



## **KDT900 – Connecting to a PC via USB**

### **Introduction**

The KDT900 can communicate to Microsoft Windows PCs via Microsoft ActiveSync on Windows XP or Windows Mobile Device Center on Windows Vista via USB.

### **Cable Requirement**

The KDT900 requires a USB Slave adapter cable to connect to a PC. This cable has a five pin connector on one end and a standard USB Type-A connector on the other:



### **Internal Connection**

The cable is connected to the internal connector of the KDT900 motherboard labeled “USB SLAVE” or “J300”. The RED wire of the cable MUST BE CONNECTED TO THE RIGHTMOST PIN!

