


## CALIBRATION MODE SETTINGS FOR ER JR SERIES

1. Make sure the scale is off.
2. Remove the two sealing bolts and the calibration plate on the bottom of the indicator head. Under the plate is the calibration switch.
3. Press and hold the switch while turning the scale on. The display will show “onE” and then “CAL 1”. Release the calibration switch.
4. Use the “ZERO” to go up through the cal option settings {cal1 to cal 11}. The “TARE” key enters the cal setting.
5. Go to “CAL 4” and press the “TARE” key.

The display will show “C41” in the weight display and letters and or numbers in the total price display. Use the PLU keys for the letters according to the figure below and the number keypad for the numbers. The “TARE” key advances through the settings. Set the C4 settings according to the following chart and then press the “TARE” key again to go back to “CAL4”.

C-4-1	b0
C-4-2	bC
C-4-3	73
C-4-4	03
C-4-5	22

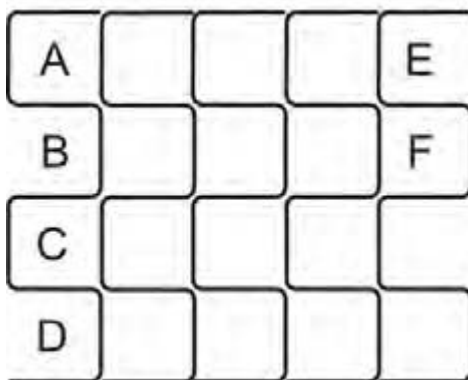

6. Press the “C” and the scale will show the version, count up, and then go to the weigh mode.