



Issued September 2001

MODEL 8000XL REPLACEMENT PARTS LIST

<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>LIST PRICE</u>
PCA0223	<u>Main PCB Assembly, 115 VAC</u> Not for use on 8000MIS Intrinsically Safe Indicator - refer to 8000IS Parts List	\$ 440.00
PCA0223D	<u>Main PCB Assembly, 230 VAC</u> Not for use on 8000MIS Intrinsically Safe Indicator - refer to 8000IS Parts List	\$ 470.00
	<u>Program Memory IC</u> Not field serviceable	
SUB0395	<u>Touch Panel Assembly</u> Includes face plate, switch assembly, and installation instructions. Not for use on 8000MIS Intrinsically Safe Indicator – refer to 8000IS Parts List.	\$ 105.00
SUB0396	<u>Face Plate Only</u> Includes face plate and instructions	\$ 65.00
SWI0104-B	<u>Inner Switch Assembly</u>	\$ 60.00
SHP0099	<u>Lens Replacement Glue</u> Touch panel adhesive.	\$ 45.00
SUB0004-1	<u>Foot Assembly Set</u> Rubber feet; S/S 10-24 x 1 screw, sold in sets of 6 only	\$ 25.00
HDW0042	<u>S/S Foot</u> Sold singly, for 18"x18" & larger bases, 1/2-20 NF Thread	\$ 25.00
SUB0063-1	<u>Power Cord</u> Shielded, 8 ft long, 18/3 SJEOW, with chosorb, connector assembly, and instruction sheet; connector unassembled.	\$ 25.00
CNT0019	<u>Liquid-Tite Feed Thru</u> For load cell, power cord & option inputs	\$ 6.00
CNT0256	<u>Load Cell Connector/Plug</u>	\$ 8.00
LBL0173-A	<u>Capacity Labels</u>	\$ 5.00



Issued September 2001

MODEL 8000XL REPLACEMENT PARTS LIST

<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>LIST PRICE</u>
FUS0020	<u>Fuse, 1/2 Amp, Slo-Blo, 115 VAC</u> Used on Main PCB Assembly PCA0223	\$ 3.00
FUS0019	<u>Fuse, 1 / 4 Amp, Slo-Blo 230VAC</u> Used on Main PCB Assembly PCA0223D	\$ 3.00
SUB0038-4	<u>Battery</u> 4 Ah, 6 Volt, lead acid, rechargeable, with terminals, and wires	\$ 55.00
XFR0029	<u>Power Transformer</u> For use on Main PCB	\$ 30.00
SUB0235	<u>Calibration Port Cover Assembly</u> Includes cover, gasket & screws	\$ 15.00
SUB0398	<u>Gasket & Screw Set, Rear Panel</u> 3 standard & 1 cross-drilled 10-32 S/S screws, rubber and metal washers and one rear panel rubber gasket.	\$ 12.00
GSK0024	<u>Rubber Gasket, Rear Panel</u> 10" x 6"	\$ 8.00
SUB0211	<u>E Mounting Brackets- <i>*(OLD STYLE)*</i></u> Connects Base to Indicator Same as Option E. If the scale base does not have drilled and tapped holes on the side, this part MUST be used.	\$ 35.00
SUB0455	<u>E Mounting Brackets- <i>*(NEW STYLE)*</i></u> Connects Base to Indicator Same as Option E. If the scale base does have drilled and tapped holes on the side, this part MUST be used.	\$ 35.00
SUB0417	<u>Kit, 14" Atlas Column with Hardware</u>	\$ 125.00



Doran Scales, Inc.

www.doranscales.com

1315 Paramount Pkwy. • Batavia, IL 60510 • 630-879-1200 • 800-262-6844 • Fax: 630-879-0073



Issued September 2001

MODEL 8000XL REPLACEMENT PARTS LIST

<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>LIST PRICE</u>
SUB0425	<u>Kit, 20" Atlas Column with Hardware</u>	\$ 150.00
SUB0426	<u>Kit, 30" Atlas Column with Hardware</u>	\$ 240.00
MAN0190	<u>Dealer/Instruction Manual</u>	\$ 20.00
MAN0191	<u>Operator's/User Manual</u>	\$ 20.00
SUB0397	<u>Case Cover Assembly</u> Touch panel included (Includes both SWI104-B & SWI105)	\$ 175.00
ENC0624	<u>"U" Bracket</u> Tilt Stand bracket for 8000XLM	\$ 35.00
SUB0210-1	<u>Knob, "U" Bracket Adjust</u> One Friction adjust knob with washers	\$ 7.00
ENC0586	<u>Backplate</u> Rear cover with cord wrap bracket (w/o battery bracket or battery)	\$ 65.00
SUB0041-1	<u>Foot Switch</u> Non Washdown – Cable Included	\$ 65.00
SUB0442	<u>Calibration/Units Switch Replacement Kit</u> Includes switches and caps	\$ 12.00
ENC0585	<u>Battery Bracket</u>	\$ 15.00
SUB0399	<u>Sealing Plug Kit</u>	\$ 10.00
70/70XL-042-C	<u>RS-232 Data Cable</u> - Pigtail end. REV. 5.X	\$ 65.00
70/70XL-042-C1	<u>RS-232 Data Cable</u> - With 9 Pin Connector. REV. 5.X	\$ 95.00
70/70XL-042-C2	<u>RS-232 Data Cable</u> - With 25 Pin Connector. REV. 5.X	\$ 105.00
MSC0102	<u>Scale Veils for 8000XL</u>	\$ 12.00
	(5 or more)	\$ 10.00