

## **Intercharacter Delay**

Intercharacter Delay refers to the pause, if any, between each character before it is sent to the host. This time delay controls the flow of data from the scanner. Scan the following bar codes to select the Intercharacter Delay.

**SET**-----



 
**None**

-----




**5 Milliseconds**

-----



**10 Milliseconds**

 -----



**20 Milliseconds**

-----




**30 Milliseconds**

-----




40 Milliseconds

-----

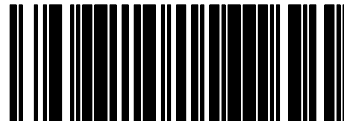

60 Milliseconds

 -----




80 Milliseconds

-----



90 Milliseconds

-----

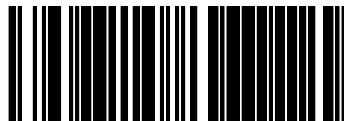

END-----



## Quiet Interval

Quiet Interval is the amount of time to look for keyboard activity before the scanner breaks the keyboard connection in order to transmit data to the host.

SET-----

