



**Intermec**



Programmer's  
Reference Manual

**IPL (Intermec Printer  
Language)**

Intermec Technologies Corporation

Corporate Headquarters  
6001 36th Ave. W.  
Everett, WA 98203  
U.S.A.

[www.intermec.com](http://www.intermec.com)

The information contained herein is proprietary and is provided solely for the purpose of allowing customers to operate and service Intermec-manufactured equipment and is not to be released, reproduced, or used for any other purpose without written permission of Intermec.

Information and specifications contained in this document are subject to change without prior notice and do not represent a commitment on the part of Intermec Technologies Corporation.

© 2004 by Intermec Technologies Corporation. All rights reserved.

The word Intermec, the Intermec logo, Norand, ArciTech, CrossBar, Data Collection Browser, dcBrowser, Duratherm, EasyCoder, EasyLAN, Enterprise Wireless LAN, EZBuilder, Fingerprint, i-gistics, INCA (under license), InterDriver, Intermec Printer Network Manager, IRL, JANUS, LabelShop, Mobile Framework, MobileLAN, Nor\*Ware, Pen\*Key, Precision Print, PrintSet, RoutePower, TE 2000, Trakker Antares, UAP, Universal Access Point, and Virtual Wedge are either trademarks or registered trademarks of Intermec Technologies Corporation.

Throughout this manual, trademarked names may be used. Rather than put a trademark (™ or ®) symbol in every occurrence of a trademarked name, we state that we are using the names only in an editorial fashion, and to the benefit of the trademark owner, with no intention of infringement.

There are U.S. and foreign patents pending.

The name Centronics is wholly owned by GENICOM Corporation.

IBM is a registered trademark of International Business Machines Corporation.

The software contained in the Intermec Printers and the accompanying materials are copyrighted. Unauthorized copying of the software, including software that has been modified, merged, or included with other software, or the written materials is expressly forbidden without the prior written consent of Intermec. All right, title, and interest in all copies of this software are and shall at all times remain the sole and exclusive property of Intermec. Customer may be held legally responsible for any copyright infringement that is caused or encouraged by its failure to abide by these terms.

## **Document Change Record**

<b>Revision</b>	<b>Date</b>	<b>Changes</b>
003	10/00	Revised throughout to include EasyCoder F4 printer information.
004	04/01	Revised to include 3400e series printer information.
005	12/01	Revised to include 44X0 printer information.
006	03/03	Revised to include: <ul style="list-style-type: none"><li>• IPL firmware versions 1.4 and 2.0 functionality</li><li>• Command information for the PF2i, PF4i, and PM4i printers</li></ul>
007	10/03	Revised to include minor changes. Added new Slash Zero, Enable or Disable command.
008	06/04	Revised to include: <ul style="list-style-type: none"><li>• IPL firmware version 2.30 functionality</li><li>• Command information for the PX4i and PX6i printers</li></ul>



# Contents

Before You Begin.....	xiii
Safety Summary.....	xiii
Safety Icons .....	xiv
Global Services and Support .....	xiv
Who Should Read This Document? .....	xv
Related Documents .....	xv

## **1 Introduction to IPL Commands..... 1**

What Is IPL?.....	2
What Are IPL Commands? .....	2
Programming for Intermecc Printers .....	3
Learning the Structure of IPL Commands .....	3
Using Control Characters in IPL Command Strings.....	4
Sending IPL Commands to the Printer .....	5
Downloading Commands From Windows .....	6
Sending a String of Commands Through an Application.....	7
Example 1.....	7
Example 2.....	7
Switching Between Print Mode and Program Mode .....	7
What to Read Next.....	8

## **2 Downloading Fonts to the Printer ..... 9**

What Types of Fonts Can I Download?.....	10
Using PrintSet Version 2.0 or Later to Download Fonts .....	11
Installing International Character Sets Using GLOBE .....	13
What Types of Fonts Does GLOBE Support? .....	13
Do You Need to Purchase Additional RAM? .....	14
Licensing Your Fonts .....	15
Creating Bitmap Fonts From TrueType Fonts.....	15
Selecting the Printer Language.....	17
Installing Code Page Tables.....	17
Using IPL Commands to Download Fonts.....	18
Downloading Bitmap Fonts.....	18
Downloading Outline Fonts.....	18
Using Third-Party Software Applications to Download Fonts.....	19

<b>3</b>	<b>Designing Bar Code Labels</b> .....	21
	Introduction to Formats .....	22
	Tutorial for Designing and Creating a Label Format.....	22
	Defining Label Design Fields.....	27
	Bar Code Fields .....	27
	Human-Readable Fields.....	27
	Line and Box Fields .....	28
	Graphic Fields .....	30
	Editing Label Formats and Working With Fields.....	31
	Editing Existing Fields .....	33
	Deleting Fields.....	34
	Positioning Fields .....	34
	Rotating Fields .....	35
	Scaling Fields.....	36
	Magnifying Fonts and Character Fields .....	36
	Magnifying Bar Code Fields .....	37
	Designing Pages.....	38
	Label Format Example.....	38
	Graphic for Example.....	39
	Format for Example.....	39
	Data for Example.....	40
<b>4</b>	<b>Troubleshooting</b> .....	43
	Troubleshooting Checklist.....	44
	How the Printer Handles Error Conditions .....	44
	Syntax Errors .....	44
	Parameter Errors.....	45
	Image Overrun Errors.....	45
	Invalid Numeric Character Errors.....	45
	Insufficient Storage Memory Errors .....	45
	Interpreting Error Codes and Solving Problems .....	46
<b>5</b>	<b>Advanced Printer Programming</b> .....	49
	Using the Printer Memory Efficiently .....	50
	How Is the Printer Storage Memory Used? .....	50
	Making the Most of Your Storage Memory.....	50
	Increasing Throughput .....	51
	What Is an Image Band? .....	51
	How the Image Bands Command Works .....	52
	Optimizing Print Speed and Image Band Setting.....	52
	Reimaging Modified Fields.....	55
	Optimizing Image Bands for Batch Printing.....	56

Using Emulation Mode ..... 56

**6 Finding IPL Commands in This Manual** ..... 63

Commands Listed by Name..... 64

Commands Listed by Syntax..... 68

Commands Listed by Task..... 72

    Immediate Commands ..... 72

    Program Mode Commands ..... 72

    Print Mode Commands..... 76

    Test and Service Commands..... 78

**7 IPL Command Reference** ..... 79

Which Commands Does Your Printer Support? ..... 80

Immediate Commands ..... 86

    Abort Print Job..... 86

    Error Code, Request ..... 86

    Label and Gap Length, Transmit ..... 87

    Remaining Quantity and Batch Count, Transmit..... 87

    Reset..... 87

    Status Dump ..... 88

    Status Enquiry ..... 89

Print Commands ..... 90

    Advanced Mode, Select..... 91

    Alphanumeric Field Separator..... 92

    Batch Count, Set ..... 93

    Clear All Data..... 93

    Clear Data From Current Field..... 93

    Command Terminator 1 ..... 93

    Command Terminator 2 ..... 94

    Configuration Parameters, Transmit..... 94

    Cut..... 94

    Data Shift – International Characters..... 94

    Direct Graphics Mode, Select ..... 96

    Emulation Mode, Enter..... 97

    Field, Select ..... 97

    Field Decrement, Set ..... 98

    Field Increment, Set..... 99

    First Data Entry Field, Select ..... 99

    Font, Transmit ..... 100

    Form Feed ..... 101

    Format, Select..... 101

    Format, Transmit ..... 103

    Increment and Decrement, Disable..... 104

    Memory Usage, Transmit ..... 105

    Next Data Entry Field, Select ..... 106

    Numeric Field Separator..... 106

Options Selected, Transmit .....	107
Page, Select.....	108
Page, Transmit.....	108
Print .....	109
Printhead Parameters, Transmit.....	109
Program Mode, Enter .....	109
Program Number, Transmit .....	110
Quantity Count, Set .....	110
Start and Stop Codes (Code 39), Print.....	110
Storage Area Usage, Transmit .....	111
Test and Service Mode, Enter .....	111
User-Defined Characters, Transmit .....	111
User-Defined Tables, Transmit.....	112
Warm Boot.....	112
Configuration Commands .....	113
Amount of Storage, Define .....	114
Audible Alarm, Enable or Disable.....	114
Auto-Transmit 1, Enable .....	115
Auto-Transmit 2, Enable .....	115
Auto-Transmit 3, Enable .....	115
Auto-Transmit 1, 2, and 3, Disable .....	115
Communication Port Configuration, Set .....	116
Control Panel Access Permission, Set.....	117
Cutter, Enable or Disable .....	118
Dark Adjust, Set .....	118
Emulation or Advanced Mode on Power-Up .....	119
End-of-Print Skip Distance, Set .....	120
IBM Language Translation, Enable or Disable.....	122
Intercharacter Delay, Set.....	122
Interlabel Ribbon Save, Enable or Disable .....	123
Label Rest Point, Adjust .....	123
Label Retract, Enable or Disable .....	124
Label Retract Distance, Set .....	124
Label Stock Type, Select .....	125
Label Width, Set.....	125
Maximum Label Length, Set.....	126
Media Fault Recovery Mode, Set .....	127
Media Sensitivity, Select .....	127
Message Delay, Set .....	128
Number of Image Bands, Set .....	129
Online or Offline on Power-Up.....	130
Pin 11/20 Protocol, Set.....	130
Postamble, Set .....	131
Preamble, Set.....	131
Print Speed, Set .....	132
Printer Language, Select.....	133
Printhead Loading Mode, Select .....	135
Printhead Pressure, Set.....	136
Printhead Test Parameters, Set.....	136
Ribbon Save Zones, Set .....	137
Self-Strip, Enable or Disable .....	137
Serial Port Configuration, Set .....	138

Slash Zero, Enable or Disable .....	138
Takeup Motor Torque, Increase .....	139
Top of Form, Set.....	139
Program Mode Commands.....	140
Bar Code, Select Type .....	141
Code 39.....	142
Code 93.....	142
Interleaved 2 of 5.....	143
Code 2 of 5.....	143
Codabar.....	143
Code 11.....	144
Code 128.....	144
UPC/EAN.....	146
HIBC Code 39 .....	147
Code 16K.....	147
Code 49.....	148
POSTNET .....	148
PDF417.....	148
MaxiCode.....	151
JIS-ITF.....	152
HIBC Code 128.....	153
Data Matrix Symbology Versions ECC-100 and ECC-200 .....	154
QR Code.....	155
MicroPDF417 .....	156
RSS .....	157
EAN.UCC Composite.....	160
Bar Code Field, Create or Edit.....	163
Bitmap Cell Height for Graphic or UDF, Define .....	164
Bitmap Cell Width for Graphic or UDF, Define .....	166
Bitmap User-Defined Font, Clear or Define .....	167
Border Around Human-Readable Text, Define.....	167
Box Field, Create or Edit .....	168
Character Bitmap Origin Offset, Define.....	169
Character Rotation or Bar Code Ratio, Define .....	170
Code 39 Prefix Character, Define .....	173
Command Tables, Load .....	173
Current Edit Session, Save .....	174
Data Source for Format in a Page, Define.....	174
Field, Delete .....	174
Field Data, Define Source.....	175
Field Direction, Define.....	177
Field Origin, Define .....	177
Font Character Width, Define.....	178
Font Type, Select.....	180
Format, Create or Edit.....	182
Format Direction in a Page, Define .....	183
Format, Erase.....	184
Format Offset Within a Page, Define.....	184
Format Page Position, Define Data Source .....	184
Format Position From Page, Delete .....	185
Format Position in a Page, Assign .....	185
Graphic, Select .....	186

## Contents

Graphic or UDC, Define.....	186
Height Magnification of Bar, Box, or UDC, Define .....	187
Human-Readable Field, Create or Edit.....	189
Intercharacter Space for UDF, Define.....	190
Interpretive Field, Edit.....	191
Interpretive Field, Enable or Disable.....	192
Length of Line or Box Field, Define .....	192
Line Field, Create or Edit .....	193
Outline Font, Clear or Create.....	193
Outline Font, Download .....	195
Page, Create or Edit.....	196
Page, Delete.....	197
Pitch Size, Set.....	197
Point Size, Set.....	198
Print Line Dot Count Limit, Set.....	198
Program Mode, Exit .....	199
User-Defined Character, Clear or Create .....	199
User-Defined Character Field, Create or Edit .....	199
User-Defined Font Character, Create .....	200
Width of Line, Box, Bar, or Character, Define.....	201
Test and Service Commands.....	202
12 Volt Supply Value, Transmit .....	203
Ambient Temperature, Transmit .....	203
Command Terminator .....	203
Dark Adjust.....	203
Factory Defaults, Reset .....	203
Formats, Print .....	204
Hardware Configuration Label, Print .....	204
Label Path Open Sensor Value, Transmit .....	204
Label Taken Sensor Value, Transmit .....	204
Pages, Print.....	204
Pitch Label, Print.....	205
Print Quality Label, Print .....	205
Printhead Resistance Test, Begin .....	205
Printhead Resistance Values, Transmit.....	205
Printhead Temperature Sensor Value, Transmit .....	205
Printhead Volt Supply Value, Transmit.....	205
Reflective Sensor Value, Transmit.....	206
Software Configuration Label, Print .....	206
Test and Service Mode, Exit .....	206
Transmissive Sensor Value, Transmit.....	206
User-Defined Characters (UDC) and Graphics, Print.....	206
User-Defined Fonts, Print .....	206
<b>A Full ASCII Table.....</b>	<b>207</b>
Full ASCII Table .....	208
Full ASCII Control Characters Table.....	210

**B Character Sets** ..... 211

- International Character Sets..... 212
  - Advanced Character Table..... 212
  - 8636/46 Character Table..... 212
  - IBM Translation Character Table..... 213
  - Code Page 850 Character Table..... 214
- Extended Character Sets ..... 215

**C Creating User-Defined Bitmap Graphics and Fonts**..... 219

- Creating User-Defined Bitmap Graphics ..... 220
  - Creating One Bit Per Byte User-Defined Graphics ..... 220
  - Creating Six Bits Per Byte User-Defined Graphics ..... 224
- Creating User-Defined Bitmap Fonts..... 227
  - Creating One Bit Per Byte User-Defined Fonts ..... 227
  - Creating Six Bits Per Byte User-Defined Fonts ..... 228

**D User-Defined Interface Tables**..... 231

- Print Commands (t = 0) ..... 232
- Escape Print Commands (t = 1)..... 233
- Shift Print Commands (t = 2)..... 234
- Status Responses and Auto-Transmit Commands (t = 3) ..... 235
- Protocol Commands (t = 4)..... 236
- Communications Protocol Characters..... 237

**E Using Direct Graphics Mode** ..... 239

- What Is Direct Graphics Mode?..... 240
  - What Is Run-Length Encoding?..... 240
  - How Do I Send a Direct Graphic to the Printer? ..... 242
    - Direct Graphics Mode, Enter..... 242
    - Change Origin..... 243
    - End of Bitmap ..... 243
    - End of Line..... 243
    - Raw Bitmap Data Follows ..... 244
    - Repeat Last Line ..... 244
    - Transition Black ..... 244
    - Transition White ..... 244
  - Using Direct Graphics Commands ..... 245

<b> </b> <b>Index</b> .....	247
-----------------------------	-----

## **Before You Begin**

This section provides you with safety information, technical support information, and sources for additional product information.

### **Safety Summary**

Your safety is extremely important. Read and follow all warnings and cautions in this document before handling and operating Intermec equipment. You can be seriously injured, and equipment and data can be damaged if you do not follow the safety warnings and cautions.

#### **Do not repair or adjust alone**

Do not repair or adjust energized equipment alone under any circumstances. Someone capable of providing first aid must always be present for your safety.

#### **First aid**

Always obtain first aid or medical attention immediately after an injury. Never neglect an injury, no matter how slight it seems.

#### **Resuscitation**

Begin resuscitation immediately if someone is injured and stops breathing. Any delay could result in death. To work on or near high voltage, you should be familiar with approved industrial first aid methods.

#### **Energized equipment**

Never work on energized equipment unless authorized by a responsible authority. Energized electrical equipment is dangerous. Electrical shock from energized equipment can cause death. If you must perform authorized emergency work on energized equipment, be sure that you comply strictly with approved safety regulations.

## Safety Icons

This section explains how to identify and understand dangers, warnings, cautions, and notes that are in this document. You may also see icons that tell you when to follow ESD procedures and when to take special precautions for handling optical parts.



**A caution alerts you to an operating procedure, practice, condition, or statement that must be strictly observed to prevent equipment damage or destruction, or corruption or loss of data.**

**Attention: Une précaution vous avertit d'une procédure de fonctionnement, d'une méthode, d'un état ou d'un rapport qui doit être strictement respecté pour empêcher l'endommagement ou la destruction de l'équipement, ou l'altération ou la perte de données.**



**Note:** Notes either provide extra information about a topic or contain special instructions for handling a particular condition or set of circumstances.

## Global Services and Support

### Warranty Information

To understand the warranty for your Intermec product, visit the Intermec web site at <http://www.intermec.com> and click **Service & Support**. The **Intermec Global Sales & Service** page appears. From the **Service & Support** menu, move your pointer over **Support**, and then click **Warranty**.

Disclaimer of warranties: The sample code included in this document is presented for reference only. The code does not necessarily represent complete, tested programs. The code is provided “as is with all faults.” All warranties are expressly disclaimed, including the implied warranties of merchantability and fitness for a particular purpose.

### Web Support

Visit the Intermec web site at <http://www.intermec.com> to download our current documents as PDF files. To order printed versions of the Intermec manuals, contact your local Intermec representative or distributor.

Visit the Intermec technical knowledge base (Knowledge Central) at <http://intermec.custhelp.com> to review technical information or to request technical support for your Intermec product.

## Telephone Support

These services are available from Intermec Technologies Corporation.

Service	Description	In the U.S.A. and Canada call 1-800-755-5505 and choose this option
Factory Repair and On-site Repair	Request a return authorization number for authorized service center repair, or request an on-site repair technician.	1
Technical Support	Get technical support on your Intermec product.	2
Service Contract Status	Inquire about an existing contract, renew a contract, or ask invoicing questions.	3
Schedule Site Surveys or Installations	Schedule a site survey, or request a product or system installation.	4
Ordering Products	Talk to sales administration, place an order, or check the status of your order.	5

Outside the U.S.A. and Canada, contact your local Intermec representative. To search for your local representative, from the Intermec web site, click **Contact**.

## Who Should Read This Document?

The document explains how to use the Intermec Printer Language (IPL) and provides a chapter on the IPL commands.

Before you use IPL, you should be familiar with your network, general networking terms, such as IP address, and your bar code label printers.

## Related Documents

The Intermec web site at <http://www.intermec.com> contains our current documents that you can download as PDF files.

To order printed versions of the Intermec manuals, contact your local Intermec representative or distributor.

***Before You Begin***



# 1 Introduction to IPL Commands

This chapter describes Intermec's approach to printing labels and introduces the Intermec Printer Language (IPL) command set. The chapter also explains how to switch between Print and Program modes, how to send IPL files to a printer, and how to use ASCII control characters in IPL commands. The chapter concludes with a roadmap to the rest of the manual.

In this manual, "printer" can refer to the 3240, 3400, 3440, 3600, 4100, 4400, 4420, 4440, 4630, 4830, 7421, EasyCoder PF2i, EasyCoder PF4i, EasyCoder PM4i, EasyCoder F4, EasyCoder PX4i, or EasyCoder PX6i, bar code printer.

## What Is IPL?

Intermec Printer Language (IPL) is the programming language that has been developed for use with Intermec printers. IPL is an easy-to-use programming language that allows you to:

- design formats (templates) for bar code labels.
- download bar code label formats to the printer.
- modify a bar code label format that is stored in the printer.
- download data to fill in a bar code label format and print the label.
- enable or disable printer features and options.
- query the printer for hardware diagnostic data and the status of print jobs.
- abort print jobs and reset the printer.

## What Are IPL Commands?

There are five types of IPL commands (Print, Program, Test and Service, Configuration, and Immediate) and these types are related to the printer's three operating modes (Print, Program, and Test and Service). That is, in order to execute an IPL command, the printer must be in the operating mode that corresponds to the IPL command's type.

### *IPL Command Types and Descriptions*

<b>IPL Command Type</b>	<b>Printer Operating Mode</b>	<b>Uses for This Type of IPL Command</b>
Print	Print mode	Download data to the printer and print bar code labels.
Program	Program mode	Design label formats.
Test and Service	Test and Service mode	Query the printer for hardware diagnostic information.
Configuration	Print mode	Enable or disable printer features and options.
Immediate	Any operating mode	Query the printer on the status of print jobs, abort print jobs, and reset the printer.



**Note:** The printer executes Immediate commands as soon as it receives them, even if there are other IPL commands waiting to be executed.

The printer does not execute a command that does not match the current operating mode. For example, if you send a Program command while the printer is in Print mode, the printer ignores the Program command. See “Switching Between Print Mode and Program Mode” later in this chapter, or refer to your printer user’s manual for help changing the mode of your printer.

## Programming for Intermecc Printers

When you program in IPL, you must understand the approach that Intermecc uses to print bar code labels. It is a two-step process:

- 1 Design the format (or template) for the bar code label, and then send the format to the printer, where it is stored in memory.
- 2 Send another command to the printer that specifies the data for the fields of the format and prints the label.



**Note:** It is not always necessary to send the format and the data to the printer separately. You can send fixed data formats or even variable data formats that include the data in the same file.

If you skip Step 1 and do not specify a format, the printer assumes you want to use the default format, which is stored permanently in the printer. The printer will print the label using that format. The default format is called format 0.

You can store multiple formats on your printer. Many Intermecc printers can store up to 19 formats, but some printers (such as the 3240 and 3440) can store up to 99. To learn how many formats your printer can store, see the “Format, Create or Edit” command in Chapter 7.

## Learning the Structure of IPL Commands

This section describes general principles to follow when creating or downloading IPL commands.



**Note:** The syntax of each IPL command is described in detail in Chapter 7, “IPL Command Reference.”

- IPL commands are case sensitive. Type them as they appear in this manual. For example, if the command is an uppercase “A,” do not enter it as a lowercase “a.”
- Each command string that you download to a printer must begin with the start of text character <STX> and end with the end of text character <ETX>.



**Note:** When the printer is in XON/XOFF mode, you can send data and print multiple labels without using the <ETX> character.

- The <STX> and <ETX> commands mark the beginning and end of a message. The semicolon (;) is the command terminator. All commands in Program mode or Test and Service mode must end with this terminator except the last command in a string. Commands in Print mode do not require the semicolon command terminator.

For example, a simple IPL command string looks like this:

```
<STX>E2 ; F2<ETX>
```

## Using Control Characters in IPL Command Strings

Formats that you design with IPL commands require you to enter ASCII control characters in your command strings. To create ASCII control characters, either:

- enter a control code

or

- type the printable command characters.

Many word processing programs have the ability to represent ASCII control characters such as <ETX> by entering a control code. For example, to enter the hexadecimal equivalent of the ASCII character <ETX> on your computer, you would type the control code 03. For help finding the hexadecimal equivalent of a control character, consult the full ASCII table in Appendix A.

If it is difficult for you to edit or transmit IPL command files that contain ASCII control characters, you can use printable control characters instead.

A printable control character (or “readable character”) is a text string, enclosed in angle brackets, that represents an ASCII control character. For example, instead of entering a control code for the ASCII start of text character, you can type these five readable characters:

```
<STX>
```

To determine the readable character for each ASCII control character, see the full ASCII table in Appendix A. Simply enclose the text string in the ASCII column in angle brackets to create the readable character.

The printer automatically detects whether you are using ASCII control characters or readable characters by the start of text (<STX>) character, which marks the beginning of an IPL command message. All characters in a message must be in the same form (ASCII control character or readable characters) as the start of text character. For example, if you begin a message with the readable characters <STX>, the printer executes only the readable characters in the message and throws away any ASCII control characters in the message.

Using readable characters may consume more space and time, but it has the distinct advantage of displaying everything on the screen in readable characters.

Here is an example of using control codes:

```
^B^Og1,567^C
```

where:

^B is the control code representation of hex 02 (the <STX> character).

^O is the control code representation of hex 0F (the <SI> character).

^C is the control code representation of hex 03 (the <ETX> character).

Here is an example of using printable control characters:

```
<STX><SI>g1,567<ETX>
```

## Sending IPL Commands to the Printer

Before you can send IPL commands to the printer, you need to:

- connect the printer to a PC.
- create an ASCII text file of IPL commands.

### To connect the printer to a PC

- 1 Connect the printer to the serial port on your PC using the correct cable. For help selecting a cable, see your user's manual.
- 2 Configure the PC for a serial connection to the printer by typing this command at the DOS prompt and pressing **Enter**. The following example assumes that your serial connection is COM1.

```
MODE COM1 96,E,7,1,N
```

These serial connection characteristics are the default for the printer.

- 3 Make sure the printer is configured for the hardware flow control (XON/XOFF) communications protocol. This protocol is the default. For help, see your printer user's manual.



**Note:** If you receive the “write fault error” error message, it indicates that either you are sending the data to the wrong COM port or your cable does not support hardware flow control. Try sending the data via Windows using the information below.

### To create an ASCII text file of IPL commands

- 1 Create a set of IPL commands. For help, see Chapter 2, “Downloading Fonts to the Printer,” or Chapter 3, “Designing Bar Code Labels.”
- 2 Type the commands into the text file using any text editor or word processor and save the file as an ASCII text file. Your ASCII text file can contain an entire label format or just a single configuration command that you use often. For example, if you need to set the media sensitivity number often, you may want to create a text file that contains the IPL command line:

```
<STX><SI>g1,567<ETX>.
```

You can send IPL commands to the printer in many ways. This section describes two simple methods:

- Downloading commands from Windows
- Sending a string of commands through an application

## Downloading Commands From Windows

After you create a text file of IPL commands, you can use Windows HyperTerminal to send the file to the printer.

### To download commands using HyperTerminal

- 1 Start the HyperTerminal application.
- 2 In the Connection Description dialog box, enter a name for your new connection and click **OK**.
- 3 In the Phone number dialog box, select a serial port from the **Connect using** list box and click **OK**.
- 4 In the COM Properties dialog box, set the port settings to your printer communication settings. If you have not changed the printer default settings, enter the following information and click **OK**:

Bits per second	9600
Data bits	7
Parity	even
Stop bit	1
Flow control	XON/XOFF
- 5 From the Main menu bar, select **Transfer**.
- 6 From the Transfer list box, select **Send Text File**.
- 7 In the Send Text File dialog box, locate your .TXT file and click **Open**.

HyperTerminal sends the .TXT file to your printer. Your command text file will either change a configuration setting in the printer or print your label format.

## Sending a String of Commands Through an Application

You can send a string of IPL commands through a PC communications application, a terminal emulation application, or a host terminal. See the application's documentation for instructions.

The disadvantage of sending a string of commands is that you must retype the entire command string if you make an error while entering the commands. It is easier to retype a command if you keep the command strings short; therefore, you should design your label formats as combinations of several short command strings rather than one very long string.

To illustrate this idea, consider the next examples, which show two ways to send a bar code label format to the printer. Example 1 uses several short command strings to define the format. Example 2 combines all of the commands into a single string.

### Example 1

```
<STX><ESC>P<ETX>
<STX>E3;F3;<ETX>
<STX>H0;o81,100;f0;c0;d0,16;h1;w1;<ETX>
<STX>H1;o81,120;f0;c0;d0,16;h1;w1;<ETX>
<STX>H2;o81,150;f0;c2;d0,14;h1;w1;<ETX>
<STX>H3;o81,190;f0;c2;d0,16;h1;w1;<ETX>
<STX>B4;o81,0;f0;c0,1;h50;w1;d0,11;i0;p@;<ETX>
<STX>R<ETX>
```

### Example 2

```
<STX><ESC>P;E3;F3;H0;o81,100;f0;c0;d0,16;h1;w1;H1;o81,120;
f0;c0;d0,16;h1;w1;H2;o81,150;f0;c2;d0,14;h1;w1;H3;o81,190;
f0;c2;d0,16;h1;w1;B4;o81,0;f0;c0,1;h50;w1;d0,11;i0;p@;
R<ETX>
```

In Example 1, each line begins with the start of text character <STX> and finishes with the end of text character <ETX>. If you make a mistake, you need to retype only the line with the mistake. In Example 2, if you made a mistake anywhere in the string, you must retype the entire format.

Example 1 takes slightly longer to download, but is much easier to read and debug.

## Switching Between Print Mode and Program Mode

Print mode and Program mode are two different operating modes of the printer. Before you download information to the printer, make sure that you are in the correct mode:

- Use Program mode to define formats, pages, fonts, and characters.
- Use Print mode to print labels, to download data, or to download configuration commands to the printer.

### To enter Program mode on any printer

- Type this command:

<STX><ESC>P<ETX>

Send this command every time that you download formats, even if you think the printer is already in Program mode. If the printer is already in Program mode, it ignores this command.

### To enter Print mode on any printer

- Type this command:

<STX>R<ETX>

Send this command before each set of data or as your last format command. If the printer is already in Print mode, it ignores this command.



**Note:** The R command may be treated as data if the data to the printer does not include a <CAN> or field pointer to clear the fields.

## What to Read Next

Now that you have been introduced to IPL commands, you can use this manual to learn how to perform these tasks:

For Help With This Task	See
To download any font to the printer	Chapter 2
To design and code the formats for bar code labels	Chapter 3
To diagnose and solve problems with IPL commands	Chapter 4
To learn how to use printer memory efficiently, how to increase throughput, and when to use Emulation mode	Chapter 5
To find a specific IPL command	Chapter 6
To look up the exact syntax and description of any IPL command	Chapter 7
To refer to the Full ASCII table	Appendix A
To see the character set tables	Appendix B
To create your own fonts and graphics	Appendix C
To refer to the user-defined interface tables	Appendix D
To download direct graphics	Appendix E



## **2** Downloading Fonts to the Printer

This chapter explains how to download fonts to your Intermecc printer. You can use PrintSet, IPL commands, or third-party software applications.

## What Types of Fonts Can I Download?

You can download these types of fonts to most Intermecc printers:

- Bitmap
- Outline (TrueType and Speedo)



**Note:** The 3400, 3400e, 3440, 4420, 4440, PF2i, PF4i, PM4i, F4, PX4i, and PX6i printers support the use of scaleable TrueType fonts. Bitmap fonts can be used on any Intermecc printer, including those TrueType fonts you have converted to bitmap using PrintSet. The PF2i, PF4i, PM4i, F4, PX4i, and PX6i do not support Speedo fonts.

In addition to the fonts permanently resident in your printer, you can download fonts in the form of user-defined bitmap or outline (scaleable) fonts. Use this section to learn about the differences between bitmap and outline fonts and how to choose the type of font you want to use.

Bitmap fonts commonly:

- print in one fixed size. (If you magnify the font, they print but are ragged.)
- print quickly.
- are memory intensive when defined as large characters.

Outline fonts commonly:

- vary in size. You can print any size character up to 10.16 cm (4 in).
- print smooth characters.
- image slower than bitmap fonts.

Your printer supports two types of outline fonts: TrueType (support available only on the 3400, 3400e, 3440, 4420, 4440, F4, PF2i, PF4i, PM4i, PX4i, and PX6i printers) and Speedo (not supported on the F4, PF2i, PF4i, PM4i, PX4i, or PX6i). TrueType fonts are the most popular outline fonts, and several are available through Windows on your PC. For help locating Speedo fonts, contact Intermecc Technical Support.

See the next table to decide which fonts best suit your needs.

### Font Selection Table

Concern	Bitmap	TrueType	Speedo
image speed	fastest	medium	fast
availability	extensive	extensive with Windows	limited
storage space	varies	50 - 80K per font usually; Japanese, Chinese and Korean are considerably larger	20 - 30K per font
size	fixed	variable	variable

You can download fonts to the printer and store them in the non-volatile memory. Although the printer reserves 16 font ID numbers (3 to 6, and 8 to 19) for you to download fonts, memory constraints may limit the number of fonts you can store.

## Using PrintSet Version 2.0 or Later to Download Fonts

The easiest way to download fonts to the printer is with the PrintSet printer configuration application. This application is on the CD that shipped with your printer. You can also download the latest release of PrintSet from the Intermec web site at [www.intermec.com](http://www.intermec.com). You can use PrintSet to select fonts and directly download them to your printer.


Bitmap fonts can be memory intensive, so you may decide not to download the entire font to the printer. You can use PrintSet to define a subset of the font (only the numbers, for example). Then you can download the subset, saving storage space on the printer. The printer requires that bitmap fonts be in one of these formats: one bit per byte or six bits per byte. PrintSet automatically converts all bitmap fonts into the six bits per byte format.

PrintSet automatically converts scaleable outline fonts into nibblized data that you can download to the printer. PrintSet can also convert fixed outline fonts into bitmap fonts that you can download to the printer.

### To select a font with PrintSet

- 1 Start PrintSet.
- 2 Make sure that the communications settings are correct.
- 3 From the **Configuration menu**, select **Fonts** or on the toolbar, click the **Font Setup** button.

The Font Setup dialog box appears.

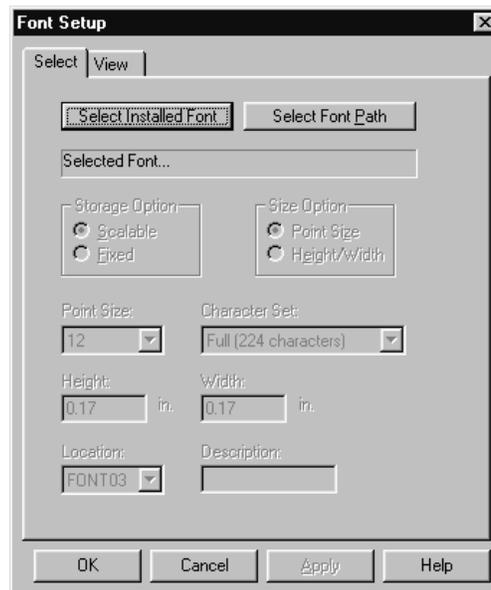

- 4 To select a font by font name, click the **Select Installed Font** button. From the list of installed fonts, select your TrueType font name.  
  
To select a font by pathname, click the **Select Font Path** button. Select a drive and a path. From the **File name** list box, select a TrueType font file (\*.TTF).
- 5 In the Storage Option box:
  - Click the **Scaleable option** button if you are downloading an outline font. (This option is disabled if your printer does not support TrueType.)
  - Click the **Fixed** option button if you are downloading a bitmap font.
- 6 (Bitmap fonts only) Select the size option, point size, and character set as needed.
- 7 In the **Location** list box, choose the font number you wish to assign to the font. Intermec printers identify each font by its font number.  
  
You may select additional fonts to add to local memory. Each font must have a unique location number.
- 8 Click **Apply**.
- 9 Click the **View** tab. The **Fonts to send** box displays the selected fonts and the designated printer locations.
- 10 Click **OK** to exit the Font Setup dialog box.

Now that you have defined your font, you need to either install it in your printer or save it to a file. Follow one of these procedures to complete the process.

**To install fonts in your printer**

- From the **DataXfer** menu, select **Send to printer** or on the toolbar, click the **Send Config to Printer** button.



**Note:** If you download an incompatible TrueType font, the font type will be 999. If you select the incompatible font for a text field, the printer will print the default font 0.

**To save a font to a file and copy it to your printer**

- 1 From the **File** menu, select **Save as** or on the toolbar, click the **Save As** button. The Save As dialog box appears.
- 2 In the Save As dialog box, enter a path and filename. The file must use a .PCF extension. For example, you could name your file NEWFONT.PCF.
- 3 Click the **Save** button.

When you save the font to file, the IPL commands necessary to install the font are automatically written to the file.

- 4 Use Windows HyperTerminal to download the \*.PCF file to your printer.

## Installing International Character Sets Using GLOBE

Intermec's goal is to help you easily localize your printer with the font set you choose. To support this goal, Intermec printers now use GLOBE (Global Languages On Bar Code Equipment) technology to download and access single- and double-byte international character sets.

### What Types of Fonts Does GLOBE Support?

Use GLOBE technology to install international character sets on your printer. GLOBE technology is part of PrintSet, the Windows-based configuration program that came on the CD with your printer. You can use PrintSet to install these types of fonts:

- TrueType fonts
- Bitmap fonts generated from TrueType fonts using PrintSet

TrueType fonts are scalable fonts that retain smooth contours at any size. Since TrueType fonts may be very complex, they tend to image slower than bitmap fonts. You cannot subset a TrueType font. You must download the entire font to the printer.



**Note:** When using TrueType fonts, your printer must be configured to operate in 8 bit mode. Intermec also recommends the following printer configuration: highest supported bits per second (Baud rate), 8 data bits, no parity, 1 stop bit, XON/XOFF flow control.

Your TrueType fonts must be compatible with Microsoft Windows. To generate bitmap fonts from TrueType fonts for a particular language, you must run PrintSet under that language version of Microsoft Windows. You can run PrintSet Version 2.0 and later under Windows 95/98/NT 4.0/2000/XP. Earlier versions of PrintSet will run under Windows 3.11.

PrintSet 2.1 or later is required to install a Chinese, Japanese, or Korean TrueType font. You must locate and install the necessary code page tables to use with these language fonts. For help, see “Installing Code Page Tables” later in this chapter. The EasyCoder F4 does not support bitmap or TrueType Chinese, Japanese, or Korean fonts.

## Do You Need to Purchase Additional RAM?

If you wish to install a TrueType font in your printer, you must have enough memory available to contain the entire font file. The size of the TrueType font file, in bytes, is the minimum amount of memory you must have available in your printer. Bitmap fonts generated from TrueType files will vary in size, depending on the point size and number of characters you create. The larger the point size you choose, the larger the resulting file size.

Chinese, Japanese, and Korean languages contain thousands of characters. If you wish to use these languages, you will need to purchase expanded flash memory to store them in your printer. The amount of memory depends on the size and number of fonts you wish to install.

Use the next table to determine the approximate size of some Asian TrueType fonts. The approximate size is shown in dots per inch (dpi).

### Approximate Sizes – Asian TrueType Fonts

TrueType Font	Point Size	Approximate Size (400 dpi)	Approximate Size (200 dpi)
Korean KSC-5601	12 pt	1.6MB	0.5MB
	16 pt	2.7MB	0.8MB
	24 pt	5.8MB	1.5MB
Traditional Chinese Big 5	12 pt	3.1MB	0.9MB
	16 pt	5.25MB	1.6MB
Simplified Chinese GB	12 pt	3.5MB	1MB
	16 pt	6.2MB	1.8MB
Japanese Shift-JIS	12 pt	3.9MB	1.1MB
	16 pt	6.75MB	2MB

Some TrueType fonts require large amounts of dynamic RAM to operate. If you receive an error code 37 when printing a label using TrueType fonts, you may need to purchase expanded dynamic RAM.

## Licensing Your Fonts

Although Intermec provides you with a tool to download international characters sets, you must license the fonts that you purchase and install in your printers. Contact your font vendor for licensing information.

These companies resell TrueType fonts that work with Intermec printers:

**Precision Type**

47 Mall Drive  
Commack, NY 11725  
Tel: 1-800-248-3668  
Fax: 516-543-5721  
e-mail: info@precisiontype.com

**Galapagos Design Group**

256 Great Road  
Suite 15  
Littleton, MA 01360-1916  
Tel: 978-952-6200  
Fax: 978-952-6260  
e-mail: info@galapagosdesign.com

These companies also provide TrueType fonts compatible with Intermec printers:

**Dynalab Inc.**

2055 Gateway Place  
Suite 400  
San Jose, CA 95110  
Tel: 408-490-4224  
Fax: 408-490-2233  
www.dynalab.com

**Microsoft Corporation**

One Microsoft Way  
Redmond, WA 98052-6399  
Tel: 425-882-8080  
www.microsoft.com



**Note:** Dynalab Inc. provides Chinese, Japanese, and Korean fonts. You can also purchase fonts from their offices in Taiwan and Hong Kong. See the Dynalab web page for the address of these offices.

## Creating Bitmap Fonts From TrueType Fonts

To create bitmap fonts from TrueType fonts, you must run PrintSet under the correct language version of Windows. For example, to create a Traditional Chinese font, you must run PrintSet under Traditional Chinese Microsoft Windows. In addition, you must install the font using Microsoft Windows in order for PrintSet to correctly convert it to a bitmap font.


The advantage of bitmap fonts is that they may require less RAM and the printer can image them faster. When you download bitmap characters to the printer, you must select the size of the characters. Make sure that you select the size you want to use in your formats. If you magnify the character size in the printer, the edges of the characters will be jagged.



**Note:** You can create Traditional or Simplified Chinese bitmap fonts up to a size of 16 points at 400 dpi or 32 points at 200 dpi. The EasyCoder F4, PF2i, PF4i, PM4i, PX4i, and PX6i do not support bitmapped Chinese, Japanese, or Korean fonts.

**To create bitmap fonts from TrueType fonts**

- 1 Start PrintSet.
- 2 Make sure that the communications settings are correct.
- 3 From the **Configuration** menu, select **Fonts** or on the toolbar, click the **Font Setup** button. The Font Setup dialog box appears.

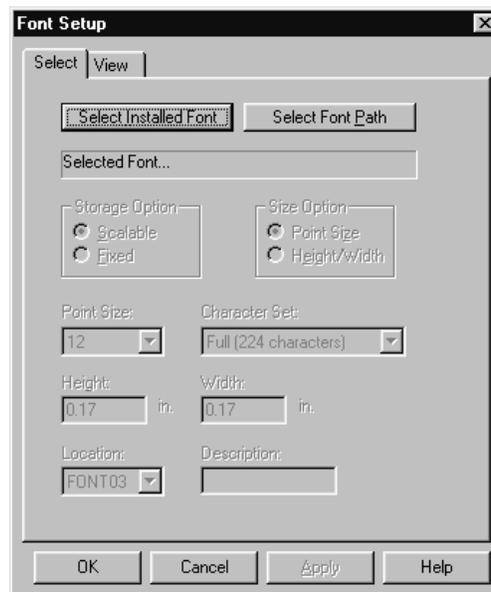

- 4 To select a font by font name, click **Select Installed Font**. Select the TrueType font name from the list of installed fonts.  
To select a font by pathname, click **Select Font Path**. Select a drive and a path. From the **File name** list box, select the TrueType font file (\*.TTF).
- 5 In the **Storage Option** box, click the **Fixed** option button.
- 6 In the **Size Option** box, click either the **Point Size** option button or the **Height/Width** option button.
- 7 If you select Point Size, in the **Point Size** list box, select the size of the bitmap characters. One point equals 1/72 of an inch.  
If you select Height/Width, in the **Height** box and **Width** box enter the height and width (in inches or centimeters) of the bitmap characters.



**Note:** If you enter 0 for the width, you preserve the aspect ratio of the font.

**8** In the **Character Set** list box, you may restrict the number of bitmap characters that you want created. Restricting the number of characters will create a smaller font that requires less memory and takes less time to install.

If you are creating a Chinese, Japanese, or Korean font, you must select the language you are using. You can choose from these selections:

- Japanese (Shift JIS)
- Traditional Chinese (BIG 5)
- Simplified Chinese (GB 2312)
- Korean (KSC 5601)

**9** In the **Location** list box, choose the font number you wish to assign to the font. Intermec printers identify fonts by their font number.

**10** Click the **View** tab. The selected font and the designated printer location appear in the fonts to send box.

You may select additional fonts to add to local memory. Each font must have a unique location number.

## Selecting the Printer Language

When you install a TrueType font, you must select the correct printer language. To choose the correct language, use the IPL command, Printer Language, Select. If the language setting you have chosen does not work, use the default language setting.

## Installing Code Page Tables

If you install a Japanese, Chinese, or Korean TrueType font, you must also install the code page tables. See the “Printer Language, Select” command in Chapter 7 for a list of code pages. You can download code pages from Intermec’s web site at [www.intermec.com](http://www.intermec.com), and then from the **Service & Support** menu, choose **Software Downloads**. The files were compressed using Microsoft WinZip application and have the file extension .ZIP. After decompressing the file, install your code page as described in the procedure below.

### To install the code page tables in your printer

**1** Copy the tables you wish to use to your PC:

- SJIS.PCF - Japanese (Shift JIS)
- BIG5.PCF - Traditional Chinese (Big 5)
- GB.PCF - Simplified Chinese (GB 2312)
- KSC.PCF - Korean (KSC5601)

- 2 Use Windows HyperTerminal to configure the PC to match the printer settings. When using double-byte fonts, the recommended printer configuration is COM 1, 19,200 bits per second, no parity, 8 data bits, 1 stop bit, and XON\XOFF flow control.
  - a Start HyperTerminal. (HyperTerminal is often located inside the Accessories folder.) The Connection Description screen appears.
  - b In the **Name** field, enter a name for this connection (such as Printer) and select an icon (optional). Click **OK**. The Connect To screen appears.
  - c In the Connect Using list box, select the appropriate port. Click **OK**. The port properties screen appears.
  - d Enter data, matching the PC's settings to the printer settings. Click **OK**. The HyperTerminal main menu appears.
  - e From the **Transfer** menu, select **Send File**. The Send File screen appears.
  - f In the **Name** field, locate your file, and then click **Send**.

## Using IPL Commands to Download Fonts

Although the easiest way to download fonts is with PrintSet, you can also use the IPL command set to create and download user-defined bitmap and outline fonts to your Intermec printer.

### Downloading Bitmap Fonts

To learn more about bitmap font formats, see “Creating User-Defined Bitmap Fonts” in Appendix C.

### Downloading Outline Fonts

If you need to download an outline font but you cannot use PrintSet, you can:

- create a program to convert the outline font to a format you can download to the printer.
- manually convert the outline font to a format you can download to the printer.

When you convert an outline font to a format you can download to the printer, you must change the font character data into nibblized data that the printer can interpret. When you nibblize data, you divide each byte of data into two bytes.

For example:

byte 0xAB becomes two bytes: 0x41, 0x42 or text string “AB”

**To manually download an outline font to your printer****1** Nibblize the font data.

Divide the nibblized data into separate lines preceded by the `j` command. (See the “Outline Font, Download” command in Chapter 7.) Remember to wrap the entire line in `<STX>` and `<ETX>`. You need short lines for limited message length protocols and to make modifying easier by using an editor or word processing program.

**2** Include IPL commands to instruct the printer what to do with the font data. For help, see the following example and Chapter 7, “IPL Command Reference.”**3** Send the commands to the printer using one of the methods described in Chapter 1.

This is an example of a nibblized outline font file that includes IPL commands to send it directly to a printer.

**Nibblized Outline Font File Example**

Command	Definition
<code>&lt;STX&gt;R&lt;ESC&gt;C&lt;ESC&gt;P&lt;ETX&gt;</code>	Enter Program mode.
<code>&lt;STX&gt;J03,Times,1;&lt;ETX&gt;</code>	Create TrueType font 3 and give it the name Times.
<code>&lt;STX&gt;j0001000000110100000400604c545348efe24cd00000;&lt;ETX&gt;</code>	TrueType data string.
<code>&lt;STX&gt;j00ebf468646d78d956f5ab0001135800001508686561;&lt;ETX&gt;</code>	TrueType data string.
<code>&lt;STX&gt;j0d2000012f04000006a3706f7374d43c8176000135a8;&lt;ETX&gt;</code>	TrueType data string.
:	Several TrueType data strings not shown due to space constraints.
:	
:	
<code>&lt;STX&gt;j00b3008200b0008725ba0000;&lt;ETX&gt;</code>	Last TrueType data string.
<code>&lt;STX&gt;R&lt;ETX&gt;</code>	Exit Program mode.

**Using Third-Party Software Applications to Download Fonts**

Use your third-party software to download fonts into a user-defined font format that the printer can interpret. Refer to your third-party documentation for more information.





# **3 Designing Bar Code Labels**

This chapter explains how to design and print your own labels using IPL commands. It covers the basic elements of label design and provides examples to guide you in designing your own labels.

## Introduction to Formats

To print a label on an Intermec printer, you must create a label format, send that format to the printer, send data to fill in the fields in the format, and then print the label.

A format is a template that defines how the information prints on a label. For example, if you want to print a number on a label, the format must indicate the location of the number, its font and size, and whether the number has a vertical or horizontal orientation.

You can define a format either by downloading IPL commands or by using a label generation program. The printer stores the format in its RAM or flash module. You can use the format at any time. You can call it up to print labels, or call it up in Program mode to modify one or more of its fields on the host.

If you intend to regularly reload a format, you can use the temporary format parameter (\*) with some printers. The use of format \* results in an optimal use of flash-based storage memory because the printer stores it in RAM and deletes it when the printer power is turned off.

## Tutorial for Designing and Creating a Label Format

Label formats are composed of several different fields that determine where and how different types of data appear in the label design. The fields on a label may differ in size, location, orientation, and data type. You must define information that you plan to print on the label as a field in the label format. Once you define the fields, you can pass data into the fields and print them.

This tutorial assumes that you are using IPL commands.

### To design a basic label format

**1** Using a label from your roll of media, sketch an example of a format that you want to create. Your format can include any or all of these fields:

- Human-readable
- Bar code
- Line
- Box
- User-defined characters (UDCs) or graphics

In this example, you will design a simple label that includes a human-readable field, a line field, and a bar code field.


- 2 Determine the placement of each field from the label origin. The label origin (oØ,Ø) is the top left corner of the label.
  - To determine the horizontal or X origin of each field, measure the distance from the left side of the label to the upper left corner of the field.
  - To determine the vertical or Y origin of each field, measure the distance from the top of the label to the upper left corner of the field.



**Note:** On the 4400 and 7421 printers, be sure to use the label width command to set the actual width of your labels; otherwise, the Y origins will be incorrect.

When you combine the two numbers, they form the field origin oX,Y.

In the illustration below, the horizontal or X origin of the human-readable field measures 12.7 mm (0.5 in) from the left side of the label and the vertical or Y origin measures 6.35 mm (0.25 in) from the top of the label.

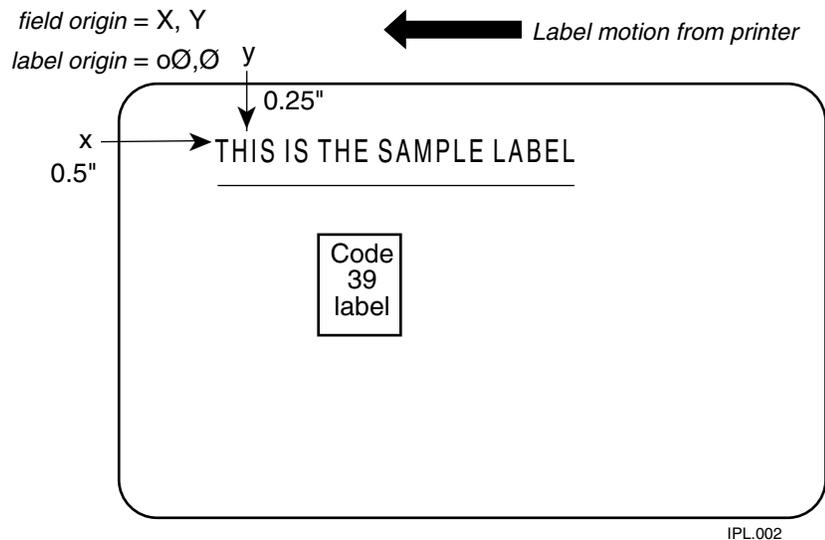

- 3 Convert the measurements for the human-readable field from inches to dots. Use this equation:

$$25.4 \text{ mm (1 in)} = 203 \text{ dots}$$

$$1 \text{ mm} = 16 \text{ dots}$$

In this example, the human-readable field origin in dots is:

$$12.7 \text{ mm (0.5 in)} \times 203 \text{ dots} = 102 \text{ dots (X dimension)}$$

$$6.35 \text{ mm (0.25 in)} \times 203 \text{ dots} = 51 \text{ dots (Y dimension)}$$

The origin for the human-readable field is o102,51 (oX,Y).



**Note:** If you have a 300 dpi or 406 dpi printer, substitute your dpi where you see 203 dots in these equations.

- 4 Convert the measurements for the line field and the bar code field to complete this example.

**To create or program the label format**

- 1 Choose a bar code symbology and a human-readable font that suit your needs.

For this example, you are going to use the proportional outline font and the Code 39 symbology. See Chapter 7, “IPL Command Reference,” for information on the different symbologies and fonts available to you.

- 2 Define the parameters for each type of field in the format.

Field Type in Label	Represented By
Human-readable	H
Bar code	B
Line	L
Box	W
User-defined characters (UDCs) or graphics	U

See “Commands Listed by Task” in Chapter 6 for a list of the parameters you can define for each type of field. For example, you need to define the following parameters for a human-readable field:

Parameter	Value for this Example
Field type	H0
Field origin	o102, 51
Font	c25 (outline font)
Field direction	f0 (horizontal)
Height	h20 (multiplied 20 times)
Width	w20 (multiplied 20 times)
Field source and number of characters	d0, 30

- 3 Create command strings for each type of field. You must bracket your field information between the start of text character (<STX>) and the end of text character (<ETX>).

When you combine the parameters in the previous table into a command string, it should look like this:

```
<STX>H0;o102,51;c25;f0;h20;w20;d0,30;<ETX>
```

- 4 Combine the command strings you defined into one file and add the following commands bracketed by <STX> and <ETX>:

Command	Description
<ESC>C	Selects Advanced mode
<ESC>P	Enters Program mode
E4 ; F4 ;	Erases what was in format 4 and creates a new format 4
R	Saves the format and exits to Print mode
<ESC>E4	Accesses format 4
<ETB>	Prints the format

- 5 Create the data lines for the human-readable field and the bar code field. Do this by completing the following tasks:
- Type the information that you want to appear in the human-readable field and the bar code field in two separate lines.
  - Separate the information with a <CR> at the end of the first text string.

The <CR> tells the printer to enter the text into different fields. The first line will be the text for the human-readable field and so on.

- Preface the data lines with the <CAN> command. It erases all data in the current format.

Your command strings should look like this:

Command String	Definition
<CAN>	Erases all data in current format
THIS IS THE SAMPLE LABEL<CR>	Text for the human-readable field
SAMPLE	Text for the bar code field

- Bracket the command strings between <STX> and <ETX>.
- 6 Combine all of the command strings into one format and it should look like the following example.



**Note:** The difference between the lowercase letter “l” and the numeral “1” is not very noticeable in the Courier font. Make sure that you enter the correct command.


### Sample Label Command Strings

Command	Definition
<STX><ESC>C<ETX>	Select Advanced mode
<STX><ESC>P<ETX>	Enter Program mode
<STX>E4 ; F4 ; <ETX>	Erase format 4, create format 4
<STX>H0 ; o102 , 51 ; f0 ; c25 ; h20 ; w20 ; d0 , 30 ; <ETX>	Edit/create human-readable field 0
<STX>L1 ; o102 , 102 ; f0 ; l575 ; w5 ; <ETX>	Edit/create line field 1
<STX>B2 ; o203 , 153 ; c0 , 0 ; h100 ; w2 ; i1 ; d0 , 10 ; <ETX>	Edit/create Code 39 bar code field 2 with interpretive field enabled
<STX>I2 ; h1 ; w1 ; c20 ; <ETX>	Create interpretive field to go with bar code field 2
<STX>R ; <ETX>	Save format and exit to Print mode
<STX><ESC>E4<ETX>	Access format 4
<STX><CAN><ETX>	Erase all data
<STX>THIS IS THE SAMPLE LABEL<CR><ETX>	Data for human-readable field 0
<STX>SAMPLE<ETX>	Data for bar code field 2
<STX><ETB><ETX>	Print



**Note:** The line breaks in the preceding example are shown for formatting purposes only and do not necessarily represent carriage returns.

This format prints the label shown in the next illustration.

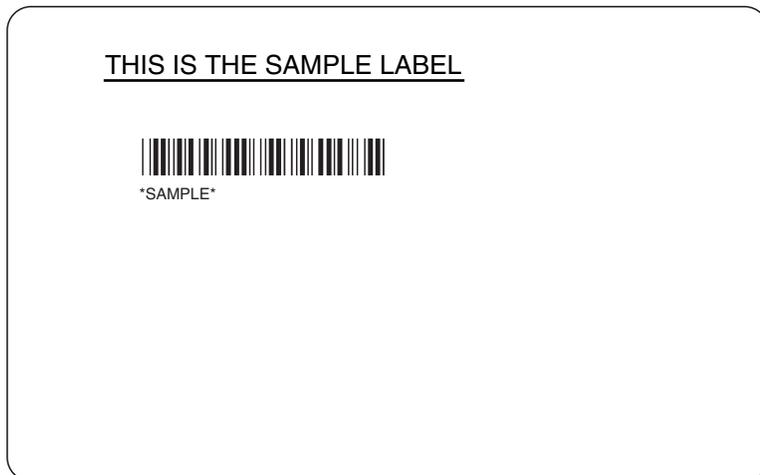

IPL004.eps

## Defining Label Design Fields

Define each type of field to hold a certain type of data. You can define:

- Bar code fields (with or without interpretive fields)
- Human-readable fields
- Graphic fields
- Line fields
- Box fields

You must define the data you plan to print on your label as a field in the label format. Each field type gives you options for interpreting your data. The fields that contain the most options are bar code fields and human-readable fields.

### Bar Code Fields

You can print bar codes in any of these symbologies:

- |               |                      |                |
|---------------|----------------------|----------------|
| • Codabar     | • Code 93            | • MaxiCode     |
| • Code 2 of 5 | • Code 128           | • MicroPDF 417 |
| • Code 11     | • Code One           | • QR Code      |
| • Code 16K    | • Data Matrix        | • PDF 417      |
| • Code 39     | • HIBC               | • POSTNET      |
| • Code 49     | • Interleaved 2 of 5 | • UPC/EAN      |

See Chapter 7, “IPL Command Reference,” for a complete list of commands to select the appropriate bar code symbology. “Commands Listed by Task” in Chapter 6 lists the command options available for editing bar code fields.

### Human-Readable Fields

You can print human-readable fields in any one of the printer’s internal fonts or user-defined fonts. The printer contains several resident bitmap fonts in a range of sizes and styles.

You can change the size of the font character by using the width and height magnification or by using the pitch or point-size commands. The fonts themselves remain unchanged. The font character charts in Appendix B, “Character Sets,” illustrate the complete character set for each font.

The printer supports nine different international character sets for each command set mode. In Emulation mode, the international character substitution is compatible with Intermecc 8636/8646 printers. In Advanced mode, the substitution complies with the ISO standards. The printer may also contain character sets for IBM translation and code pages.

The internal bitmap fonts of the printer include:

- Standard bitmap fonts measured in dots
- Bitmap fonts recognized by optical character recognition (OCR) programs
- Bitmap fonts measured in point sizes
- Outline fonts
- Bitmap monospaced fonts

## **Line and Box Fields**

Use the command set (see Chapter 7, “IPL Command Reference”) to define line or box fields on a label. You can use the commands to determine whether a box or line appears vertically or horizontally and to set the line length and thickness.

The following example uses vertical and horizontal lines to separate fields on a label and uses a box field to make a label border. This format uses bold text to highlight the lines that contain line or box fields. This label format prints the label shown on the next page.

**Lines and Boxes Format**

```

<STX><ESC>C0<ETX>
<STX><ESC>P;<ETX>
<STX>E4;F4, DEMO 4;<ETX>
<STX>L1;o11,447;f0;l1207;w4;<ETX>
<STX>L2;o11,285;f0;l1207;w4;<ETX>
<STX>W3;o11,0;f0;l1207;h802;w4;<ETX>
<STX>B4;o658,650;f0;h102;w2;c0,0;i1;r1;d0,11;<ETX>
<STX>I4;o658,752;f0;h1;w1;c20;r0;b0;<ETX>
<STX>B5;o87,650;f0;h102;w2;c0,0;i1;r1;d0,11;<ETX>
<STX>I5;o87,752;f0;h1;w1;c20;r0;b0;<ETX>
<STX>H6;o34,183;f0;h1;w1;c22;r0;b0;d0,17;<ETX>
<STX>H7;o35,143;f0;h1;w1;c21;r0;b0;d3,BASIS WT. 39-4838;<ETX>
<STX>H8;o389,305;f0;h1;w1;c21;r0;b0;d3,ROLLS;<ETX>
<STX>H9;o40,305;f0;h1;w1;c21;r0;b0;d3,ROLL WIDTH;<ETX>
<STX>L10;o11,609;f0;l1207;w4;<ETX>
<STX>H12;o1022,508;f0;h1;w1;c22;r0;b0;d0,7;<ETX>
<STX>H13;o1022,467;f0;h1;w1;c21;r0;b0;d3,WEIGHT;<ETX>
<STX>H14;o539,508;f0;h1;w1;c22;r0;b0;d0,11;<ETX>
<STX>H15;o539,467;f0;h1;w1;c21;r0;b0;d3,LOCATION;<ETX>
<STX>H16;o42,508;f0;h1;w1;c22;r0;b0;d0,15;<ETX>
<STX>H17;o43,467;f0;h1;w1;c21;r0;b0;d3,CUSTOMER ORDER NUMBER;<ETX>
<STX>H18;o840,346;f0;h1;w1;c22;r0;b0;d0,13;<ETX>
<STX>H19;o840,305;f0;h1;w1;c21;r0;b0;d3,ORDER ITEM NUMBER;<ETX>
<STX>H20;o389,346;f0;h1;w1;c22;r0;b0;d0,7;<ETX>
<STX>H21;o34,346;f0;h1;w1;c22;r0;b0;d0,11;<ETX>
<STX>H22;o747,183;f0;h1;w1;c22;r0;b0;d0,15;<ETX>
<STX>H23;o743,143;f0;h1;w1;c21;r0;b0;d3,GRADE DESCRIPTION;<ETX>
<STX>H24;o13,0;f0;h51;w34;c25;r0;b3;d3, SHIPPING LABEL ;<ETX>
<STX>R<ETX>
<STX><ESC>E4<CAN><ETX>
<STX><ESC>F4<LF>INTERMEC<ETX>
<STX><ESC>F5<LF>372181192<ETX>
<STX><ESC>F6<LF>38448379237<ETX>
<STX><ESC>F12<LF>230<ETX>
<STX><ESC>F14<LF>3839494<ETX>
<STX><ESC>F16<LF>372181192<ETX>
<STX><ESC>F18<LF>234-LOFT<ETX>
<STX><ESC>F20<LF>12<ETX>
<STX><ESC>F21<LF>338438<ETX>
<STX><ESC>F22<LF>A-PLUS QTY<ETX>
<STX><ETB><FF><ETX>

```

SHIPPING LABEL			
BASIS WT. 39-4838		GRADE DESCRIPTION	
38448379237		A - PLUS QTY	
ROLL WIDTH	ROLLS	ORDER ITEM NUMBER	
338438	12	234 - LOFT	
CUSTOMER ORDER NUMBER	LOCATION	WEIGHT	
372181192	3839494	230	
 INTERMEC		 372181192	

IPL006.eps

**Sample Label in Lines and Boxes Format:** This illustration shows the label printed using the command strings on the previous page.

## Graphic Fields

You must define a graphic field if you want to print a graphic image on a label. Before you can use this field, you need to download the graphic to the printer. Once you download the graphic, you can use it in any format.

Use the PrintSet printer installation software to easily download graphics to the printer. PrintSet automatically converts the graphic into a six bits per byte format that your printer can understand.

If you are using third-party label-generation software, it converts your graphic file to a UDC format that the printer can interpret and downloads it to the printer.

If you want to design your own graphic, refer to “Creating User-Defined Bitmap Graphics” in Appendix C. You must send graphics as either one bit per byte or six bits per byte bitmap images. The maximum size that you can define a graphic to be is limited by the capacity of your printer. Due to message length constraints, you must design large graphics in the six bits per byte format.

You can use Direct Graphics mode to reduce the time it takes to download and print an image. For more information on direct graphics, see Appendix E, “Using Direct Graphics Mode.”

## Editing Label Formats and Working With Fields

In addition to understanding the different types of printable fields on the printer, you need to know how to arrange them to define or change the format of a label. The following sections use examples to describe the commands that position, size, rotate, and edit label fields. For a complete list of all programming commands, see Chapter 6, “Finding IPL Commands in This Manual.”

Whenever you create a format, the printer automatically creates a human-readable field zero (H0) along with it. The printer creates the H0 field with all field parameters set to the default setting. You can only delete field zero after you create one or more other fields. You cannot delete the last field in a format.

### Defaults for the H0 Field

Command	Definition
o0,0;	Field origin is 0,0.
f0;	Field direction is horizontal with respect to the label motion from printer.
h1;	Field height magnification is one.
w1;	Field width magnification is one.
c2;	Selects the 10 x 14 standard font.
b0;	Selects no border around human-readable field.
r0;	Selects horizontal orientation of characters.
d0,30;	You enter variable data in Print mode. The maximum number of characters you can enter into this field is 30.

When creating a new format field, it is not possible to specify field zero as anything other than human-readable field zero (H0) without creating another field first. For example, you cannot make field zero a bar code field by doing the following:

```
<STX><ESC>P;E1;F1;B0;<ETX>
```

To make field zero a bar code field, you have to delete human-readable field 0 and then define bar code field 0. To do this, you must create a temporary field (L39) before you delete human-readable field zero (H0):

```
<STX><ESC>P;E1;F1;L39;D0;B0;D39;<ETX>
```

The next table describes each command in the string.

### **Label Format Editing Command Examples**

<b>Command</b>	<b>Definition</b>
<ESC>P;	Enters Program mode
E1;	Erases format 1
F1;	Creates format 1
L39;	Creates line field (temporary field)
D0;	Deletes field zero
B0;	Creates bar code field zero
D39;	Deletes the temporary line field

When numbering the fields in a format, it is important to remember to give every field a different number. Never use a field number more than once. You can have up to 200 fields numbering from 0 to 199. The importance of field numbering comes into play when you are in Print mode and are entering data into the label format. At this point, you can only identify the fields by a number, not by the type of field.

Each bar code field can have an interpretive field associated with it. For example, bar code field B33 would have an interpretive field I33. All interpretive fields use up a field location, starting from the top of the field directory; if B33 is the first bar code field with interpretive text, then field I33 would use location 199. You can see how the printer uses the fields internally by uploading the format and examining where the interpretives appear. For help, see the “Format, Transmit” command in Chapter 7, “IPL Command Reference.” If you need to use more fields than IPL can accommodate in a single format (because of interpretive fields), you can use pages to combine several formats on one label.

Also keep in mind that you enter data into fields according to their numeric value if you use a <CR> to separate the data. In other words, the first string of data you enter goes into the lowest numbered field, the second string of data you enter goes into the next lowest numbered field, and so on.

## Editing Existing Fields

If you make a mistake in a label format, you may not have to download the entire format again depending on the severity of the mistake. You can change a specific field in a format by sending a command in Program mode. You can modify just the incorrect format fields instead of having to download the entire format again.

When the printer is in Program mode, it uses a field pointer to point to the field to be modified. The pointer continues to point to the most recently selected field until you select a different format or field.

For the next example, assume that you used the following format:

### Sample Format

Command	Description
<STX><ESC>C<ETX>	Selects Advanced mode
<STX><ESC>P<ETX>	Enters Program mode
<STX>E3 ; F3 ; <ETX>	Erases format 3, Creates format 3
<STX>H0 ; 080 , 100 ; f0 ; c0 ; d0 , 16 ; h1 ; w1 ; <ETX>	Creates field H0
<STX>H1 ; 080 , 120 ; f0 ; c0 ; d0 , 16 ; h1 ; w1 ; <ETX>	Creates field H1
<STX>H2 ; 080 , 150 ; f0 ; c2 ; d0 , 14 ; h1 ; w1 ; <ETX>	Creates field H2
<STX>H3 ; 080 , 190 ; f0 ; c2 ; d0 , 16 ; h1 ; w1 ; <ETX>	Creates field H3
<STX>B4 ; 080 , 0 ; f0 ; c0 , 1 ; h50 ; w1 ; d0 , 11 ; i0 ; p@ ; <ETX>	Creates field B3
<STX>R ; <ETX>	Saves and exits to Print mode

To change the height and width of field 3 to 2 dots, download this command string:

```
<STX><ESC>P ; F3 ; H3 ; h2 ; w2 ; R ; <ETX>
```

The following table describes each command in this string:

### Field Editing Commands in the Sample Format

Command	Description
<ESC>P ;	Enters Program mode
F3 ;	Accesses format number 3 from memory
H3 ;	Accesses field 3
h2 ;	Sets the height to 2 dots
w2 ;	Sets the width to 2 dots
R ;	Returns to Print mode



**Note:** The <STX> and <ETX> commands mark the beginning and end of a message. The semicolon (;) is the command terminator. Except for the last command in a message, all commands in Program mode must end with this terminator.

## Deleting Fields

It is possible to delete any field from a format except for the last field. Use the following command string to delete field 3 from format 4.

```
<STX><ESC>P;F4;D3;R;<ETX>
```

The following table describes each command in this string:

### Command String Descriptions

Command	Description
<ESC>P;	Enters Program mode
F4;	Accesses format 4
D3;	Deletes field 3
R;	Returns to Print mode

## Positioning Fields

Using the IPL command language to position fields is the trickiest part of designing labels. Since you cannot tell exactly how the field looks until it prints, you may need to make several test prints before you get the field positioned correctly.

For all types of fields, determine the print position by defining the coordinates of the upper left corner of the unrotated field.

The field origin is the upper left corner of an unrotated field. To define the coordinates of the field origin, use the origin command (oX,Y) where o is the command that specifies origin, X is the distance from the left side of the label, and Y is the distance from the top of the label.



**Note:** On the 4400 and 7421 printers, be sure to use the label width command to set the printer for the correct label width; otherwise, the Y origins will be incorrect.

The X and Y coordinates of the field origin use dots as their form of measurement. There are 203 dots per inch or 8 dots per millimeter.



**Note:** The 3400e with 400 dots per inch, 3240, and 3440 printers have 406 dots per inch or 16 dots per mm. The 4X30 printers have 300 dots per inch or 12 dots per mm.

To position a field to print approximately 0.25 inch from the left side and 0.5 inch from the top of your label, the origin command is o51,102.



**Field Positioning:** This illustration shows the relative positions of four fields with different origin points.




**Note:** If you are operating your printer in Emulation mode, the dot sizes are doubled (101 dots per inch or 4 dots per mm), so the origin for 1 inch from the top of the label and 0.5 inch from the left side is o25,51.

## Rotating Fields

You can rotate any type of printable field in increments of 90 degrees counterclockwise around the field origin. To position a rotated field, you should keep in mind that the field origin remains on the corner where it was before you rotated the field. If you rotate a field 90 degrees counterclockwise, the origin that was at the upper left corner is now at the lower left corner. Use the Field Direction command *f $n$*  to define the field rotation. See Chapter 7, “IPL Command Reference,” for more information.

- To rotate a field 90 degrees, you must position the lower left corner of the rotated field.
- To rotate a field 180 degrees, you must position the lower right corner of the rotated field.
- To rotate a field 270 degrees, you must position the upper right corner of the rotated field.

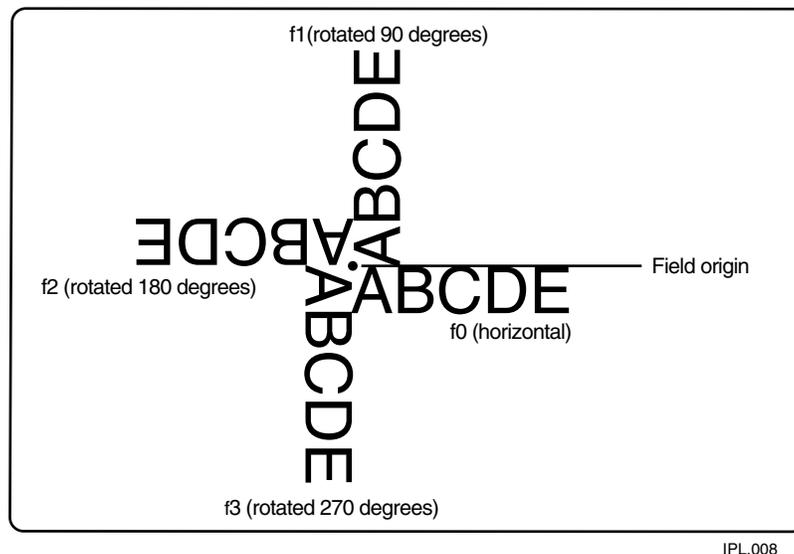

**Field Rotation:** This illustration shows the effects of rotating a field by using the Field Direction command.

## Scaling Fields

You can determine the size of a field by the font or graphic you use and the field magnification factors you apply. The human-readable fonts and bar code symbologies have default sizes, and the user-defined character fields print as large as you design them (up to the maximum), but you can scale each of these fields even further by using magnification commands.

### Magnifying Fonts and Character Fields

The internal fonts in the printer already have sizes associated with them. For example, the letters in font c0 are 7 dots wide by 9 dots high, with a 1-dot gap between characters. If you design a field that prints 10 letters in font c0, the field will be 79 dots wide by 9 dots high.

By applying magnification factors (h for height and w for width), you can increase a field's height or width. If you increase the height to 2 (h2) for the field described above, the field height doubles, and the final field prints 79 dots long by 18 dots high. If you change the height magnification to h3, the field height triples, and the field prints 79 dots by 27 dots.

The default human-readable field H0 prints the 7 x 9 font as follows (assuming you enter the word "example" as data):

EXAMPLE

When you apply a magnification factor of 3 to human-readable field H0, the font now prints the image below:

EXAMPLE

Increasing the width of a text field to 2 makes each letter in the field twice as wide. If you did this to the example above, with field height h2, the final field would print 158 dots wide by 18 dots high.

When you magnify a bitmap font, the edges of the characters become jagged. If you want to print large text characters (greater than 1 inch or 2.54 cm), use an outline font such as c25 (Swiss Mono 721 standard outline font).

### Magnifying Bar Code Fields

You can also use height and width commands to modify bar code fields, but the commands do not behave the same as with human-readable fields.

For bar code fields, the height magnification is the actual dot height of the bar code. If you choose a height magnification of h20, the height of the bar code field will be 20 dots.

Printing narrow bar codes conserves space on each label as well as media; however, if you plan to scan bar codes from a distance, you may need to magnify the bar code widths.

The width magnification factor for bar code fields refers to the width of the narrowest element of the bar code. When you specify a narrow element width of w3, the width of the narrowest element in the symbology is 3 dots wide. The spaces and large element widths grow according to preset ratios for each symbology.



**Note:** You can only print a bar width of 1 if you are printing in drag mode (bars perpendicular to the print head). If you select a width of 1 in picket mode (bars parallel to the print head), the printer defaults to 2.

The default height for bar code fields is 50 dots, and the default width for narrow elements is 1 dot.



**Note:** If you are using the POSTNET symbology, follow the rules for magnifying fonts.

## Designing Pages

A page is a collection of one or more formats that you combine to print at the same time. This feature is helpful when you need to print several different labels for an application at once. For example, you may need to attach one type of label to a product and a different type of label to its container. With the page printing capability, you can print both labels at the same time. Because you can print pages of several formats at once, you can also print labels on media rolls that have different sizes and shapes of labels already precut.

When you group label formats into a page, you assign the formats to positions designated by the letters a through z. You can print the formats used in pages independent of each other. The next example shows how to create a page that contains five different formats.

## Label Format Example

The format example on this page is a complex label designed to demonstrate the different types of data that you can print with your printer. This example contains human-readable fields, a bar code field, line fields, a box field, and a graphic field (the diamond).

Cat. No.	432-3221	Std. Qty.	100
Size	1 3/4"	DUPLX ANGLE CONNECTOR	
Lot 23455 262948	<ul style="list-style-type: none"> <li>- For Flexible Steel Conduit and .375" - .625" Diameter Armored and Nonmetallic Sheath Cables</li> <li>- For Smooth or Interlocking Sheath Metal Clad Cables .375" - .675" Dia. (UL only)</li> </ul>		
	ACE CORP. ADDRESS 3010 FICTION USA	 *307 91747*	

IPL011.eps

**Complex Label:** This illustration shows a label that includes human-readable, box, bar code, line, and graphic fields.

## Graphic for Example

Download the six bits per byte diamond graphic explained in “Creating Six Bits Per Byte User-Defined Graphics” in Appendix C.

## Format for Example

```

<STX><ESC>C<ETX>
<STX><ESC>P<ETX>
<STX>E5;F5;<ETX>
<STX>H0;o35,40;c25;d3,Cat.;k12;<ETX>
<STX>H1;o35,70;c25;d3,No.;k12;<ETX>
<STX>H2;o165,0;c25;d3,432-3221;k36;<ETX>
<STX>H3;o785,40;c25;d3,Std.;k12;<ETX>
<STX>H4;o785,70;c25;d3,Qty.;k12;<ETX>
<STX>H5;o915,0;c25;d3,100;k36;<ETX>
<STX>L6;o740,10;f3;l130;w8;<ETX>
<STX>L7;o25,140;l1130;w8;<ETX>
<STX>H8;o30,165;c25;f3;r1;d3,Size;k12;<ETX>
<STX>H9;o80,170;c25;d3,1";k30;<ETX>
<STX>H10;o150,165;f3;r1;c25;d3,3/4;h3;w7;<ETX>
<STX>L11;o300,140;f3;l130;w8;<ETX>
<STX>L12;o25,270;l275;w8;<ETX>
<STX>H13;o60,560;f1;c25;d0,20;h3;w2;<ETX>
<STX>L14;o140,270;f3;l310;w8;<ETX>
<STX>H15;o360,120;c22;d3,DUPLEX ANGLE CONNECTOR;h3;w1;<ETX>
<STX>H16;o170,320;c25;d3,- For Flexible Steel Conduit and .375" -
.625";k12;<ETX>
<STX>H17;o212,375;c25;d3,Diameter Armored and Nonmetallic Sheath
Cables;k12;<ETX>
<STX>H18;o170,450;c25;d3,- For Smooth or Interlocking Sheath Metal
Clad;k12;<ETX>
<STX>H19;o212,505;c25;d3,Cables .375" - .675" Dia. (UL only);k12;<ETX>
<STX>L20;o25,580;l1130;w8;<ETX>
<STX>U21;o40,610;c2;h9;w9;<ETX>
<STX>H22;o210,600;c25;d3,ACE CORP.;k24;<ETX>
<STX>H23;o210,670;c25;d3,ADDRESS 3010;k12;<ETX>
<STX>H24;o210,710;c25;d3,FICTION USA;k12;<ETX>
<STX>B25;o685,615;c0,0;d0,20;i1;h100;p@;<ETX>
<STX>I25;h2;w2;<ETX>
<STX>L26;o590,580;f3;l185;w8;<ETX>
<STX>W27;o015,000;w10;l1150;h775;<ETX>
<STX>R<ETX>

```

## Data for Example

```
<STX><ESC>E5<CAN><ETX>
<STX>Lot 23455 262948<CR><FS>307 91747<FS><ESC>I2<ETX>
<STX><RS>5<ETB><ETX>
```

Use the <ETX> and <STX> characters to mark the beginning and end of the command strings. The other characters are explained in the following table. Most of the printer command lines explained below contain commands previously not discussed in this chapter. Refer to previous examples for clarification of the lines that are not explained, or see Chapter 7, “IPL Command Reference,” for a further explanation of the command language.

### Label Format Example Command Descriptions

Command	Description
<ESC>C	Selects Advanced mode.
<ESC>P	Selects Program mode.
E5 ; F5 ;	Erases anything previously stored as format five and accesses the location for format five.
H0 ;	Defines field 0 as a human-readable field.
o35 , 40 ;	Sets the origin of field 0 at coordinates (35,40).
c25 ;	Sets the font for field 0 to font 25.z
d3 , Cat . ;	Sets the data for field 0 to have the constant value: Cat.
k12 ;	Sets the point size to 12.
L6 ;	Defines field 6 as a line field.
o740 , 10 ;	Sets the origin for field 6 at (740,10).
f3 ;	Rotates field 6 by 270 degrees counterclockwise around the field origin.
l1300 ;	Sets the length of the line in field 6 to 130 dots.
w8 ;	Sets the width of field 6 to 8 dots.
H8 ;	Defines field 8 as a human-readable field.
o30 , 165 ;	Sets the origin of field 8 at (30,165).
c25 ;	Defines the font for field 8 as font 25.
f3 ;	Rotates field 8 by 270 degrees counterclockwise around the origin.
r1 ;	Rotates the characters in field 8 by 90 degrees counterclockwise.
d3 , Size ;	Defines the constant data for field 8.
k12 ;	Sets the point size to 12.
H10 ;	Defines field 10 as a human-readable field.
o150 , 165 ;	Sets the origin for field 10 at (150,165).
f3 ;	Rotates field 10 by 270 degrees counterclockwise around the origin.
r1 ;	Rotates the characters in field 10 by 90 degrees counterclockwise.
c25 ;	Sets the font for field 10 to font 25.
d3 , 3/4 ;	Defines constant data for field 10.
k12 ;	Sets the point size to 12.

**Label Format Example Command Descriptions (continued)**

<b>Command</b>	<b>Description</b>
H13 ;	Defines field 13 as a human-readable field.
o60,560 ;	Sets the origin of field 13 at (60,560).
f1 ;	Rotates field 13 by 90 degrees around the origin.
c25 ;	Determines that field 13 prints in font 25.
d0,20 ;	Specifies that data for field 13 will be entered during Print mode and that the data will be a maximum of 20 characters long.
k10 ;	Sets the point size to 10.
U21 ;	Defines field 21 as a graphic field.
o40,610 ;	Sets the origin of field 21 at (40,610).
c2 ;	Determines that field 21 prints in font two.
h9 ;	Sets the height to nine times the original size.
w9 ;	Sets the width to 9 dots.
B25 ;	Defines field 25 as a bar code field.
o685,615 ;	Sets the origin of field 25 at (685,615).
c0,0 ;	Sets the bar code font to Code 39 with no check digit.
d0,20 ;	Determines that the data for field 25 is entered during Print mode and its maximum length is 20 characters.
i1 ;	Determines that an interpretation of the bar code prints with start and stop characters included.
h100 ;	Determines that the bar code height is 100 dots.
p@ ;	Clears all prefixes from the bar code field.
I25	Edits the interpretive field for bar code field 25.
h2	Sets the height of the interpretive field to twice its original height.
w2	Sets the width of the interpretive field to 2 dots.
W27 ;	Defines field 27 as a box field.
o015,000 ;	Sets the origin of field 27 at 15,0.
w10 ;	Defines the line width of the box as 10 dots.
l1150 ;	Defines the length of the box as 1150.
h775 ;	Sets the height of the box to 775.
R	Sets the printer in Print mode.
<ESC>E5	Accesses format 5 from the printer memory.
<CAN>	Clears all host-entered data for the current format and sets the field pointer to the lowest numbered data-entry field.
Lot 23455 262948<CR>	This is the data intended for the first data-entry field. <CR> instructs the printer to go to the next data-entry field.
<FS>	Specifies that the following data is to be incremented.
307 91747	This is the data intended for the next data-entry field (specified as data to be incremented).
<FS>	Specifies that the preceding data is to be incremented.
<ESC>I2	The data surrounded by <FS> commands is to be incremented by a value of 2 after each label is printed.
<RS>5	Sets the number of labels to print when the print command is executed.
<ETB>	Tells the printer to print the label.





# 4 Troubleshooting

This chapter describes the problems that may occur as a result of using IPL commands incorrectly. If you do not find your problem listed here, see the troubleshooting information in your printer user's manual.

## Troubleshooting Checklist

Even though Intermec designed your printer to operate under harsh conditions, you may still encounter error messages. You can easily fix most of the errors you encounter and consequently not delay operation of the printer for very long.

If you receive an error message or encounter a functional problem with the printer, you should perform these steps:

### To troubleshoot your printer

- 1 Send a <BEL> command to the printer and see if the printer sends an error message to the host in response.
- 2 If there is an error message, find it in the section called “Interpreting Error Codes and Solving Problems,” later in this chapter. Follow the instructions in the table to correct the problem.

Or:

If the printer does not send an error message to the host, try to locate the symptom in the “Printer Operation Problems” and “Print Quality Problems” sections of the printer user’s manual. Follow the instructions in the manual to correct the problem.

- 3 Clean the printer components and check all connections. See your user’s manual for instructions.
- 4 If the problem persists, contact Intermec Technical Support (1-800-755-5505) in North America. If you are an international customer, contact your local Intermec representative.

## How the Printer Handles Error Conditions

This section describes how the printer handles error conditions that may occur while you use IPL commands.

### Syntax Errors

The printer responds to syntax errors in the messages it receives from the host by attempting to execute the commands. It does not ignore a command with a syntax error; instead, the printer produces output, even if it is wrong. This output helps determine what went wrong and what should be done to correct the problem.

## Parameter Errors

Certain commands require optional parameters. If you do not supply these parameters, the printer substitutes default values. If a parameter is above its maximum range limit, the printer uses the maximum value. If it falls below the minimum range, the printer uses the minimum value. See Chapter 7, “IPL Command Reference,” for the range and default value for each command.

## Image Overrun Errors

Image overrun occurs when a label is too complex to image for a given print speed. An overrun will cause the printer to abort the label being printed. This error is most common on labels over 12.7 cm (5 in) long.

The printer automatically attempts to correct for this error condition by resetting to the lowest print speed and to the highest number of image bands, then repeats printing the label. The printer remains at this setting until you reset it. If an image overrun still occurs, printing for that batch of labels stops and the printer executes any following commands.



**Note:** Installing optional memory expansion may decrease image overrun errors.

## Invalid Numeric Character Errors

If you include non-numeric characters within a numeric data string in a command, the printer ignores them and continues to process the rest of the valid numeric characters. If a non-numeric character begins the numeric data string, however, the printer uses a default value for the affected command.

Here are two examples of valid numeric character strings and one example of an invalid string:

```
12a valid
1a2 valid
a12 invalid
```

## Insufficient Storage Memory Errors

Before storing new formats, graphics, or user-defined fonts in the static RAM or flash, the printer ensures that it has sufficient memory to store them. If there is insufficient memory, the printer ignores the last editing session. The printer preserves the existing data in the storage memory.

## Interpreting Error Codes and Solving Problems

Most of the problems you may encounter cause the printer to send an error code to the host. To correct the error, find the error code in the following table and complete the instructions in the solution column.

### Error Codes and Possible Solutions

Error Code	Description of Problem	Solution
00	No error.	No action is necessary.
02	Invalid number of bar code characters (UPC/EAN).	Verify the number of bar code characters used in the Bar Code, Select Type command.
06	Invalid supplemental character count (UPC/EAN).	Make sure that the supplemental data consists of either two or five characters.
07	More than one supplemental delimiter (UPC/EAN).	Make sure that you have only one supplemental delimiter (“.”) between the bar code data and the supplemental data.
11	Invalid bar code data.	Verify data in the label format.
12	Data count exceeded.	Data count should not exceed what is specified for the field.
13	Entering data in non-data entry field.	Check the field for accuracy.
21	Quantity or batch count out of range.	Quantity of labels or number of batches should be between 1 and 9999.
22	Field increment/decrement out of range.	Quantity should be between 1 and 9999.
23	Intercharacter/message delay out of range.	Delay should be between 0 and 9999.
24	Missing preamble/postamble data.	Change the configuration command to no preamble/postamble or include preamble/postamble data.
25	Invalid format transmission syntax.	Check the Format, Transmit command syntax. The correct syntax is <ESC>x <i>n</i> with <i>n</i> ranging from 0 to 19 on most printers. On some printers, such as the 3440, <i>n</i> ranges from 0 to 99. For more information, see the “Format, Transmit” command in Chapter 7.
26	Invalid page transmission syntax.	Check the Page, Transmit command syntax. The correct syntax is <ESC>y <i>n</i> with <i>n</i> ranging from 0 to 9.
27	Invalid font transmission syntax.	Check the Font, Transmit command syntax. The correct syntax is <ESC>v <i>n</i> . Values for <i>n</i> vary depending on your printer model. For more information, see the “Font, Transmit” command in Chapter 7.
28	Invalid UDC transmission syntax.	Check the User-Defined Characters, Transmit command syntax. The correct syntax is <ESC>u <i>n</i> with <i>n</i> ranging from 0 to 99.

**Error Codes and Possible Solutions (continued)**

<b>Error Code</b>	<b>Description of Problem</b>	<b>Solution</b>
32	Non-immediate command or data received after buffer full.	Allow the printer to empty the buffer contents before sending commands or data.
33	Invalid field delimiters.	Check for all pairs of field delimiters and make sure both are numeric, or both are alphanumeric.
34	Invalid escape command.	Correct the escape command syntax.
35	Invalid data shift command.	Correct the shift command syntax.
36	Invalid or undefined format number.	Verify that the format numbers are between 0 and 19.
37	Insufficient room in RAM to print format.	Reduce the number of data fields in the format or add more DRAM.
38	Invalid or undefined field number.	Verify the field number in the label format.
41	Syntax error for program commands.	Check the program command for proper syntax.
42	Insufficient room in RAM to store format.	<p>Empty the buffer contents. If the format still does not fit, delete some fields or other data from the format. You may have to remove or reduce the UDCs, formats, or fonts if necessary.</p> <p> <b>Note:</b> Entering &lt;ESC&gt;m tells the host how much memory is installed and how much is available.</p>
43	Too many fields in label format.	You can use up to 200 fields in a format and each field can use up to 250 characters. Reduce field size or delete some fields.
46	Undefined statement.	Check the statement syntax.
52	Invalid UDC/UDF bitmap cell height/width or intercharacter space.	Verify that the UDC/UDF bitmap cell height/width or intercharacter space is within the specified values for <i>n</i> . For more information, see the “Bitmap Cell Height/Width for Graphic or UDF, Define” or the “Intercharacter Space for UDF, Define” command in Chapter 7.
53	Insufficient room in RAM to store UDC or UDF.	Remove or reduce formats, fonts, or UDCs.
54	Invalid UDC command syntax.	Correct the UDC command syntax.





# **5** Advanced Printer Programming

This chapter discusses topics for advanced IPL programmers, such as using printer memory efficiently, increasing throughput, and using Emulation mode.

## Using the Printer Memory Efficiently

To receive the best performance from your printer, you must understand how to use the printer RAM efficiently. In general, if you use a significant amount of available memory for storage, you reduce the amount of memory used for imaging, which decreases printer performance.

### How Is the Printer Storage Memory Used?

Although the printer contains enough static RAM or flash to store several different label formats, downloaded fonts, graphics, and data, you should be careful of how you use your printer memory.

Printers use either static RAM or flash memory for storing tables, pages, formats, fonts, and user-defined characters (UDCs). Any storage memory that you are not using for storage is available for imaging. Some printers allow you to use PrintSet to adjust the amount of storage memory available for storage purposes. If you require additional storage memory, you can purchase a memory expansion option.

### Making the Most of Your Storage Memory

There are limits to the number of formats, fonts, graphics, or pages that you can store in the printer. You can define up to 16 fonts, but there may not be enough room depending on the amount of memory being used for other purposes. The more formats, graphics, and fonts you store, the less memory is available.

When you encounter a memory usage problem, use PrintSet to see how much memory is available. You must upload the memory information from the printer first. Refer to the PrintSet online help for more information.

You can increase your available memory by following one of these suggestions:

- In some printers, you can adjust the amount of RAM allocated for storage purposes. For help, see the PrintSet software or the “Amount of Storage, Define” command in Chapter 7.
- Increase the amount of available memory by using the Memory Reset portion of the Test and Service menu. You can use the Memory Reset command to erase all or part of the information that you have downloaded to the printer. For help, see your user’s manual.
- Delete any unneeded user-defined fonts, graphics, pages, or formats. For help, see the PrintSet software or the specific commands in Chapter 7, “IPL Command Reference.”

- Purchase additional memory. Please contact your Intermec representative for information on purchasing additional memory for your printer model.

## Increasing Throughput



**Note:** This section does not apply to the EasyCoder F4, PF2i, PF4i, PM4i, PX4i, or PX6i.

To print labels as quickly as possible, you must adjust the print speed in conjunction with the number of image bands (one image band equals 2.54 cm (1 in) of label). The print speed and image band settings determine the rate at which the printer processes the images of your labels, which affects the throughput of the entire printing process.

When the printer receives the command to select a format, <ESC>E, it immediately begins imaging the label; as a result, the imaging process is better able to keep up with the print speed and throughput improves. If the number of image bands is too low, however, the imaging process is unable to keep up with the print speed, and the printer stops printing and restarts at the lowest print speed with the maximum number of image bands. If the image band command is set too high, the printer spends more time than necessary imaging, and label production is slowed.

### What Is an Image Band?

An image band is a section of memory where a picture of a label format is drawn. This drawing process is known as imaging. Once the picture is imaged, the printer loads the picture from the image bands to the printhead for printing. Each image band is equal to 2.54 cm (1 in) of length of the label format. The number of image bands you use may be less than the length of the label being printed. The number of image bands (in inches) does not have to equal the length of the label since the printer recycles the image bands. Once the contents of an image band have been printed, it may be reused to image the next section of the label.

Keep in mind that the more complex the label, the longer it will take to image each section, thus requiring a slower print speed. To use a higher print speed, use more image bands to allow more of the imaging process to complete before printing begins.

It is possible to reduce the amount of time necessary to download and image a graphic by using Direct Graphics mode. In Direct Graphics mode, the printer images a graphic directly into the image bands without storing it in the printer. For help, see Appendix E, “Using Direct Graphics Mode.”

## How the Image Bands Command Works

The Number of Image Bands, Select command controls the amount of memory allotted to the imaging process. When you increase the image band adjustment to a higher number, you are adding more buffers to the imaging memory. As a result, more of the label format is imaged before printing begins.

The minimum number of required image bands is dependent upon the print speed and the complexity of the label. Labels that contain numerous fields with different rotations, graphics, or combinations of any number of these formatting options may require a higher number of image bands.

To set the number of image bands, use PrintSet or the Number of Image Bands, Set (<SI>I) IPL command. For help, see the PrintSet online help or the “Number of Image Bands, Set” (<SI>I) command in Chapter 7.

## Optimizing Print Speed and Image Band Setting

The minimum number of image bands available is two. The maximum number of image bands varies between printer models. Use PrintSet to check for the maximum number of image bands available, or see the “Number of Image Bands, Set” (<SI>I) command in Chapter 7.

### To optimize the number of image bands for your print speed

- 1 Set the image band setting at the lowest number (2).
- 2 Print a label at the desired speed.

If the label prints, the image band setting is optimal. You do not need to perform any more adjustments.

If the number of image bands is too low, the printer aborts the label before printing is completed and attempts to reprint the label at the slowest speed (2 ips) with the highest number of image bands. Continue with Step 3.

- 3 Return to the original print speed and increase the original number of image bands one at a time.

Continue to increase the number of image bands until the printer prints a label correctly.


If the printer still aborts and reprints at the highest image band setting, you may be trying to optimize at a print speed that is too high for your label format. Try optimizing the number of image bands at a lower print speed, or add expansion RAM.

To print very complex labels at high speeds, you must allocate enough image bands to completely image the label before printing. By allocating one band for each 2.54 cm (1 in) of label length, you can print at any speed; however, you may notice considerable delays before each label is printed.


**Image Band Example**

This example shows how the printer prints a label format using image bands. The label is 12.7 cm (5 in) long and is divided into five image bands. The printer is configured for three image bands, which means that three bands will be imaged before printing begins.


The dashed lines represent the divisions between the five image bands, and the arrow (↑) represents the portion of the image band that is being printed at that time.

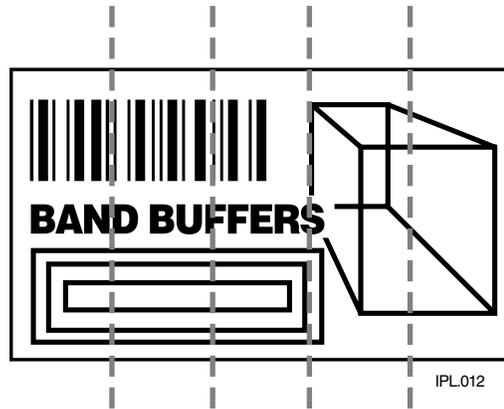


The diagram below shows the first 2.54 cm (1 in) of the label imaged into the first image band. The other two image bands are still empty. Printing has not started.

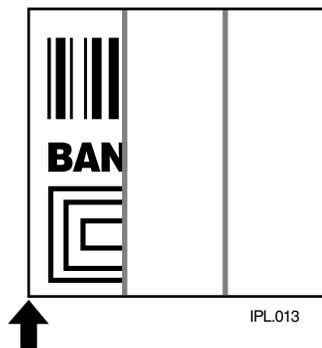


The second 2.54 cm (1 in) section of the label is imaged into the second image band. Printing still has not started.

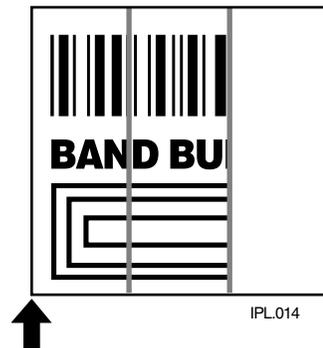


The third 2.54 cm (1 in) section of the label is imaged into the third image band. Printing begins from the first image band, as indicated by the arrow. At this point, all three available image bands have been filled. The first band will be reused after it has been completely printed.

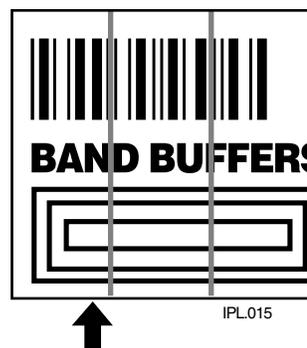

When the first image band is emptied (printed), the fourth band is imaged into it. Printing continues from the second image band. As before, this band must be emptied before the final band can be imaged into it.

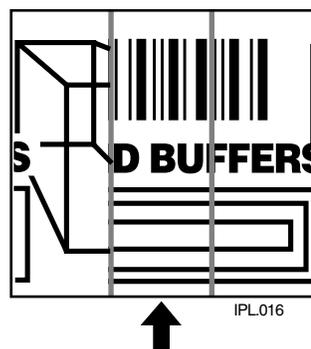

The final section of the label is imaged into the second image band. Printing continues from the third band. At this point, the label has been completely imaged, but not printed.

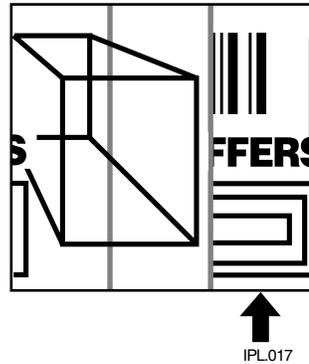

Imaging of a second label could begin in the third image band while the first label is still printing. The second label could begin printing immediately after the first with no delay, which suggests that the only print delay encountered would be during the time when the first bands of the first label were imaged.

As labels become more complex, the influence that print speed and the number of buffers has on throughput is limited by imaging speed. You will encounter new considerations, such as delay between printing and perceived printer performance. Unfortunately, no formula exists to calculate an ideal configuration; instead, you will have to find it through trial and error.

## Reimaging Modified Fields

You can now choose to reimage only the fields in a label format that you modify instead of reimaging the entire label format. If you are updating data in only a few simple fields, it might be faster to use the modified field reimaging command; however, you need to take into account the type of fields you will be reimaging. If you choose to reimage a field that takes longer to erase and reimage than it takes an entire label format to erase and reimage, you will not be increasing throughput. Erasing a field requires reimaging it with zeros and erasing a label requires only clearing the RAM. When you use it correctly, this command parameter can greatly increase the throughput of your printer.

### To use the modified field reimaging command

- 1 Make sure that you select enough image bands to allow the printer to retain the entire label image.

One image band is equal to 2.54 cm (1 in) of label length.

- 2 Select the fields to reimage by using the following command:

```
<ESC>En, m
```

See the “Format, Select” command in Chapter 7 for more information about reimaging modified fields.

## Optimizing Image Bands for Batch Printing

If you frequently print batches of identical labels (using the <US> command) or print a quantity of identical labels, you may want to optimize the number of image bands for batch printing. Optimizing the number of image bands for batch printing is especially helpful if you experience delays between the printing of each label.

To optimize the number of image bands for batch printing, you must select enough image memory to allow the printer to retain the entire label image. To optimize batch printing, select the number of image bands (1 band = 2.54 cm (1 in)) to equal the label size. For example, if the printed image stops at a distance of 10.16 cm (4 in) from the beginning of the label, you must select four image bands to prevent reimaging if the label is 12.7 cm (5 in) long.

The 3400C, 3400e, 3440, 4420, 4440, and 7421 printers automatically select the optimal number of image bands. If you increase the number of image bands on these printers, you may decrease performance.

## Using Emulation Mode



**Note:** The 4630 and 4830 printers do not support Emulation mode.

Emulation mode lets you print bar code labels that were designed on an 86XX printer in multiples of 10 or 15 mil. (“Emulation mode” is also called “86XX Emulation mode” in some printer manuals.)

Here is a summary of the features in Emulation mode:

- Pages are not available.
- Character size is specified by height and width magnification only.
- International characters are preceded by <SUB> or selectable by language.
- The bitmaps for user-defined characters (UDC) and user-defined fonts (UDF) are one bit per byte (instead of six bits per byte).
- Print resolution is in 10 mil dots.

Two IPL commands place the printer in Emulation mode:

- Emulation or Advanced Mode on Power-Up.
- Emulation Mode, Enter.

The following table lists all the IPL commands and specifies if the command works when the printer is in Emulation mode.

**IPL Commands and Emulation Mode**

<b>IPL Command Name</b>	<b>Syntax</b>	<b>Page</b>	<b>Works in Emulation Mode?</b>
12 Volt Supply Value, Transmit	U	201	Yes
Abort Print Job	<EM>	86	Yes
Advanced Mode, Select	<ESC>C	91	Yes
Alphanumeric Field Separator	<GS>	92	Yes
Ambient Temperature, Transmit	A	201	N/A
Amount of Storage, Define	<SI>N	114	N/A
Audible Alarm, Enable or Disable	<SI>a	114	N/A
Auto-Transmit 1, Enable	<ESC>j	115	Yes
Auto-Transmit 2, Enable	<ESC>d	115	Yes
Auto-Transmit 3, Enable	<ESC>e	115	Yes
Auto-Transmit 1, 2, and 3, Disable	<ESC>k	115	Yes
Bar Code, Select Type	c	141	Yes
Bar Code Field, Create or Edit	B	161	Yes
Batch Count, Set	<US>	93	Yes
Bitmap Cell Height for Graphic or UDF, Define	y	162	Yes
Bitmap Cell Width for Graphic or UDF, Define	x	164	Yes
Bitmap User-Defined Font, Clear or Define	T	165	Yes
Border Around Human-Readable Text, Define	b	165	Yes
Box Field, Create or Edit	w	166	Yes
Character Bitmap Origin Offset, Define	x	167	Yes
Character Rotation or Bar Code Ratio, Define	r	168	Yes
Clear All Data	<CAN>	93	Yes
Clear Data From Current Field	<DEL>	93	Yes
Code 39 Prefix Character, Define	p	171	Yes
Command Tables, Load	C	171	Yes
Command Terminator	;	201	Yes
Command Terminator 1	<NUL>	93	Yes
Command Terminator 2	<LF>	94	Yes
Communication Port Configuration, Set	<SI>P	116	Yes
Configuration Parameters, Transmit	<ESC>p	94	Yes
Control Panel Access Permission, Set	<SI>A	117	Yes
Current Edit Session, Save	N	172	Yes
Cut	<SO>	94	Yes
Cutter, Enable or Disable	<SI>c	118	Yes
Dark Adjust	K	201	Yes
Dark Adjust, Set	<SI>d	118	Yes
Data Shift - International Characters	<SUB>	94	Yes

**IPL Commands and Emulation Mode (continued)**

<b>IPL Command Name</b>	<b>Syntax</b>	<b>Page</b>	<b>Works in Emulation Mode?</b>
Data Source for Format in a Page, Define	e	172	No
Direct Graphics Mode, Select	<ESC>g	96	No
Emulation Mode, Enter	<ESC>c	97	Yes
Emulation or Advanced Mode on Power-Up	<SI>C	119	Yes
End-of-Print Skip Distance, Set	<SI>D	120	Yes
Error Code, Request	<BEL>	86	Yes
Factory Defaults, Reset	D	202	Yes
Field, Delete	D	172	Yes
Field, Select	<ESC>F	97	Yes
Field Data, Define Source	d	173	Yes
Field Decrement, Set	<ESC>D	98	Yes
Field Direction, Define	f	175	Yes
Field Increment, Set	<ESC>I	99	Yes
Field Origin, Define	o	175	Yes
First Data Entry Field, Select	<ACK>	99	Yes
Font, Transmit	<ESC>v	100	Yes
Font Character Width, Define	Z	176	Yes
Font Type, Select	c	178	Yes
Form Feed	<FF>	101	Yes
Format, Create or Edit	A or F	180	Yes
Format, Erase	E	182	Yes
Format, Select	<ESC>E	101	Yes
Format, Transmit	<ESC>x	103	Yes
Format Direction in a Page, Define	q	181	No
Format Offset Within a Page, Define	O	182	No
Format Position From Page, Delete	m	183	No
Format Position in a Page, Assign	M	183	No
Formats, Print	f	202	Yes
Graphic, Select	c	184	Yes
Graphic or UDC, Define	u	184	Yes
Hardware Configuration Label, Print	h	202	Yes
Height Magnification of Bar, Box, or UDC, Define	h	185	Yes
Human-Readable Field, Create or Edit	H	187	Yes
IBM Language Translation, Enable or Disable	<SI>i	122	Yes
Increment and Decrement, Disable	<ESC>N	104	Yes
Intercharacter Delay, Set	<SYN>	122	Yes
Intercharacter Space for UDF, Define	z	188	Yes

**IPL Commands and Emulation Mode (continued)**

<b>IPL Command Name</b>	<b>Syntax</b>	<b>Page</b>	<b>Works in Emulation Mode?</b>
Interlabel Ribbon Save, Enable or Disable	<SI>s	123	N/A
Interpretive Field, Edit	I	189	Yes
Interpretive Field, Enable or Disable	i	190	Yes
Label and Gap Length, Transmit	<ESC> L	87	Yes
Label Path Open Sensor Value, Transmit	L	202	N/A
Label Rest Point, Adjust	<SI>f	123	Yes
Label Retract, Enable or Disable	<SI>R	124	Yes
Label Retract Distance, Set	<SI>r	124	Yes
Label Stock Type, Select	<SI>T	125	Yes
Label Taken Sensor Value, Transmit	T	202	Yes
Label Width, Set	<SI>W	125	N/A
Length of Line or Box Field, Define	l	190	Yes
Line Field, Create or Edit	L	191	Yes
Maximum Label Length, Set	<SI>L	126	Yes
Media Fault Recovery Mode, Set	<SI>e	127	Yes
Media Sensitivity, Select	<SI>g	127	Yes
Memory Usage, Transmit	<ESC>m	105	Yes
Message Delay, Set	<ESC><SYN>	128	Yes
Next Data Entry Field, Select	<CR>	106	Yes
Number of Image Bands, Set	<SI>I	129	Yes
Numeric Field Separator	<FS>	106	Yes
Online or Offline on Power-Up	<SI>O	130	N/A
Options Selected, Transmit	<ESC>O	107	Yes
Outline Font, Clear or Create	J	191	No
Outline Font, Download	j	193	No
Page, Create or Edit	S	194	No
Page, Delete	s	195	No
Page, Select	<ESC>G	108	No
Page, Transmit	<ESC>y	108	No
Pages, Print	p	203	Yes
Pin 11/20 Protocol, Set	<SI>p	130	No
Pitch Label, Print	C	203	Yes
Pitch Size, Set	g	195	No
Point Size, Set	k	196	No
Postamble, Set	<EOT>	131	Yes
Preamble, Set	<SOH>	131	Yes
Print	<ETB>	109	Yes

**IPL Commands and Emulation Mode (continued)**

<b>IPL Command Name</b>	<b>Syntax</b>	<b>Page</b>	<b>Works in Emulation Mode?</b>
Print Line Dot Count Limit, Set	v	196	N/A
Print Quality Label, Print	Q	203	Yes
Print Speed, Set	<SI>S	132	Yes
Printer Language, Select	<SI>l	133	Yes
Printhead Loading Mode, Select	<SI>h	135	No
Printhead Parameters, Transmit	<ESC>H	109	Yes
Printhead Pressure, Set	<SI>H	136	N/A
Printhead Resistance Test, Begin	B	203	N/A
Printhead Resistance Values, Transmit	S	203	N/A
Printhead Temperature Sensor Value, Transmit	P	203	Yes
Printhead Test Parameters, Set	<SI>U	136	N/A
Printhead Volt Supply Value, Transmit	V	204	N/A
Program Mode, Enter	<ESC>P	109	Yes
Program Mode, Exit	R	197	Yes
Program Number, Transmit	<ESC>M	110	Yes
Program Number and Model, Transmit	<ESC>M	110	Yes
Quantity Count, Set	<RS>	110	Yes
Reflective Sensor Value, Transmit	M	204	No
Remaining Quantity and Batch Count, Transmit	<ESC>Q	87	Yes
Reset	<DLE>	87	Yes
Ribbon Save Zones, Set	<SI>Z	137	N/A
Self-Strip, Enable or Disable	<SI>t	137	Yes
Slash Zero, Enable or Disable	<SI>z	138	No
Software Configuration Label, Print	s	204	Yes
Start and Stop Codes (Code 39), Print	<ESC><SP>	110	Yes
Status Dump	<VT>	88	Yes
Status Enquiry	<ENQ>	89	Yes
Takeup Motor Torque, Increase	<SI>b	139	No
Test and Service Mode, Enter	<ESC>T	111	Yes
Test and Service Mode, Exit	R	204	Yes
Top of Form, Set	<SI>F	139	Yes
Transmissive Sensor Value, Transmit	G	204	Yes
User-Defined Character (UDC) and Graphics, Print	g	204	Yes
User-Defined Character, Clear or Create	G	197	Yes
User-Defined Character Field, Create or Edit	U	197	Yes
User-Defined Characters, Transmit	<ESC>u	111	Yes
User-Defined Font Character, Create	t	198	Yes
User-Defined Fonts, Print	t	205	Yes

**IPL Commands and Emulation Mode (continued)**

<b>IPL Command Name</b>	<b>Syntax</b>	<b>Page</b>	<b>Works in Emulation Mode?</b>
User-Defined Tables, Transmit	<ESC>Z	112	Yes
Warm Boot	<BS>	112	Yes
Width of Line, Box, Bar, or Character, Define	w	199	Yes





# 6 Finding IPL Commands in This Manual

This chapter contains tables that show the page numbers in Chapter 7 where each IPL command is described. The tables are organized in various ways to help you find the command you are looking for.

To find a command, you can refer to any of these tables, which include the page number in Chapter 7 on which the command is described:

## ***Command Tables***

<b>Table</b>	<b>Page</b>	<b>How the Table is Organized</b>
Commands Listed by Name	64	Alphabetized by the command name
Commands Listed by Syntax	68	Alphabetized by the command syntax
Commands Listed by Task	72	Divided into groups, further divided into the tasks you will perform, and finally alphabetized by the command name.

## Commands Listed by Name

This table lists the IPL commands in alphabetical order by name.

<b>IPL Command</b>	<b>Syntax</b>	<b>Page</b>
12 Volt Supply Value, Transmit	U	203
Abort Print Job	<EM>	86
Advanced Mode, Select	<ESC>C	91
Alphanumeric Field Separator	<GS>	92
Ambient Temperature, Transmit	A	203
Amount of Storage, Define	<SI>N	114
Audible Alarm, Enable or Disable	<SI>a	114
Auto-Transmit 1, Enable	<ESC>j	115
Auto-Transmit 2, Enable	<ESC>d	115
Auto-Transmit 3, Enable	<ESC>e	115
Auto-Transmit 1, 2, and 3, Disable	<ESC>k	115
Bar Code, Select Type	c	141
Bar Code Field, Create or Edit	B	163
Batch Count, Set	<US>	93
Bitmap Cell Height for Graphic or UDF, Define	Y	164
Bitmap Cell Width for Graphic or UDF, Define	x	166
Bitmap User-Defined Font, Clear or Define	T	167
Border Around Human-Readable Text, Define	b	167
Box Field, Create or Edit	W	168
Character Bitmap Origin Offset, Define	X	169
Character Rotation or Bar Code Ratio, Define	r	170
Clear All Data	<CAN>	93
Clear Data From Current Field	<DEL>	93
Code 39 Prefix Character, Define	p	173
Command Tables, Load	C	173
Command Terminator	;	203
Command Terminator 1	<NUL>	93
Command Terminator 2	<LF>	94
Communication Port Configuration, Set	<SI>P	116
Configuration Parameters, Transmit	<ESC>p	94
Control Panel Access Permission, Set	<SI>A	117
Current Edit Session, Save	N	174
Cut	<SO>	94
Cutter, Enable or Disable	<SI>c	118
Dark Adjust	K	203
Dark Adjust, Set	<SI>d	118

**Commands Listed by Name (continued)**

<b>IPL Command</b>	<b>Syntax</b>	<b>Page</b>
Data Shift - International Characters	<SUB>	94
Data Source for Format in a Page, Define	e	174
Direct Graphics Mode, Select	<ESC>g	96
Emulation Mode, Enter	<ESC>c	97
Emulation or Advanced Mode on Power-Up	<SI>C	119
End-of-Print Skip Distance, Set	<SI>D	120
Error Code, Request	<BEL>	86
Factory Defaults, Reset	D	203
Field, Delete	D	174
Field, Select	<ESC>F	97
Field Data, Define Source	d	175
Field Decrement, Set	<ESC>D	98
Field Direction, Define	f	177
Field Increment, Set	<ESC>I	99
Field Origin, Define	o	177
First Data Entry Field, Select	<ACK>	99
Font, Transmit	<ESC>v	100
Font Character Width, Define	Z	178
Font Type, Select	c	180
Form Feed	<FF>	101
Format, Create or Edit	A or F	182
Format, Erase	E	184
Format, Select	<ESC>E	101
Format, Transmit	<ESC>x	103
Format Direction in a Page, Define	q	183
Format Offset Within a Page, Define	O	184
Format Position From Page, Delete	m	185
Format Position in a Page, Assign	M	185
Formats, Print	f	204
Graphic, Select	c	186
Graphic or UDC, Define	u	186
Hardware Configuration Label, Print	h	204
Height Magnification of Bar, Box, or UDC, Define	h	187
Human-Readable Field, Create or Edit	H	189
IBM Language Translation, Enable or Disable	<SI>i	122
Increment and Decrement, Disable	<ESC>N	104
Intercharacter Delay, Set	<SYN>	122
Intercharacter Space for UDF, Define	z	190

**Commands Listed by Name (continued)**

<b>IPL Command</b>	<b>Syntax</b>	<b>Page</b>
Interlabel Ribbon Save, Enable or Disable	<SI>s	123
Interpretive Field, Edit	I	191
Interpretive Field, Enable or Disable	i	192
Label and Gap Length, Transmit	<ESC> L	87
Label Path Open Sensor Value, Transmit	L	204
Label Rest Point, Adjust	<SI>f	123
Label Retract, Enable or Disable	<SI>R	124
Label Retract Distance, Set	<SI>r	124
Label Stock Type, Select	<SI>T	125
Label Taken Sensor Value, Transmit	T	204
Label Width, Set	<SI>W	125
Length of Line or Box Field, Define	l	192
Line Field, Create or Edit	L	193
Maximum Label Length, Set	<SI>L	126
Media Fault Recovery Mode, Set	<SI>e	127
Media Sensitivity, Select	<SI>g	127
Memory Usage, Transmit	<ESC>m	105
Message Delay, Set	<ESC><SYN>	128
Next Data Entry Field, Select	<CR>	106
Number of Image Bands, Set	<SI>I	129
Numeric Field Separator	<FS>	106
Online or Offline on Power-Up	<SI>O	130
Options Selected, Transmit	<ESC>O	107
Outline Font, Clear or Create	J	193
Outline Font, Download	j	195
Page, Create or Edit	S	196
Page, Delete	s	197
Page, Select	<ESC>G	108
Page, Transmit	<ESC>y	108
Pages, Print	p	204
Pin 11/20 Protocol, Set	<SI>p	130
Pitch Label, Print	C	205
Pitch Size, Set	g	197
Point Size, Set	k	198
Postamble, Set	<EOT>	131
Preamble, Set	<SOH>	131
Print	<ETB>	109
Print Line Dot Count Limit, Set	v	198
Print Quality Label, Print	Q	205

**Commands Listed by Name (continued)**

<b>IPL Command</b>	<b>Syntax</b>	<b>Page</b>
Print Speed, Set	<SI>S	132
Printer Language, Select	<SI>l	133
Printhead Loading Mode, Select	<SI>h	135
Printhead Parameters, Transmit	<ESC>H	109
Printhead Pressure, Set	<SI>H	136
Printhead Resistance Test, Begin	B	205
Printhead Resistance Values, Transmit	S	205
Printhead Temperature Sensor Value, Transmit	P	205
Printhead Test Parameters, Set	<SI>U	136
Printhead Volt Supply Value, Transmit	V	205
Program Mode, Enter	<ESC>P	109
Program Mode, Exit	R	199
Program Number, Transmit	<ESC>M	110
Quantity Count, Set	<RS>	110
Reflective Sensor Value, Transmit	M	206
Remaining Quantity and Batch Count, Transmit	<ESC>Q	87
Reset	<DLE>	87
Ribbon Save Zones, Set	<SI>Z	137
Self-Strip, Enable or Disable	<SI>t	137
Slash Zero, Enable or Disable	<SI>z	138
Software Configuration Label, Print	s	206
Start and Stop Codes (Code 39), Print	<ESC><SP>	110
Status Dump	<VT>	88
Status Enquiry	<ENQ>	89
Takeup Motor Torque, Increase	<SI>b	139
Test and Service Mode, Enter	<ESC>T	111
Test and Service Mode, Exit	R	206
Top of Form, Set	<SI>F	139
Transmissive Sensor Value, Transmit	G	206
User-Defined Characters (UDC) and Graphics, Print	g	206
User-Defined Character, Clear or Create	G	199
User-Defined Character Field, Create or Edit	U	199
User-Defined Characters, Transmit	<ESC>u	111
User-Defined Font Character, Create	t	200
User-Defined Fonts, Print	t	206
User-Defined Tables, Transmit	<ESC>Z	112
Warm Boot	<BS>	112
Width of Line, Box, Bar, or Character, Define	w	201

## Commands Listed by Syntax

This table lists the IPL commands in alphabetical order by command syntax.

Syntax	IPL Command	Page
;	Command Terminator	203
<ACK>	First Data Entry Field, Select	99
<BEL>	Error Code, Request	86
<BS>	Warm Boot	112
<CAN>	Clear All Data	93
<CR>	Next Data Entry Field, Select	106
<DEL>	Clear Data From Current Field	93
<DLE>	Reset	87
<EM>	Abort Print Job	86
<ENQ>	Status Enquiry	89
<EOT>	Postamble, Set	131
<ESC>L	Label and Gap Length, Transmit	87
<ESC><SP>	Start and Stop Codes (Code 39), Print	110
<ESC><SYN>	Message Delay, Set	128
<ESC>c	Emulation Mode, Enter	97
<ESC>C	Advanced Mode, Select	91
<ESC>d	Auto-Transmit 2, Enable	115
<ESC>D	Field Decrement, Set	98
<ESC>e	Auto-Transmit 3, Enable	115
<ESC>E	Format, Select	101
<ESC>F	Field, Select	97
<ESC>g	Direct Graphics Mode, Select	96
<ESC>G	Page, Select	108
<ESC>H	Printhead Parameters, Transmit	109
<ESC>I	Field Increment, Set	99
<ESC>j	Auto-Transmit 1, Enable	115
<ESC>k	Auto-Transmit 1, 2, and 3, Disable	115
<ESC>L	Label and Gap Length, Transmit	87
<ESC>m	Memory Usage, Transmit	105
<ESC>M	Program Number, Transmit	110
<ESC>N	Increment and Decrement, Disable	104
<ESC>O	Options Selected, Transmit	107
<ESC>p	Configuration Parameters, Transmit	94
<ESC>P	Program Mode, Enter	109
<ESC>Q	Remaining Quantity and Batch Count, Transmit	87
<ESC>T	Test and Service Mode, Enter	111

**Commands Listed by Syntax (continued)**

<b>Syntax</b>	<b>IPL Command</b>	<b>Page</b>
<ESC>u	User-Defined Characters, Transmit	111
<ESC>v	Font, Transmit	100
<ESC>x	Format, Transmit	103
<ESC>y	Page, Transmit	108
<ESC>Z	User-Defined Tables, Transmit	112
<ETB>	Print	109
<FF>	Form Feed	101
<FS>	Numeric Field Separator	106
<GS>	Alphanumeric Field Separator	92
<LF>	Command Terminator 2	94
<NUL>	Command Terminator 1	93
<RS>	Quantity Count, Set	110
<SI>a	Audible Alarm, Enable or Disable	114
<SI>A	Control Panel Access Permission, Set	117
<SI>b	Takeup Motor Torque, Increase	139
<SI>c	Cutter, Enable or Disable	118
<SI>C	Emulation or Advanced Mode on Power-Up	119
<SI>d	Dark Adjust, Set	118
<SI>D	End-of-Print Skip Distance, Set	120
<SI>e	Media Fault Recovery Mode, Set	127
<SI>f	Label Rest Point, Adjust	123
<SI>F	Top of Form, Set	139
<SI>g	Media Sensitivity, Select	127
<SI>h	Printhead Loading Mode, Select	135
<SI>H	Printhead Pressure, Set	136
<SI>i	IBM Language Translation, Enable or Disable	122
<SI>I	Number of Image Bands, Set	129
<SI>l	Printer Language, Select	133
<SI>L	Maximum Label Length, Set	126
<SI>N	Amount of Storage, Define	114
<SI>O	Online or Offline on Power-Up	130
<SI>p	Pin 11/20 Protocol, Set	130
<SI>P	Communication Port Configuration, Set	116
<SI>r	Label Retract Distance, Set	124
<SI>R	Label Retract, Enable or Disable	124
<SI>s	Interlabel Ribbon Save, Enable or Disable	123
<SI>S	Print Speed, Set	132
<SI>t	Self-Strip, Enable or Disable	137
<SI>T	Label Stock Type, Select	125

**Commands Listed by Syntax (continued)**

<b>Syntax</b>	<b>IPL Command</b>	<b>Page</b>
<SI>U	Printhead Test Parameters, Set	136
<SI>W	Label Width, Set	125
<SI>z	Slash Zero, Enable or Disable	138
<SI>Z	Ribbon Save Zones, Set	137
<SO>	Cut	94
<SOH>	Preamble, Set	131
<SUB>	Data Shift - International Characters	94
<SYN>	Intercharacter Delay, Set	122
<US>	Batch Count, Set	93
<VT>	Status Dump	88
A	Ambient Temperature, Transmit	203
A or F	Format, Create or Edit	182
b	Border Around Human-Readable Text, Define	167
B	Bar Code Field, Create or Edit	163
B	Printhead Resistance Test, Begin	205
c	Bar Code, Select Type	141
c	Font Type, Select	180
c	Graphic, Select	186
C	Command Tables, Load	173
C	Pitch Label, Print	205
d	Field Data, Define Source	175
D	Factory Defaults, Reset	203
D	Field, Delete	174
e	Data Source for Format in a Page, Define	174
E	Format, Erase	184
f	Field Direction, Define	177
f	Formats, Print	204
g	Pitch Size, Set	197
g	User-Defined Characters and Graphics, Print	206
G	Transmissive Sensor Value, Transmit	206
G	User-Defined Character, Clear or Create	199
h	Hardware Configuration Label, Print	204
h	Height Magnification of Bar, Box, or UDC, Define	187
H	Human-Readable Field, Create or Edit	189
i	Interpretive Field, Enable or Disable	192
I	Interpretive Field, Edit	191
j	Outline Font, Download	195
J	Outline Font, Clear or Create	193
k	Point Size, Set	198

**Commands Listed by Syntax (continued)**

<b>Syntax</b>	<b>IPL Command</b>	<b>Page</b>
K	Dark Adjust	203
l	Length of Line or Box Field, Define	192
L	Label Path Open Sensor Value, Transmit	204
L	Line Field, Create or Edit	193
m	Format Position From Page, Delete	185
M	Format Position in a Page, Assign	185
M	Reflective Sensor Value, Transmit	206
N	Current Edit Session, Save	174
o	Field Origin, Define	177
O	Format Offset Within a Page, Define	184
p	Code 39 Prefix Character, Define	173
p	Pages, Print	204
P	Printhead Temperature Sensor Value, Transmit	205
q	Format Direction in a Page, Define	183
Q	Print Quality Label, Print	205
r	Character Rotation or Bar Code Ratio, Define	170
R	Program Mode, Exit	199
R	Test and Service Mode, Exit	206
S	Page, Create or Edit	196
s	Page, Delete	197
S	Printhead Resistance Values, Transmit	205
s	Software Configuration Label, Print	206
t	User-Defined Font Character, Create	200
t	User-Defined Fonts, Print	206
T	Bitmap User-Defined Font, Clear or Define	167
T	Label Taken Sensor Value, Transmit	204
u	Graphic or UDC, Define	186
U	12 Volt Supply Value, Transmit	203
U	User-Defined Character Field, Create or Edit	199
v	Print Line Dot Count Limit, Set	198
V	Printhead Volt Supply Value, Transmit	205
w	Width of Line, Box, Bar, or Character, Define	201
W	Box Field, Create or Edit	168
x	Bitmap Cell Width for Graphic or UDF, Define	166
X	Character Bitmap Origin Offset, Define	169
Y	Bitmap Cell Height for Graphic or UDF, Define	164
z	Intercharacter Space for UDF, Define	190
Z	Font Character Width, Define	178

## Commands Listed by Task

This section focuses on the tasks that you will perform with IPL commands, such as editing bar code fields on a label. Each table presents a task and lists the IPL commands that you must use to perform that task. For example, to edit bar code fields while the printer is in Program mode, you must use all the commands shown in the second table in this section.



**Note:** This section does not list all the IPL commands, only the commands that are necessary to perform specific tasks. For a complete list of commands, see the table of contents, “Commands Listed by Name,” or “Commands Listed by Syntax” earlier in this chapter.

Some command names in this section have been modified slightly to indicate exactly how you will use the command to perform the task.

### Immediate Commands

#### System Commands

Syntax	Command	Page
<BEL>	Error Code, Request	86
<DLE>	Reset	87
<EM>	Abort Print Job	86
<ENQ>	Status Enquiry	89
<VT>	Status Dump	88
<ESC>L	Label and Gap Length, Transmit	87
<ESC>Q	Remaining Quantity and Batch Count, Transmit	87

### Program Mode Commands

#### Bar Code Field Editing Commands

Syntax	Command	Page
c	Bar Code, Select Type	141
d	Field Data, Define Source	175
f	Field Direction, Define	177
h	Height Magnification of Bar, Box, or UDC, Define	187
i	Interpretive Field, Enable or Disable	192
o	Field Origin, Define	177
p	Code 39 Prefix Character, Define	173
r	Character Rotation or Bar Code Ratio, Define	170
w	Width of Line, Box, Bar, or Character, Define	201

**Bitmap User-Defined Font Editing Commands**

<b>Syntax</b>	<b>Command</b>	<b>Page</b>
t	User-Defined Font Character, Create	200
u	Graphic or UDC, Define	186
X	Character Bitmap Origin Offset, Define	169
x	Bitmap Cell Width for Graphic or UDF, Define	166
Y	Bitmap Cell Height for Graphic or UDF, Define	164
Z	Font Character Width, Define	178
z	Intercharacter Space for UDF, Define	190

**Box Field Editing Commands**

<b>Syntax</b>	<b>Command</b>	<b>Page</b>
f	Field Direction, Define	177
h	Height Magnification of Bar, Box, or UDC, Define	187
l	Length of Line or Box Field, Define	192
o	Field Origin, Define	177
w	Width of Line, Box, Bar, or Character, Define	201

**Format Editing Commands**

<b>Syntax</b>	<b>Command</b>	<b>Page</b>
B	Bar Code Field, Create or Edit	163
D	Field, Delete	174
H	Human-Readable Field, Create or Edit	189
I	Interpretive Field, Edit	191
L	Line Field, Create or Edit	193
U	User-Defined Character Field, Create or Edit	199
W	Box Field, Create or Edit	168

### **Human-Readable Field Editing Commands**

<b>Syntax</b>	<b>Command</b>	<b>Page</b>
b	Border Around Human-Readable Text, Define	167
c	Font Type, Select	180
d	Field Data, Define Source	175
f	Field Direction, Define	177
g	Pitch Size, Set	197
h	Height Magnification of Bar, Box, or UDC, Define	187
k	Point Size, Set	198
o	Field Origin, Define	177
r	Character Rotation or Bar Code Ratio, Define	170
w	Width of Line, Box, Bar, or Character, Define	201

### **Interpretive Field Editing Commands**

<b>Syntax</b>	<b>Command</b>	<b>Page</b>
b	Border Around Human-Readable Text, Define	167
c	Font Type, Select	180
f	Field Direction, Define	177
g	Pitch Size, Set	197
h	Height Magnification of Bar, Box, or UDC, Define	187
k	Point Size, Set	198
o	Field Origin, Define	177
r	Character Rotation or Bar Code Ratio, Define	170
w	Width of Line, Box, Bar, or Character, Define	201

### **Line Field Editing Commands**

<b>Syntax</b>	<b>Command</b>	<b>Page</b>
f	Field Direction, Define	177
l	Length of Line or Box Field, Define	192
o	Field Origin, Define	177
w	Width of Line, Box, Bar or Character, Define	201

**Page Editing Commands**

Syntax	Command	Page
e	Data Source for Format in a Page, Define	174
M	Format Position in a Page, Assign	185
m	Format Position From Page, Delete	185
O	Format Offset Within a Page, Define	184
q	Format Direction in a Page, Define	183

**Programming Commands**

Syntax	Command	Page
A	Format, Create or Edit	182
E	Format, Erase	184
F	Format, Create or Edit	182
G	User-Defined Character, Clear or Create	199
J	Outline Font, Clear or Create	193
N	Current Edit Session, Save	174
R	Program Mode, Exit	199
S	Page, Create or Edit	196
s	Page, Delete	197
T	Bitmap User-Defined Font, Clear or Define	167

**UDC Field Editing Commands**

Syntax	Command	Page
c	Graphic, Select	186
f	Field Direction, Define	177
h	Height Magnification of Bar, Box, or UDC, Define	187
o	Field Origin, Define	177
w	Width of Line, Box, Bar, or Character, Define	201

**UDC Editing Commands**

Syntax	Command	Page
u	Graphic or UDC, Define	186
x	Bitmap Cell Width for Graphic or UDF, Define	166
y	Bitmap Cell Height for Graphic or UDF, Define	164
j	Outline Font, Download	195
J	Outline Font, Clear or Create	193

**Print Mode Commands****Configuration Commands**

<b>Syntax</b>	<b>Command</b>	<b>Page</b>
<SI>a	Audible Alarm, Enable or Disable	114
<SI>A	Control Panel Access Permission, Set	117
<SI>b	Takeup Motor Torque, Increase	139
<SI>c	Cutter, Enable or Disable	118
<SI>C	Emulation or Advanced Mode on Power-Up	119
<SI>d	Dark Adjust, Set	118
<SI>D	End-of-Print Skip Distance, Set	120
<SI>e	Media Fault Recovery Mode, Set	127
<SI>f	Label Rest Point, Adjust	123
<SI>F	Top of Form, Set	139
<SI>g	Media Sensitivity, Select	127
<SI>h	Printhead Loading Mode, Select	135
<SI>H	Printhead Pressure, Set	136
<SI>i	IBM Language Translation, Enable or Disable	122
<SI>I	Number of Image Bands, Set	129
<SI>l	Printer Language, Select	133
<SI>L	Maximum Label Length, Set	126
<SI>N	Amount of Storage, Define	114
<SI>O	Online or Offline on Power-Up	130
<SI>p	Pin 11/20 Protocol, Set	130
<SI>r	Label Retract Distance, Set	124
<SI>R	Label Retract, Enable or Disable	124
<SI>s	Interlabel Ribbon Save, Enable or Disable	123
<SI>S	Print Speed, Set	132
<SI>t	Self-Strip, Enable or Disable	137
<SI>T	Label Stock Type, Select	125
<SI>U	Printhead Test Parameters, Set	136
<SI>W	Label Width, Set	125
<SI>z	Slash Zero, Enable or Disable	138
<SI>Z	Ribbon Save Zones, Set	137

**Print Commands**

<b>Syntax</b>	<b>Command</b>	<b>Page</b>
<ACK>	First Data Entry Field, Select	99
<BS>	Warm Boot	112
<CAN>	Clear All Data	93
<CR>	Next Data Entry Field, Select	106
<DEL>	Clear Data From Current Field	93
<ESC>c	Emulation Mode, Select	97
<ESC>C	Advanced Mode, Select	91
<ESC>D	Field Decrement, Set	98
<ESC>E	Format, Select	101
<ESC>F	Field, Select	97
<ESC>g	Direct Graphics Mode, Select	96
<ESC>G	Page, Select	108
<ESC>H	Printhead Parameters, Transmit	109
<ESC>I	Field Increment, Set	99
<ESC>m	Memory Usage, Transmit	105
<ESC>M	Program Number, Transmit	110
<ESC>N	Increment and Decrement, Disable	104
<ESC>O	Options Selected, Transmit	107
<ESC>p	Configuration Parameters, Transmit	94
<ESC>P	Program Mode, Enter	109
<ESC><SP>	Start and Stop Codes (Code 39), Print	110
<ESC>T	Test and Service Mode, Enter	111
<ESC>u	User-Defined Characters, Transmit	111
<ESC>v	Font, Transmit	100
<ESC>x	Format, Transmit	103
<ESC>y	Page, Transmit	108
<ESC>Z	User-Defined Tables, Transmit	112
<ETB>	Print	109
<FF>	Form Feed	101
<FS>	Numeric Field Separator	106
<GS>	Alphanumeric Field Separator	92
<LF>	Command Terminator 2	94
<NUL>	Command Terminator 1	93
<RS>	Quantity Count, Set	110
<SO>	Cut	94
<SUB>	Data Shift - International Characters	94
<US>	Batch Count, Set	93

### Protocol Modification Commands

Syntax	Command	Page
<EOT>	Postamble, Set	131
<ESC>d	Auto-Transmit 2, Enable	115
<ESC>e	Auto-Transmit 3, Enable	115
<ESC>j	Auto-Transmit 1, Enable	115
<ESC>k	Auto-Transmit 1, 2, and 3, Disable	115
<SI>p	Pin 11/20 Protocol, Set	130
<SI>P	Communication Port Configuration, Set	116
<ESC><SYN>	Message Delay, Set	128
<SOH>	Preamble, Set	131
<SYN>	Intercharacter Delay, Set	122

### Test and Service Commands

Syntax	Command	Page
;	Command Terminator	203
A	Ambient Temperature, Transmit	203
B	Printhead Resistance Test, Begin	205
C	Pitch Label, Print	205
D	Factory Defaults, Reset	203
f	Formats, Print	204
g	User-Defined Characters (UDC) and Graphics, Print	206
G	Transmissive Sensor Value, Transmit	206
h	Hardware Configuration Label, Print	204
K	Dark Adjust	203
L	Label Path Open Sensor Value, Transmit	204
M	Reflective Sensor Value, Transmit	206
p	Pages, Print	204
P	Printhead Temperature Sensor Value, Transmit	205
Q	Print Quality Label, Print	205
R	Test and Service Mode, Exit	206
s	Software Configuration Label, Print	206
S	Printhead Resistance Values, Transmit	205
t	User-Defined Fonts, Print	206
T	Label Taken Sensor Value, Transmit	204
U	12 Volt Supply Value, Transmit	203
V	Printhead Volt Supply Value, Transmit	205



# 7 IPL Command Reference

This chapter describes all of the IPL commands. The commands are grouped by type (Immediate, Print, Configuration, Program, and Test and Service) and alphabetized within each type.

The commands listed in this chapter are used for all Intermec printers. Defaults, ranges of values for the variables, and special notes for specific printers are presented in a chart under the Printers heading.

Convention	Description
< >	Angle brackets < > enclose mnemonic representations of ASCII control characters. For example, <ETX> represents the ASCII “End of Text” control character.
<i>data</i>	Italic text represents variable data, which you must replace with a real value. For example, <i>n</i> signifies a variable for which you must designate a constant value.
[ <i>data</i> ]	Italic text within brackets represents optional data.
<b>Ctrl</b>	Bold text represents a key on your keypad. For example, <b>Ctrl</b> represents the Ctrl key.
<b>Ctrl-Z</b>	When two keys are joined with a dash, press them simultaneously. For example, if you see the command <b>Ctrl-Z</b> , press the two keys at the same time.
E3 ; F3	Type all characters that appear in the Courier font by pressing an individual key on the keypad.

## Which Commands Does Your Printer Support?

The next table shows which commands are supported by each printer. A • indicates that the printer supports the command, and a blank space indicates that the printer ignores the command.

IPL Command	Page	3 2 4 0	3 4 0 0	3 4 0 0e	3 4 0 0	3 6 0 0	4 1 0 0	4 4 0 0	4 4 X 0	4 X 3 0	7 4 2 1	EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i
12 Volt Supply Value, Transmit	203										•	
Abort Print Job	86	•	•	•	•	•	•	•	•	•	•	•
Advanced Mode, Select	91	•	•	•	•	•	•	•	•		•	•
Alphanumeric Field Separator	92	•	•	•	•	•	•	•	•	•	•	•
Ambient Temperature, Transmit	203										•	
Amount of Storage, Define	114	•	•			•	•				•	
Audible Alarm, Enable or Disable	114								•			• (i only)
Auto-Transmit 1, Enable	115	•	•	•	•	•	•	•	•	•	•	•
Auto-Transmit 2, Enable	115	•	•	•	•	•	•	•	•	•	•	•
Auto-Transmit 3, Enable	115	•	•	•	•	•	•	•	•	•	•	•
Auto-Transmit 1, 2, and 3, Disable	115	•	•	•	•	•	•	•	•	•	•	•
Bar Code, Select Type	141	•	•	•	•	•	•	•	•	•	•	•
Bar Code Field, Create or Edit	163	•	•	•	•	•	•	•	•	•	•	•
Batch Count, Set	93	•	•	•	•	•	•	•	•	•	•	•
Bitmap Cell Height for Graphic or UDF, Define	164	•	•	•	•	•	•	•	•	•	•	•
Bitmap Cell Width for Graphic or UDF, Define	166	•	•	•	•	•	•	•	•	•	•	•
Bitmap User-Defined Font, Clear or Define	167	•	•	•	•	•	•	•	•	•	•	•
Border Around Human-Readable Text, Define	167	•	•	•	•	•	•	•	•	•	•	•
Box Field, Create or Edit	168	•	•	•	•	•	•	•	•	•	•	•
Character Bitmap Origin Offset, Define	169	•	•	•	•	•	•	•	•	•	•	•
Character Rotation or Bar Code Ratio, Define	170	•	•	•	•	•	•	•	•	•	•	•
Clear All Data	93	•	•	•	•	•	•	•	•	•	•	•
Clear Data From Current Field	93	•	•	•	•	•	•	•	•	•	•	•
Code 39 Prefix Character, Define	173	•	•	•	•	•	•	•	•	•	•	•
Command Tables, Load	173	•	•	•	•	•	•	•	•	•	•	•

**Commands Supported By Each Printer (continued)**

<b>IPL Command</b>	<b>Page</b>	<b>3 2 4 0</b>	<b>3 4 0 0</b>	<b>3 4 0 0e</b>	<b>3 4 0 0</b>	<b>3 6 0 0</b>	<b>4 1 0 0</b>	<b>4 4 0 0</b>	<b>4 4 X 0</b>	<b>4 X 3 0</b>	<b>7 4 2 1</b>	<b>EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i</b>
Command Terminator	203	•	•	•	•	•	•	•	•	•	•	•
Command Terminator 1	93	•	•	•	•	•	•	•	•	•	•	•
Command Terminator 2	94	•	•	•	•	•	•	•	•	•	•	•
Communication Port Configuration, Set	116										•	•
Configuration Parameters, Transmit	94	•	•	•	•	•	•	•	•	•	•	•
Control Panel Access Permission, Set	117							•		•		• (i only)
Current Edit Session, Save	174	•	•	•	•	•	•	•	•	•	•	•
Cut	94		• (C, D)	•			•	•	•	•	•	•
Cutter, Enable or Disable	118		•	•			•	•	•	•	•	•
Dark Adjust	203				•							
Dark Adjust, Set	118	•	•	•	•	•	•	•	•	•	•	•
Data Shift - International Characters	94	•	•	•	•	•	•	•	•	•	•	•
Data Source for Format in a Page, Define	174	•	•	•	•	•	•	•	•	•	•	•
Direct Graphics Mode, Select	96		• (C, D)	•	•				•		•	•
Emulation Mode, Enter	97	•	•	•	•	•	•	•	•		•	•
Emulation or Advanced Mode on Power-Up	119	•	•	•	•	•	•	•	•		•	•
End-of-Print Skip Distance, Set	120	•	•	•	•	•	•	•	•	•	•	•
Error Code, Request	86	•	•	•	•	•	•	•	•	•	•	•
Factory Defaults, Reset	203	•	•	•	•	•	•	•	•	•	•	•
Field, Delete	174	•	•	•	•	•	•	•	•	•	•	•
Field, Select	97	•	•	•	•	•	•	•	•	•	•	•
Field Data, Define Source	175	•	•	•	•	•	•	•	•	•	•	•
Field Decrement, Set	98	•	•	•	•	•	•	•	•	•	•	•
Field Direction, Define	177	•	•	•	•	•	•	•	•	•	•	•
Field Increment, Set	99	•	•	•	•	•	•	•	•	•	•	•
Field Origin, Define	177	•	•	•	•	•	•	•	•	•	•	•
First Data Entry Field, Select	99	•	•	•	•	•	•	•	•	•	•	•
Font, Transmit	100	•	•	•	•	•	•	•	•	•	•	•
Font Character Width, Define	178	•	•	•	•	•	•	•	•	•	•	•

**Commands Supported By Each Printer (continued)**

<b>IPL Command</b>	<b>Page</b>	<b>3 2 4 0</b>	<b>3 4 0 0</b>	<b>3 4 0 0e</b>	<b>3 4 0 0</b>	<b>3 6 0 0</b>	<b>4 1 0 0</b>	<b>4 4 0 0</b>	<b>4 4 X 0</b>	<b>4 X 3 0</b>	<b>7 4 2 1</b>	<b>EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i</b>
Font Type, Select	180	•	•	•	•	•	•	•	•	•	•	•
Form Feed	101	•	•	•	•	•	•	•	•	•	•	•
Format, Create or Edit	182	•	•	•	•	•	•	•	•	•	•	•
Format Direction in a Page, Define	183	•	•	•	•	•	•	•	•	•	•	•
Format, Erase	184	•	•	•	•	•	•	•	•	•	•	•
Format, Select	101	•	•	•	•	•	•	•	•	•	•	•
Format, Transmit	103	•	•	•	•	•	•	•	•	•	•	•
Format Offset Within a Page, Define	184	•	•	•	•	•	•	•	•	•	•	•
Format Position From Page, Delete	185	•	•	•	•	•	•	•	•	•	•	•
Format Position in a Page, Assign	185	•	•	•	•	•	•	•	•	•	•	•
Formats, Print	204		• (C, D)	•	•				•		•	•
Graphic, Select	186	•	•	•	•	•	•	•	•	•	•	•
Graphic or UDC, Define	186	•	•	•	•	•	•	•	•	•	•	•
Hardware Configuration Label, Print	204		• (C, D)	•	•				•		•	•
Height Magnification of Bar, Box, or UDC, Define	187	•	•	•	•	•	•	•	•	•	•	•
Human-Readable Field, Create or Edit	189	•	•	•	•	•	•	•	•	•	•	•
IBM Language Translation, Enable or Disable	122	•	•	•	•	•	•	•	•	•	•	•
Increment and Decrement, Disable	104	•	•	•	•	•	•	•	•	•	•	•
Intercharacter Delay, Set	122	•	•	•	•	•	•	•	•	•	•	•
Intercharacter Space for UDF, Define	190	•	•	•	•	•	•	•	•	•	•	•
Interlabel Ribbon Save, Enable or Disable	123						•					
Interpretive Field, Edit	191	•	•	•	•	•	•	•	•	•	•	•
Interpretive Field, Enable or Disable	192	•	•	•	•	•	•	•	•	•	•	•
Label and Gap Length, Transmit	87	•	•	•	•	•	•	•	•	•	•	•
Label Path Open Sensor Value, Transmit	204	•		•	•			•	•	•	•	•

**Commands Supported By Each Printer (continued)**

<b>IPL Command</b>	<b>Page</b>	<b>3 2 4 0</b>	<b>3 4 0 0</b>	<b>3 4 0 0e</b>	<b>3 4 4 0</b>	<b>3 6 0 0</b>	<b>4 1 0 0</b>	<b>4 4 0 0</b>	<b>4 4 X 0</b>	<b>4 X 3 0</b>	<b>7 4 2 1</b>	<b>EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i</b>
Label Rest Point, Adjust	123	•	•	•	•	•	•	•	•	•	•	•
Label Retract, Enable or Disable	124	•	•	•	•	•	•	•	•	•	•	•
Label Retract Distance, Set	124	•	•	•	•	•	•	•	•	•	•	•
Label Stock Type, Select	125	•	•	•	•	•	•	•	•	•	•	•
Label Taken Sensor Value, Transmit	204	•	•	•	•	•	•	•	•	•	•	•
				(400 dpi only)								
Label Width, Set	125						•	•		•		
Length of Line or Box Field, Define	192	•	•	•	•	•	•	•	•	•	•	•
Line Field, Create or Edit	193	•	•	•	•	•	•	•	•	•	•	•
Maximum Label Length, Set	126	•	•	•	•	•	•	•	•	•	•	•
Media Fault Recovery Mode, Set	127			•				•		•	•	
Media Sensitivity, Select	127	•	•	•	•	•	•	•	•	•	•	•
Memory Usage, Transmit	105	•	•	•	•	•	•		•	•	•	
Message Delay, Set	128	•	•	•	•	•	•	•	•	•		
Next Data Entry Field, Select	106	•	•	•	•	•	•	•	•	•	•	•
Number of Image Bands, Set	129	•	•	•	•	•	•	•		•		
Numeric Field Separator	106	•	•	•	•	•	•	•	•	•	•	•
Online or Offline on Power-Up	130							•		•		
Options Selected, Transmit	107	•	•	•	•	•	•	•	•	•	•	•
Outline Font, Clear or Create	193	•	•	•	•	•	•	•	•	•	•	•
Outline Font, Download	195	•	•	•	•	•	•	•	•	•	•	•
Page, Create or Edit	196	•	•	•	•	•	•	•	•	•	•	•
Page, Delete	197	•	•	•	•	•	•	•	•	•	•	•
Page, Select	108	•	•	•	•	•	•	•	•	•	•	•
Page, Transmit	108	•	•	•	•	•	•	•	•	•	•	•
Pages, Print	204		•	•				•		•	•	
			(C, D)									
Pin 11/20 Protocol, Set	130			•				•		•		
Pitch Label, Print	205	•	•	•	•			•	•	•	•	•
Pitch Size, Set	197	•	•	•	•	•	•	•	•	•		
Point Size, Set	198	•	•	•	•	•	•	•	•	•	•	•
Postamble, Set	131	•	•	•	•	•	•	•	•	•	•	•
Preamble, Set	131	•	•	•	•	•	•	•	•	•	•	•

**Commands Supported By Each Printer (continued)**

IPL Command	Page	3	3	3	3	3	4	4	4	4	7	EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i
		2	4	4	4	6	1	4	4	X	4	
		4	0	0	4	0	0	0	X	3	2	
		0	0	0e	0	0	0	0	0	0	1	
Print	109	•	•	•	•	•	•	•	•	•	•	•
Print Line Dot Count Limit, Set	198											
Print Quality Label, Print	205	•	•	•	•	•	•	•	•	•	•	•
Print Speed, Set	132	•	•	•	•	•	•	•	•	•	•	•
Printer Language, Select	133	•	•	•	•	•	•	•	•	•	•	•
Printhead Loading Mode, Select	135		•	•	•	•			•		•	•
			(C, D)									
Printhead Parameters, Transmit	109	•	•	•	•	•	•	•	•	•	•	•
Printhead Pressure, Set	136							•				
Printhead Resistance Test, Begin	205							•				
Printhead Resistance Values, Transmit	205							•				
Printhead Temperature Sensor Value, Transmit	205	•	•	•	•	•	•	•	•	•	•	•
Printhead Test Parameters, Set	136							•				
Printhead Volt Supply Value, Transmit	205							•				
Program Mode, Enter	109	•	•	•	•	•	•	•	•	•	•	•
Program Mode, Exit	199	•	•	•	•	•	•	•	•	•	•	•
Program Number, Transmit	110	•	•	•	•	•	•	•	•	•	•	•
Quantity Count, Set	110	•	•	•	•	•	•	•	•	•	•	•
Reflective Sensor Value, Transmit	206	•	•	•	•	•	•	•	•	•	•	•
Remaining Quantity and Batch Count, Transmit	87	•	•	•	•	•	•	•	•	•	•	•
Reset	87	•	•	•	•	•	•	•	•	•	•	•
Ribbon Save Zones, Set	137						•					
Self-Strip, Enable or Disable	137	•	•	•	•	•	•	•	•	•	•	•
Slash Zero, Enable or Disable	138			•					• (e)			•
Software Configuration Label, Print	206		•	•	•				•		•	•
			(C, D)									
Start and Stop Codes (Code 39), Print	110	•	•	•	•	•	•	•	•	•	•	•
Status Dump	88	•	•	•	•	•	•	•	•	•	•	•
Status Enquiry	89	•	•	•	•	•	•	•	•	•	•	•
Takeup Motor Torque, Increase	139								•			
Test and Service Mode, Enter	111	•	•	•	•	•	•	•	•	•	•	•

**Commands Supported By Each Printer (continued)**

<b>IPL Command</b>	<b>Page</b>	<b>3 2 4 0</b>	<b>3 4 0 0</b>	<b>3 4 0 0e</b>	<b>3 4 0 0</b>	<b>3 6 0 0</b>	<b>4 1 0 0</b>	<b>4 4 0 0</b>	<b>4 4 X 0</b>	<b>4 X 3 0</b>	<b>7 4 2 1</b>	<b>EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i</b>
Test and Service Mode, Exit	206	•	•	•	•	•	•	•	•	•	•	•
Top of Form, Set	139	•	•	•	•	•	•	•	•	•	•	•
Transmissive Sensor Value, Transmit	206	•	•	•	•	•	•	•	•	•	•	•
User-Defined Characters (UDC) and Graphics, Print	206		• (C, D)	•	•				•		•	•
User-Defined Character, Clear or Create	199	•	•	•	•	•	•	•	•	•	•	•
User-Defined Character Field, Create or Edit	199	•	•	•	•	•	•	•	•	•	•	•
User-Defined Characters, Transmit	111	•	•	•	•	•	•	•	•	•	•	•
User-Defined Font Character, Create	200	•	•	•	•	•	•	•	•	•	•	•
User-Defined Fonts, Print	206		• (C, D)	•	•				•			•
User-Defined Tables, Transmit	112	•	•	•	•	•	•	•	•	•	•	
Warm Boot	112	•	•	•	•	•	•	•	•	•	•	•
Width of Line, Box, Bar, or Character, Define	201	•	•	•	•	•	•	•	•	•	•	•

## Immediate Commands

You can use Immediate commands to query the printer about the status of the printer and any print jobs, to abort print jobs, to request error conditions, and to reset the printer.

Unlike other commands that the printer stores in the data buffer and executes in the order received, the printer executes immediate commands when it receives them, regardless of printer mode.

For help downloading Immediate commands to the printer, see “Sending IPL Commands to the Printer” in Chapter 1.

### Abort Print Job

**Purpose:** Stops batch printing.

**Syntax:** <EM>

**Notes:** The printer stops the current batch print job. The batch quantity count is reset to the original setting. The printer continues to execute other commands remaining in the buffer.

### Error Code, Request

**Purpose:** Solicits error codes from the printer.

**Syntax:** <BEL>

**Notes:** The printer sends back the most recent error code as an ASCII number. The error code represents a command syntax error or a printer RAM usage error.

If no errors have occurred since the printer was turned on, the printer sends a zero. It also resets the error code to 00.

See Chapter 4, “Troubleshooting,” for a list of error codes.

## Label and Gap Length, Transmit

**Purpose:** Transmits the label and gap length as measured by the number of 5 mil increments.

**Syntax:** <ESC>L

**Notes:** Label length refers to the length of the label currently being processed. If the label is longer than the distance between the label sensor and the printhead, the printer transmits the length of the previous label.

If you select continuous stock, the printer transmits the length defined by the Maximum Label Length, Set command (<SI>L).

## Remaining Quantity and Batch Count, Transmit

**Purpose:** Uploads the remaining quantity and batch counts for the current print job.

**Syntax:** <ESC>Q

## Reset

**Purpose:** Executes a printer power-up reset immediately.

**Syntax:** <DLE>

**Notes:** The printer erases all data and commands in the input buffer upon reset. In the following example, the first DLE is a transparency character. It instructs the printer to use the <DLE> as a reset command.

```
<STX><DLE><DLE><ETX>
```

## Status Dump

**Purpose:** Causes the printer to upload all current printer status.

**Syntax:** <VT>

**Printers:**

Printer	Notes
3240	The 3240 printer does not upload either <BS> Takeup reel full or <SO> Printhead test fail.
3400	The 3400 printer does not upload <US> Label path open, <BS> Takeup reel full, or <SO> Printhead test fail.
3400e	The 3400e printer does not upload either <BS> Takeup reel full or <SO> Printhead test fail. Only the 400 dpi version uploads <US> label path open.
3440	The 3440 printer does not upload either <BS> Takeup reel full or <SO> Printhead test fail.
3600	The 3600 printer does not upload <US> Label path open, <BS> Takeup reel full, or <SO> Printhead test fail.
4100	The 4100 printer does not upload <US> Label path open, <BS> Takeup reel full, or <SO> Printhead test fail.
4400	The 4400 printer does not upload <BS> Takeup reel full.
44X0	The 4420 and 4440 printers do not upload either <BS> Takeup reel full or <SO> Printhead test fail.
4X30	The 4630 and 4830 printers do not upload <SO> Printhead test fail.
7421	The 7421 printer does not upload <US> Label path open, <BS> Takeup reel full, or <SO> Printhead test fail.
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	These printers do not upload either <BS> Takeup reel full or <SO> Printhead test fail.

**Notes:** The printer uploads the status in the following order of priority for Intermec Standard Protocol. See Appendix D for codes for other protocols.

<GS>	Buffer already full	<BS>	Takeup reel full
<SO>	Printhead test fail	<SI>	Printhead hot
<US>	Label path open	<FS>	Label at strip pin
<US>	Ribbon fault	<DC1>	Skipping
<EM>	No label stock	<DC1>	Printing
<DC3>	Buffer now full	<DC1>	Ready

## Status Enquiry

**Purpose:** Transmits the current printer status to the host.

**Syntax:** <ENQ>

**Printers:**

Printer	Notes
3240	The 3240 printer does not upload either <BS> Takeup reel full or <SO> Printhead test fail.
3400	The 3400 printer does not upload <US> Label path open, <BS> Takeup reel full, or <SO> Printhead test fail.
3400e	The 3400e printer does not upload either <BS> Takeup reel full or <SO> Printhead test fail. Only the 400 dpi version uploads <US> Label path open.
3440	The 3440 printer does not upload either <BS> Takeup reel full or <SO> Printhead test fail.
3600	The 3600 printer does not upload <US> Label path open, <BS> Takeup reel full, or <SO> Printhead test fail.
4100	The 4100 printer does not upload <US> Label path open, <BS> Takeup reel full, or <SO> Printhead test fail.
4400	The 4400 printer does not upload <BS> Takeup reel full.
44X0	The 4420 and 4440 printers do not upload either <BS> Takeup reel full or <SO> Printhead test fail.
4X30	The 4630 and 4830 printers do not upload <SO> Printhead test fail.
7421	The 7421 printer does not upload <US> Label path open, <BS> Takeup reel full, or <SO> Printhead test fail.
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	These printers do not upload either <BS> Takeup reel full or <SO> Printhead test fail.

**Notes:** The printer uploads the status in the following order of priority for Intermec Standard Protocol. See Appendix D for codes for other protocols.

<GS>	Buffer already full	<BS>	Takeup reel full
<SO>	Printhead test fail	<SI>	Printhead hot
<US>	Label path open	<FS>	Label at strip pin
<US>	Ribbon fault	<DC1>	Skipping
<EM>	No label stock	<DC1>	Printing
<DC3>	Buffer now full	<DC1>	Ready

## Print Commands

You can use Print commands to pass data to formats and print labels.

When you enter data into a format for printing, the printer uses a field pointer to designate the field in the format where the data should print. If you choose a new format, the field pointer automatically points to the lowest numbered data entry field and continues to point to that field until you select a different field or format. If you select a field by using the <CR> or <ESC>F command, new data entered into the field overwrites any data already existing in the field.

Print commands are effective when the printer is in Print mode. You can switch to Print mode with this command:

```
<STX>R<ETX>
```

For help downloading Print commands to the printer, see “Sending IPL Commands to the Printer” in Chapter 1.



**Note:** You must precede each string of commands with the start of message character <STX> and follow it with the end of message character <ETX>. The next command in the message terminates all Print mode commands. The command separator (<NUL> or <LF>) is optional between commands, but is necessary to separate commands from data. For example, to separate the <ESC>F command from data, type:

```
<ESC>F4<NUL>data
```

## Advanced Mode, Select

**Purpose:** Instructs the printer to operate in Advanced mode. Advanced mode is the default mode; the alternative operating mode is Emulation mode.

**Syntax:** <ESC>C*n*  
where *n* specifies the dot size.

### Printers:

Printer	Default	Values for <i>n</i>	Notes
3240	<i>n</i> = 1	0 = 5.0 mil (0.005 inch) dot size 1 = 2.5 mil (0.0025 inch) dot size	
3400e	200 dpi: N/A 400 dpi: <i>n</i> = 1	0 = 5.0 mil (0.005 inch) dot size 1 = 2.5 mil (0.0025 inch) dot size	The <i>n</i> parameter is not available on the 3400e with the 200 dpi option.
3440	<i>n</i> = 1	0 = 5.0 mil (0.005 inch) dot size 1 = 2.5 mil (0.0025 inch) dot size	
44X0	4420: N/A 4440: <i>n</i> = 1	0 = 5.0 mil (0.005 inch) dot size 1 = 2.5 mil (0.0025 inch) dot size	The <i>n</i> parameter is not available on the 4420.

**Notes:** The field pointer designates the first field in format 0. Page 0 is the default page.

You will lose all previously host-entered data when you switch operating modes.

## Alphanumeric Field Separator

**Purpose:** Increments or decrements alphanumeric characters within a field-separated region. You must enclose the data between two sets of <GS> commands:

```
<GS>data<GS>
```

**Syntax:** <GS>

Alphanumeric characters are 0 to 9 and A to Z. The order of the characters is 0, 1, 2...8, 9, A, B, C...Y, Z, 0, 1...9, A, B....

**Notes:** You may have more than one region in a field as long as they do not overlap. Each region independently increments or decrements according to the increment or decrement value specified for the field. The length of data does not change. Rather, the values increment or decrement as in an odometer. For example, 9 increments to 0, and Z increments to A.

This command marks the region of characters to increment or decrement, but it does not actually increment or decrement. The printer ignores any non-alphanumeric characters within this region.

The following example illustrates the Alphanumeric Field Separator command:

```
<STX><ESC>C<ETX>
<STX><ESC>P<ETX>
<STX>E1;F1;<ETX>
<STX>H1;o175,10;f3;c2;h2;w2;b10;<ETX>
<STX>H2;o75,10;f3;c2;h2;w2;b10;<ETX>
<STX>H3;o200,10;f3;c7;h2;w2<ETX>
<STX>H4;o100,10;f3;c7;h2;w2<ETX>
<STX>R<ETX>
<STX><ESC>E1<CAN><ETX>
<STX><CR><ESC>I1<GS>A<GS><ETX>
<STX><CR><ESC>D1<GS>C<GS><ETX>
<STX><CR>Increment Field<ETX>
<STX><CR>Decrement Field<ETX>
<STX><RS>3<ETB><ETX>
```

## Batch Count, Set

**Purpose:** Sets the number of labels to be printed in the next batch.

**Syntax:** <US>*n*  
where *n* is the number of labels.

**Printers:**

Printer	Default	Values for <i>n</i>	Notes
All	<i>n</i> = 1	1 to 9999	All printers support this command the same way.

**Notes:** This command causes the printer to make *n* copies of the same label. The total number of labels printed per print command is equal to the quantity in each batch multiplied by the number of batches.

The printer generates an error code (21) if *n* is out of range.

See your printer user's manual for help optimizing image bands for batch printing.

## Clear All Data

**Purpose:** Clears all host-entered data from the current page or format.

**Syntax:** <CAN>

**Notes:** If you select a format, the pointer indicates the first data entry field in the format after you clear the data. If you select a page, the pointer designates the first data entry field in the first format.

## Clear Data From Current Field

**Purpose:** Deletes data from the current field.

**Syntax:** <DEL>

**Notes:** The field pointer continues to designate the current field even after you clear the data.

## Command Terminator 1

**Purpose:** Terminates the current command.

**Syntax:** <NUL>

## Command Terminator 2

**Purpose:** Terminates the current command.

**Syntax:** <LF>

## Configuration Parameters, Transmit

**Purpose:** Uploads the current configuration commands from the printer.

**Syntax:** <ESC>p

**Notes:** The printer transmits only the configuration parameters that you can set from the host.

Use this command to view, edit, or copy the current configuration command settings.

See your printer user's manual for a list of the configuration parameters that the printer uploads to the host.

## Cut

**Purpose:** Advances the label out to the cutter and cuts the label stock.

**Syntax:** <SO>

**Notes:** This command is executed only if the cutter is installed but not enabled. Use this command only after you have printed a batch of labels.

## Data Shift – International Characters

**Purpose:** Allows you to enter selected command characters as data.

**Syntax:** <SUB> *or* <DLE>

**Notes:** In Emulation mode, this command shifts the next character (if not a control character) into the upper character bank (setting the eighth bit to 1) to print international characters.

This command lets you enter selected command characters as data instead of commands in both Advanced and Emulation mode. For example, use this command to enter a <GS> or <CR> as data in a bar code or text field.

**Data Shift – International Characters (continued)**

Use <SUB> to send the following command characters as data:

<ACK>	<DC4>	<FF>	<NUL>	<SYN>
<BEL>	<EM>	<FS>	<RS>	<US>
<BS>	<ENQ>	<GS>	<SI>	<VT>
<CAN>	<EOT>	<HT>	<SO>	
<CR>	<ESC>	<LF>	<SOH>	
<DC2>	<ETB>	<NAK>	<SUB>	

Use <DLE> to send these command characters as data:

<DC1>	<DC3>	<STX>	<ETX>
-------	-------	-------	-------

To send <DLE> as data, preface it with the command <SUB><DLE>.

This example illustrates using the Data Shift command to print control or command characters in a data field.

```

<STX><ESC>C<ETX>
<STX><ESC>P<ETX>
<STX>E1;F1;<ETX>
<STX>H0;o750,10;f3;c0;h3;w2;b10;d0,50<ETX>
<STX>B1;o300,10;f3;c0;h200;w1;i1;r2<ETX>
<STX>B2;o600,10;f3;c0;h200;w1;i1;r2<ETX>
<STX>I1;o75,10;f3;c0;h3;w3<ETX>
<STX>I2;o375,10;f3;c0;h3;w3<ETX>
<STX>R<ETX>
<STX><ESC>E1<ETX>
<STX><CAN><ETX>
<STX>Example for printing control codes<CR><ETX>
<STX><SUB><NUL><SUB><SOH><DLE><STX><DLE><ETX><SUB><EOT>
<SUB><ENQ><SUB><ACK><SUB><BEL><SUB><BS><SUB><HT><SUB><LF>
<SUB><VT><SUB><FF><SUB><CR><SUB><SO><SUB><SI>
<SUB><DLE><DLE>
<SUB><DC1><SUB><DC2><ETX>
<STX><CR><ETX>
<STX><SUB><DC3><SUB><DC4><SUB><NAK><SUB><SYN><SUB><ETB>
<SUB><CAN><SUB><EM><SUB><SUB><SUB>
<ESC><SUB><FS><SUB><GS><SUB><RS><SUB><US><ETX>
<STX><US>1<ETX>
<STX><RS>1<ETX>
<STX><ETB><ETX>

```

## Direct Graphics Mode, Select

**Purpose:** Allows you to download graphic images directly into image memory without storing them in nonvolatile RAM.

**Syntax:** <ESC>*gm*

where *m* specifies the format of the data to follow.

### Printers:

Printer	Default	Values for m	Notes
3400C, 3400e	m = 0	0 = 8 bits per byte 1 = 8 bits per byte that have been nibblized	When the printer is in Direct Graphics mode, the printer treats all Immediate commands as Direct Graphics commands.
3440	m = 0	0 = 8 bits per byte 1 = 8 bits per byte that have been nibblized	
44X0	m = 0	0 = 8 bits per byte 1 = 8 bits per byte that have been nibblized	
7421	m = 0	0 = 8 bits per byte 1 = 8 bits per byte that have been nibblized	
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	m = 0	0 = 8 bits per byte 1 = 8 bits per byte that have been nibblized	When the printer is in Direct Graphics mode, the printer treats all Immediate commands as Direct Graphics commands.

**Notes:** For more information on direct graphics, see Appendix E, “Using Direct Graphics Mode.”

## Emulation Mode, Enter

**Purpose:** Instructs the printer to operate in Emulation mode. The default is Advanced Mode.

**Syntax:** <ESC>*cn*  
where *n* specifies the dot size.

**Printers:**

Printer	Default	Values for n
All	n = 0	0 = 10 mil (0.010 inch) dot size 1 = 15 mil (0.015 inch) dot size for bar codes only (other fields are 10 mil)

**Notes:** Emulation mode lets you print bar code labels that were designed on an 86XX printer in multiples of 10 or 15 mil.

The field pointer designates the first field in format 0.

You disable the page select command and lose all previously host-entered data.

## Field, Select

**Purpose:** Selects a data field for entering or working with data.

**Syntax:** <ESC>*F**n* or <ESC>*F*"*name*"  
where *n* is the number of the field.

**Printers:**

Printer	Default	Values for n	Notes
All	n = 0	0 to 199	All printers support this command the same way.

**Notes:** The parameter for this command can either be the field number or the field name, but not both. If neither is present, the printer defaults to 0.

If you use the field number, the printer enters all following data into field *n*. If you use the field *name*, the printer enters all following data into all fields with the specified name in the current format or page. You must bracket the field *name* with quotation marks (" ").

The printer generates an error code (38) if you enter an invalid field number.

**Field, Select (continued)**

The following example illustrates employing the Field, Select command to enter data into a field identified by a number:

```
<STX><ESC>C<ETX>
<STX><ESC>P<ETX>
<STX>E1;F1;<ETX>
<STX>H0;o450,50;c0;f3;h3;w2;b10;d0,35<ETX>
<STX>H1;o300,50;c0;h2;w2;f3<ETX>
<STX>B2;o250,50;c0,3;f3;h200;w2;i1;<ETX>
<STX>R<ETX>
<STX><ESC>E1<CAN><ETX>
<STX><ESC>F0<DEL>Example printing by field number<ETX>
<STX><ESC>F1<DEL>This is a test<ETX>
<STX><ESC>F2<DEL>Test<ETX>
<STX><US>1<ETX>
<STX><RS>1<ETX>
<STX><ETB><ETX>
```

The following example illustrates employing the Field, Select command to enter data into a field identified by a name:

```
<STX><ESC>C<ETX>
<STX><ESC>P<ETX>
<STX>E1;F1;<ETX>
<STX>H0,Example;o450,50;c0;f3;h3;w2;b10;d0,35<ETX>
<STX>H1,Text;o300,50;c0;h2;w2;f3<ETX>
<STX>B2,Barcode;o250,50;c0,3;f3;h200;w2;i1;<ETX>
<STX>R<ETX>
<STX><ESC>E1<CAN><ETX>
<STX><ESC>F"Example"<DEL>Example printing by field
name<ETX>
<STX><ESC>F"Text"<DEL>This is a test<ETX>
<STX><ESC>F"Barcode"<DEL>Test<ETX>
<STX><US>1<ETX>
<STX><RS>1<ETX>
<STX><ETB><ETX>
```

**Field Decrement, Set**

**Purpose:** Sets the field decrement value for the selected field.

**Syntax:** <ESC>D*n*

where *n* is the field decrement value.

**Printers:**

Printer	Default	Values for <i>n</i>	Notes
All	<i>n</i> = 1	0 to 9999	All printers support this command the same way.

**Field Decrement, Set (continued)**

**Notes:** In the section of data separated by <FS> or <GS>, the printer decrements the values in data entry fields by  $n$  after it prints each batch.

The printer generates an error code (22) if the decrement value is out of range.

**Field Increment, Set**

**Purpose:** Sets the increment value for the selected field.

**Syntax:** <ESC>In  
where  $n$  is the increment value.

**Printers:**

Printer	Default	Values for $n$	Notes
All	$n = 1$	1 to 9999	All printers support this command the same way.

**Notes:** In the section of data separated by <FS> or <GS>, the printer increments the values in data entry fields by  $n$  after it prints each batch. You must use this command when you are defining a format in Programming mode. This example shows how to use the field increment command:

```
<STX><ESC>E5<CAN><ETX>
<STX>Lot 23455 262948<CR><FS>307 91747<FS><ESC>I2<ETX>
<STX><RS>5<ETB><ETX>
```

The printer generates an error code (22) if the increment value is out of range.

**First Data Entry Field, Select**

**Purpose:** Sets the field pointer to the lowest numbered data entry field that can accept Print mode data.

**Syntax:** <ACK>

**Notes:** This command ensures that data prints in the field with the lowest number if you do not want to specify a data field by its field number.

## Font, Transmit

**Purpose:** Uploads a font from the printer in the form of commands and data the printer receives to create the font.

**Syntax:** <ESC>vn  
where *n* is the font ID number.

**Printers:**

Printer	Default	Values for n
3240	None	0 to 28, 30 to 41, and 50 to 56 with the Kanji option
3400A	None	0 to 24
3400B 3400C 3400D	None	0 to 25, 30 to 41, and 50 to 56 with the Kanji option
3400e	None	0 to 28, 30 to 41 and 50 to 56 with the Kanji option
3440	None	0 to 28, 30 to 41, and 50 to 56 with the Kanji option
3600	None	0 to 25, 30 to 41, and 50 to 56 with the Kanji option
4100	None	0 to 24
4400	None	0 to 25
44X0	None	0 to 28, 30 to 41, and 50 to 56 with the Kanji option
4X30	None	0 to 28, 30 to 41
7421	None	0 to 28, 30 to 41
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	None	0 to 28, 30 to 41

**Notes:** You can set *n* to a number from 0 to 56, depending on the fonts your printer supports. The font names are listed in the “Values for n” table on page 180.

**Font, Transmit (continued)**

If you send <ESC>v to the printer without specifying a value for the *n* parameter, the printer (except for the 3400A, 3400B, 3600, and 4400) uploads the entire user-defined fonts directory. The directory appears in this format:

```
IDnumber, name, type, storage size<CR><LF>
```

where:

*IDnumber* is the font number that was specified by *n* in the command that created the user-defined font.

*name* is the optional font name that may have been specified by *,name* in the command that created the user-defined font.

*type* is 200 for Bitmap fonts, 300 for Speedo outline fonts, or 301 for TrueType fonts.

*storage size* is 0 for resident fonts.

Always transmit fonts in Advanced mode.

The target printer remains in Advanced mode. The printer generates an error code (27) if you enter an invalid number.

**Form Feed**

**Purpose:** Feeds a label out to the next print point.

**Syntax:** <FF>

**Notes:** If you use self-strip, the printer feeds out one blank label to the strip pin, skipping an entire label. If you use batch operation with die-cut label stock, the label moves to the tear bar.

If you use continuous label stock, the label stock moves the same amount as the end-of-print skip distance.

**Format, Select**

**Purpose:** Selects a format for data entry or printing.

**Syntax:** <ESC>En [, m]

where *n* is the numeric format ID and *,m* specifies to reimage only changed fields.

**Format, Select (continued)****Printers:**

<b>Printer</b>	<b>Default</b>	<b>Values for n</b>	<b>Values for ,m</b>	<b>Notes</b>
3240	n = 0	0 to 99	0 = the printer reimages the entire label. 1 = the printer only reimages the changed fields.	
3400A 3400B	n = 0	0 to 19	0 = the printer reimages the entire label. 1 = the printer only reimages the changed fields.	
3400C 3400D	n = 0	*, 0 to 19	Not available	If you use an asterisk (*) for the label format, the printer temporarily stores the label format in RAM.
3400e	n = 0	*, 0 to 99	Not available	If you use an asterisk (*) for the label format, the printer temporarily stores the label format in RAM.
3440	n = 0	*, 0 to 99	Not available	If you use an asterisk (*) for the label format, the printer temporarily stores the label format in RAM.
3600	n = 0	0 to 19	0 = the printer reimages the entire label. 1 = the printer only reimages the changed fields.	
4400	n = 0	0 to 19	0 = the printer reimages the entire label. 1 = the printer only reimages the changed fields.	
44X0	n = 0	*, 0 to 99	Not available	If you use an asterisk (*) for the label format, the printer temporarily stores the label format in RAM.
4X30	n = 0	0 to 19	Not available	If you use an asterisk (*) for the label format, the printer temporarily stores the label format in RAM.
7421	n = 0	*, 0 to 99	Not available	If you use an asterisk (*) for the label format, the printer temporarily stores the label format in RAM.
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 0	*, 0 to 99	Not available	If you use an asterisk (*) for the label format, the printer temporarily stores the label format in RAM.

**Format, Select (continued)**

**Notes:** If you select a page other than 0, *n* is an alphabetic format position within the page with a range from a to z.

After you select the format, the field pointer points to the lowest numbered data entry field.

The printer must be able to completely image a label, within the available number of image bands, for the reimaging command to work and retain the image. The printer starts imaging the label as soon as it receives the command to select a format.

The printer clears all host entered/variable data from this format.

The printer generates an error code (36) if you enter an invalid format number.

**Format, Transmit**

**Purpose:** Uploads a format from the printer in the form of commands and data the printer uses to create the format.

**Syntax:** <ESC>*xn*  
where *n* is the format ID number.

**Printers:**

Printer	Default	Values for n
3240	None	0 to 19
3400A 3400B	None	0 to 19
3400C 3400D 3400e	None	0 to 99
3440	None	0 to 99
3600	None	0 to 19
4100	None	0 to 19
4400	None	0 to 19
44X0	None	0 to 99
4X30	None	0 to 19
7421	None	0 to 99
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	None	0 to 99

### **Format, Transmit (continued)**

**Notes:** If you send <ESC>x to the printer without specifying a value for the *n* parameter, the printer (except for the 3400A, 3400B, 3600, and 4400) uploads the entire format directory. The directory appears in this format:

```
[IDnumber] [name] [type] [storage size]<CR><LF>
```

where:

*IDnumber* is the format number that was specified by *n* in the command that created the format.

*name* is the optional format name that may have been specified by *,name* in the command that created the format.

*type* is 0 for formats.

*storage size* is the number of bytes needed to store the format.

The target printer remains in Advanced mode.

The printer generates an error code (25) if you enter an invalid number.

## **Increment and Decrement, Disable**

**Purpose:** Resets any increment or decrement flags for the current field.

**Syntax:** <ESC>N

## Memory Usage, Transmit

**Purpose:** Uploads information on the amount of memory installed or allocated and the amount of memory not being used.

**Syntax:** <ESC>mn

where *n* specifies the type of the memory.

### Printers:

Printer	Default	Values for n
3400e	n = 0	0 = Transmits the amounts of memory that are available and free. 1 = Transmits the amount of installed SRAM, DRAM, or Flash RAM.
3440	n = 0	0 = Transmits the amounts of memory that are available and free. 1 = Transmits the amount of installed SRAM, DRAM, or Flash RAM.
44X0	n = 0	0 = Transmits the amounts of memory that are available and free. 1 = Transmits the amount of installed SRAM, DRAM, or Flash RAM.
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 0	0 = Transmits the amounts of memory that are available and free. 1 = Transmits the amount of installed SRAM, DRAM, or Flash RAM.

**Notes:** The printer uploads the amount of total storage memory available for formats, fonts, and UDCs. The amount of available RAM not being used follows the amount of total RAM. The printer separates the numbers by a comma: 32,10.

This command was called Storage Area Usage, Transmit in older versions of the 3240, 3400, and 3600 printer manuals. This command is called Static RAM Usage, Transmit in the 4400 printer manual.

## Next Data Entry Field, Select

**Purpose:** Moves the field pointer to the next data entry field.

**Syntax:** <CR>

**Notes:** If you have not selected a page and the pointer is designating the last field, the field pointer moves back to the first data entry field in the format. If you selected a multiformat page and the field pointer is pointing to the last field in a format, it moves to the first field in the next format.

## Numeric Field Separator

**Purpose:** Specifies which numeric data within a field to increment or decrement. You must enclose the data between two sets of <FS> commands:

```
<FS>data<FS>.
```

**Syntax:** <FS>

**Notes:** You can have more than one region per field as long as they do not overlap. The printer independently increments or decrements each region according to the increment or decrement value specified for the field. The length of data does not change. Rather, the values increment or decrement as in an odometer: 9 increments to 0. The printer ignores any non-numeric characters within the region.

The following example illustrates the Numeric Field Separator command:

```
<STX><ESC>C<ETX>  
<STX><ESC>P<ETX>  
<STX>E1;F1;<ETX>  
<STX>H1;o175,10;f3;c2;h2;w2;b10;<ETX>  
<STX>H2;o75,10;f3;c2;h2;w2;b10;<ETX>  
<STX>H3;o200,10;f3;c7;h2;w2<ETX>  
<STX>H4;o100,10;f3;c7;h2;w2<ETX>  
<STX>R<ETX>  
<STX><ESC>E1<CAN><ETX>  
<STX><CR><ESC>I1<FS>1<FS><ETX>  
<STX><CR><ESC>D1<FS>10<FS><ETX>  
<STX><CR>Increment Field<ETX>  
<STX><CR>Decrement Field<ETX>  
<STX><RS>3<ETB><ETX>
```

## Options Selected, Transmit

**Purpose:** Uploads the list of selected options.

**Syntax:** <ESC>O

**Printers:**

Printer	Values Returned by Printer
3240	0 = No options selected 4 = Self-strip
3400A 3400B	0 = No options selected 4 = Self-strip
3400C 3400D	0 = No options selected 1 = Cutter 4 = Self-strip
3400e	0 = No options selected 1 = Cutter 4 = Self-strip
3440	0 = No options selected 4 = Self-strip
3600	0 = No options selected 4 = Self-strip
4100	0 = No options selected 1 = Cutter 4 = Self-strip 5 = Ribbon save
4400	0 = No options selected 1 = Cutter 2 = Batch takeup 3 = Self-strip and applicator 4 = Self-strip
44X0	0 = No options selected 1 = Cutter 2 = Batch takeup (if you have the option installed) 4 = Self-strip
4X30	0 = No options selected 1 = Cutter 2 = Batch takeup 3 = Self-strip and applicator 4 = Self-strip

**Options Selected, Transmit (continued)**

Printer	Values Returned by Printer
7421	0 = No options selected 1 = Cutter
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	0 = No options selected 1 = Cutter 4 = Self-strip

**Page, Select**

**Purpose:** Selects a page for data entry or printing.

**Syntax:** <ESC>G*n*  
where *n* is the page ID number.

**Printers:**

Printer	Default	Values for n	Notes
All	n = 0	0 to 9	All printers support this command the same way.

**Notes:** After you select the page, the field pointer points to the lowest numbered data entry field of the lowest position format.

The printer clears all host-entered data from this page.

The printer generates an error code (36) if you enter an invalid page number.

**Page, Transmit**

**Purpose:** Uploads a page from the printer in the form of commands used to create a format. It also uploads all formats in a page.

**Syntax:** <ESC>y*n*  
where *n* is the page ID number.

**Printers:**

Printer	Default	Values for n	Notes
All	None	1 to 9	All printers support this command the same way.

**Page, Transmit (continued)**

**Notes:** If you send <ESC>y to the printer without specifying a value for the *n* parameter, the printer uploads the entire page directory. The directory appears in this format:

```
[IDnumber] [name] [type] [storage size]<CR><LF>
```

where:

*IDnumber* is the page number that was specified by *n* in the command that created the page.

*name* is the optional page name that may have been specified by *,name* in the command that created the page.

*type* is 1 for pages.

*storage size* is always 0 for a page.

The target printer remains in Advanced mode. The printer generates an error code (26) if you enter an invalid number.

**Print**

**Purpose:** Prints the current page or format with previously entered data.

**Syntax:** <ETB>

**Printhead Parameters, Transmit**

**Purpose:** Transmits the number and size of dots in the printhead back to the host.

**Syntax:** <ESC>H

**Notes:** Here is an example of what you can expect to see: 896,5.0.

**Program Mode, Enter**

**Purpose:** Causes the printer to enter Program mode for the purpose of creating or editing pages, formats, fonts, or graphics.

**Syntax:** <ESC>P

**Notes:** When this command is executed, you lose all previously entered data.

## Program Number, Transmit

**Purpose:** Transmits both the program number and the version number.

**Syntax:** <ESC>M*n*

*n* = 0 returns program # and version #

*n* = 1 returns program #, version #, and model #

The default for *n* is 0.

<ESC>M1 is supported by 4420, 4440, and 3400e only.

Here is an example of what you might see: 059877,1.4.

3400e: <ESC>M1 returns program #, version # 3400E2 or E4 (200 dpi/400 dpi)

**Notes:** This command uploads the program and software version number to the host as an ASCII alphanumeric character string.

## Quantity Count, Set

**Purpose:** Sets the quantity of label batches to be printed by the next print command.

**Syntax:** <RS>*n*

where *n* is the number of batches.

**Printers:**

Printer	Default	Values for <i>n</i>	Notes
All	<i>n</i> = 1	1 to 9999	All printers support this command the same way.

Here is an example of how to use this command:

<STX><RS>5<ETB><ETX>

**Notes:** The printer generates an error code (21) if the quantity is out of range. Data increments or decrements between batches of labels.

## Start and Stop Codes (Code 39), Print

**Purpose:** Instructs the current Code 39 field to print only the start and stop characters.

**Syntax:** <ESC><SP>

where <SP> is the space character.

**Notes:** The printer clears all previous data from the current field.

## Storage Area Usage, Transmit

See the “Memory Usage, Transmit” command.

## Test and Service Mode, Enter

**Purpose:** Enters Test and Service mode.

**Syntax:** <ESC>T

**Notes:** The printer completes all print jobs before executing this command. When the printer enters Test and Service mode, it erases any host-entered data that was sent prior to the command.

## User-Defined Characters, Transmit

**Purpose:** Uploads a graphic (user-defined character) from the printer in the form of commands and data the printer receives to create the graphic.

**Syntax:** <ESC>un

where *n* is the graphic ID number.

**Printers:**

Printer	Default	Values for n	Notes
All	None	0 to 99	All printers support this command the same way.

**Notes:** If you send <ESC>u to the printer without specifying a value for the *n* parameter, the printer (except for the 3400A, 3400B, 3600, and 4400) uploads the entire graphics directory. The directory appears in this format:

```
[IDnumber] [name] [type] [storage size]<CR><LF>
```

where:

*IDnumber* is the graphic number that was specified by *n* in the command that created the graphic.

*name* is the optional graphic name that may have been specified by *,name* in the command that created the graphic.

*type* is 100 for a graphic.

*storage size* is the number of bytes to store the graphic.

If the printer is in Advanced mode, each data byte represents six bits of the graphic bitmap. If the printer is in Emulation mode, each data byte represents one bit of the graphic image.

The printer generates an error code (28) if you enter an invalid number.

## User-Defined Tables, Transmit

**Purpose:** Causes the printer to upload the user-defined command and protocol tables that the printer receives to download a new command set.

**Syntax:** <ESC>Z*t*  
where *t* identifies the table.

**Printers:**

Printer	Values for <i>t</i>	Notes
All except the EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i, and 7421	0 = Print mode commands 1 = Escape print commands 2 = Shift print commands 3 = Status response 4 = Protocol characters	All printers support this command the same way.

**Notes:** You can find tables listing the default values in Appendix D, “User-Defined Interface Tables.”

The printer generates an error code (12) if you enter an invalid number.

Use this command to substitute protocol and command characters.

## Warm Boot

**Purpose:** Resets the printer with a warm boot.

**Syntax:** <BS>

**Notes:** Unlike the <DLE> command, this command does not take effect immediately. The printer executes all previous commands before the warm boot takes effect.

You will lose any data that is sent after this command and before the printer finishes rebooting. Use this command when configuration changes require a printer reset.

## Configuration Commands

Use Configuration commands to set parameters for configuration features and to enable or disable options.

Configuration commands are effective when the printer is in Print mode. You can switch to Print mode with this command:

```
<STX>R<ETX>
```

For help downloading Configuration commands to the printer, see “Sending IPL Commands to the Printer” in Chapter 1.



**Note:** You must precede each string of commands with the start of message character <STX> and follow it with the end of message character <ETX>. The printer terminates a configuration command when it receives the next command in the message.

After reconfiguring your printer, you must cycle power or reset the printer for the commands to become effective unless specified otherwise; however, when configuring the 3400e, 4420, and 4440 printers, do not cycle power using the hardware power switch. You must send the Reset command (<BS> character) after issuing the new configuration command or commands.

## Amount of Storage, Define

**Purpose:** Specifies the amount of RAM you have allocated for storage.

**Syntax:** <SI>Nn

where *n* is the amount of RAM in kilobytes.

**Printers:**

Printer	Without expanded RAM		With expanded RAM	
	Default	Values for n	Default	Values for n
3240	n = 60	10K to 120K	n = 200	10K to 504K
3400A	n = 20	10K to 32K	n = 120	10K to 128K
3400B 3400C 3400D	n = 60	10K to 120K	n = 200	10K to 504K
3600	n = 60	10K to 120K	n = 200	10K to 504K
4100	n = 20	10K to 32K	n = 120	10K to 128K

**Notes:** The printer buffers this command until you execute it. When you execute this command, it erases all previously stored format, fonts, or UDCs but does not change the printer configuration. Use this command with printers that share image generation and format/UDC/fonts storage area.

## Audible Alarm, Enable or Disable

**Purpose:** Turns the audible alarm feature on or off.

**Syntax:** <SI>an

**Printers:**

Printer	Default	Values for n
4400	n = 0	0 = Disables the audible alarm. 1 = Enables the audible alarm
EasyCoder PF2i, PF4i, PM4i, PX4i, PX6i	n=0	0 = Disables the audible alarm. 1 = Enables the audible alarm

## Auto-Transmit 1, Enable

**Purpose:** Enables auto-transmit level 1.

**Syntax:** <ESC>j

**Notes:** The printer uploads the status in the following order of priority for Intermecc Standard Protocol. See Appendix D, “User-Defined Interface Tables,” for codes for other protocols.

<DC1> Fault cleared.  
(<DC2> transmitted when Flow Control Protocol selected.)

<FS> Label at strip pin

<BS> Takeup reel full

<EM> No label stock

<US> Ribbon fault

<US> Label path open

## Auto-Transmit 2, Enable

**Purpose:** Enables auto-transmit level 2.

**Syntax:** <ESC>d

**Notes:** At level 2, the printer automatically transmits the status response code indicating room in input buffer (<DC1> for Standard Protocol and <DC2> for Flow Control Protocol). Without auto-transmit enabled, the host must use the <ENQ> or <VT> command to determine the status.

## Auto-Transmit 3, Enable

**Purpose:** Enables auto-transmit level 3.

**Syntax:** <ESC>e

**Notes:** The printer transmits a status response when this condition occurs:

<HT> Imager overrun

<SOH> Printing is complete and the buffer is empty

<RS> Insufficient RAM for printing or storage

## Auto-Transmit 1, 2, and 3, Disable

**Purpose:** Disables the auto-transmit status responses.

**Syntax:** <ESC>k

## Communication Port Configuration, Set

**Purpose:** Sets the serial and parallel port configuration.

**Syntax:** <SI>P [n1] [, n2] [, n3] [, n4] [, n5] [, n6]

where:

*n1* sets the baud rate, *n2* sets the parity, *n3* sets the data bits, *n4* sets the protocol, and *n5* sets the Multi-Drop address (if you are using Multi-Drop).

*n6* sets the parallel port mode.

### Printers:

Printer	Defaults	n1 Values	n2 Values	n3 Values	n4 Values	n5 Values	n6 Values
7421	n1 = 3 n2 = 0 n3 = 1 n4 = 0 n5 = A n6 = 0	0 = 1,200 1 = 2,400 2 = 4,800 3 = 9,600 4 = 19,200	0 = None 1 = even 2 = odd	0 = 7 bits 1 = 8 bits	0 = XON/XOFF 1 = Intermec XON/XOFF 2 = Intermec Standard 3 = Polling Mode D	A - Z, 0 - 5	0 = Centronic Mode 1 = 1284 Nibble Mode
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n1 = 3 n2 = 0 n3 = 1 n4 = 0	0 = 1,200 1 = 2,400 2 = 4,800 3 = 9,600 4 = 19,200 5 = 38,400 6 = 57,600 7 = 115,200	0 = None 1 = even 2 = odd	0 = 7 bits 1 = 8 bits	0 = XON/XOFF 2 = Intermec Standard	N/A	N/A

## Control Panel Access Permission, Set

**Purpose:** Sets a security level to restrict access to certain menus.

**Syntax:** <SI>An

where *n* specifies the menus that can be accessed.

### Printers:

Printer	Default	Values for n
4400	n = 0	0 = Allows access to all menus (operator, configuration, installation, and test and service) 1 = Allows access to the operator and configuration menus only 2 = Allows access to the operator menu only 3 = Denies access to all menus
4X30	n = 0	0 = Allows access to all menus (operator, configuration, installation, and test and service) 1 = Allows access to the operator and configuration menus only 2 = Allows access to the operator menu only 3 = Denies access to all menus
EasyCoder PF2i, PF4i, PM4i, PX4i, PX6i	n=0	0 = Allows access to all Setup menus 1 = Denies access to all Setup menus

## Cutter, Enable or Disable

**Purpose:** Turns the cutter feature on or off if the cutter option is installed. Reset the printer after sending this command.

**Syntax:** <SI>cn  
where *n* enables or disables the cutter.

### Printers:

Printer	Default	Values for n	Notes
3400C 3400D	n = 0	0 = Disables the cutter 1 = Enables the cutter	
3400e	n = 0	0 = Disables the cutter 1 = Enables the cutter	
4100	n = 0	0 = Disables the cutter 1 = Enables the cutter	
4400	n = 0	0 = Disables the cutter 1 = Enables the cutter	
44X0	n = 0	0 = Disables the cutter 1 = Enables the cutter	
4X30	n = 0	0 = Disables the cutter 1 = Enables the cutter	
7421	n = 0	0 = Disables the cutter 1 = Enables the cutter	
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 0	0 = Disables the cutter 1 = Enables the cutter	This option is available on the EasyCoder F4 with IPL version 1.4.

## Dark Adjust, Set

**Purpose:** Sets the dark adjust command. This command controls the print darkness on the labels.

**Syntax:** <SI>dn  
where *n* specifies the darkness setting.

### Printers:

Printer	Default	Values for n	Notes
All	n = 0	-10 to +10 (in increments of 1)	This command changes the configuration setting.

**Notes:** The darkest setting is +10 (darkest) and the lightest setting is -10 (lightest).

## Emulation or Advanced Mode on Power-Up

**Purpose:** Selects Emulation or Advanced printer operating mode on power-up.

**Syntax:** <SI>C*n*

where *n* specifies the mode and mil.

### Printers:

Printer	Default	Values for n	Notes
3240	n = 3	0 = Emulation mode (10 mil) 1 = Advanced mode (5 mil) 2 = Emulation mode (15 mil) 3 = Advanced mode (2.5 mil)	
3400	n = 1	0 = Emulation mode (10 mil) 1 = Advanced mode (5 mil) 2 = Emulation mode (15 mil)	
3400e	200 dpi: n = 1  400 dpi: n = 3	200 dpi: 0 = Emulation mode (10 mil) 1 = Advanced mode (5 mil) 2 = Emulation mode (15 mil)  400 dpi: 0 = Emulation mode (10 mil) 1 = Advanced mode (5 mil) 2 = Emulation mode (15 mil) 3 = Advanced mode (2.5 mil)	You can use Advanced mode 2.5 mil option <b>only</b> on the 3400e with the 400 dpi option.
3440	n = 3	0 = Emulation mode (10 mil) 1 = Advanced mode (5 mil) 2 = Emulation mode (15 mil) 3 = Advanced mode (2.5 mil)	
3600	n = 1	0 = Emulation mode (10 mil) 1 = Advanced mode (5 mil) 2 = Emulation mode (15 mil)	
4100	n = 1	0 = Emulation mode (10 mil) 1 = Advanced mode (5 mil)	
4400	n = 1	0 = Emulation mode (10 mil) 1 = Advanced mode (5 mil)	

**Emulation or Advanced Mode on Power-Up (continued)**

Printer	Default	Values for n	Notes
44X0	4420: n = 1  4440: n = 3	4420: 0 = Emulation mode (10 mil) 1 = Advanced mode (5 mil) 2 = Emulation mode (15 mil)  4440: 0 = Emulation mode (10 mil) 1 = Advanced mode (5 mil) 2 = Emulation mode (15 mil) 3 = Advanced mode (2.5 mil)	You can use Advanced mode 2.5 mil option <b>only</b> on the 4440.
7421	n = 1	0 = Emulation mode (10 mil) 1 = Advanced mode (5 mil) 2 = Emulation mode (15 mil)	
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 1	0 = Emulation mode (10 mil) 1 = Advanced mode (5 mil) 2 = Emulation mode (15 mil)	

**Notes:** Emulation mode lets you print labels that were designed on an 86XX printer in multiples of 10 or 15 mil. Advanced mode lets you print bar code labels in multiples of 2.5 or 5 mil.

**End-of-Print Skip Distance, Set**

**Purpose:** Sets the end-of-print skip distance. This distance is a value in 5 mil increments that the label advances after printing or when you pause printing.

**Syntax:** <SI>D [n]

where *n* is the distance in 5 mil increments (3.3 mil increments on 4X30 printers).

**End-of-Print Skip Distance, Set (continued)****Printers:**

Printer	Default		Values for n
3240	n = 0 n = 118	Label Stock mode Continuous Stock mode	0 to 9999 in 5 mil increments
3400	n = 0 n = 118	Label Stock mode Continuous Stock mode	0 to 9999 in 5 mil increments
3400e	n = 0 n = 123	Label Stock Mode Continuous Stock mode	0 to 9999 in 5 mil increments
3440	n = 0 n = 123	Label Stock mode Continuous Stock mode	0 to 9999 in 5 mil increments
3600	n = 0 n = 118	Label Stock mode Continuous Stock mode	0 to 9999 in 5 mil increments
4100	n = 0 n = 118	Label Stock mode Continuous Stock mode	0 to 9999 in 5 mil increments
4400	n = 0 n = 141	Label Stock mode Continuous Stock mode	0 to 9999 in 5 mil increments
44X0	n = 0 n = 132	Label Stock mode Continuous Stock mode	0 to 9999 in 5 mil increments
4X30	n = 0 n = 94	Label Stock mode Continuous Stock mode	0 to 9999 in 5 mil increments
7421	n = 0 n = 160	Label Stock mode Continuous Stock mode	0 to 9999 in 5 mil increments
EasyCoder F4, PF2i, PF4i	n = 0 n = 103	Label Stock mode Continuous Stock mode	
EasyCoder PM4i, PX4i, PX6i	n = 0 n = 100	Label Stock mode Continuous Stock mode	

**Notes:** To advance the label out to the tear bar in label stock mode, set *n* to the Continuous Stock mode value.

If you enter a value for *n*, it applies to both Continuous mode and Label Stock mode, regardless of the mode in which you enter the value.

If you do not specify a value for *n*, the <SI>D command returns the printer to the default.

This command is ineffective in self-strip applications.

## IBM Language Translation, Enable or Disable

**Purpose:** Turns the IBM language translation feature on or off.

**Syntax:** <SI>*n*

where *n* enables or disables IBM translation.

### Printers:

Printer	Default	Values for n	Notes
All	n = 0	0 = Disable IBM translation 1 = Enable IBM translation	All printers support this command the same way.

**Notes:** This feature allows IBM compatible characters to replace standard ASCII characters based on the current printer language (see your printer user's manual for international character sets). This command overrides the language translation based on the current printer emulation.

## Intercharacter Delay, Set

**Purpose:** Sets the intercharacter delay. The intercharacter delay is the time delay between characters in a message the printer transmits.

**Syntax:** <SYN>*n*

where *n* is the intercharacter delay in milliseconds.

### Printers:

Printer	Default	Values for n	Notes
All except the EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 0	0 to 9999	All printers support this command the same way.

## Interlabel Ribbon Save, Enable or Disable

**Purpose:** Enables or disables the interlabel ribbon save feature on the 4100 printer.

**Syntax:** <SI>*sn*

**Printers:**

Printer	Default	Values for n	Notes
4100	n = 0	0 = Disable interlabel ribbon save 1 = Enable interlabel ribbon save	If you do not have the ribbon save option installed, the printer ignores this command.

## Label Rest Point, Adjust

**Purpose:** Adjusts the point at which labels stop for removal. Use this command for self-strip and cutter applications.

**Syntax:** <SI>*fn*

where *n* specifies the label stop point.

**Printers:**

Printer	Default	Values for n
3240	n = 0	-30 (farthest back) to +30 (farthest forward) in 5 mil increments
3400	n = 0	-30 (farthest back) to +30 (farthest forward) in 5 mil increments
3400e	n = 0	-30 (farthest back) to +30 (farthest forward) in 5 mil increments
3440	n = 0	-30 (farthest back) to +30 (farthest forward) in 5 mil increments
3600	n = 0	-30 (farthest back) to +30 (farthest forward) in 5 mil increments
4100	n = 0	-30 (farthest back) to +30 (farthest forward) in 5 mil increments
4400	n = 0	-30 (farthest back) to +30 (farthest forward) in 5 mil increments
44X0	n = 0	-30 (farthest back) to +30 (farthest forward) in 5 mil increments
4X30	n = 0	-20 (farthest back) to +20 (farthest forward)
7421	n = 0	-30 (farthest back) to +30 (farthest forward) in 5 mil increments
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 0	-30 (farthest back) to +30 (farthest forward) in 5 mil increments

**Notes:** You can also set this command by using the control panel or Test and Service DIP switches. For help, see your printer user's manual.

## Label Retract, Enable or Disable

**Purpose:** Turns the label retract option on or off.

**Syntax:** <SI>Rn

where *n* enables or disables the label retract option.

**Printers:**

Printer	Default	Values for n	Notes
All	n = 1	0 = Disables label retract 1 = Enables label retract	All printers support this command the same way.

**Notes:** If you select die-cut label stock, the printer determines the retract distance automatically.

If you select continuous label stock, the printer uses the retract distance set by the Set Label Retract Distance (Label Retract Distance, Set) command. See also the Select Label Stock Type (“Label Stock Type, Select”) command.

## Label Retract Distance, Set

**Purpose:** Sets the label retract distance.

**Syntax:** <SI>r*n*

where *n* specifies the label retract distance in 5 mil increments.

**Printers:**

Printer	Default	Values for n	Notes
4400	n = 284 n = 216 (6.5 mil printhead)	0 to 399	
All other printers	n = 0	0 to 399	All other printers support this command the same way.

**Notes:** This command works with continuous label stock only. The label retracts to this distance at the start of a print.

## Label Stock Type, Select

**Purpose:** Selects the type of label stock.

**Syntax:** <SI>T*n*

where *n* specifies the type of stock.

**Printers:**

Printer	Default	Values for <i>n</i>	Notes
All	<i>n</i> = 1	0 = Continuous label stock (no breaks between labels) 1 = Label stock with gaps between labels 2 = Label stock with marks between labels (on back of label stock)	All printers support this command the same way.

**Notes:** To make this command effective, reset the printer or turn the power off and on again after issuing the command.

## Label Width, Set

**Purpose:** Sets the label width to *n* in dot increments.

**Syntax:** <SI>W*n*

where *n* is a number between the minimum and maximum number of dots for your printer. Calculations for all printers (except the 4440 printer) use a 5 mil dot.

**Printers:**

Printer	Default	Values for <i>n</i>	Notes
4400	<i>n</i> = 896 <i>n</i> = 672 (6.5 mil printhead)	50 to 896 or 50 to 672	This command is effective upon execution.
44X0	4420: <i>n</i> = 896 4440: <i>n</i> = 1792	4420: 50 to 896 4440: 100 to 1792	This command is effective upon execution. For the 4440 printer, <i>n</i> must be calculated using 2.5 mil dot.
7421	<i>n</i> = 832	50 to 832	This command is effective upon execution.

**Notes:** (44X0 only) When you print narrower labels, set this command to reduce torque. You may need to experiment with this command until your labels print properly. In high humidity environments, you may also want to use the Takeup Motor Torque, Increase command.

## Maximum Label Length, Set

**Purpose:** Defines the maximum label length.

**Syntax:** <SI>Ln

where *n* specifies the maximum label length in 5 mil increments.

**Printers:**

Printer	Default	Values for n
3240	n = 1000	100 to 4800
3400	n = 1000	100 to 4800
3440	n = 1000	100 to 4800
3600	n = 1000	100 to 4800
4100	n = 1000	100 to 4800
4400	n = 1000	200 to 4800
44X0	n = 1000	100 to 4800
4X30	n = 1000	200 to 4800
7421	n = 1000	100 to 4800
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 1200	100 to 4800

**Notes:** The printer uses this number for detecting media faults. It does not use this number to limit the image size of a format on the label.

## Media Fault Recovery Mode, Set

**Purpose:** Sets the media fault recovery mode.

**Syntax:** <SI>en

**Printers:**

Printer	Default	Values for n
3400e	n = 0	0 = reprints interrupted label 1 = do not reprint interrupted label
4420	n = 0	0 = reprints interrupted label 1 = do not reprint interrupted label
4440	n = 0	0 = reprints interrupted label 1 = do not reprint interrupted label
7421	n = 0	0 = reprints interrupted label 1 = do not reprint interrupted label
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 0	0 = reprints interrupted label 1 = do not reprint interrupted label

## Media Sensitivity, Select

**Purpose:** Selects the media sensitivity of the printer.

**Syntax:** <SI>gn [, m]

where *n* specifies direct thermal (DT) stock or thermal transfer (TTR) stock, and *m* specifies the sensitivity.

**Printers:**

Printer	Default	Values for n	Values for ,m	Notes
3240	n = 0	0 = Direct thermal 1 = Thermal transfer	420 = Direct thermal 567 = Thermal transfer	You can only set n by using the DIP switches.
3400A 3400B	n = 0	0 = Direct thermal 1 = Thermal transfer	420 = Direct thermal 567 = Thermal transfer	You can only set n by using the DIP switches.
3400C 3400D	n = 0	0 = Direct thermal 1 = Thermal transfer	470 = Direct thermal 567 = Thermal transfer	You can only set n by using the DIP switches.
3400e	n = 0	0 = Direct thermal 1 = Thermal transfer	470 = Direct thermal (2-5 ips) 720 = Direct thermal (6-8 ips) 567 = Thermal transfer	You can only set n by using the DIP switches.
3440	n = 0	0 = Direct thermal 1 = Thermal transfer	470 = Direct thermal 567 = Thermal transfer	You can only set n by using the DIP switches.
3600	n = 0	0 = Direct thermal 1 = Thermal transfer	420 = Direct thermal 567 = Thermal transfer	You can only set n by using the DIP switches.

**Media Sensitivity, Select (continued)**

Printer	Default	Values for n	Values for ,m	Notes
4100	n = 0	0 = Direct thermal 1 = Thermal transfer	420 = Direct thermal 567 = Thermal transfer	You can only set n by using the Transfer On switch on the front of the 4100 printer.
4400	n = 0	0 = Direct thermal 1 = Thermal transfer	420 = Direct thermal 567 = Thermal transfer	This command is effective after you cycle printer power.
44X0	n = 0	0 = Direct thermal 1 = Thermal transfer	470 = Direct thermal (2-5 ips) 720 = Direct thermal (6-8 ips) 567 = Thermal transfer	You can only set n by using the DIP switches.
4X30	n = 0	0 = Direct thermal 1 = Thermal transfer	N/A	The ,m parameter is not available for the 4630 and 4830 printers.
7421	n = 0	0 = Direct thermal 1 = Thermal transfer	180 = Direct thermal 567 = Thermal transfer	
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 0	0 = Direct thermal 1 = Thermal transfer	420 = Direct thermal 567 = Thermal transfer	

**Notes:** For help setting ,m, see your printer user's manual.

This command was called TTR/Direct Thermal Media Grade, Select in the 4630 and 4830 printers user's manual.

**Message Delay, Set**

**Purpose:** Sets the message delay to *n* milliseconds.

**Syntax:** <ESC><SYN>*n*

where *n* is the number of milliseconds to delay the start of a printer transmission.

**Printers:**

Printer	Default	Values for n	Notes
All except EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 0	0 - 9999	All printers support this command the same way.

## Number of Image Bands, Set

**Purpose:** Selects the number of image bands.

**Syntax:** <SI>In

where *n* is the number of image bands.

### Printers:

Printer	Default	Values for n	Notes
3240	n = 3	2 to 5 if the printer has 128K of static RAM. 2 to 7 if the printer has expanded RAM.	This command is effective upon execution.
3400	n = 3	2 to 6 if the printer has 32K of static RAM. 2 to 12 if the printer has expanded RAM	This command is effective upon execution.
3400e	n = 3	200 dpi: 2 to 20 with the standard 1 MB of DRAM. 400 dpi: 2 to 9 with the standard 1 MB of DRAM. 2 to 20 if the printer has expanded memory.	This command is effective upon execution.
3440	n = 3	2 to 9 if the printer has 1 MB of DRAM. 2 to 20 if the printer has expanded memory.	This command is effective upon execution.
3600	n = 3	2 to 13 if the printer has 128K of static RAM. 2 to 25 if the printer has expanded RAM.	This command is effective upon execution.
4100	n = 3	2 to 6 if the printer has 32K of static RAM. 2 to 12 if the printer has expanded RAM.	This command is effective upon execution.
4400	n = 3	2 to 10 if the printer has 512K of RAM.	This command is effective upon execution.
44X0	n = 3	4420: 2 to 20 with the standard 1 MB of DRAM. 4440: 2 to 9 with the standard 1 MB of DRAM. 2 to 20 if the printer has expanded memory.	This command is effective upon execution.
7421	n = 3	2 to 20 if the printer has 512K of DRAM.	This command is effective upon execution.

## Online or Offline on Power-Up

**Purpose:** Selects the printer to be online or offline when it is turned on.

**Syntax:** <SI>On

where *n* specifies online or offline.

### Printers:

Printer	Default	Values for n
4400	n = 0	0 = Printer is online on power up 1 = Printer is offline on power up
4X30	n = 0	0 = Printer is online on power up 1 = Printer is offline on power up

## Pin 11/20 Protocol, Set

**Purpose:** Sets the protocol for pin 11/20.

**Syntax:** <SI>pn [, m]

where *n* sets the protocol for pin 20 (DTR) and ,*m* sets the protocol for pin 11 (PS).

### Printers:

Printer	Default	Values for n and ,m	Notes
3400e	n = 0	0 = The pin follows the software protocol	
44X0	m = 0	1 = Always ready (high) 2 = Flow control 3 = Ready/Busy	
7421	n = 0 m = 0	0 = The pin follows the software protocol 1 = Always ready (high) 2 = Flow control 3 = Ready/Busy	The 7421 uses pins 6 and 9 instead of pins 20 and 11.

**Notes:** When a pin is set to the default, it uses flow control if the serial port is set for XON/XOFF protocol. The pin uses ready/busy if the serial port is set to Intermec Standard protocol.

When you set a pin to always ready (high), the pin is held high as long as the printer receives power.

**Pin 11/20 Protocol, Set (continued)**

When a pin is set to flow control, the pin is high when there is room in the data buffer. The pin is held low when the data buffer is full.

When a pin is set to ready/busy, the pin is high when the printer status is ready. The pin is held low when the printer is in one of these conditions:

- Offline
- Buffer full
- No label stock
- Ribbon fault
- Label at strip pin
- Printhead hot

**Postamble, Set**

**Purpose:** Sets the postamble character.

**Syntax:** <EOT>*n*

where *n* specifies the postamble character.

**Printers:**

Printer	Default	Values for <i>n</i>	Notes
All	<i>n</i> = <NUL>	Any ASCII character	When <i>n</i> = <NUL>, the printer does not send a postamble character.  All printers support this command the same way.

**Preamble, Set**

**Purpose:** Sets the preamble character.

**Syntax:** <SOH>*n*

where *n* specifies the preamble character.

**Printers:**

Printer	Default	Values for <i>n</i>	Notes
All	<i>n</i> = <NUL>	Any ASCII character	When <i>n</i> = <NUL>, the printer does not send a postamble character.  All printers support this command the same way.

## Print Speed, Set

**Purpose:** Sets the print speed.

**Syntax:** <SI>Sn

where *n* specifies the print speed.

### Printers:

Printer	Default	Values for n
3240	n = 30	20, 30, or 40 (corresponding to 2, 3, or 4 ips)
3400A 3400B	n = 30	20, 30, 40, or 50
3400C 3400D	n = 30	20, 30, 40, 50, or 60
3400e		200 dpi: 20, 30, 40, 50, 60, 70, 80 (no self-strip) 20, 30, 40, 50, 60 (with self-strip)  400 dpi: 20, 30, 40, 50, 60, 70, 80 (no self-strip) 20, 30, 40, 50 (with self-strip)
3440	n = 30	20, 30, 40, or 50
3600	n = 30	20, 30, 40, or 50
4100	n = 30	20, 30, 40, or 50
4400	n = 35	5 mil printhead: A number from 25 to 100 in multiples of 5.  6.5 mil printhead: A number from 25 to 85 in multiples of 5.
44X0	n = 30	20, 30, 40, 50, 60, 70, 80, or 100 (no self-strip) 20, 30, 40, 50, 60, 70, or 80 (self-strip)
4X30	n = 35	20 to 80 in multiples of 5
7421	n = 20	20
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 50	40, 50, 60, 70, 80

## Printer Language, Select

**Purpose:** Selects the printer language.

**Syntax:** <SI>ln

where *n* specifies the language as shown in the next table.

### Values for *n*

n	Language	n	Language
0	USA	13	Code Page 1252, Latin 1, Western Europe
1	United Kingdom	14	Code Page 1253, Greek
2	Germany	15	Code Page 1254, Turkish
3	Denmark	16	Code Page 1255, Hebrew
4	France	17	Code Page 1256, Arabic
5	Sweden	18	Code Page 1257, Baltic Rim
6	Italy	19	Code Page 1258, Vietnamese
7	Spain	20	Code Page 874, Thai
8	8-Bit ASCII	30	Code Page 932, Shift JIS, Japanese
9	Switzerland	31	Code Page 936, GB 2312-80, Simplified Chinese
10	Code Page 850	32	Code Page 949, KSC5601, Korean Hangeul
11	Code Page 1250, Central Europe	33	Code Page 950, Big 5, Traditional Chinese
12	Code Page 1251, Cyrillic, Russian		

### Printers:

Printer	Default	Values for n
3240	n = 0	0 - 10
3400A 3400B	n = 0	0 - 9
3400C 3400D	n = 0	0 - 10
3400e	n = 0	0 - 20, 30 - 33
3440	n = 0	0 - 20, 30 - 33
3600	n = 0	0 - 9
4100	n = 0	0 - 9
4400	n = 0	0 - 9

**Printer Language, Select (continued)**

Printer	Default	Values for n
44X0	n = 0	0 - 20, 30 - 33
4X30	n = 0	0 - 10
7421	n = 0	0 - 10
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 0	0 - 20

**Notes:** You can only select one printer language per print job.

Bitmap user-defined fonts (including bitmap TrueType) do not use code pages. If your label format requires several language fonts, you can:

- bitmap the TrueType fonts. For help, see “Creating Bitmap Fonts From TrueType Fonts” in Chapter 2.
- create your own bitmap fonts. For help, see “Creating User-Defined Bitmap Fonts” in Appendix C.

Resident fonts (those that were installed at the factory) use language selections 0 through 10. The default setting will probably provide all the special characters you will need, but you may want to look through the page tables in Appendix B, “Character Sets,” to determine if one of the other languages (0 through 10) would be more suitable. Code pages 11 through 33 do not work with resident fonts.

If you are using a TrueType font (not bitmap), you must match the code page to your language needs. Do not use languages 0 through 10 with scaleable TrueType fonts.

If you are using a downloaded scaleable (that is, not bitmap) Japanese, Chinese, or Korean TrueType font, you must first locate the correct code page and download it to your printer. (All others are already stored in your printer.) Select the corresponding code page using the Printer Language, Select command. See Chapter 2 for more information.

See Chapter 2 for more information about downloading fonts and code pages. See Appendix B for tables of the various character sets.

## Printhead Loading Mode, Select

**Purpose:** Selects the printhead loading mode that affects how the whole image prints on the label. Mirror Printing mode reverses the order in which data loads into the printhead. Inverse Printing mode causes all pixels that are white to invert to black and vice versa.

**Syntax:** <SI>hn [, m]

**Printers:**

Printer	Defaults	Values for n	Values for ,m
3400C 3400D 3400e	n = 0 ,m = 0	0 = Selects normal printing 1 = Selects Mirror Printing mode	0 = Selects normal printing 1 = Selects Inverse Printing mode
3440	n = 0 ,m = 0	0 = Selects normal printing 1 = Selects Mirror Printing mode	0 = Selects normal printing 1 = Selects Inverse Printing mode
44X0	n = 0 ,m = 0	0 = Selects normal printing 1 = Selects Mirror Printing mode	0 = Selects normal printing 1 = Selects Inverse Printing mode
7421	n = 0 ,m = 0	0 = Selects normal printing 1 = Selects Mirror Printing mode	0 = Selects normal printing 1 = Selects Inverse Printing mode
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 0 ,m = 0	0 = Selects normal printing 1 = Selects Mirror Printing mode	0 = Selects normal printing 1 = Selects Inverse Printing mode

**Note:** The printhead is not under warranty if you use Inverse Printing mode for batch printing. Intermec does not recommend using Inverse Printing mode for batch printing. For best results with Inverse Printing mode, use a maximum print density of 35 percent.

## Printhead Pressure, Set

**Purpose:** Compensates for variations in the thickness of label stock.

**Syntax:** <SI>Hn

**Printers:**

Printer	Default	Values for n	Notes
4400	n = 0	0 = Low printhead pressure 1 = High printhead pressure	If your labels are slipping, or you notice that the pressure is too light, try changing the pressure to the other setting.

## Printhead Test Parameters, Set

**Purpose:** Sets the printhead test parameters.

**Syntax:** <SI>Un [, m] [, p] [, q]

where:

- n* determines whether printing continues if the printhead test sends a warning.
- m* is the positive threshold of the percentage of the allowable deviation in resistance.
- p* is the negative threshold of the percentage of the allowable deviation in resistance.
- q* specifies how often (in terms of the number of labels printed) to automatically run the printhead resistance test.

**Printers:**

Printer	Defaults	Values for n ,m ,p and ,q	Notes
4400	n = 0 m = 45 p = 45 q = 0	n = 0 Printing continues when warning occurs n = 1 Printing stops when warning occurs  ,m A number from 45 to 10 ,p A number from 45 to 10 ,q A number from 0 to 9999. Setting q = 0 disables the test.	This command is effective upon execution.

## Ribbon Save Zones, Set

**Purpose:** Defines the start and stop points of a ribbon save zone within the label. This command does not enable interlabel ribbon save.

**Syntax:** <SI>Zn [, m]

*n* and *m* are the zone start and zone stop distances, in dot increments, from the detected front of the label.

The difference between *m* and *n* depends on the speed (number of ips) at which you are printing. Also, *m* must be bigger than *n* by at least 100, or the command will be ignored.

### Printers:

Printer	Notes
4100	The ribbon save option must be installed or the printer will ignore this command. Setting a ribbon save zone enables ribbon save. Entering no ribbon save zones clears all ribbon save zones within this label. If only one parameter is entered, the command is ignored. The maximum number of zones possible on one label is 10. This command is buffered up and becomes effective upon execution.

## Self-Strip, Enable or Disable

**Purpose:** Turns the self-strip (label taken sensor) option on or off.

**Syntax:** <SI>t*n*

### Printers:

Printer	Default	Values for n	Notes
3240	n = 0	0 = disabled 1 = enabled	
3400	n = 0	0 = disabled 1 = enabled	
3440	n = 0	0 = disabled 1 = enabled	
3600	n = 0	0 = disabled 1 = enabled	
4100	N/A	N/A	The 4100 printer ignores this command; however, you can enable self-strip by using the DIP switches.
4400	n = 0	0 = disabled 1 = enabled	You must install the self-strip option from the control panel before you can enable or disable the label taken sensor.
44X0	n = 0	0 = disabled 1 = enabled	

**Self-Strip, Enable or Disable (continued)**

Printer	Default	Values for n	Notes
4X30	n = 0	0 = disabled 1 = enabled	
7421	n = 0	0 = disabled 1 = enabled	
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 0	0 = disabled 1 = enabled	

**Serial Port Configuration, Set**

See the “Communication Port Configuration, Set” command.

**Slash Zero, Enable or Disable**

**Purpose:** Determines if the regular zero is replaced with a slashed zero.

**Syntax:** <SI>zn

**Printers:**

Printer	Default	Values for n
3400e	n = 0	0 = disabled 1 = enabled
44X0e	n = 0	0 = disabled 1 = enabled
EasyCoder PF4i, PM4i, PX4i, PX6i	n = 0	0 = disabled 1 = enabled

**Notes:** This command only works if the Printer Language, Select command <SI>1 is set to 0 (USA). Also, it does not apply to OCR fonts 23 and 24.

## Takeup Motor Torque, Increase

**Purpose:** Increases the takeup motor torque from 0 to 50% above the default value. For printers with firmware version 2.5, varies the torque from 75% below to 50% above the default value.

**Syntax:** <SI>bn

**Printers:**

Printer	Default	Values for n
44X0	n = 0	0 to 50 -75 to 50 for firmware version 2.5

**Notes:** In high humidity environments, you may want to use this command with the Label Width, Set command.

## Top of Form, Set

**Purpose:** Sets the top of form (left margin or start print point) to *n*, which is the distance in 5 mil increments from the label origin to its leading edge.

**Syntax:** <SI>Fn

**Printers:**

Printer	Default	Values for n	Notes
All	n = 20	-10 to 4000 (in 5 mil increments)	The negative values for <i>n</i> let you decrease the margin and print closer to the edge of the label.

## Program Mode Commands

You can use Program mode commands to design label formats and to download user-defined fonts and graphics.

When creating or editing formats, the printer uses a field pointer to designate the field you are going to modify when the printer is in Program mode. To download commands in Program mode, you must specify the field you want to change. If you do not select a field, the pointer continues to point to the last selected field until you select a different format or field. New formats contain a default human-readable field numbered H0. New pages do not contain a default format.

Program mode commands are effective when the printer is in Program mode. You can switch the printer to Program mode with this command:

```
<STX><ESC>P<ETX>
```

For help downloading Program mode commands to the printer, see “Sending IPL Commands to the Printer” in Chapter 1.



**Note:** You must precede each string of commands with the start of message character <STX> and follow it with the end of message character <ETX>. The semicolon (;) is the command terminator. All commands in Program mode must end with this terminator except the last command in a message. The printer ignores parentheses [( )] and <LF> characters.

## Bar Code, Select Type

**Purpose:** Selects a symbology for a bar code field.

**Syntax:** `cn [, m1] [, m2] [, m3]`

*n* is the symbology and *m1*, *m2*, and *m3* are modifiers for that symbology. For more information on valid *m* values, see the information for that symbology in the following pages.

### Values for *n*

n	Symbology	n	Symbology	n	Symbology
0	Code 39	7	UPC/EAN Codes	15	JIS-ITF
1	Code 93	8	HIBC Code 39	16	HIBC Code 128
2	Interleaved 2 of 5	9	Code 16K	17	Data Matrix
3	Code 2 of 5	10	Code 49	18	QR Code
4	Codabar	11	POSTNET	19	MicroPDF417
5	Code 11	12	PDF417	20	RSS
6	Code 128	14	MaxiCode	21	EAN.UCC Composite

### Printers:

Printer	Default	Values for <i>n</i>
3240	n = 0	0 - 12, 14 - 19
3400A	n = 0	0 - 11
3400B	n = 0	0 - 12, 14 - 17
3400C 3400D 3400e	n = 0	0 - 12, 14 - 19
3440	n = 0	0 - 12, 14 - 19
3600	n = 0	0 - 12, 14 - 17
4100	n = 0	0 - 11      Standard memory 0 - 12, 14    Expanded memory
4400	n = 0	0 - 11
44X0	n = 0	0 - 12, 14 - 19
4X30	n = 0	0 - 12, 14, 16, 17
7421	n = 0	0 - 12, 14 - 19
EasyCoder F4	n = 0	0 - 12, 14 - 19
EasyCoder PF2i, PF4i, PM4i, PX4i, PX6i	n = 0	0 - 12, 14 - 21

**Bar Code, Select Type (continued)****Code 39**

c0 [, m]

The default for *m* is 0.

**Values for m**

<b>m</b>	<b>Description</b>
0	Selects 8646 compatible Code 39. No check digit.
1	Selects 8646 compatible Code 39. Printer enters check digit.
2	Selects 8646 compatible Code 39. Host enters check digit and printer verifies.
3	Selects full ASCII Code 39. No check digit.
4	Selects full ASCII Code 39. Printer enters check digit.
5	Selects full ASCII Code 39. Host enters check digit and printer verifies.
6	Selects 43 character Code 39. No check digit.
7	Selects 43 character Code 39. Printer enters check digit.
8	Selects 43 character Code 39. Host enters check digit and printer verifies.

Intermec printers support three different types of Code 39:

- 43 character Code 39
- Full ASCII Code 39
- 8646 compatible Code 39 (except the EasyCoder F4, PF2i, PF4i and PM4i)

The 8646 compatible version only differs from the full ASCII version by four characters. The “\$”, “%”, “/”, and “+” are encoded as single characters instead of as “/D”, “/E”, “/O”, and “/K.” The 8646 compatible version allows the printer to be backward compatible with 86XX printers.

When you enter <ESC><SPACE> as data, the printer prints the start and stop characters.

**Code 93**

c1

**Bar Code, Select Type (continued)****Interleaved 2 of 5**

c2 [, m]

The default for *m* is 0.**Values for m**

m	Description
0	Selects Interleaved 2 of 5. No check digit.
1	Selects Interleaved 2 of 5. Printer enters check digit.
2	Selects Interleaved 2 of 5. Host enters check digit.



**Note:** The printer adds a zero to character strings that are odd in length.

**Code 2 of 5**

c3 [, m]

The default for *m* is 0.**Values for m**

m	Description
0	Selects Code 2 of 5. 3-bar start/stop code.
1	Selects Code 2 of 5. 2-bar start/stop code.

**Codabar**

c4 [, m]

The default for *m* is 0.**Values for m**

m	Description
0	Selects Codabar. Host enters start/stop codes and printer verifies.
1,x,y	Selects Codabar. Printer enters start code <i>x</i> and stop code <i>y</i> . The values for <i>x</i> and <i>y</i> can range from A to D and from a to d.

Valid start/stop characters range from A to D and from a to d. You can define them as part of the bar code field, or you can download them as part of the print data. Start/stop characters sent down with printer data override the characters defined by the bar code field.

**Bar Code, Select Type (continued)****Code 11**

c5 [, m]

The default for *m* is 0.**Values for m**

m	Description
0	Selects Code 11. Printer enters 2 check digits.
1	Selects Code 11. Printer enters 1 check digit.
2	Selects Code 11. Host enters 2 check digits and printer verifies.
3	Selects Code 11. Host enters 1 check digit and printer verifies.

**Code 128**

c6 [, m1] [, m2] [, m3]

The default for *m1*, *m2*, and *m3* = 0.**Values for m1 and m2**

m1,m2	Description
0,0	Selects Code 128, keep parentheses and spaces.
0,1	Selects Code 128, ignore parentheses and spaces in the bar code but keep them in the interpretive field.
1,0	Selects UCC-128 Serial Shipping Container Code.
1,1	Selects UCC-128 Serial Shipping Container Code and keep parentheses and spaces in interpretive field.

In Emulation mode, you can print the Function 1 character by entering <SUB> 1. In Advanced mode, you can print the Function 1 character by entering <SUB><SUB> 1. You can print the characters for Function 2, 3, and 4 in the same way.

UCC-128 serial shipping container code automatically starts in subset C with a <FNC1>. It is a fixed length version of Code 128 requiring you to enter 19 numeric characters. The printer forces the first two characters to zero.

**Bar Code, Select Type (continued)****Values for m3**

m3	Description
0	Recommended. Automatically selects start character.
1	Starts in subset A.
2	Starts in subset B.
3	Starts in subset C.



**Note:** Intermec recommends that you set m3 to 0 unless you are familiar with Code 128 subsets. The printer will automatically determine the correct start subset and perform any necessary switching between subsets.

,m3 is valid only in the EasyCoder PF4i and PM4i printers with firmware version 2.10 and higher and ,m1 must equal 0. If you set m3 to a number other than 0, only characters within the chosen subset are valid. If you enter characters from another subset, the printer generates an error code 11 (invalid bar code data) and the bar code will not print.

**To switch to another character subset within the bar code**

- Enter:

<SUB><SUB>n

where *n* is A, B, or C depending on if you want to switch to subset A, B, or C.

Or,

where *n* is S and the current subset is A or B. The next one character is shifted from the current subset into the other subset (A or B). Then, the following characters will return to the current subset. If you set *n* equal to S and the current subset is C, this command is ignored.

**Bar Code, Select Type (continued)****UPC/EAN**

c7 [, m1] [, m2]

The default for *m1* and *m2* is 0.**Values for m1**

m1	Description
0	Selects UPC/EAN Codes. Printer enters check digit. Flag 1 enabled.
1	Selects UPC/EAN Codes. Printer enters check digit. Flag 1 disabled.
2	Selects UPC/EAN Codes. Host enters check digit and printer verifies Flag 1 enabled.
3	Selects UPC/EAN Codes. Host enters check digit and printer verifies. Flag 1 disabled.

**Values for m2**

m2	Description	m2	Description
0	variable length	5	UPC Version D1
1	EAN 8	6	UPC Version D2
2	EAN 13	7	UPC Version D3
3	UPC Version A	8	UPC Version D4
4	UPC Version E	9	UPC Version D5

The variable length option selects the UPC/EAN version by the number of characters in the data field. The number of data characters and check characters allowed for each version are:

EAN 8	7 data + 1 check character
EAN 13	12 data + 1 check character
UPC version A	11 data + 1 check character
UPC version E	6 data + 1 check character
UPC version D1	13 data + 1 check character
UPC version D2	18 data + 2 check characters
UPC version D3	22 data + 2 check characters
UPC version D4	25 data + 3 check characters
UPC version D5	29 data + 3 check characters

Use a “.” to delimit the bar code data from the supplemental data. Data to the right of the “.” is supplemental data; data to the left is bar code data. You can add the two- or five-digit supplemental to any version of the UPC/EAN code.

**Bar Code, Select Type (continued)**

The flag 1 option only applies to EAN 8, EAN 13, and UPC version A. For EAN 13, enabling the flag 1 option prints the first character of the bar code interpretive. For EAN 8 and UPC version A, enabling the flag 1 option moves the first and last character of the bar code interpretive outside of the guard bars.

UPC Versions D1 - D5 are not supported in the 3400 C/D, 3400e, 4420, 4440, EasyCoder F4, PF2i, PF4i and PM4i printers.

**HIBC Code 39**

c8 [, m1] [, m2]

The default for *m1* is 0.

**Values for m1 Conforming to the Supplier Standard**

m1	Description
0	Selects HIBC Code 39. Primary format.
1	Selects HIBC Code 39. Alternate primary format.
2[,m2]	Selects HIBC Code 39. Secondary format. The linkage character comes from ,m2, which is the field identifier.

**Values for m1 Conforming to the Provider Standard**

m1	Description
3	Single format.
4	First data format.
5[,m2]	Selects HIBC Code 39. Second data format. The linkage character comes from ,m2, which is the field identifier.
6	Selects HIBC Code 39. Multiple data format.

**Code 16K**

c9

In Emulation mode, use a <SUB> 1 to represent the function 1 character. To represent the function 1 character in Advanced mode, enter <SUB><SUB> 1. Represent the characters for functions 2, 3, and 4 in the same way.

To produce a square symbol, specify a height magnification of 1 in Advanced mode. To specify a square symbol, use a height magnification of 250 in Emulation mode.

**Bar Code, Select Type (continued)****Code 49**

c10

Use a <SUB> 1 to represent the function 1 character in Emulation mode. In Advanced mode, you can represent the function 1 character by entering <SUB><SUB> 1. You can represent the characters for functions 2, 3, and 4 in the same way.

To produce a square symbol, specify a height magnification of 1 in Advanced mode. To specify a square symbol, use a height magnification of 250 in Emulation mode.

The printer supports only the alphanumeric (0) and numeric (2) modes.

**POSTNET**

c11

POSTNET uses the height (“h”) and width (“w”) commands in the same way as a font. Other symbologies use “h” to specify the bar height and “w” to specify the narrow bar width. POSTNET uses “h” and “w” to magnify the base character cell. Each character cell is 13 dots high by 22 dots wide. The default width and height magnification for POSTNET is 2 x 2, resulting in a symbology sized according to the POSTNET specification.

**PDF417**

c12 [ [, m1] [, m2] [, m3] ] ;

PDF417 is a stacked 2D symbology that provides the ability to scan across rows of code. Each row consists of start/stop characters, row identifiers, and symbol characters, which consist of four bars and four spaces each and contain the actual data. This symbology uses error correction symbol characters appended at the end to recover loss of data.

**Default Parameters for PDF417**

Parameter	Default	Description
,m1	0	The printer selects the number of columns needed to create a symbol that is as close to square as possible.
,m2	9	The printer automatically selects the error correction level based on the amount of data.
,m3	0	Truncating disabled.

**Bar Code, Select Type (continued)****Using ,*m1* to Select the Number of Columns**

,*m1* is the number of columns of data characters. The range for ,*m1* is 0 to 30 and the default is 0. If you select zero, the printer provides the number of columns needed to create a symbol that is as close to a square as possible.



**Note:** When you select zero, the printer selects a height magnification that is three times the width magnification. The specifications of PDF417 recommend these magnification values for creating a symbol that you can scan easily.

**Using ,*m2* to Select an Error Correction Level**

,*m2* determines the level of error correction. Each level provides a certain number of detection characters, which can detect and recover a specific number of faulty characters. The range for ,*m2* is 0 to 9. The default is 9 and allows the printer to automatically select the appropriate level.

The level of error correction that works best for your data depends on the amount of characters in your symbols. If you decide to select your own error correction level, you will need to estimate the number of characters since they are formed by compressing the raw data you send to the printer. In general, 1.8 alphanumeric characters generate one symbol character. If you are using numeric data, 2.9 digits generate one data symbol character.

Intermec recommends that you leave the error correction level at the default setting of 9. This setting lets the printer select a level, between level 2 and level 5, that provides the most efficient error correction of your data. The printer bases the level selection on the number of symbol characters your data generates.

The following table shows the *m2* values (error correction levels), the recommended data amount that you should use for each value, and the number of error correction characters that it generates.

**Bar Code, Select Type (continued)****Values for *m2***

<b>m2</b>	<b>Recommended Amount of Data</b>	<b>Error Detection Characters</b>
0	*	2 (error detected, no recovery)
1	*	4
2	1 - 40	8
3	41 - 160	16
4	161 - 320	32
5	321 - 863	64
6	†	128
7	†	256
8	†	512
9	‡	

- \* You should only use *m2* = 0 or 1 if your labels do not have enough space for more error correction characters. Usually, these values are not recommended.
- † The printer reserves *m2* = 6, 7, or 8 for special applications where the symbol is subject to damage and requires a higher level of error correction.
- ‡ *m2* = 9 lets the printer set *m2* to the recommended value for each symbol based on the number of characters. An *m2* value of 9 is the default setting.

**Using *m3* to Set the Truncate Flag**

*m3* is a truncate flag that indicates whether to print the symbol in truncated form. If truncated, the symbols print without right row indicators and with only a one-module wide stop character. The values for *m3* are 0 to disable truncating and 1 to enable truncating. The default is 0. To minimize errors and maintain the best reading performance, Intermec recommends that you leave *m3* equal to 0.

This table shows the approximate data capacity (maximum number of characters allowed) for the three character sets.

**Data Capacity per Character Set**

<b>Character Set</b>	<b>Data Capacity</b>
Full ASCII	1108
Alphanumeric	1850
Numeric	2725



**Note:** 2D symbols encode data by compressing it in different amounts. Therefore, use these values as guidelines. The exact data capacity varies with the actual data being encoded.

**Bar Code, Select Type (continued)****MaxiCode**

c14 [, m1]

MaxiCode is a fixed-size 2D symbology where the printer ignores height and width magnification. This symbology is made up of offset rows of hexagonal elements, each of which is 35 mils wide by 40 mils high, arranged around a bull's-eye finder pattern. Each hexagon represents one bit of information and is either black or white depending on the state of the encoded data bit. United Parcel Service (UPS) developed MaxiCode for the specific purpose of encoding information about a parcel.

This table lists the possible values for ,m1. The default value autodiscriminates between Modes 2, 3, and 4.



**Note:** If you have developed previous applications using Mode 0, your printer will still support your application; however, we recommend using Mode 2 or 3 for new applications.

**Values for m1**

m1	Description
2	Structured Carrier Message for numeric postal codes up to 9 digits
3	Structured Carrier Message for alphanumeric postal codes up to 6 characters
4	Standard Symbol
5	Full Enhanced Error Correction (EEC)
6	Reader Programming

When you select MaxiCode, you must format your data to conform to the five fields described in the next table.



**Note:** The header only applies to Structured Carrier Message (Modes 2 and 3). The Structured Carrier Message header is optional.

**MaxiCode Fields**

Field	Description of Field	Number of Characters	Default
1	Header (optional)	Nine	None
2	Postal code	Six or nine	None
3	Country code	Three	840 (U.S.)
4	Service class	Three	999
5	Secondary Message	84	None

1
2
3
4
5

[><sup>R</sup><sub>s</sub>01<sup>G</sup><sub>s</sub>97982039280<sup>G</sup><sub>s</sub>840<sup>G</sup><sub>s</sub>001<sup>G</sup><sub>s</sub> Up to 84 Character Message<sup>E</sup><sub>T</sub>

IPL.018

**Bar Code, Select Type (continued)**

**Notes:** The NULL character is not supported. If the NULL character appears in the user data, you will lose it along with any following data.

All control characters (<RS>, <GS>, <EOT>, etc.) must be preceded by a <SUB> character, as illustrated in the following examples.

This example illustrates the command for MaxiCode Mode 2:

```
<STX><ESC>C<ETX>
<STX><ESC>P<ETX>
<STX>E1;F1<ETX>
<STX>H0;o10,10<ETX>
<STX>B1;o100,300;f1;c14,2;h6;w6;d0,100<ETX>
<STX>R<ETX>
<STX><ESC>E1<CAN><ETX>
<STX>MaxiCode Sample Mode 2<CR><ETX>
<STX>[]><SUB><RS>01<SUB><GS>01982039280<SUB><GS>840<SUB>
<GS>001<SUB><GS>1Z94924221455215<SUB><RS>Intermec 6001
36th Ave West Everett, WA 98203<SUB><EOT><ETX>
<STX><ETB><ETX>
```

This example illustrates the command for MaxiCode Mode 3:

```
<STX><ESC>P<ETX>
<STX>E1;F1<ETX>
<STX>H0;o10,10<ETX>
<STX>B1;o100,300;f1;c14,3;h6;w6;d0,100<ETX>
<STX>R<ETX>
<STX><ESC>E1<CAN><ETX>
<STX>MaxiCode Sample Mode 3<CR><ETX>
<STX>[]><SUB><RS>01<SUB><GS>96T51654<SUB><GS>484<SUB>
<GS>066<SUB><GS>1Z00000256<SUB><RS><SUB><EOT><ETX>
<STX><ETB><ETX>
```

**JIS-ITF**

c15 [, m]

The default for *m* is 0.

**Values for m**

m	Description
0	Selects 5 dot narrow bar width magnification.
1	Selects 8 dot narrow bar width magnification.
2	Selects 10 dot narrow bar width magnification.

The next command defines a data source for the current field and how many characters are in the field.

d [n] [, m]

The default for *n,m* is 0,14.

**Bar Code, Select Type (continued)****Values for *n***

<b>n</b>	<b>Description</b>
d0[, <i>m</i> ]	This field receives data from a host. The , <i>m</i> is the data length, which can be set to 6 (condensed), 14 (standard), and 16 (extended).
d2[, <i>m</i> ]	This field acts as a slave field and receives its data from another field (master slave). The , <i>m</i> is the master slave field ID.
d3[, <i>m</i> ]	The printer defines the data during Program mode (fixed). The , <i>m</i> determines the JIS-ITF type. If the data length is not exactly 6, 14, or 16, the printer uses the next highest JIS-ITF type with zero padding in front.

The JIS-ITF bar code is the Japanese Industry Standard for Interleaved 2 of 5. JIS-ITF bar codes are in a box of solid black that measures 4.75 mm (0.19 in) and always include an interpretive field [21 x 14O CR-B (JIS x 9001)] centered beneath the bar code field.

Valid narrow bar width magnifications are 5, 8, and 10 dots. Due to printhead dot size limitations, the printer cannot achieve a true 2.5 to 1 ratio when using a narrow bar width of 5 dots. The printer uses a wide bar width of 12 dots for a true 2.4 to 1 ratio instead.

JIS-ITF bar code fields consist of these three categories: standard, condensed, and enlarged. If you are not using the command to define the source of the field data, the printer automatically chooses a category. If your bar code field contains 14 characters, the printer uses standard JIS-ITF. If your field contains 6, the printer uses the condensed version, and if your field contains 16, the printer uses the enlarged version.

**HIBC Code 128**

c16 [, *m1*] [, *m2*]

The default for *m1* is 0.

**Values for *m1* Conforming to the Supplier Standard**

<b>m1</b>	<b>Description</b>
0	Selects HIBC Code 128. Primary format.
1	Selects HIBC Code 128. Alternate primary format.
2, <i>m2</i>	Selects HIBC Code 128. Secondary format. The linkage character comes from , <i>m2</i> , which is the field identifier.

**Bar Code, Select Type (continued)****Values for m1 Conforming to the Provider Standard**

m1	Description
3	Single format.
4	First data format.
5,m2	Selects HIBC Code 128. Second data format. The linkage character comes from ,m2, which is the field identifier.
6	Selects HIBC Code 128. Multiple data format.

**Data Matrix Symbology Versions ECC-100 and ECC-200**

c17 [ , m1 ] [ , m2 ] [ , m3 , m4 [ , m5 , m6 ] ]

Data Matrix is a 2D matrix symbology made up of square modules arranged within a perimeter finder pattern. The finder pattern is a perimeter to the data region and is one module wide. Two adjacent sides are solid dark lines. These lines are used to define physical size, orientation, and symbol distortion. Intermec supports these two versions of Data Matrix: ECC-100 and ECC-200. Use ECC-200 for new applications.

**Data Matrix Default Parameters**

Parameter	Default	Description
,m1	200	ECC-200
,m2	0	Square
,m3	0	Position of current symbol in group
,m4	,m3	Total number of symbols in group
,m5	1	File identifier
,m6	1	File identifier

,m1 is a three-digit number that selects the Data Matrix version. Possible values are:

- 100 (ECC-100)
- 200 (ECC-200)



**Note:** The EasyCoder F4, Pf2i, PF4i, and PM4i printers only support ,m1 = 200.

,m2 is a one-digit value that indicates whether your symbol will be square or rectangular. The amount of data you enter determines the size of the symbol. Possible values are:

- 0 = square
- 1 = rectangular

**Bar Code, Select Type (continued)**

Use ,*m3*, ,*m4*, ,*m5*, and ,*m6* when you define Structured Append symbols within ECC-200.

**Structured Append Parameter Values for Data Matrix**

Parameter	Description	Possible Values
, <i>m3</i>	The position of the current symbol in the group	0 - 16
, <i>m4</i>	The total number of symbols in the group	0 - 16
, <i>m5</i>	File identifier	1 - 254
, <i>m6</i>	File identifier	1 - 254

For example, setting ,*m3*,*m4*,*m5*,*m6* to 2,5,1,43 indicates that the current symbol definition is the second in a group of 5 with the file identifier of 1,43.

If you do not set ,*m3* or you set it to 0, you disable Structured Append mode. If you do not set ,*m5* or ,*m6*, the settings default to 1,1.

**Notes:** This table lists how many numeric, alpha, or 8-bit characters you can place in a Data Matrix bar code for each version.

**Character Capacity for Data Matrix Versions**

Type of Character	ECC-100	ECC-200
All numeric	88	3116
All alpha	59	2335
All 8-bit	38	1556

**QR Code**

c18 [, *m1*] [, *m2*] [, *m3*]

QR Code is a matrix 2D symbology that encodes data into patterns consisting of black and white dots or modules. A three position detection pattern enables omni-directional reading and ultra high-speed reading. QR Code can handle a wide range of data, including numerical, alphabetical, Kanji, Hiragana, Katakana, graphics, and control codes. A built-in error correction function enables the QR Code to repair errors in the code.

**Bar Code, Select Type (continued)****Values for *m1*, *m2*, *m3***

Parameter	Default	Description	Possible Values
, <i>m1</i>	2	QR model	1 = Model 1 2 = Model 2
, <i>m2</i>	M	Error correction level	L = 7% correction M = 15% correction Q = 25% correction H = 30% correction
, <i>m3</i>	8	Mask number	0-7 = Mask type 8 = Auto-selection of mask by printer

**Notes:** You can only create QR symbols up to 3550 characters.

**MicroPDF417**

c19 [, *m1*] [, *m2*]

MicroPDF417 is a 2D symbology, derived from PDF417. You use MicroPDF417 for applications needing improved area efficiency but without the requirement for PDF417's maximum data capacity. MicroPDF417 replaces PDF417's 17-module-wide start/stop patterns and left/right row indicators with a unique set of 10-module-wide Row Address Patterns, which were designed both to reduce overall symbol width and to enable linear scanning at row heights as low as 2X. MicroPDF417, unlike PDF417, may only be printed in certain defined combinations of number of data columns (*m1*) and number of data rows (*m2*), up to a maximum of 4 data columns by 44 data rows.

**Values for *m1* and *m2***

Parameter	Default	Description
<i>m1</i>	0	Sets the number of data columns in the printed symbol. The default setting (0) allows the printer to determine the most efficient size for given data. Possible values are 0 through 4.
<i>m2</i>	0	Sets the number of data rows in the printed symbol. The default setting (0) allows the printer to determine the most efficient size for given data. Possible values depend on the setting for <i>m1</i> .

**Bar Code, Select Type (continued)**

MicroPDF417 uses the following symbol sizes (data columns x data rows), each with a distinct error correction capacity:

1x11	2x8	3x6	4x4
1x14	2x11	3x8	4x6
1x17	2x14	3x10	4x8
1x20	2x17	3x12	4x10
1x24	2x20	3x15	4x12
1x28	2x23	3x20	4x15
	2x26	3x26	4x20
		3x32	4x26
		3x38	4x32
		3x44	4x38
			4x44

**RSS**

c20 [, m1] [, m2] [, m3]

The Reduced Space Symbology (RSS) family contains seven different linear bar codes that can be used individually (c20) or as Composite Components for the EAN.UCC Composite symbology (c21).

**RSS Bar Code Descriptions**

RSS Bar Code	Description
RSS-14	Numeric only linear symbology used to encode the Global Trade Item Numbers (GTINs) for scanning in the supply chain. RSS-14 is smaller than EAN-13 or UPC-A and may include up to 13 digits. The check digit is not included in the data.
RSS-14 Truncated	Reduced height symbology designed to fit on small, narrow items. This bar code may include up to 13 digits. The check digit is not included in the data.
RSS-14 Stacked	A variation that is stacked in two rows, and is suitable for applications with limited width available. This bar code may include up to 13 digits. The check digit is not included in the data.
RSS-14 Stacked Omnidirectional	Full height version symbology with omni directional scanning capability so it can be scanned at retail point-of-sale. This bar code may include up to 13 digits. The check digit is not included in the data.
RSS-14 Limited	Numeric only linear symbology used to encode the Global Trade Item Numbers (GTINs) for scanning in the supply chain. This bar code may include up to 13 digits. The check digit is not included in the data.
RSS-14 Expanded	Encodes a maximum of 74 numeric or 41 alphanumeric characters from a subset of ISO 646 consisting of the upper and lowercase letters, digits, 20 selected punctuation characters and the FNC1 character. See the “ISO 646 Subset Characters” table on page 159.
RSS-14 Expanded Stacked	RSS-14 Expanded symbology that is stacked in 2 to 11 rows.

**Bar Code, Select Type (continued)****Values for m1, m2, m3**

Parameter	Default	Description	Possible Values
,m1	2	Select RSS version	0 = RSS-14 1 = RSS-14 Truncated 2 = RSS-14 Stacked 3 = RSS-14 Stacked Omnidirectional 4 = RSS Limited 5 = RSS Expanded 6 = RSS Expanded Stacked
,m2	1	Height of the separator pattern row	,m1 = 2, 3, and 6 only Minimum is 1X the defined bar magnification of the barcode (w[n] command). If too low of a value for m2 is entered, the height will be changed to the smallest legal value for the selected magnification.
,m3	2	Number of segments per row	,m1 = 6 only Even numbers in the range of 2 to 22

The height of the bar codes or the height of each row in the stacked bar codes is determined by the bar height magnification command (h[n]). For RSS-14 Stacked, the lower row is set using the value specified in the bar height magnification command and the upper row height is calculated from this value. If the bar height magnification command is not sent, the bar code will default to the proper height specified for the selected width:

- For m1 = 0  $h[n] = 33 * w[n]$
- For m1 = 1  $h[n] = 13 * w[n]$
- For m1 = 2  $h[n] = 7 * w[n]$
- For m1 = 3  $h[n] = 33 * w[n]$
- For m1 = 4  $h[n] = 10 * w[n]$
- For m1 = 5  $h[n] = 33 * w[n]$
- For m1 = 6  $h[n] = 34 * w[n]$

If the amount of data sent to the bar code exceeds the defined limit, an Error Code 11 is generated and the bar code does not print.

**Bar Code, Select Type (continued)****ISO 646 Subset Characters**

Character	Description
0-9	
FNC1	
A to Z	
a to z	
!	Exclamation mark
“	Quotation mark
%	Percent sign
&	Ampersand
‘	Apostrophe
(	Left parenthesis
)	Right parenthesis
*	Asterisk
+	Plus sign
,	Comma
-	Minus or hyphen
.	Period or full stop
/	Slash or solidus
:	Colon
;	Semicolon
<	Less-than sign
=	Equals sign
>	Greater-than sign
?	Question mark
—	Underline or low line
	space

## **Bar Code, Select Type (continued)**

### **EAN.UCC Composite**

c21 [, m1] [, m2] [, m3] [, m4] [, m5] [, m6]

The EAN.UCC Composite symbology consists of an EAN.UCC linear component associated with an adjacent 2D Composite Component.

The linear component encodes the primary identification so that it is readable by all scanning technologies and so that 2D imagers can use the linear component as a finder pattern for the adjacent 2D Composite Component. The linear components include these bar codes:

- UCC/EAN-128
- UPC-A
- EAN-8
- EAN-13
- RSS family of bar codes

The 2D Composite Component encodes supplementary data, such as batch number or expiration date. There are three types of 2D Composite Components that are all based on the PDF417 symbology:

- CC-A is a structural variant of MicroPDF417.
- CC-B is a MicroPDF417 symbol.
- CC-C is a PDF417 symbol.

The data for the linear and 2D components is separated by the <HT> command with the data for the linear component sent first. For example, to print a Composite bar code with the linear component encoding 112233445566 and the 2D component encoding aabbccddeeff, the data is sent to the printer as 112233445566<HT>aabbccddeeff.

For all possible combinations of linear and 2D Composite components, see the next table, “Combinations of Linear and 2D Composite Components and Capacity.”

**Bar Code, Select Type (continued)****Combinations of Linear and 2D Composite Components and Capacity**

Linear Component		2D Composite Component (Max Data Length)		
Bar Code Type	Data Length	CC-A	CC-B	CC-C
UCC/EAN-128	1-48 digits	56 digits 31 char	338 digits 196 char	2361 digits
EAN-13	13 digits	56 digits 31 char	338 digits 196 char	N/A
EAN-8	8 digits	47 digits 26 char	219 digits 127 char	N/A
UPC-A	12 digits	56 digits 31 char	338 digits 196 char	N/A
UPC-E	8 digits	47 digits 26 char	96 digits 55 char	N/A
RSS-14 RSS-14 Truncated	1-13 digits	56 digits 31 char	338 digits 196 char	N/A
RSS-14 Stacked RSS-14 Stacked Omnidirectional	1-13 digits	47 digits 26 char	96 digits 55 char	N/A
RSS Limited	1-13 digits	47 digits 26 char	219 digits 127 char	N/A
RSS-14 Expanded RSS-14 Expanded Stacked	1-74 digits* 1-41 char*	56 digits 31 char	338 digits 196 char	N/A

**Notes:** Data lengths with an asterisk (\*) indicate that the actual maximum amount of data depends on data content.

UCC/EAN-128 uses the same code set as Code 128, except it does not allow function codes FNC2 through FNC4. FNC1 can be sent to the printer as the data string <SUB><SUB>1.

2D Composite Components encode characters from the ISO 646 code set. See the “ISO 646 Subset Characters” table on page 159.

**Bar Code, Select Type (continued)****Values for m1, m2, m3, m4, m5, m6**

Parameter	Default	Description	Possible Values
<i>,m1</i>	0	Select version	0 = UCC/EAN-128 with CC-C 1 = UCC/EAN-128 with CC-A or CC-B 2 = EAN-13 with CC-A or CC-B 3 = EAN-8 with CC-A or CC-B 4 = UPC-A with CC-A or CC-B 5 = UPC-E with CC-A or CC-B 6 = RSS-14 with CC-A or CC-B 7 = RSS-14 Truncated with CC-A or CC-B 8 = RSS-14 Stacked with CC-A or CC-B 9 = RSS-14 Stacked Omnidirectional with CC-A or CC-B 10 = RSS Limited with CC-A or CC-B 11 = RSS Expanded with CC-A or CC-B 12 = RSS Expanded Stacked with CC-A or CC-B   <b>Note:</b> The printer determines whether CC-A or CC-B will be used based on the amount of data sent to the 2D Composite Component.
<i>,m2</i>	1	Height of the separator pattern row	<i>,m1</i> = 0, and 6-12 only: Range is between 1X and 2X the defined bar magnification of the bar code (w[n] command). If too low of a value for <i>,m2</i> is entered, the height is changed to the smallest legal value for the selected magnification. If too high a value is entered, an Error Code 11 "Invalid bar code data" is generated. Example: If w[n] is set to 3 the separator height can be 3 to 6.
<i>,m3</i>	0 ( <i>m1</i> = 0) 4 ( <i>m1</i> = 12)	Number of segments or columns per row	<i>,m1</i> = 0: <i>,m3</i> = 0 selects the largest number of columns for the 2D bar code to fit within the 1D bar code including its quiet zones. Values for <i>,m3</i> are from 1 to 30. <i>,m1</i> = 12: the number of segments per row.
<i>,m4</i>	1	Display space, “(“ and “)” characters	<i>,m4</i> = 0: the bar code does not include any of the “space”, “(“ and “)” characters in the data, but these characters are displayed in the human readable interpretive field. <i>,m4</i> = 1: the bar code and the human readable interpretive field includes exactly the same data.
<i>,m5</i>	0	Height of each row in the 2D bar code	<i>,m5</i> = 0: the height is 3X the magnification (default)
<i>,m6</i>	0	Print the linear barcode interpretive field	<i>,m6</i> = 0: do not print the human readable interpretive field for the linear bar code <i>,m6</i> = 1: print the human readable interpretive field for the linear bar code   <b>Note:</b> The human readable interpretive field for the 2D Composite Component is displayed if the i[n] is set to 1.

## Bar Code Field, Create or Edit

**Purpose:** Edits or creates a bar code field.

**Syntax:** `Bn [, name]`

**Printers:**

Printer	Default	Values for n	Notes
All	n = 0	0 - 199	The ,name parameter is optional. The field can be up to eight ASCII characters, but cannot start with a numeric character.

**Notes:** When you create a bar code field, you automatically create an interpretive field if you have enabled the Interpretive parameter.

### Bar Code Field Default Parameters

Parameter	Syntax	Default
Field origin	o	0,0
Field direction	f	0 degrees
Bar code type	c	Code 39
Check digits		Disabled
Prefix		None
Data length		20
Ratio	r	3 to 1
Interpretive	i	Disabled
Height magnification	h	50
Width magnification	w	1

The printer generates an error code (38) if the field number is out of range.

## Bitmap Cell Height for Graphic or UDF, Define

**Purpose:** Defines the height of a graphic or user-defined font.

**Syntax:**  $\gamma n$

**Printers:**

Printer	Default	Values for n	Notes
3240	n = 1 bitmap fonts n = 10 outline fonts n = 50 graphics	1 - 999	n is the number of rows for a graphic or font (bitmap). For outline fonts, n represents the height of the base character in number of dots. The printer generates an error code (52) for an invalid height.
3400	n = 1 bitmap fonts n = 10 outline fonts n = 50 graphics	1 - 799	n is the number of rows for a graphic or font (bitmap). For outline fonts, n represents the height of the base character in number of dots. The printer generates an error code (52) for an invalid height.
3400e	n = 1 bitmap fonts n = 10 outline fonts n = 50 graphics	200 dpi: 1 - 799 400 dpi: 1 - 1599	n is the number of rows for a graphic or font (bitmap). For outline fonts, n represents the height of the base character in number of dots. The printer generates an error code (52) for an invalid height.
3440	n = 1 bitmap fonts n = 10 outline fonts n = 50 graphics	1 - 1599	n is the number of rows for a graphic or font (bitmap). For outline fonts, n represents the height of the base character in number of dots. The printer generates an error code (52) for an invalid height.
3600	n = 1 bitmap fonts n = 10 outline fonts n = 50 graphics	1 - 599	n is the number of rows for a graphic or font (bitmap). For outline fonts, n represents the height of the base character in number of dots. The printer generates an error code (52) for an invalid height.

**Bitmap Cell Height for Graphic or UDF, Define (continued)**

Printer	Default	Values for n	Notes
4100	n = 1 bitmap fonts or graphics	1 - 599 1 - 799 (with expanded memory)	n is the number of rows for a graphic or font (bitmap). For outline fonts, n represents the height of the base character in number of dots.  The printer generates an error code (52) for an invalid height.
4400	n = 1 bitmap fonts  n = 10 outline fonts  n = 50 graphics	1 - 599	n is the number of rows for a graphic or font (bitmap). For outline fonts, n represents the height of the base character in number of dots.  The printer generates an error code (52) for an invalid height.
44X0	n = 1 bitmap fonts  n = 10 outline fonts  n = 50 graphics	4420: 1 - 799  4440: 1 - 1599	n is the number of rows for a graphic or font (bitmap). For outline fonts, n represents the height of the base character in number of dots.  The printer generates an error code (52) for an invalid height.
4X30	n = 1 bitmap fonts  n = 10 outline fonts  n = 50 graphics	1 - 599	n is the number of rows for a graphic or font (bitmap). For outline fonts, n represents the height of the base character in number of dots.  The printer generates an error code (52) for an invalid height.
7421	n = 1 bitmap fonts  n = 10 outline fonts  n = 50 graphics	1 - 799	n is the number of rows for a graphic or font (bitmap). For outline fonts, n represents the height of the base character in number of dots.  The printer generates an error code (52) for an invalid height.
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 1 bitmap fonts  n = 10 outline fonts  n = 50 graphics	1 - 799	n is the number of rows for a graphic or font (bitmap). For outline fonts, n represents the height of the base character in number of dots.  The printer generates an error code (52) for an invalid height.

## Bitmap Cell Width for Graphic or UDF, Define

**Purpose:** Defines the maximum width for a graphic or any character in a font. Each character has a width within this amount, which should be at least as wide as the widest character in the font. *n* is the number of columns for the UDC, bitmap, or user-defined font. For outline fonts, *n* represents the width of the base character in number of dots.

**Syntax:** `xn`

**Printers:**

Printer	Default	Values for n	Notes
3240	n = 1 bitmap fonts or graphics	1 - 999	The printer generates an error code (52) for an invalid width.
	n = 10 outline fonts	With expanded memory: 1 - 1999	
3400	n = 1 bitmap fonts or graphics	1 - 799	The printer generates an error code (52) for an invalid width.
	n = 10 outline fonts		
3400e	n = 1 bitmap fonts or graphics	200 dpi: 1 - 799	The printer generates an error code (52) for an invalid width.
	n = 10 outline fonts	400 dpi: 1 - 1599	
3440	n = 1 bitmap fonts or graphics	1 - 1599	The printer generates an error code (52) for an invalid width.
	n = 10 outline fonts		
3600	n = 1 bitmap fonts or graphics	1 - 599	The printer generates an error code (52) for an invalid width.
	n = 10 outline fonts		
4100	n = 1 bitmap fonts or graphics	1 - 599	The printer generates an error code (52) for an invalid width.
		With expanded memory: 1 - 799	
44X0	n = 1 bitmap fonts or graphics	4420: 1 - 799	The printer generates an error code (52) for an invalid width.
	n = 10 outline fonts	4440: 1 - 1599	
4400	n = 1 bitmap fonts or graphics	1 - 599	The printer generates an error code (52) for an invalid width.
	n = 10 outline fonts		
4X30	n = 1 bitmap fonts or graphics	1 - 599	The printer generates an error code (52) for an invalid width.
	n = 10 outline fonts		

**Bitmap Cell Width for Graphic or UDF, Define (continued)**

Printer	Default	Values for n	Notes
7421	n = 1 bitmap fonts or graphics  n = 10 outline fonts	1 - 799	The printer generates an error code (52) for an invalid width.
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 1 bitmap fonts or graphics  n = 10 outline fonts	1 - 799	The printer generates an error code (52) for an invalid width.

**Bitmap User-Defined Font, Clear or Define**

**Purpose:** Clears or creates a user-defined bitmap font set. The font ID number is *n*.

**Syntax:** `Tn [ , name]`

**Printers:**

Printer	Default	Values for n	Notes
All	N/A	3 to 6 and 8 to 19	The ,name parameter is an optional field. The field can be up to eight ASCII characters.

**Notes:** If you have already defined font set *n*, the printer erases all previous characters in the font. You can recreate an existing font, but you cannot edit it. To change any characters, you must transmit the entire font set.

**Border Around Human-Readable Text, Define**

**Purpose:** Defines a border around a human-readable field.

**Syntax:** `bn`

**Printers:**

Printer	Default	Values for n	Notes
3240	n = 0 no borders (black letters)	0 - 199	When n is greater than 0, field prints white letters with n dot size border around the field.
3400A 3400B	n = 0 no borders (black letters)	0 - 199	When n is greater than 0, field prints white letters with n dot size border around the field.
3400C 3400D	n = 0 no borders (black letters)	0 - 999	When n is greater than 0, field prints white letters with n dot size border around the field.

**Border Around Human-Readable Text, Define (continued)**

Printer	Default	Values for n	Notes	
3400e	n = 0	no borders (black letters)	0 - 999	When n is greater than 0, field prints white letters with n dot size border around the field.
3440	n = 0	no borders (black letters)	0 - 999	When n is greater than 0, field prints white letters with n dot size border around the field.
3600	n = 0	no borders (black letters)	0 - 199	When n is greater than 0, field prints white letters with n dot size border around the field.
4100	n = 0	no borders (black letters)	0 - 199	When n is greater than 0, field prints white letters with n dot size border around the field.
4400	n = 0	no borders (black letters)	0 - 199	When n is greater than 0, field prints white letters with n dot size border around the field.
44X0	n = 0	no borders (black letters)	0 - 999	When n is greater than 0, field prints white letters with n dot size border around the field.
4X30	n = 0	no borders (black letters)	0 - 199	When n is greater than 0, field prints white letters with n dot size border around the field.
7421	n = 0	no borders (black letters)	0 - 999	When n is greater than 0, field prints white letters with n dot size border around the field.
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 0	no borders (black letters)	0 - 999	When n is greater than 0, field prints white letters with n dot size border around the field.

**Box Field, Create or Edit**

**Purpose:** Accesses or creates a box field.

**Syntax:** `wn [, name]`

**Printers:**

Printer	Default	Values for n	Notes
All	n = 0	0 - 199	The ,name parameter is optional. The field can be up to eight ASCII characters, but cannot start with a numeric character.

**Box Field, Create or Edit (continued)**

**Notes:** The next table describes the box field parameters.

**Box Field Parameter Descriptions**

Parameter	Syntax	Default
Field origin	o	0,0
Field direction	f	0 degrees
Box length	l	100
Box height	h	100
Box width	w	1

**Character Bitmap Origin Offset, Define**

**Purpose:** Defines the offset, to the right, of all characters in a font. If you define each character's width in columns, with the first column numbered 0, then the origin of each character is at the column with the same number as  $n$ . For example,  $n = 2$  shifts the character origins over two columns to the right.

**Syntax:**  $xn$

**Printers:**

Printer	Default	Values for n	Notes
3240	n = 0	0 - 599	Use this command only with bitmap fonts.
3400A 3400B	n = 0	0 - 599	Use this command only with bitmap fonts.
3400C 3400D 3400e	n = 0	0 - 800	Use this command only with bitmap fonts.
3440	n = 0	0 - 800	Use this command only with bitmap fonts.
3600	n = 0	0 - 599	Use this command only with bitmap fonts.
4100	n = 0	0 - 599	Use this command only with bitmap fonts.
4400	n = 0	0 - 599	Use this command only with bitmap fonts.
44X0	n = 0	0 - 800	Use this command only with bitmap fonts.
4X30	n = 0	0 - 599	Use this command only with bitmap fonts.
7421	n = 0	0 - 800	Use this command only with bitmap fonts.
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 0	0 - 800	Use this command only with bitmap fonts.

## Character Rotation or Bar Code Ratio, Define

**Purpose:** Defines the character rotation for human-readable fields, or the bar code ratio for a bar code field.

**Syntax:** `r n`

**Printers:**

Printer	Default		Values for n	Notes
3240	n = 0	character rotation	Human-readable fields: n = 0 horizontal	If the bar code width is odd and you select r0, the printer substitutes r1.  The narrow elements of this code are always at least 3 dots, therefore select a width of w = 1 to have the shortest symbol.
	n = 1	bar code ratio	n = 1 90° counterclockwise	
			Bar code fields, ratios of wide element to narrow element: n = 0 2.5 to 1 n = 1 3.0 to 1 n = 2 2.0 to 1	
3400A 3400B	n = 0	character rotation	Human-readable fields: n = 0 horizontal	
	n = 1	bar code ratio	n = 1 90° counterclockwise	
			Bar code fields, ratios of wide element to narrow element: n = 0 2.5 to 1 n = 1 3.0 to 1 n = 2 2.0 to 1	
3400C 3400D 3400e	n = 0	character rotation	Human-readable fields: n = 0 horizontal	n = 3 applies to Code 39 for a ratio of 7 dots to 3 dots.
	n = 1	bar code ratio	n = 1 90° counterclockwise	
			Bar code fields, ratios of wide element to narrow element: n = 0 2.5 to 1 n = 1 3.0 to 1 n = 2 2.0 to 1 n = 3 2.3 to 1	

**Character Rotation or Bar Code Ratio, Define (continued)**

Printer	Default	Values for n	Notes
3440	n = 0 character rotation n = 1 bar code ratio	Human-readable fields: n = 0 horizontal n = 1 90° counterclockwise Bar code fields, ratios of wide element to narrow element: n = 0 2.5 to 1 n = 1 3.0 to 1 n = 2 2.0 to 1 n = 3 2.3 to 1	
3600	n = 0 character rotation n = 1 bar code ratio	Human-readable fields: n = 0 horizontal n = 1 90° counterclockwise Bar code fields, ratios of wide element to narrow element: n = 0 2.5 to 1 n = 1 3.0 to 1 n = 2 2.0 to 1	
4100	n = 0 character rotation n = 1 bar code ratio	Human-readable fields: n = 0 horizontal n = 1 90° counterclockwise Bar code fields, ratios of wide element to narrow element: n = 0 2.5 to 1 n = 1 3.0 to 1 n = 2 2.0 to 1	
4400	n = 0 character rotation n = 1 bar code ratio	Human-readable fields: n = 0 horizontal n = 1 90° counterclockwise Bar code fields, ratios of wide element to narrow element: n = 0 2.5 to 1 n = 1 3.0 to 1 n = 2 2.0 to 1	

**Character Rotation or Bar Code Ratio, Define (continued)**

Printer	Default	Values for n	Notes
44X0	n = 0 character rotation n = 1 bar code ratio	Human-readable fields: n = 0 horizontal n = 1 90° counterclockwise Bar code fields, ratios of wide element to narrow element: n = 0 2.5 to 1 n = 1 3.0 to 1 n = 2 2.0 to 1 n = 3 2.3 to 1	
4X30	n = 0 character rotation n = 1 bar code ratio	Human-readable fields: n = 0 horizontal n = 1 90° counterclockwise Bar code fields, ratios of wide element to narrow element: n = 0 2.5 to 1 n = 1 3.0 to 1 n = 2 2.0 to 1	
7421	n = 0 character rotation n = 1 bar code ratio	Human-readable fields: n = 0 horizontal n = 1 90° counterclockwise Bar code fields, ratios of wide element to narrow element: n = 0 2.5 to 1 n = 1 3.0 to 1 n = 2 2.0 to 1 n = 3 2.3 to 1	
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 0 character rotation n = 1 bar code ratio	Human-readable fields: n = 0 horizontal n = 1 90° counterclockwise Bar code fields, ratios of wide element to narrow element: n = 0 2.5 to 1 n = 1 3.0 to 1 n = 2 2.0 to 1 n = 3 2.3 to 1	

## Code 39 Prefix Character, Define

**Purpose:** Defines the prefix for a Code 39 field. The prefix is only valid for Code 39 fields.

**Syntax:** p [n1] [n2] [n3] [n4] ;

**Printers:**

Printer	Default	Values for n	Notes
All	No prefix	A to Z (uppercase only) and 0 to 9	Enter the prefix after you select Code 39. For example, enter c0,3;pABC4; rather than pABC4;c0,3; When you enter the @ character as n1, it clears all prefixes. Prefix characters do not appear in the interpretive field.

## Command Tables, Load

**Purpose:** Downloads a command table, with *t* as the command table identifier. This command table identifier is followed by the nibblized command entries (*c1-cn*) to be loaded into the table. The printer expects two hex digits for every entry in the table.

**Syntax:** C [t], [command 1], [command 2], ..., [command n]

*t* is the command table identifier.

**Printers:**

Printer	Default	Values for t	Notes
All except the EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i, and 7421	N/A	0 = Print mode commands 1 = Escape print commands 2 = Shift print commands 3 = Status response 4 = Protocol characters	Data must be nibblized ASCII characters ranging from 0 to 9 and A to F.

**Notes:** New commands become effective after you reset the printer or turn the power off and back on. For help, see Appendix D, “User-Defined Interface Tables.”

To change an entry in the table, you must send the entire table to the printer as a string of ASCII characters in hexadecimal form. Any entry that you do not redefine retains its old value. To modify only a few commands, send the <ESC>Z command, capture the output, modify it, and send it back to the printer.

## Current Edit Session, Save

**Purpose:** Saves the current page, format, UDC, or UDF being edited. The printer remains in Program mode.

**Syntax:** N

**Notes:** The printer automatically saves the current page, format, or UDC when you call a new one or when you exit Program mode.

## Data Source for Format in a Page, Define

**Purpose:** Defines a data source for a format assigned to a page position.

**Syntax:**  $en [, m1] [, m2]$

**Printers:**

Printer	Default	Values for n	Notes
All except 4X30	n = 0 m1 = a m2 = 0	0 - format receives its data during Print mode 1 - format is a slave of another format within this page.	The format ID must be the same for both the master and slave formats.  For the 4X30, this command was called Format Page Position, Define Data Source. All values are the same.

*m1* is the position of the master format within the page.

*m2* is the data offset to apply to the slave format. You can only offset data that is delimited by numeric field separator <FS> or alphanumeric field separator <GS>.

## Field, Delete

**Purpose:** Deletes field *n* from the format.

**Syntax:** Dn

**Printers:**

Printer	Default	Values for n	Notes
All	n = 0	0 -199.	You cannot delete the last field in a format. If you delete the current field, the field pointer points to the next field. If you delete a master field, you also delete all slave fields of that master field.

## Field Data, Define Source

**Purpose:** Defines a data source for the current field and how many characters are in the field.

**Syntax:** `dn [, m1] [, m2]`

**Printers:**

Printer	Default		Values for n	Values for m1 (d0 or d1)
3240	0,20,0	Bar code fields	0 = Data entered in Print mode	0 - 3550
	0,30,0	Human-readable fields	1 = Data entered in Print mode 2 = Data comes from field ,m1 3 = Fixed data	
3400	0,20,0	Bar code fields	0 = Data entered in Print mode	0 - 3550
	0,30,0	Human-readable fields	1 = Data entered in Print mode 2 = Data comes from field ,m1 3 = Fixed data	
3440	0,20,0	Bar code fields	0 = Data entered in Print mode	0 - 3550 (incl. 2D fields)
	0,30,0	Human-readable fields	1 = Data entered in Print mode 2 = Data comes from field ,m1 3 = Fixed data	
3600	0,20,0	Bar code fields	0 = Data entered in Print mode	0 - 3550
	0,30,0	Human-readable fields	1 = Data entered in Print mode 2 = Data comes from field ,m1 3 = Fixed data	
4100	0,20,0	Bar code fields	0 = Data entered in Print mode	0 - 250
	0,30,0	Human-readable fields	1 = Data entered in Print mode 2 = Data comes from field ,m1 3 = Fixed data	
4400	0,20,0	Bar code fields	0 = Data entered in Print mode	0 - 250
	0,30,0	Human-readable fields	1 = Data entered in Print mode 2 = Data comes from field ,m1 3 = Fixed data	

**Field Data, Define Source (continued)**

Printer	Default		Values for n	Values for m1 (d0 or d1)
44X0	0,20,0	Bar code fields	0 = Data entered in Print mode 1 = Data entered in Print mode	0 - 3550
	0,30,0	Human-readable fields	2 = Data comes from field ,m1 3 = Fixed data	
4X30	0,20,0	Bar code fields	0 = Data entered in Print mode 1 = Data entered in Print mode	0 - 3550
	0,30,0	Human-readable fields	2 = Data comes from field ,m1 3 = Fixed data	
7421	0,20,0	Bar code fields	0 = Data entered in Print mode 1 = Data entered in Print mode	0 - 3550
	0,30,0	Human-readable fields	2 = Data comes from field ,m1 3 = Fixed data	
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	0,20,0	Bar code fields	0 = Data entered in Print mode 1 = Data entered in Print mode	0 - 3550
	0,30,0	Human-readable fields	2 = Data comes from field ,m1 3 = Fixed data	

The syntax for this command is illustrated in these examples.

```
d0 [, m1]
d1 [, m1] ;
```

Enter optional data in Print mode. ,*m1* is the maximum amount of data that you can enter into this field. The default for ,*m1* is 20 characters for bar code fields, and 30 characters for human-readable fields.

```
d2, m1 [, m2] ;
```

Copy data into this field from field ,*m1*. You must define the field before you can use it. ,*m2* is an optional positive integer numeric field offset that can range from 0 to 9999, with 0 as the default. You can only offset data delimited by numeric field separator (FS) or alphanumeric field separator (GS). A bar code field cannot copy data from a human-readable field, but a human-readable field can copy data from a bar code field.

```
d3, m1 ;
```

Fixed data *m1* is stored as part of the format, and you use it every time you print the current field. You cannot change entered data with print commands.

## Field Direction, Define

**Purpose:** Defines the field rotation.

**Syntax:**  $f n$

**Printers:**

Printer	Default	Values for n
All	n = 0	0 = Horizontal 1 = Rotated 90° counterclockwise from horizontal 2 = Rotated 180° counterclockwise from horizontal 3 = Rotated 270° counterclockwise from horizontal

## Field Origin, Define

**Purpose:** Defines the origin for a field. The field origin is the upper left corner of the field. Horizontal  $n$  and vertical  $m$  locations represent the number of dots from the label's origin. The origin (0,0) is the upper left square on the label.

**Syntax:**  $o n, m$

**Printers:**

Printer	Default	Values for n and m
All	n = 0 ,m = 0	n = 0 to 19999 ,m = 0 to 19999

## Font Character Width, Define

**Purpose:** Defines the amount of space from the origin of one letter to the origin of the next. If  $n$  is too small, characters may overlap.

**Syntax:**  $zn$

**Printers:**

Printer	Default	Values for n	Notes
3240	Character's bitmap width, minus the font character offset ( $Xn$ ) plus the intercharacter space ( $zn$ )	1 - 999 With expanded memory: 1 - 1999	For bitmap characters only. The printer ignores the intercharacter space command ( $zn$ ) if you use it with this command.
3400	Character's bitmap width, minus the font character offset ( $Xn$ ) plus the intercharacter space ( $zn$ )	1 - 799	For bitmap characters only. The printer ignores the intercharacter space command ( $zn$ ) if you use it with this command.
3400e	Character's bitmap width, minus the font character offset ( $Xn$ ) plus the intercharacter space ( $zn$ )	200 dpi: 1 - 799 400 dpi: 1 - 1599	For bitmap characters only. The printer ignores the intercharacter space command ( $zn$ ) if you use it with this command.
3440	Character's bitmap width, minus the font character offset ( $Xn$ ) plus the intercharacter space ( $zn$ )	1 - 1599	For bitmap characters only. The printer ignores the intercharacter space command ( $zn$ ) if you use it with this command.
3600	Character's bitmap width, minus the font character offset ( $Xn$ ) plus the intercharacter space ( $zn$ )	1 - 599	For bitmap characters only. The printer ignores the intercharacter space command ( $zn$ ) if you use it with this command.
4100	Character's bitmap width, minus the font character offset ( $Xn$ ) plus the intercharacter space ( $zn$ )	1 - 599 With expanded memory: 1 - 799	For bitmap characters only. The printer ignores the intercharacter space command ( $zn$ ) if you use it with this command.
4400	Character's bitmap width, minus the font character offset ( $Xn$ ) plus the intercharacter space ( $zn$ )	1 - 599	For bitmap characters only. The printer ignores the intercharacter space command ( $zn$ ) if you use it with this command.

**Font Character Width, Define (continued)**

Printer	Default	Values for n	Notes
4420	Character's bitmap width, minus the font character offset ( $Xn$ ) plus the intercharacter space ( $zn$ )	1 - 799	For bitmap characters only. The printer ignores the intercharacter space command ( $zn$ ) if you use it with this command.
4440	Character's bitmap width, minus the font character offset ( $Xn$ ) plus the intercharacter space ( $zn$ )	1 - 1599	For bitmap characters only. The printer ignores the intercharacter space command ( $zn$ ) if you use it with this command.
4X30	Character's bitmap width, minus the font character offset ( $Xn$ ) plus the intercharacter space ( $zn$ )	1 - 599	For bitmap characters only. The printer ignores the intercharacter space command ( $zn$ ) if you use it with this command.
7421	Character's bitmap width, minus the font character offset ( $Xn$ ) plus the intercharacter space ( $zn$ )	1 - 799	For bitmap characters only. The printer ignores the intercharacter space command ( $zn$ ) if you use it with this command.
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	Character's bitmap width, minus the font character offset ( $Xn$ ) plus the intercharacter space ( $zn$ )	1 - 799	For bitmap characters only. The printer ignores the intercharacter space command ( $zn$ ) if you use it with this command.

## Font Type, Select

**Purpose:** Selects a font type for human-readable fields.

**Syntax:** `cn [, m]`

where:

*n* is the font ID number.

*m* is the intercharacter gap (the space between characters). If you do not specify *m*, the printer uses the default value of the selected font.

### Printers:

Printer	Default	Values for n	Values for m
3240	n = 0	0 to 26, 28, 30 to 41 50 to 56 with the Kanji option	-199 to 199
3400A	n = 0	0 to 24	-199 to 199
3400B 3400C 3400D	n = 0	0 to 25, 30 to 41, 50 to 56 with the Kanji option	-199 to 199
3400e	n = 0	0 to 26, 28, 30 to 41 50 to 56 with the Kanji option	-199 to 199
3440	n = 0	0 to 26, 28, 30 to 41 50 to 56 with the Kanji option	-199 to 199
3600	n = 0	0 to 25, 30 to 41 50 to 56 with the Kanji option	-199 to 199
4100	n = 0	0 to 24	-199 to 199
4400	n = 0	0 to 25	-199 to 199
44X0	n = 0	0 to 26, 28, 30 to 41 50 to 56 with the Kanji option	-199 to 199
4X30	n = 0	0 to 26, 28, 30 to 41	-199 to 199
7421	n = 0	0 to 26, 28, 30 to 41	-199 to 199
EasyCoder F4	n = 0	0 to 26, 28, 30 to 41	-199 to 199
EasyCoder PF2i, PF4i, PM4i, PX4i, PX6i	n = 0	0 to 26, 28, 30 to 41, 61 to 70	-199 to 199

**Font Type, Select (continued)**

**Notes:** You can set *n* to a number from 0 to 56 for human-readable fields, depending on the fonts your printer supports. The next table includes values for *n* and the font name associated with it.

**Values for *n***

<b>n</b>	<b>Font Name</b>	<b>n</b>	<b>Font Name</b>
0	7 x 9 Standard (86XX font)	38	24 point monospace standard
1	7 x 11 OCR (86XX font)	39	24 point monospace bold
2	10 x 14 Standard (86XX font)	40	30 point monospace bold
3 - 6	User-defined fonts	41	36 point monospace bold
7	5 x 7 Standard (86XX font)	50	Kanji outline font
8 - 19	User-defined fonts	51	Kanji monospace outline font
20	8 point monospace	52	Katakana 12 x 16 bitmap
21	12 point monospace	53	Katakana 16 x 24 bitmap
22	20 point monospace	54	Katakana 24 x 36 bitmap
23	OCR A	55	Kanji 16 x 16 bitmap
24	OCR B size 2	56	Kanji 24 x 24 bitmap
25	Swiss Mono 721 standard outline font	61	Swiss 721
26	Swiss Mono 721 bold outline font	62	Swiss 721 bold
28	Dutch Roman 801 proportional outline font	63	Swiss 721 bold condensed
30	6 point monospace bold	64	Prestige bold
31	8 point monospace bold	65	Zurich extra condensed
32	10 point monospace standard	66	Dutch 801 bold
33	10 point monospace bold	67	Century Schoolbook
34	12 point monospace bold	68	Futura light
35	16 point monospace standard	69	Letter Gothic
36	16 point monospace bold	70	DingDings
37	20 point monospace bold		

For more information about fonts, see the “Printer Language, Select” command in this chapter. For more information about designing and using fonts, see Chapter 2 and Appendix C.

## Format, Create or Edit

**Purpose:** Edits or creates a format.

**Syntax:** An[,name] or Fn[,name]

**Printers:**

Printer	Default	Values for n	Notes
3240	N/A	1 - 99	n is the format ID number. The ,name parameter is an optional field. The field can be up to eight ASCII characters, but cannot start with a numeric character.
3400A 3400B	N/A	1 - 19	n is the format ID number. The ,name parameter is an optional field. The field can be up to eight ASCII characters, but cannot start with a numeric character.
3400C 3400D	N/A	*, 1 - 19	If you use an asterisk (*) for the label format, the printer does not store the label format in permanent memory. When you turn the printer off, the printer loses the label format.
3400e	N/A	*, 1 - 99	If you use an asterisk (*) for the label format, the printer does not store the label format in permanent memory. When you turn the printer off, the printer loses the label format.
3440	N/A	*, 1 - 99	If you use an asterisk (*) for the label format, the printer does not store the label format in permanent memory. When you turn the printer off, the printer loses the label format.
3600	N/A	1 - 19	n is the format ID number. The ,name parameter is an optional field. The field can be up to eight ASCII characters, but cannot start with a numeric character.
4100	N/A	1 - 19	n is the format ID number. The ,name parameter is an optional field. The field can be up to eight ASCII characters, but cannot start with a numeric character.
4400	N/A	1 - 19	n is the format ID number. The ,name parameter is an optional field. The field can be up to eight ASCII characters, but cannot start with a numeric character.
44X0	N/A	*, 1 - 99	If you use an asterisk (*) for the label format, the printer does not store the label format in permanent memory. When you turn the printer off, the printer loses the label format.

**Format, Create or Edit (continued)**

Printer	Default	Values for n	Notes
4X30	N/A	1 - 19	n is the format ID number. The ,name parameter is an optional field. The field can be up to eight ASCII characters, but cannot start with a numeric character.
7421	N/A	*, 1 - 99	If you use an asterisk (*) for the label format, the printer does not store the label format in permanent memory. When you turn the printer off, the printer loses the label format.
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	N/A	*, 1 - 99	If you use an asterisk (*) for the label format, the printer does not store the label format in permanent memory. When you turn the printer off, the printer loses the label format.

**Notes:** The printer generates an error code (36) if the format number is out of range.

**Format Direction in a Page, Define**

**Purpose:** Defines the format directions within a page.

**Syntax:** `qn`

**Printers:**

Printer	Default	Values for n
All	n = 0	0 = Horizontal 1 = Rotated 90° counterclockwise from horizontal 2 = Rotated 180° counterclockwise from horizontal 3 = Rotated 270° counterclockwise from horizontal

## Format, Erase

**Purpose:** Erases format ID number  $n$ .

**Syntax:**  $En$

**Printers:**

Printer	Default	Values for $n$	Notes
3240	N/A	1 - 99	You cannot erase format 0.
3400	N/A	1 - 19	You cannot erase format 0.
3400e	N/A	1 - 99	You cannot erase format 0.
3440	N/A	1 - 99	You cannot erase format 0.
3600	N/A	1 - 19	You cannot erase format 0.
4100	N/A	1 - 19	You cannot erase format 0.
4400	N/A	1 - 19	You cannot erase format 0.
44X0	N/A	1 - 99	You cannot erase format 0.
4X30	N/A	1 - 19	You cannot erase format 0.
7421	N/A	1 - 99	You cannot erase format 0.
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	N/A	1 - 99	You cannot erase format 0.

## Format Offset Within a Page, Define

**Purpose:** Defines the format offsets within a page and creates new origins for fields within a format by adding the format offsets to the original field offsets.  $m$  and  $n$  represent increments of dot sizes.

**Syntax:**  $On, m$

**Printers:**

Printer	Default	Values for $n$	Values for $,m$
All	$n = 0$ $,m = 0$	0 - 19999	0 - 19999

## Format Page Position, Define Data Source

See the “Data Source for Format in a Page, Define” command.

## Format Position From Page, Delete

**Purpose:** Deletes the format position  $p$  from a page.  $p$  is the page position.

**Syntax:**  $m p$

**Printers:**

Printer	Default	Values for p
All	$p = a$	a to z

## Format Position in a Page, Assign

**Purpose:** Assigns the format  $n$  to page position  $p$ .  $n$  is the numeric format ID, and  $p$  is the page position.

**Syntax:**  $m p, n$

**Printers:**

Printer	Default	Values for p	Values for ,n
3240	$p = a$	a to z	0 - 19
3400	$p = a$	a to z	0 - 19
3400e	$p = a$	a to z	0 - 99
3440	$p = a$	a to z	0 - 99
3600	$p = a$	a to z	0 - 19
4100	$p = a$	a to z	0 - 19
4400	$p = a$	a to z	0 - 19
44X0	$p = a$	a to z	0 - 99
43X0	$p = a$	a to z	0 - 19
7421	$p = a$	a to z	0 - 99
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	$p = a$	a to z	0 - 99

**Notes:** A format may be in multiple positions.

The printer generates an error code (36) if the format ID is out of range.

## Graphic, Select

**Purpose:** Selects a graphic for graphic fields.

**Syntax:** *cn*

**Printers:**

Printer	Default	Values for n	Notes
All	n = 0	0 - 99	This applies to a graphic field only.

## Graphic or UDC, Define

**Purpose:** Maps one column of bitmap for a graphic or a font character. *n* is the column to be mapped.

**Syntax:** *un, m...m*

**Printers:**

Printer	Default	Values for n	Notes
3240	N/A	1 - 999 With expanded memory: 1 - 1999	
3400	N/A	1 - 799	
3400e	N/A	200 dpi: 1 - 799 400 dpi: 1 - 1599	
3440	N/A	1 - 1599	
3600	N/A	1 - 599	
4100	N/A	1 - 599 With expanded memory: 1 - 799	
4400	N/A	1 - 599	
44X0	N/A	4420: 1 - 799 4440: 1 - 1599	
4X30	N/A	1 - 599	These printers do not support Emulation mode.
7421	N/A	1 - 799	
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	N/A	1 - 799	

In Emulation mode, *m...m* is a string of 1s and 0s that make up the column and specify whether or not to print in that row element of the column (*m* = 1 prints, *m* = 0 does not). Any unmapped columns or row elements default to *m* = 0. In Advanced mode, each data byte *m* represents 6 bits of the bitmap.

## Height Magnification of Bar, Box, or UDC, Define

**Purpose:** Defines box, bar code, or UDC height magnification. For bar code and box fields, define the height  $n$  in number of dots.

**Syntax:** `hn`

**Printers:**

Printer	Default	Values for n: Human-readable fields and graphics	Values for n: Bar codes and box fields
3240	n = 50 Bar code height n = 100 Box height n = 2 POSTNET and human-readable fields n = 1 Graphics	1 - 250 (graphics) 1 - 400 (human readable fields)	1 - 1999 (bar codes) 1 - 9999 (box fields)
3400A 3400B	n = 50 Bar code height n = 100 Box height n = 2 POSTNET and human-readable fields n = 1 Graphics	1 - 250 (graphics) 1 - 400 (human readable fields)	1 - 1999 (bar codes) 1 - 9999 (box fields)
3400C 3400D	n = 50 Bar code height n = 100 Box height n = 2 POSTNET and human-readable fields n = 1 Graphics	1 - 999	1 - 9999
3400e	n = 50 Bar code height n = 100 Box height n = 2 POSTNET and human-readable fields n = 1 Graphics	1 - 999	1 - 9999
3440	n = 50 Bar code height n = 100 Box height n = 2 POSTNET and human-readable fields n = 1 Graphics	1 - 999	1 - 9999
3600	n = 50 Bar code height n = 100 Box height n = 2 POSTNET and human-readable fields n = 1 Graphics	1 - 250 (graphics) 1 - 400 (human readable fields)	1 - 1999 (bar codes) 1 - 9999 (box fields)

**Height Magnification of Bar, Box, or UDC, Define (continued)**

<b>Printer</b>	<b>Default</b>	<b>Values for n: Human-readable fields and graphics</b>	<b>Values for n: Bar codes and box fields</b>
4100	n = 50 Bar code height n = 100 Box height n = 2 POSTNET and human-readable fields n = 1 Graphics	1 - 250	1 - 9999
4400	n = 50 Bar code height n = 100 Box height n = 2 POSTNET and human-readable fields n = 1 Graphics	1 - 250	1 - 9999
44X0	n = 50 Bar code height n = 100 Box height n = 2 POSTNET and human-readable fields n = 1 Graphics	1 - 999	1 - 9999
4X30	n = 50 Bar code height n = 100 Box height n = 2 POSTNET and human-readable fields n = 1 Graphics	1 - 250	1 - 9999
7421	n = 50 Bar code height n = 100 Box height n = 2 POSTNET and human-readable fields n = 1 Graphics	1 - 999	1 - 9999
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 50 Bar code height n = 100 Box height n = 2 POSTNET and human-readable fields n = 1 Graphics	1 - 999	1 - 9999

**Height Magnification of Bar, Box, or UDC, Define (continued)**

**Notes:** For human-readable fields, graphics, and the POSTNET symbology,  $n$  represents the vertical magnification of the character bitmap.

If you set  $n$  to a number that is too large, the printer uses the highest value it can support.

In Advanced Mode, a dot is 5 mil for a 200 dpi printer and 2.5 mil for a 400 dpi printer. For the 4X30 printers, a dot is 3.3 mil.

**Human-Readable Field, Create or Edit**

**Purpose:** Edits or creates a human-readable field.

**Syntax:** `Hn [ , name]`

**Printers:**

Printer	Default	Values for n	Notes
All	n = 0	0 - 199	The ,name parameter is an optional field. You can use eight ASCII characters (not counting the semicolon) and cannot start with a number.

**Notes:** The parameters for the default field are listed in the next table.

**Parameters for the Default Field**

Parameter	Syntax	Default
Field origin	o	0,0
Field direction	f	0 degrees
Character rotation	r	0 degrees
Font	c	7 x 9 standard
Height magnification	h	2
Width magnification	w	2
Pitch	g	Disabled
Point	k	Disabled
Border	b	Disabled
Data origin	d	Print mode
Data length		30

## Intercharacter Space for UDF, Define

**Purpose:** Defines the amount of space added to the default intercharacter gap length for a bitmap font. The number of dots you select for  $n$  define the intercharacter gap length.

**Syntax:**  $zn$

**Printers:**

Printer	Default	Values for $n$	Notes
3240	$n = 2$	0 - 199	The printer ignores this command if you use it with the font character width command ( $Zn$ ).
3400	$n = 2$	0 - 199	The printer ignores this command if you use it with the font character width command ( $Zn$ ).
3440	$n = 2$	0 - 199	The printer ignores this command if you use it with the font character width command ( $Zn$ ).
3600	$n = 2$	0 - 199	The printer ignores this command if you use it with the font character width command ( $Zn$ ).
4100	$n = 2$	0 - 199	The printer ignores this command if you use it with the font character width command ( $Zn$ ).
4400	$n = 2$	0 - 199	The printer ignores this command if you use it with the font character width command ( $Zn$ ).
44X0	$n = 2$	0 - 199	The printer ignores this command if you use it with the font character width command ( $Zn$ ).
4X30	$n = 2$	0 - 199	The printer ignores this command if you use it with the font character width command ( $Zn$ ).
7421	$n = 2$	0 - 199	The printer ignores this command if you use it with the font character width command ( $Zn$ ).
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	$n = 2$	0 - 199	The printer ignores this command if you use it with the font character width command ( $Zn$ ).

**Notes:** The printer generates an error code (52) for invalid lengths.

The unit for  $n$  is in number of dots per pixels. In Advanced Mode, a dot is 5 mil for a 200 dpi printer and 2.5 mil for a 400 dpi printer. For the 4X30 printers, a dot is 3.3 mil.

## Interpretive Field, Edit

**Purpose:** Edits an interpretive field.

**Syntax:**  $I n$

**Printers:**

Printer	Default	Values for n	Notes
All	n = 0	0 - 199	n is the field ID number of the bar code field to be interpreted.

**Notes:** You cannot create interpretive fields with this command; you can only create or delete them when enabling the interpretive of the corresponding bar code field. The parameters for the default field are listed in the next table.

### Parameters for the Default Field

Parameter	Syntax	Default
Field origin	o	2 dots below bar code, left justified
Field direction	f	0 degrees
Character rotation	r	0 degrees
Font	c	7 x 9 standard
Height magnification	h	2
Width magnification	w	2
Pitch	g	Disabled
Point	k	Disabled
Border	b	Disabled
Data origin	d	Print mode
Data length		30

Each interpretive field is counted as an individual field in the maximum number of 200 fields (0 – 199).

## Interpretive Field, Enable or Disable

**Purpose:** Determines if the interpretive field of the current bar code field prints.

**Syntax:** *in*

**Printers:**

Printer	Default	Values for n
All	n = 0	0 = Disable 1 = Enable with start and stop characters 2 = Enable without start or stop characters

**Notes:** When you enable the interpretive field, the human-readable information in the default font (font 0, 7 x 9 standard) prints 2 dots below the bar code field and is left justified.

Use the I command to edit an interpretive field.

## Length of Line or Box Field, Define

**Purpose:** Defines the length of a line or box. You define the length of a line or box field in the number of dots.

**Syntax:** *ln*

**Printers:**

Printer	Default	Values for n
All	n = 100	1 to 9999

**Notes:** In Advanced Mode, a dot is 5 mil for a 200 dpi printer and 2.5 mil for a 400 dpi printer. For the 4X30 printers, a dot is 3.3 mil.

## Line Field, Create or Edit

**Purpose:** Accesses or creates a line field.

**Syntax:** `Ln [, name]`

**Printers:**

Printer	Default	Values for n	Notes
All	n = 0	0 to 199	The ,name parameter is an optional field. The field can be up to eight ASCII characters.

**Notes:** The parameters for the default field are listed in the next table.

### Parameters for the Default Field

Parameter	Syntax	Default
Field origin	o	0,0
Field direction	f	0 degrees
Line length	l	100
Line width	w	1

## Outline Font, Clear or Create

**Purpose:** Clears or creates an outline font or graphic.

**Syntax:** `Jn [, name] [, type] [, size]`

where:

*n* is the font or graphic ID.

*,name* is a string of up to eight ASCII characters (not counting the semicolon) that provides a name for the font or graphic.

*,type* is the type of the font.

*,size* defines the size of a TrueType font and is only needed for double-byte fonts that exceed 512K bytes.

**Outline Font, Clear or Create (continued)****Printers:**

Printer	Values for n	Values for ,type	Notes
3240	3 to 6, 8 to 19	0 = Speedo font	
3400A 3400B	3 to 6, 8 to 19	0 = Speedo font	
3400C	3 to 6, 8 to 19	0 = Speedo font (default) 2 = Double-byte bitmap font	
3400e	3 to 6, 8 to 19	0 = Speedo font (default) 1 = TrueType font 2 = Double-byte bitmap font	
3440	3 to 6, 8 to 19	0 = Speedo font (default) 1 = TrueType font 2 = Double-byte bitmap font	
3600	3 to 6, 8 to 19	0 = Speedo font	
4100	N/A	N/A	This command is only available on the 4100 with the addition of expanded RAM.
4400	3 to 6, 8 to 19	0 = Speedo font	
44X0	3 to 6, 8 to 19	0 = Speedo font (default) 1 = TrueType font 2 = Double-byte bitmap font	
4X30	3 to 6, 8 to 19	0 = Speedo font (default)	
7421	3 to 6, 8 to 19	0 = Speedo font (default) 2 = Double-byte bitmap font	
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	3 to 6, 8 to 19	1 = TrueType font	

**Notes:** If you have already defined font set n, the printer erases all previous characters in the font.

## Outline Font, Download

**Purpose:** Downloads outline font descriptions.

**Syntax:** `jnn...nn`

where *n* is the information that describes all characters within the font.

You must send the font information to the printer as a string of ASCII characters in hexadecimal form. The printer expects two hex digit bytes for every 8-bit byte of information. Data must be ASCII characters, ranging from 0 to 9 and A to F. All characters are loaded at once, not individually as with bitmap fonts. The description for the whole font can be thousands of characters long; however, the maximum message length is only 255. Therefore, the font description may have to be split between successive `j` commands.

**Notes:** The printer stores the incoming font description in the font you select with the `J` command.

See Chapter 2 for more information about downloading fonts.

## Page, Create or Edit

**Purpose:** Edits or creates a page.

**Syntax:** *Sn*

where *n* is the numeric page ID.

**Printers:**

Printer	Default	Values for <i>n</i>	Notes
All	N/A	1 to 9	You cannot edit the default page (page 0).

**Notes:** The printer generates an error code (26) if a page number is out of range.

The following example illustrates the Page, Create or Edit command:

```
<STX><ESC>C<ETX>
<STX><ESC>P<ETX>
<STX>E1;F1;<ETX>
<STX>H0;o1000,100;f3;b10;c0;h3;w2;d0,35<ETX>
<STX>H1;o300,250;c0;f3;h3;w3;<ETX>
<STX>B2;o250,100;c0;f3;h200;w2;i1;<ETX>
<STX>W3;o25,50;l300;h600;w5;<ETX>
<STX>R<ETX>
<STX><ESC>P<ETX>
<STX>E2;F2;<ETX>
<STX>H0;o800,250;c0;f3;h3;w3;<ETX>
<STX>B1;o750,100;c0;f3;h200;w2;i1;<ETX>
<STX>W2;o525,50;l300;h600;w5;<ETX>
<STX>R<ETX>
<STX><ESC>P<ETX>
<STX>S1;Ma,1;O0,0;Mb,2;O0,0<ETX>
<STX>R<ETX>
<STX><ESC>G1<CAN><ETX>
<STX><ESC>Ea<ETX>
<STX>Example using the page command<CR><ETX>
<STX>Format 1<CR><ETX>
<STX>Format1<STX>
<STX><ESC>Eb<ETX>
<STX>Format 2<CR><ETX>
<STX>Format2<STX>
<STX><US>1<ETX>
<STX><RS>1<ETX>
<STX><ETB><ETX>
<STX><ESC>G0<ETX>
```

## Page, Delete

**Purpose:** Deletes a page.

**Syntax:** *sn*

where *n* is the numeric page ID.

**Printers:**

Printer	Default	Values for n	Notes
All	N/A	1 to 9	You cannot edit the default page (page 0).

## Pitch Size, Set

**Purpose:** Sets the pitch size that defines the size of the characters in human-readable fields. You can only use this command in Advanced mode. When you use the pitch size command, you disable the height and width magnification and point.

**Syntax:** *gn*

**Printers:**

Printer	Default	Values for n	Notes
All except the EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 12	1 to 50	You can use this command for both bitmap and outline fonts. Pitch is characters per line. The higher the pitch, the smaller the characters.

**Notes:** Use the pitch size command to scale outline fonts smoothly.

## Point Size, Set

**Purpose:** Sets the point size that defines the size of the characters in human-readable fields. You can only use this command in Advanced mode.

**Syntax:** `k.n`

**Printers:**

Printer	Default	Values for n	Notes
3240	n = 12	4 - 180	This command works most effectively on fonts c25, c26, and c27.
3400	n = 12	4 - 288	This command works most effectively on outline fonts.
3400e	n = 12	200 dpi: 3 - 288  400 dpi: 3 - 255	This command works most effectively on outline fonts.
3440	n = 12	3 - 255	This command works most effectively on fonts c25, c26, and c27.
3600	n = 12	4 - 288	This command works most effectively on font c25.
4100	n = 12	4 - 212	This command works most effectively on fonts c20, c21, and c22.
4400	n = 12	4 - 212	This command works most effectively on fonts c20, c21, c22, and c25.
44X0	n = 12	4420: 3 - 288  4440: 3 - 255	This command works most effectively on outline fonts.
4X30	n = 12	4 - 212	This command works most effectively on fonts c20, c21, c22, and c25.
7421	n = 12	3 - 288	This command works most effectively on outline fonts.
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 12	4 - 288	This command works most effectively on outline fonts.

**Notes:** A point size equals 1/72 inch. A higher point size means larger characters.

## Print Line Dot Count Limit, Set

**Syntax:** `vn`

**Notes:** This is a null command and the printer ignores it.

## Program Mode, Exit

**Purpose:** Instructs the printer to exit Program mode and enter Print mode. It saves any format or page currently being edited.

**Syntax:** R

## User-Defined Character, Clear or Create

**Purpose:** Clears or creates a graphic bitmap.

**Syntax:** Gn [, name]

**Printers:**

Printer	Default	Values for n	Notes
All	N/A	0 to 99	The ,name parameter is an optional field of up to eight ASCII characters (not counting the semicolon) and cannot start with a number.

**Notes:** If you have already defined graphic *n*, the printer erases it and redefines it.

## User-Defined Character Field, Create or Edit

**Purpose:** Edits or creates a graphic field.

**Syntax:** Un [, name]

**Printers:**

Printer	Default	Values for n	Notes
All	n = 0	0 to 199	The ,name parameter is an optional field of up to eight ASCII characters (not counting the semicolon) and cannot start with a number.

**Notes:** The parameters for the default field are listed in the next table.

### Parameters for the Default Field

Parameter	Syntax	Default
Field origin	o	0,0
Field direction	f	0 degrees
Character rotation	r	0 degrees
Height magnification	h	1
Width magnification	w	1

## User-Defined Font Character, Create

**Purpose:** Specifies which font character you will define next.

**Syntax:**  $\tau n$

**Printers:**

Printer	Default	Values for n	Notes
3240	N/A	0 - 255	n is the decimal representation of the ASCII character. The printer erases existing characters.
3400	N/A	0 - 255	n is the decimal representation of the ASCII character. The printer erases existing characters.
3440	N/A	0 - 255	n is the decimal representation of the ASCII character. The printer erases existing characters.
3600	N/A	0 - 255	n is the decimal representation of the ASCII character. The printer erases existing characters.
4100	N/A	0 - 255	n is the decimal representation of the ASCII character. The printer erases existing characters.
4400	N/A	0 - 255	n is the decimal representation of the ASCII character. The printer erases existing characters.
44X0	N/A	0 - 255	n is the decimal representation of the ASCII character. The printer erases existing characters.
4X30	N/A	0 - 255	n is the decimal representation of the ASCII character. The printer erases existing characters.
7421	N/A	0 - 255	n is the decimal representation of the ASCII character. The printer erases existing characters.
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	N/A	0 - 255	n is the decimal representation of the ASCII character. The printer erases existing characters.

## Width of Line, Box, Bar, or Character, Define

**Purpose:** Defines the width magnification of a line, box, bar code, or character. You define the width of line, box, or bar code fields by the number of dots that you specify for *n*. For human-readable fields, graphics and the POSTNET symbology, *n* is the magnification of the character width.

**Syntax:** *wn*

**Printers:**

Printer	Default	Values for n
3240	n = 1	Line, box, bar code fields and graphics
	n = 2	Human-readable fields and POSTNET
3400A 3400B	n = 1	Line, box, bar code fields and graphics
	n = 2	Human-readable fields and POSTNET
3400C 3400D	n = 1	Line, box, bar code fields and graphics
	n = 2	Human-readable fields and POSTNET
3400e	n = 1	Line, box, bar code fields and graphics
	n = 2	Human-readable fields and POSTNET
3440	n = 1	Line, box, bar code fields and graphics
	n = 2	Human-readable fields and POSTNET
3600	n = 1	Line, box, bar code fields and graphics
	n = 2	Human-readable fields and POSTNET
4100	n = 1	Line, box, bar code fields and graphics
	n = 2	Human-readable fields and POSTNET

**Width of Line, Box, Bar, or Character, Define (continued)**

Printer	Default	Values for n
4400	n = 1	Line, box, bar code fields and graphics Line and box fields: 1 – 9999 Bar code fields: 1 – 9999
	n = 2	Human-readable fields and POSTNET Graphics: 1 – 250 HR fields, POSTNET: 1 – 250
44X0	n = 1	Line, box, bar code fields and graphics Line and box fields: 1 – 9999 Bar code fields: 1 – 99
	n = 2	Human-readable fields and POSTNET Graphics: 1 – 999 HR fields, POSTNET: 1 – 999
4X30	n = 1	Line, box, bar code fields and graphics Line and box fields: 1 – 9999 Bar code fields: 1 – 9999
	n = 2	Human-readable fields and POSTNET Graphics: 1 – 250 HR fields, POSTNET: 1 – 250
7421	n = 1	Line, box, bar code fields and graphics Line and box fields: 1 – 9999 Bar code fields: 1 – 99
	n = 2	Human-readable fields and POSTNET Graphics: 1 – 999 HR fields, POSTNET: 1 – 999
EasyCoder F4, PF2i, PF4i, PM4i, PX4i, PX6i	n = 1	Line, box, bar code fields and graphics Line and box fields: 1 – 9999 Bar code fields: 1 – 99
	n = 2	Human-readable fields and POSTNET Graphics: 1 – 999 HR fields, POSTNET: 1 – 999

**Notes:** In Advanced Mode, a dot is 5 mil for a 200 dpi printer and 2.5 mil for a 400 dpi printer. For the 4x30 printers, a dot is 3.3 mil.

## Test and Service Commands

You can use Test and Service commands to query the printer for hardware diagnostic information. Test and Service commands are effective when the printer is in Test and Service mode. You can switch the printer to Test and Service mode with this command:

```
<ESC>T
```

For help downloading Test and Service commands to the printer, see “Sending IPL Commands to the Printer” in Chapter 1.



**Note:** All commands in Test and Service mode end with the command terminator (;), except the last command in a message.

## 12 Volt Supply Value, Transmit

**Purpose:** Transmit the 12 volt supply A/D output back to the host. The range of the value is 00 to 255.

**Syntax:** U

**Printer:** 4400

## Ambient Temperature, Transmit

**Purpose:** Transmits the ambient temperature sensor A/D output back to the host. The value ranges from 00 to 255.

**Syntax:** A

**Printer:** 4400

## Command Terminator

**Purpose:** All commands in Test and Service mode must end with the command terminator except for the last command in a message.

**Syntax:** ;

## Dark Adjust

**Purpose:** This command changes the darkness of the print on your labels. It is for fine-tuning only.

**Syntax:** K

**Printers:** 3440

## Factory Defaults, Reset

**Purpose:** Sets the printer configuration to the factory defaults. When you exit Test and Service mode after sending this command, the printer performs a warm boot (it resets).

**Syntax:** D

Use this example to reset the factory defaults:

```
<STX><ESC>T;D;R;<ETX>
```

## Formats, Print

**Purpose:** Prints all stored formats.

**Syntax:** f

## Hardware Configuration Label, Print

**Purpose:** Prints a label that provides information about the printer's hardware configuration.

**Syntax:** h

## Label Path Open Sensor Value, Transmit

**Purpose:** Transmits the paper path open switch value back to the host. A value of 0 indicates the paper path is open, and a value of 1 indicates it is closed. On the EasyCoder F4, PF2i, PF4i and PM4i printers, a value of 1 indicates the paper path is open, and a value of 0 indicates it is closed.

**Syntax:** L

**Printers:**

Printer	Notes
3400A 3400B	This printer ignores this command.
3600	This printer ignores this command.

## Label Taken Sensor Value, Transmit

**Purpose:** Transmits the label taken sensor A/D output back to the host. The value can range from 00 to 255. On the EasyCoder F4, PF2i, PF4i and PM4i printers, a value of 0 indicates the label is removed, and a value of 1 indicates the label is at the strip pin.

**Syntax:** T

## Pages, Print

**Purpose:** Prints the pages stored on the printer.

**Syntax:** p

**Pitch Label, Print**

**Purpose:** Prints the pitch label.

**Syntax:** C

**Print Quality Label, Print**

**Purpose:** Prints the print quality program and model number label.

**Syntax:** Q

**Printhead Resistance Test, Begin**

**Purpose:** Starts the printhead resistance test. The printer will respond with the ASCII character string “pass” or “fail.”

**Syntax:** B

**Printer:** 4400

**Printhead Resistance Values, Transmit**

**Purpose:** Transmits the average, maximum, and minimum printhead dot resistance value back to the host. Each value is a numeric data string separated by a comma.

**Syntax:** S

**Printer:** 4400

**Printhead Temperature Sensor Value, Transmit**

**Purpose:** This command transmits the printhead thermistor A/D output back to the host. The range of the value is 00 to 255.

**Syntax:** P

**Printhead Volt Supply Value, Transmit**

**Purpose:** Transmits the printhead volt supply A/D output back to the host. The range of the value is 00 to 255.

**Syntax:** V

**Printer:** 4400

## Reflective Sensor Value, Transmit

**Purpose:** Transmits the label mark reflective sensor A/D output back to the host. The value ranges from 00 to 255. The EasyCoder F4, PF2i, PF4i and PM4i will not respond if the paper is moving. For these printers, the values are 0 (label) or 1 (mark).

**Syntax:** M

## Software Configuration Label, Print

**Purpose:** Prints a label providing software configuration information.

**Syntax:** s

## Test and Service Mode, Exit

**Purpose:** Causes the printer to exit Test and Service mode.

**Syntax:** R

## Transmissive Sensor Value, Transmit

**Purpose:** Transmits the label gap transmissive sensor A/D output back to the host. The value ranges from 00 to 255. The EasyCoder F4, PF2i, PF4i and PM4i will not respond if the paper is moving. For these printers, values are 0 (gap) or 1 (label).

**Syntax:** G

## User-Defined Characters (UDC) and Graphics, Print

**Purpose:** Prints the user-defined characters and graphics stored on the printer.

**Syntax:** g

## User-Defined Fonts, Print

**Purpose:** Prints the user-defined fonts stored on the printer.

**Syntax:** t



# **A Full ASCII Table**

This appendix contains the full ASCII chart and describes each ASCII control character.

## Full ASCII Table

This table lists the ASCII characters and their binary, hexadecimal, and Code 39 equivalents.

Binary <sup>0</sup>	Hex <sup>1</sup>	Decimal	Code 39	ASCII <sup>2</sup>	Binary <sup>0</sup>	Hex <sup>1</sup>	Decimal	Code 39	ASCII <sup>2</sup>
00000000	00	00	%U	NUL	00100011	23	35	/C	#
00000001	01	01	\$A	SOH	00100100	24	36	/D	\$
00000010	02	02	\$B	STX	00100101	25	37	/E	%
00000011	03	03	\$C	ETX	00100110	26	38	/F	&
00000100	04	04	\$D	EOT	00100111	27	39	/G	'
00000101	05	05	\$E	ENQ	00101000	28	40	/H	(
00000110	06	06	\$F	ACK	00101001	29	41	/I	)
00000111	07	07	\$G	BEL	00101010	2A	42	/J	*
00001000	08	08	\$H	BS	00101011	2B	43	/K	+
00001001	09	09	\$I	HT	00101100	2C	44	/L	,
00001010	0A	10	\$J	LF	00101101	2D	45	/M	-
00001011	0B	11	\$K	VT	00101110	2E	46	/N	.
00001100	0C	12	\$L	FF	00101111	2F	47	/O	/
00001101	0D	13	\$M	CR	00110000	30	48	/P <sup>4</sup>	0
00001110	0E	14	\$N	SO	00110001	31	49	/Q	1
00001111	0F	15	\$O	SI	00110010	32	50	/R	2
00010000	10	16	\$P	DLE	00110011	33	51	/S	3
00010001	11	17	\$Q	DC1	00110100	34	52	/T	4
00010010	12	18	\$R	DC2	00110101	35	53	/U	5
00010011	13	19	\$S	DC3	00110110	36	54	/V	6
00010100	14	20	\$T	DC4	00110111	37	55	/W	7
00010101	15	21	\$U	NAK	00111000	38	56	/X	8
00010110	16	22	\$V	SYN	00111001	39	57	/Y	9
00010111	17	23	\$W	ETB	00111010	3A	58	/Z	:
00011000	18	24	\$X	CAN	00111011	3B	59	%F	;
00011001	19	25	\$Y	EM	00111100	3C	60	%G	<
00011010	1A	26	\$Z	SUB	00111101	3D	61	%H	=
00011011	1B	27	%A	ESC	00111110	3E	62	%I	>
00011100	1C	28	%B	FS	00111111	3F	63	%J	?
00011101	1D	29	%C	GS	01000000	40	64	%V	@
00011110	1E	30	%D	RS	01000001	41	65	A	A
00011111	1F	31	%E	US	01000010	42	66	B	B
00100000	20	32	SP	SP <sup>3</sup>	01000011	43	67	C	C
00100001	21	33	/A	!	01000100	44	68	D	D
00100010	22	34	/B	"	01000101	45	69	E	E

## Full ASCII Table (continued)

Binary <sup>0</sup>	Hex <sup>1</sup>	Decimal	Code 39	ASCII <sup>2</sup>	Binary <sup>0</sup>	Hex <sup>1</sup>	Decimal	Code 39	ASCII <sup>2</sup>
01000110	46	70	F	F	01100011	63	99	+C	c
01000111	47	71	G	G	01100100	64	100	+D	d
01001000	48	72	H	H	01100101	65	101	+E	e
01001001	49	73	I	I	01100110	66	102	+F	f
01001010	4A	74	J	J	01100111	67	103	+G	g
01001011	4B	75	K	K	01101000	68	104	+H	h
01001100	4C	76	L	L	01101001	69	105	+I	i
01001101	4D	77	M	M	01101010	6A	106	+J	j
01001110	4E	78	N	N	01101011	6B	107	+K	k
01001111	4F	79	O	O	01101100	6C	108	+L	l
01010000	50	80	P	P	01101101	6D	109	+M	m
01010001	51	81	Q	Q	01101110	6E	110	+N	n
01010010	52	82	R	R	01101111	6F	111	+O	o
01010011	53	83	S	S	01110000	70	112	+P	p
01010100	54	84	T	T	01110001	71	113	+Q	q
01010101	55	85	U	U	01110010	72	114	+R	r
01010110	56	86	V	V	01110011	73	115	+S	s
01010111	57	87	W	W	01110100	74	116	+T	t
01011000	58	88	X	X	01110101	75	117	+U	u
01011001	59	89	Y	Y	01110110	76	118	+V	v
01011010	5A	90	Z	Z	01110111	77	119	+W	w
01011011	5B	91	%K	[	01111000	78	120	+X	x
01011100	5C	92	%L	\	01111001	79	121	+Y	y
01011101	5D	93	%M	]	01111010	7A	122	+Z	z
01011110	5E	94	%N	^	01111011	7B	123	%P	{
01011111	5F	95	%O	_	01111100	7C	124	%Q	
01100000	60	96	%W	`	01111101	7D	125	%R	}
01100001	61	97	+A	a	01111110	7E	126	%S	~
01100010	62	98	+B	b	01111111	7F	127	%T <sup>5</sup>	n <sup>6</sup>


**Notes:**

- 0 Bit positions are 76543210.
- 1 Hexadecimal value
- 2 ASCII character
- 3 SP is the SPACE character.
- 4 The Code 39 characters /P through /Y may be interchanged with the numbers 0 through 9.
- 5 May be interchanged with %X or %Y or %Z.
- 6 n is the DELETE character.

## Full ASCII Control Characters Table

This table describes the ASCII control characters.

Control Character	Definition	Control Character	Definition
NUL	Null, or all zeroes	DC1	Device Control 1 (XON)
SOH	Start of Heading	DC2	Device Control 2
STX	Start of Text	DC3	Device Control 3 (XOFF)
ETX	End of Text	DC4	Device Control
EOT	End of Transmission	NAK	Negative Acknowledge
ENQ	Enquiry	SYN	Synchronous Idle
ACK	Acknowledgment	ETB	End Transmission Block
BEL	Bell	CAN	Cancel
BS	Backspace	EM	End of Medium
HT	Horizontal Tab	SUB	Substitute
LF	Line Feed	ESC	Escape
VT	Vertical Tab	FS	File Separator
FF	Form Feed	GS	Group Separator
CR	Carriage Return	RS	Record Separator
SO	Shift Out	US	Unit Separator
SI	Shift In	SP	Space
DLE	Data Link Escape	DEL	Delete

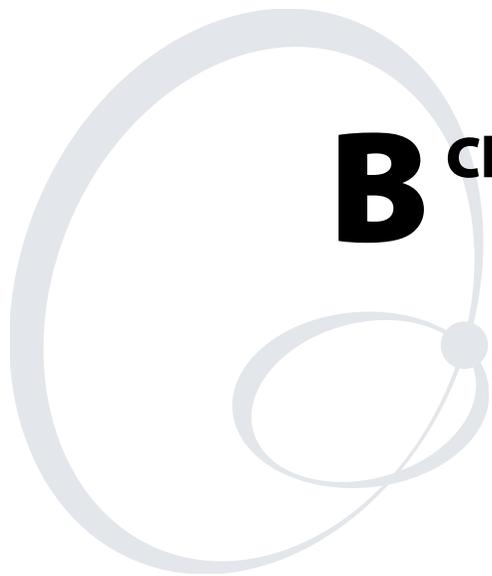

# **B** Character Sets

This appendix contains the extended character set substitution tables available on your printer.

## International Character Sets

The following tables show which hex codes to download for international characters not available in the U.S. character set. To use the tables, find the hex code for the U.S. character that corresponds with the character in your language.

### Advanced Character Table

If you are running your printer in Advanced mode, use this table to find the right hex codes for the international character sets.

	23	24	40	5B	5C	5D	5E	60	7B	7C	7D	7E
U.S. ASCII	#	\$	@	[	\	]	^	`	{		}	~
U.K. ASCII	£	\$	@	[	\	]	^	`	{		}	-
Germany	#	\$	§	Ä	Ö	Ü	^	`	ä	ö	ü	ß
France	£	\$	à	°	ç	§	^	`	é	ù	è	¨
Norway/Denmark	#	\$	@	Æ	Ø	Å	^	`	æ	ø	å	-
Sweden/Finland	#	□	É	Ä	Ö	Å	Ü	é	ä	ö	å	ü
Spain	£	\$	§	ı	Ñ	¿	^	`	°	ñ	ç	~
Switzerland	#	\$	à	°	ç	é	^	ù	ä	ö	ü	è
Italy	£	\$	§	°	ç	é	^	ù	à	ò	è	ì

### 8636/46 Character Table

This table shows the hex codes for the character sets that print if your printer is running under 86XX emulation mode.

	23	24	40	5B	5C	5D	5E	60	7B	7C	7D	7E
U.S. ASCII	#	\$	@	[	\	]	^	`	{		}	~
U.K. ASCII	£	\$	@	[	\	]	^	`	{		}	~
Germany	#	\$	§	Ä	Ö	Ü	^	`	ä	ö	ü	ß
France	£	\$	à	°	ç	§	^	`	é	ù	è	¨
Norway/Denmark	#	\$	@	Æ	Ø	Å	^	`	æ	ø	å	~
Sweden/Finland	#	□	É	Ä	Ö	Å	Ü	é	ä	ö	å	ü
Spain	P <sub>t</sub>	\$	@	ı	Ñ	¿	^	`	¨	ñ	ç	~
Switzerland	#	\$	à	°	ç	é	^	ù	ä	ö	ü	è
Italy	#	\$	§	°	ç	é	^	ù	à	ò	è	ì

## IBM Translation Character Table

This table shows the hex codes for the international character sets that print if your printer is running with Translation enabled.

	21	23	24	40	5B	5C	5D	5E	60	7B	7C	7D	7E
U.S. ASCII		#	\$	@	¢	\	!	¬	`	{		}	~
U.K. ASCII		#	£	@	\$	\	!	¬	`	{		}	-
Germany	!	#	\$	§	Ä	Ö	Ü	^	`	ä	ö	ü	ß
France	!	£	\$	à	°	ç	§	^	`	é	ù	è	..
Norway/Denmark	!	Æ	Å	Ø	#	\	□	^	`	æ	ø	å	ü
Sweden/Finland	!	Ä	Å	Ö	§	É	□	^	é	ä	ö	å	ü
Spain		Ñ	ƒ	@	[	\	]	¬	`	{	ñ	}	..
Switzerland	!	#	\$	à	°	ç	é	^	ù	ä	ö	ü	è
Italy	!	£	\$	§	°	ç	é	^	ù	à	ò	è	ì

## Code Page 850 Character Table

This table shows the character set that prints if your printer has Code Page 850 selected as the printer language.



**Note:** Some Intermec printers do not support Code Page 850. For more information, see the “Printer Language, Select” command in Chapter 7.

00	☺	☹	♥	♦	♣	♠	●	◻	◯	◉	♂	♀	🎵	🎶	☀	
10	▶	◀	↕	!!	¶	§	—	↕	↑	↓	→	←	↔	▲	▼	
20	!	¨	#	\$	%	&	'	(	)	•	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	-
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	⌂
80	Ç	ü	é	â	ä	à	å	ç	ê	ë	è	ï	î	ì	Ä	Å
90	É	æ	Æ	ô	ö	ò	û	ù	ÿ	Ö	Ü	ø	£	Ø	X	f
A0	á	í	ó	ú	ñ	Ñ	á	o	¿	®	¬	½	¼	¡	«	»
B0	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı
C0	Ł	ł	ł	ł	ł	ł	ł	ł	ł	ł	ł	ł	ł	ł	ł	ł
D0	’	Đ	Ê	Ë	È	€	Í	Î	Ï	Ĵ	Ŗ	▣	▣	▣	▣	▣
E0	Ó	β	Ô	Ò	õ	Õ	μ	þ	Ɔ	Ú	Û	Ù	ý	Ý	-	’
F0	-	±	=	¾	¶	§	÷	’	◊	••	•	1	3	2	■	

IPL019.eps

# Extended Character Sets

Each internal font in the printer has a different character set associated with it as shown in the following tables. The hex codes accompany each character. *You must set the serial port communication to 8 data bits to use the extended character sets.*

## Characters in Fonts

- c0 7x9 Standard
- c1 7x11 OCR
- c2 10x14 Standard
- c7 5x7 Standard

NL	SH	SX	EX	ET	EO	PK	BL	BS	HT	LF	UT	FF	CR	SO	SI
00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
DL	DI	DI	DI	DI	NR	SN	EB	CN	EM	SB	EC	FS	GS	RS	US
10	11	12	13	14	15	16	17	18	19	1A	1B	1C	1D	1E	1F
	!	"	#	\$	%	&	'	(	)	*	+	,	-	.	/
20	21	22	23	24	25	26	27	28	29	2A	2B	2C	2D	2E	2F
Ø	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
30	31	32	33	34	35	36	37	38	39	3A	3B	3C	3D	3E	3F
@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
40	41	42	43	44	45	46	47	48	49	4A	4B	4C	4D	4E	4F
P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	_
50	51	52	53	54	55	56	57	58	59	5A	5B	5C	5D	5E	5F
'	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
60	61	62	63	64	65	66	67	68	69	6A	6B	6C	6D	6E	6F
p	q	r	s	t	u	v	w	x	y	z	{		}	~	■
70	71	72	73	74	75	76	77	78	79	7A	7B	7C	7D	7E	7F
R	à	■	□	△	▽										
80	81	82	83	84	85	86	87	88	89	8A	8B	8C	8D	8E	8F
90	91	92	93	94	95	96	97	98	99	9A	9B	9C	9D	9E	9F
	i	É	Ö	ÿ		Š	·								
A0	A1	A2	A3	A4	A5	A6	A7	A8	A9	AA	AB	AC	AD	AE	AF
°															¿
B0	B1	B2	B3	B4	B5	B6	B7	B8	B9	BA	BB	BC	BD	BE	BF
				Ä	Å	Æ			É						
C0	C1	C2	C3	C4	C5	C6	C7	C8	C9	CA	CB	CC	CD	CE	CF
	Ñ					Ö		Ø				Ü			ß
D0	D1	D2	D3	D4	D5	D6	D7	D8	D9	DA	DB	DC	DD	DE	DF
à				ä	å	æ	ç	è	é		ë	ì			
E0	E1	E2	E3	E4	E5	E6	E7	E8	E9	EA	EB	EC	ED	EE	EF
	ñ	ò			ö		ø		ù			ü			
F0	F1	F2	F3	F4	F5	F6	F7	F8	F9	FA	FB	FC	FD	FE	FF

IPL020.eps

**Characters in Fonts**

- c20 8 point
- c21 12 point
- c22 20 point

00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
10	11	12	13	14	15	16	17	18	19	1A	1B	1C	1D	1E	1F
20	!	"	#	\$	%	&	'	(	)	*	+	,	-	.	/
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N
50	P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n
70	~	o													
80	€														
90															
A0	ı	ç	£	¤	¥	¦	§	¨	©	ª	«	¬	-	®	¯
B0	°	±	²	³	´	µ	¶	·	¸	¹	º	»	¼	½	¾
C0	À	Á	Â	Ã	Ä	Å	Æ	Ç	È	É	Ê	Ë	Ì	Í	Î
D0	Ð	Ñ	Ò	Ó	Ô	Õ	Ö	×	Ø	Ù	Ú	Û	Ü	Ý	Þ
E0	à	á	â	ã	ä	å	æ	ç	è	é	ê	ë	ì	í	î
F0	ð	ñ	ò	ó	ô	õ	ö	÷	ø	ù	ú	û	ü	ý	þ

IPL022.eps

**Characters in Font**

c23 OCR A

00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0E	
10	11	12	13	14	15	16	17	—	19	1A	1B	1C	1D	1E	1F	
20	!	"	#	\$	%	&	'	(	)	*	+	,	-	.	/	
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	Y
60	h	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	■
80																
90																
A0			f		Y											
B0																
C0				Ä	Å	Æ										
D0	Ï					ö		ø				Ü				
E0																
F0																

IPL024.eps

**Characters in Font**

c24 OCR B Size 2

00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
10	11	12	13	14	15	16	17	18	19	1A	1B	1C	1D	1E	1F
20	!	"	#	\$	%	&	'	(	)	*	+	,	-	.	/
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>
40	a	A	B	C	D	E	F	G	H	I	J	K	L	M	N
50	P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~
80															
90															
A0			£	ø	¥	!	§	"							
B0				'				'							
C0				À	Á	Æ									
D0	Ñ					Ö		Ø				Ü			ß
E0				ä	å	æ									
F0	ñ					ö		ø				ü			

IPL025.eps



# **C** Creating User-Defined Bitmap Graphics and Fonts

This appendix explains how to create user-defined bitmap fonts and graphics.

## Creating User-Defined Bitmap Graphics

You can create user-defined graphics (user-defined characters, or UDCs) in two ways: one bit per byte or six bits per byte. To use the UDC in a format, you must first define a graphic field using the IPL command `Un[,name]`. For help using the `Un[,name]` (User-Defined Character Field, Create or Edit) command, see Chapter 7, “IPL Command Reference.”

### Creating One Bit Per Byte User-Defined Graphics

One bit per byte is the standard graphic format used for downloading to an Intermecc 8636/8646 printer. You can download a one bit per byte graphic to the printer when it is in 86XX Emulation mode. A one bit per byte bitmap image is an arrangement of ones and zeros that looks similar to the following example.


#### Example of One-Bit Per Byte Bitmap Image

Bitmap Pattern	Row
000000010000000	Row 0
000000111000000	Row 1
000001011100000	Row 2
000010011110000	Row 3
000100011111000	Row 4
001000011111100	Row 5
010000011111110	Row 6
100000011111111	Row 7
010000010000010	Row 8
001000010000100	Row 9
000100010001000	Row 10
000010010010000	Row 11
000001010100000	Row 12
000000111000000	Row 13
000000010000000	Row 14


If you look closely at the bitmap pattern above, you can see that it is the outline of a diamond with a line down the middle and the upper right corner blacked in.

**To create your own graphic**

- 1 Draw your design on a piece of graph paper:

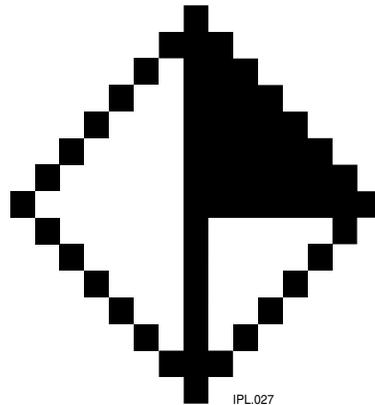

- 2 Convert each of the squares to either a one or a zero (the zeros are blanks and the ones are dots), and type it into a text file column by column. When you send the file to the printer, a character in the file represents either a dot or a blank when the image prints.

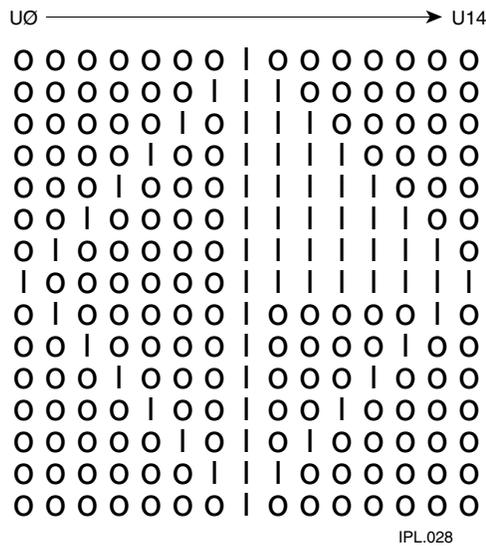

- 3 Read the pattern of ones and zeros down each column starting at the top left corner. The first column on the left becomes the data for the u0 command line, the second column becomes the data for the u1 command line, and so on. Type this into a text file:

```
U0,  0 0 0 0 0 0 0 | 0 0 0 0 0 0 0
U1,  0 0 0 0 0 0 | | | 0 0 0 0 0 0
U2,  0 0 0 0 0 | 0 | 0 | 0 0 0 0 0
U3,  0 0 0 0 | 0 0 | 0 0 | 0 0 0 0
U4,  0 0 0 | 0 0 0 | 0 0 0 | 0 0 0
U5,  0 0 | 0 0 0 0 | 0 0 0 0 | 0 0
U6,  0 | 0 0 0 0 0 | 0 0 0 0 0 | 0
U7,  | | | | | | | | 0 0 0 0 0 0 |
U8,  0 | | | | | | | | 0 0 0 0 0 | 0
U9,  0 0 | | | | | | | 0 0 0 0 | 0 0
U10, 0 0 0 | | | | | | 0 0 0 | 0 0 0
U11, 0 0 0 0 | | | | | 0 0 | 0 0 0 0
U12, 0 0 0 0 0 | | | | 0 | 0 0 0 0 0
U13, 0 0 0 0 0 0 | | | | 0 0 0 0 0 0
U14, 0 0 0 0 0 0 0 | 0 0 0 0 0 0 0
```

IPL.029

- 4 Ensure that the printer is in 86XX Emulation mode, and then add the protocol characters and define the bitmap as a user-defined graphic. The following example gives the graphic the number 3, the name “diamond,” the dimensions 15 rows by 15 columns, and adds the ASCII characters necessary for the printer to understand the graphic.

**Example of Defining a Bitmap as a User-Defined Graphic**

<b>Command Line</b>	<b>Description</b>
<STX><ESC>c<ETX>	Selects 86XX mode
<STX><ESC>P<ETX>	Enter Program mode
<STX>G3 , diamond ; x15 ; y15 ; <ETX>	Create UDC bitmap 3 (diamond)
<STX>u0 , 000000010000000 ; <ETX>	Define column 0
<STX>u1 , 000000101000000 ; <ETX>	Define column 1
<STX>u2 , 000001000100000 ; <ETX>	Define column 2
<STX>u3 , 000010000010000 ; <ETX>	Define column 3
<STX>u4 , 000100000001000 ; <ETX>	Define column 4
<STX>u5 , 001000000000100 ; <ETX>	Define column 5
<STX>u6 , 010000000000010 ; <ETX>	Define column 6
<STX>u7 , 111111111111111 ; <ETX>	Define column 7
<STX>u8 , 011111110000010 ; <ETX>	Define column 8
<STX>u9 , 001111110000100 ; <ETX>	Define column 9
<STX>u10 , 000111110001000 ; <ETX>	Define column 10
<STX>u11 , 000011110010000 ; <ETX>	Define column 11
<STX>u12 , 000001110100000 ; <ETX>	Define column 12
<STX>u13 , 000000111000000 ; <ETX>	Define column 13
<STX>u14 , 000000010000000 ; <ETX>	Define column 14
<STX>R ; <ETX>	Save and exit to Print mode

## Creating Six Bits Per Byte User-Defined Graphics

The six bits per byte format is more compact than one bit per byte. When you use six bits per byte, you can download large graphics more quickly. The printer must be in Advanced mode (2.5 mil or 5.0 mil) to use the six bits per byte format. The only difference between 2.5 mil and 5.0 mil mode is the size of the image when it prints.

The arrangement of the bits is very important in this format. Eight bits (0 through 7) compose every byte, but the printer only uses bits 0 through 5 to map the image.

You must always set bit 6 (the seventh bit) to 1 so you can download data to the printer. 7-bit hosts reserve bit 7 (the eighth bit) for parity and compatibility, so the range of characters for any given UDC is 40 hex (@) to 127 hex (■ delete character).

You can download graphics like the previous one bit per byte (diamond) bitmap example in a six bits per byte format by following the procedure below. Please refer to “Creating Six Bits Per Byte User-Defined Fonts” later in this appendix for an illustrated example of creating a six bits per byte format.

### To download a six bits per byte graphic

- 1 Draw the graphic on graph paper.
- 2 Change the graph paper drawing into a pattern of ones (square is filled in) and zeros (square is empty).
- 3 Starting from the top row, divide each vertical column into groups of six digits. (If the bottom group has less than six digits, add zeros to this group until it also has six.) The six digits in each group are the six bits that you download in a byte of data. The top digit of each group is bit 0, the bottom digit is bit 5.
- 4 Add a 1 in the bit 6 position, and then add a 0 in the bit 7 position so that each group now has eight digits. (Eight digits complete the byte.)
- 5 Starting with the first group of 8 bits in the first column, reverse the order of each group so that bit 0 is now last and bit 7 is first. Work from the top of each column to the bottom. Each eight-digit group is now a binary representation of an ASCII character.
- 6 Translate each eight-digit group into an ASCII character according to the full ASCII table in Appendix A.
- 7 Make sure the printer is in Advanced mode and not in 86XX Emulation mode. For help, see the 86XX command or the “Advanced Mode on Power-up” command in Chapter 7, “IPL Command Reference.”
- 8 Download the graphic so that each column is represented by a command string.


Here is the same format for the diamond shape graphic shown earlier, but this time it is in six bits per byte format with ASCII characters.

**Example of Six Bits Per Byte Graphic Image**

<b>Command</b>	<b>Definition</b>
<STX><ESC>C<ETX>	Selects Advanced mode
<STX><ESC>P<ETX>	Enter Program mode
<STX>G2 , diamond ; x15 ; y15 ; <ETX>	Create UDC bitmap 2 (diamond), 15 rows by 15 columns
<STX>u0 , @B@ ; <ETX>	Define column 0
<STX>u1 , @E@ ; <ETX>	Define column 1
<STX>u2 , `H@ ; <ETX>	Define column 2
<STX>u3 , PP@ ; <ETX>	Define column 3
<STX>u4 , H`@ ; <ETX>	Define column 4
<STX>u5 , D@A ; <ETX>	Define column 5
<STX>u6 , B@B ; <ETX>	Define column 6
<STX>u7 , <DEL><DEL>G ; <ETX>	Define column 7
<STX>u8 , ~CB ; <ETX>	Define column 8
<STX>u9 ,  CA ; <ETX>	Define column 9
<STX>u10 , xc@ ; <ETX>	Define column 10
<STX>u11 , pS@ ; <ETX>	Define column 11
<STX>u12 , `K@ ; <ETX>	Define column 12
<STX>u13 , @G@ ; <ETX>	Define column 13
<STX>u14 , @B@ ; <ETX>	Define column 14
<STX>R ; <ETX>	Save and exit to Print mode

After downloading the graphic to the printer, download the following format to see how the graphic prints. A label similar to the one following the format is printed.

<b>Command</b>	<b>Definition</b>
<STX><ESC>C<ETX>	Selects Advanced mode
<STX><ESC>P<ETX>	Enter Program mode
<STX>E4 ; F4<STX>	Create format 4
<STX>U1 ; o1050 , 650 ; c2 ; w20 ; h20 ; <ETX>	Create graphic field 1, origin of 1050,650, use graphic 2, and magnify it by a factor of 20
<STX>R ; <ETX>	Save and exit to Print mode
<STX><ESC>E4<ETX>	Select format 4
<STX><ETB><ETX>	Print

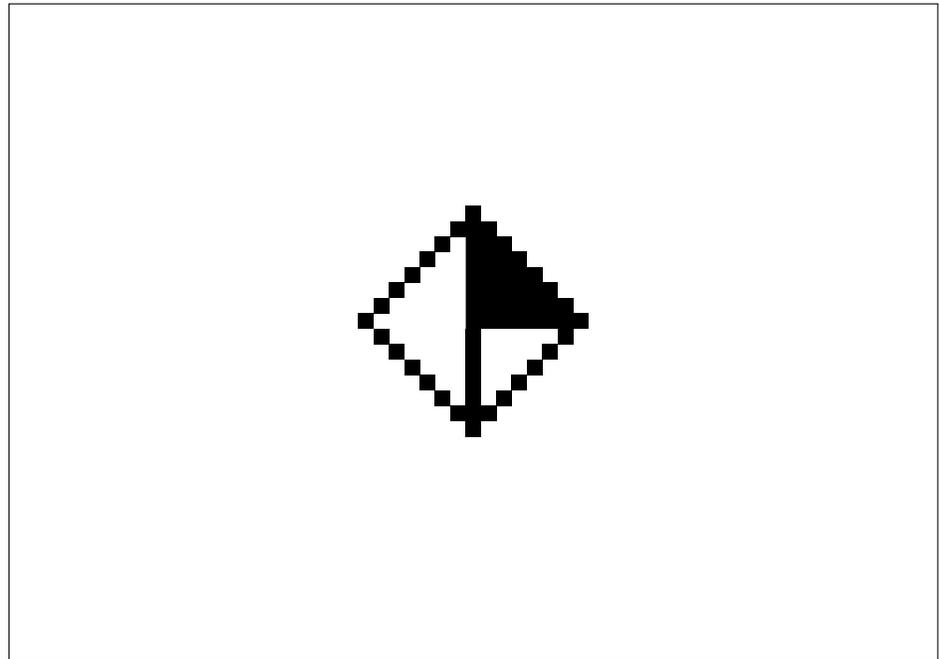

IPL.030

## Creating User-Defined Bitmap Fonts

There are two ways to create user-defined fonts: one bit per byte format (86XX Emulation mode) or six bits per byte format (Advanced mode).

### Creating One Bit Per Byte User-Defined Fonts

In 86XX Emulation mode, the printer receives downloaded fonts in the same manner as the 8636/8646 printers. You create characters column by column, from the top of the column downward. In 86XX Emulation mode, each byte of data represents one bit in the bitmap. The following example lists the commands and data required to define a font with the two characters “\$” (t36) and “i” (t105). See “Creating One Bit Per Byte User-Defined Graphics” earlier in this appendix for more information.

#### Example of User-Defined Font, One Bit Per Byte


Commands	Definition
<STX><ESC>c<ETX>	Selects 86XX Emulation mode
<STX><ESC>P<ETX>	Enter Program mode
<STX>T11, FONT11<ETX>	Create bitmap font 11
<STX>x10; y14; <ETX>	Define cell width and height
<STX>t36; Z12; <ETX>	Create character 36 (\$), character width is 12
<STX>u0, 001111110001100; <ETX>	Define column 0
<STX>u1, 011111111001110; <ETX>	Define column 1
<STX>u2, 01100011000110; <ETX>	Define column 2
<STX>u3, 01100011000110; <ETX>	Define column 3
<STX>u4, 11111111111111; <ETX>	Define column 4
<STX>u5, 11111111111111; <ETX>	Define column 5
<STX>u6, 01100011000110; <ETX>	Define column 6
<STX>u7, 01100011000110; <ETX>	Define column 7
<STX>u8, 01110011111110; <ETX>	Define column 8
<STX>u9, 00110001111100; <ETX>	Define column 9
<STX>t105; Z4; <ETX>	Create character 105 (i), character width is 4
<STX>u4, 00110011111111; <ETX>	Define column 4
<STX>u5, 00110011111111; <ETX>	Define column 5
<STX>R; <ETX>	Save and exit to Print mode

## Creating Six Bits Per Byte User-Defined Fonts

You can also create bitmaps in Advanced mode. In Advanced mode, each data byte represents six bits in the bitmap. See the following example to create a six bits per byte format like the previous one bit per byte (“\$” and “i”) bitmap font examples.

### To download a six bits per byte format

- 1 Draw the character on graph paper.
- 2 Change the graph paper drawing into a pattern of ones and zeros.

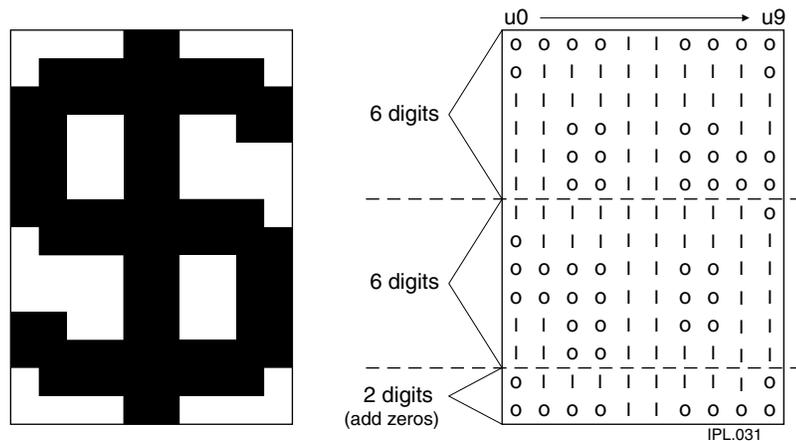

- 3 Starting with the first column, divide each vertical column into groups of six digits. (If the bottom group has less than six digits, add zeros to this group until it also has six.) The six digits in each group are the six bits that you download in a byte of data. The top digit of each group is bit 0, and the bottom digit is bit 5.

	u0	u1	u2	u3	u4	u5	u6	u7	u8	u9
bit 0	0	0	0	0	1	1	0	0	0	0
	0	1	1	1	1	1	1	1	1	1
	1	1	0	0	1	1	0	0	1	1
bit 5	1	1	0	0	1	1	0	0	0	0
bit 6	1	1	1	1	1	1	1	1	1	1
bit 7	0	0	0	0	0	0	0	0	0	0
bit 0	1	1	1	1	1	1	1	1	1	0
	0	0	0	0	1	1	0	0	1	1
	0	0	0	0	1	1	0	0	1	1
bit 5	1	1	0	0	1	1	0	0	0	0
bit 6	1	1	1	1	1	1	1	1	1	1
bit 7	0	0	0	0	0	0	0	0	0	0
bit 0	0	1	1	1	1	1	1	1	1	0
	0	0	0	0	1	1	0	0	0	0
	0	0	0	0	0	0	0	0	0	0
	0	0	0	0	0	0	0	0	0	0
bit 5	0	0	0	0	0	0	0	0	0	0
bit 6	1	1	1	1	1	1	1	1	1	1
bit 7	0	0	0	0	0	0	0	0	0	0

IPL.032

**Byte Mapping:** This illustration shows how to map a character in the six bits per byte format.

- 4 Add a 1 in the bit 6 position, and then add a 0 in the bit 7 position so that each group now has eight digits. Eight digits complete the byte.
- 5 Starting with the first group of eight bits in the first column (u0), reverse the order of each group so that bit 0 is now last and bit 7 is first. Work from the top of each column to the bottom. Each eight-digit group is now a binary representation of an ASCII character.



**Note:** In this illustration, each row now represents a column.

	bit 7	bit 0	bit 7	bit 0	bit 7	bit 0
u0	0	0	0	0	0	0
u1	0	0	0	0	0	0
u2	0	0	0	0	0	0
u3	0	0	0	0	0	0
u4	0	0	0	0	0	0
u5	0	0	0	0	0	0
u6	0	0	0	0	0	0
u7	0	0	0	0	0	0
u8	0	0	0	0	0	0
u9	0	0	0	0	0	0

IPL.033

- Translate each eight-digit group into an ASCII character according to the full ASCII table in Appendix A.

```

u0 = |q@
u1 = ~sA
u2 = FcA
u3 = FcA
u4 = <DEL><DEL>C
u5 = <DEL><DEL>C
u6 = FcA
u7 = FcA
u8 = N<DEL>A
u9 = L~@
    
```

- Make sure the printer is in Advanced mode and not in 86XX Emulation mode.
- Download the font so that you represent each column with a command string.

Here are the previously defined characters shown in a six bits per byte format with ASCII characters.

**Example of User-Defined Font, Six Bits Per Byte**

Commands	Definitions
<STX><ESC>C<ETX>	Selects Advanced mode
<ESC>P; <ETX>	Enters Program mode
<STX>T11, FONT11<ETX>	Create bitmap font 11
<STX>x10; y14; <ETX>	Define cell width (10) and cell height (14)
<STX>t36; Z12; <ETX>	Create ASCII character 36 (\$), define character width as 12
<STX>u0,  q@; <ETX>	Defines column 0
<STX>u1, ~sA; <ETX>	Defines column 1
<STX>u2, FcA; <ETX>	Defines column 2
<STX>u3, FcA; <ETX>	Defines column 3
<STX>u4, <DEL><DEL>C; <ETX>	Defines column 4
<STX>u5, <DEL><DEL>C; <ETX>	Defines column 5
<STX>u6, FcA; <ETX>	Defines column 6
<STX>u7, FcA; <ETX>	Defines column 7
<STX>u8, N<DEL>A; <ETX>	Defines column 8
<STX>u9, L~@; <ETX>	Defines column 9
<STX>t105; Z4; <ETX>	Creates ASCII character 105 (i), define character width as 4
<STX>u0, L<DEL>C; <ETX>	Defines column 0
<STX>u1, L<DEL>C; <ETX>	Defines column 1
<STX>R; <ETX>	Saves and exits to Print mode



# **D** User-Defined Interface Tables

This appendix contains the user-defined interface tables, which you may need when programming with IPL. These tables show commands in the order that you must download them when you replace the User-Defined Command/Protocol characters. A table is shown for each type of command specified by a value for “t”.

## Print Commands (t = 0)

This list shows the Print Mode commands in the order you must download them when you are replacing the command codes.

### *Print Commands (t = 0)*

<b>Default Print Command</b>	<b>Hex Value</b>	<b>Print Command Description</b>
NUL	00	Command Terminator 1
SOH	01	Set Preamble
EOT	04	Set Postamble
ENQ	05	Status Inquiry
ACK	06	Select First Data Entry Field
BEL	07	Transmit Error Code
BS	08	Warm Boot
LF	0A	Command Terminator 2
VT	0B	Status Dump
FF	0C	Form Feed
CR	0D	Select Next Data Entry Field
SO	0E	Label Cut Command
SI	0F	Go to Shift Command Table
DLE	10	Reset
SYN	16	Set Intercharacter Delay
ETB	17	Print
CAN	18	Clear All Data
EM	19	Abort Print Job
SUB	1A	Data Shift
ESC	1B	Go to Escape Command Table
FS	1C	Numeric Field Separator
GS	1D	Alphanumeric Field Separator
RS	1E	Set Quantity Count
US	1F	Set Batch Count
DEL	7F	Clear Data From Current Field

## Escape Print Commands (t = 1)

This table lists the <ESC> commands in the order you must download them.

### Escape Print Commands

Default Escape Command	Hex Value	Escape Command Description
SYN	16	Set Message Delay
(space)	20	Enter Start/Stop Character
C	43	Select Advanced Mode
D	44	Set Field Decrement
E	45	Select Format
F	46	Select Field
G	47	Select Page
H	48	Transmit Printhead Parameters
I	49	Set Field Increment
L	4C	Transmit Label and Gap Length
M	4D	Transmit Software Version Number
N	4E	Disable Increment/Decrement
O	4F	Transmit Options Selected
P	50	Enter Program Mode
Q	51	Transmit Quantity and Batch Count
T	54	Enter Test and Service Mode
Z	5A	Transmit User-Defined Command Tables
c	63	Select 86XX Emulation Mode
d	64	Enable Auto-Transmit 2
e	65	Enable Auto-Transmit 3
g	67	Select Direct Graphics Mode
j	6A	Enable Auto-Transmit 1
k	6B	Disable Auto-Transmit 1, 2, and 3
m	6D	Transmit Static RAM Usage
p	70	Transmit Configuration Parameters
u	75	Transmit User-Defined Characters
v	76	Transmit Font
x	78	Transmit Format
y	79	Transmit Page

## Shift Print Commands (t = 2)

This list shows the Shift commands in the order you must download them. You must precede these commands with the “Go to Shift Command Table” command (default value SI) listed in the table of Print Commands ( $t = 0$ ).

### Shift Print Commands (t = 2)

Default Shift Command	Hex Value	Shift Command Description
A	41	Control Panel Access
C	43	86XX or Advanced Mode on Power-Up
D	44	Set End-of-Print Skip Distance
F	46	Set Top of Form
H	48	Set Printhead Pressure
I	49	Set Number of Image Bands
L	4C	Set Maximum Label Length
N	4E	Define Amount of Storage
O	4F	Online or Offline on Power-Up
R	52	Enable or Disable Label Retract
S	53	Set Print Speed
T	54	Select Label Stock Type
U	55	Set Printhead Test Parameters
W	57	Set Label Width
Z	5A	Set Ribbon Save Zone
a	61	Audible Alarm
b	62	Increase Takeup Motor Torque
c	63	Enable or Disable Cutter
d	64	Set Dark Adjust
f	66	Adjust Label Rest Point
g	67	Select TTR or Direct Thermal
h	68	Select Printhead Loading Mode
i	69	IBM Language Translation
l	6C	Select Printer Language
p	70	Set Pin 11/20 Protocol
r	72	Set Label Retract Distance
t	74	Enable or Disable Self-Strip

## Status Responses and Auto-Transmit Commands (t = 3)

This list contains the status responses and auto-transmit commands in the order you must download them.

### Status Responses and Auto-Transmit Commands (t = 3)

Status Command	Hex Value	Status Description
GS	1D	Buffer Already Full
SO	0E	Printhead Test Fail
US	1F	Label Path Open
US	1F	Ribbon Fault
EM	19	No Label Stock
DC3	13	Buffer Now Full
BS	08	Takeup Reel Full
SI*	0F	Printhead Hot
FS	1C	Label at Strip Pin
DC1**	11	Skipping
DC1**	11	Printing
DC1**	11	Ready
DC1 Auto-Transmit 1**	11	Clear
FS Auto-Transmit 1	1C	Label at Strip Pin
BS Auto-Transmit 1	08	Takeup Reel Full
EM Auto-Transmit 1	19	No Label Stock
US Auto-Transmit 1	1F	Ribbon Fault
DC1 Auto-Transmit 2	11	Room in Buffer
HT Auto-Transmit 3	09	Imager Overrun
SOH Auto-Transmit 3	01	Print Job Complete and Buffer Empty
RS Auto-Transmit 3	1E	Insufficient RAM

\*Some older Intermec printers may not support this entry.

\*\*The status responses in the above table are for standard protocol. In XON/XOFF protocol, most of the status responses are the same; however, instead of DC1, the status response is DC2, and instead of DC2, the status response is DC4.

See your printer user's manual for more information about protocols and status responses.

## Protocol Commands (t = 4)

This list contains the protocol codes in the order you must download them.

### Protocol Commands (t = 4)

Command Characters	Hex Value	Command Description
GS	1D	SELECT IN
FS	1C	POLL IN
EOT	04	RES IN
ENQ	05	REQ IN
STX	02	SOM IN
ETX	03	EOM IN
ACK	06	AFF IN
NAK	15	NEG IN
DLE	10	DLE IN
DC1	11	XON IN
DC3	13	XOFF IN
GS	1D	SELECT OUT
FS	1C	POLL OUT
EOT	04	RES OUT
ENQ	05	REQ OUT
STX	02	SOM OUT
ETX	03	EOM OUT
ACK	06	AFF OUT
NAK	15	NEG OUT
DLE	10	DLE OUT
DC1	11	XON OUT
DC3	13	XOFF OUT
ENQ	05	Proto-Cmd 1
VT	0B	Proto-Cmd 2
20 (ms) (Range: 0 - 255)	14	Timeout on EOM ACK

## Communications Protocol Characters

This table shows the characters available for different protocols. Refer to the protocol you are using for your system.

### Communications Protocol Characters

Protocol Characters	Standard	XON/XOFF	Polling Mode D	Multi-Drop
Select In			GS	GS
Poll In			FS	FS
Reset In			EOT	EOT
Request for Acknowledgment In			ENQ	ENQ
Start of Message In	STX	STX	STX	STX
End of Message In	ETX	ETX	ETX	ETX
Acknowledgment In			ACK	ACK
Negative Acknowledgment In			NAK	NAK
Data Line Escape In	DLE	DLE	DLE	DLE
XON In		DC1		
XOFF In		DC3		
Select Out				GS
Poll Out				FS
Reset Out			EOT	EOT
Request for Acknowledgment Out			ENQ	ENQ
Start of Message Out			STX	STX
End of Message Out			ETX	ETX
Acknowledgment Out			ACK	ACK
Negative Acknowledgment Out	NAK		NAK	NAK
Data Line Escape Out	DLE	DLE	DLE	DLE
XON Out		DC1		
XOFF Out		DC3		
Status Enquiry In	ENQ	ENQ		
Status Dump In	VT	VT		
Timeout on EOM ACK			DC4	DC4





## **E** Using Direct Graphics Mode

This appendix explains how to use Direct Graphics mode, which can significantly reduce the amount of time needed to download and image a graphic.

## What Is Direct Graphics Mode?

You can significantly reduce the amount of time necessary to download and image a graphic by using Direct Graphics mode. Direct Graphics mode allows the printer to receive a compressed bitmap graphic and image it directly into the image bands without storing it in the printer.

Before you download the graphic, you must compress it into run-length encoded (RLE) data. The data compression greatly reduces the amount of data to download and the rasterized graphic requires minimal processing to image it into the image bands. You no longer need to store the graphic in Program mode and then set up a format in Print mode.

When you download a direct graphic to the printer, the printer stores the graphic in the image bands until you:

- clear the label data.
- set up another format.
- enter Program mode or Test and Service mode.

When printing a label with direct graphics, you must have enough dynamic RAM installed in your printer to contain the entire label. Because Intermec printers normally reuse image bands, you can print long labels with standard RAM; however, when you download direct graphics, the printer retains no information regarding the existence of the graphic in its image bands. Therefore, the printer cannot reuse those image bands when you download a direct graphic.

With standard dynamic RAM, you should be able to print almost any label up to 6 inches long. You may need to install expanded dynamic RAM for longer labels.

## What Is Run-Length Encoding?

Run-length encoding (RLE) is a method of compressing bitmap graphics. RLE compresses graphics that have repeated runs of white or black dots in a column, reducing the amount of time required to download the graphics to a printer.

RLE sends a series of commands that define each bitmap column of a graphic and takes advantage of a series of repeated dots within a column by encoding them as transition commands. Instead of sending the entire column of bitmap data, it sends commands telling the printer how many series of black and white dots to image.

If columns are identical, a command can instruct the printer to repeat the last column. RLE is ideal for bar code graphics or designs with simple patterns.

In cases where patterns do not exist, you can send uncompressed bitmap data to the printer. You can mix raw bitmap data and RLE commands to ensure the most efficient way to download a graphic.

The RLE file may contain five types of data, each of which is one byte long:

### Data Types in RLE Files

Type	Description	Byte Format, Range, and Data Represented
Immediate commands	<ul style="list-style-type: none"> <li>Recognized and executed as regular IPL commands or protocol commands</li> <li>Removed from compressed data</li> </ul>	Byte format (7-0): 000xxxx Range: 0-31 Data represented: N/A
Compression encodation commands	<ul style="list-style-type: none"> <li>Used as part of the compressed graphics file to change or set data modes, repeat lines, change the origin for the next lines of data, or end the compress graphics file and return to IPL command printing</li> </ul>	Byte format (7-0): 001xxxx Range: 32 - 63 Data represented: N/A
Low order data	<ul style="list-style-type: none"> <li>7 bits long and may be combined with high order data. 8<sup>th</sup> bit is always set to 1.</li> <li>Can represent up to 7 bits of data (0-127)</li> <li>Must be preceded by a command byte so the printer knows how to interpret them</li> </ul>	Byte format (7-0): 1xxxxxx Range: 128 - 255 Data represented: 0 - 127
High order data	<ul style="list-style-type: none"> <li>6 bits long and always combined with low order data. 7th bit is always set to 1 and 8th bit is always set to 0.</li> <li>When combined with low order data, can represent up to 13 bits of data (0-8191)</li> <li>Must be preceded by a command byte so the printer knows how to interpret them</li> <li>Printer ignores high order data followed by a command or more high order data</li> </ul>	Byte format (7-0): 01xxxxx Range: 64 - 127 Data represented: 0 - 63
Bitmap data	<ul style="list-style-type: none"> <li>Composed of uncompressed bytes (7 data bits per byte) that represent columns of your graphic. 8th bit is always set to 1.</li> </ul>	Byte format (7-0): 1xxxxxx Range: 128 - 255 Data represented: Raw data

## How Do I Send a Direct Graphic to the Printer?

Once you have compressed the graphic, use the following commands to send the RLE file to the printer.

### Direct Graphics Mode, Enter

**Purpose:** Instructs the printer to receive RLE compressed graphics data in nibblized format.

**Default:**  $m = 0$

**Syntax:** `<ESC>gm`

where  $m$  specifies the format of the data to follow.

$m = 0$       8 bits per byte.

$m = 1$       7 bits per byte of nibblized data.

When you select  $m = 0$ , the printer parses subsequent data streams as RLE commands. The printer still recognizes immediate IPL commands. Non-immediate commands are not parsed. The printer resumes normal IPL parsing when it receives an end of bitmap RLE command.

When you select  $m = 1$ , the printer receives the RLE compressed graphics data in nibblized format. The printer converts each pair of bytes from ASCII to their numerical equivalent and combines them to form the original byte. For example:

ASCII	Numerical	Original byte
1,B	0x1,0xB	0x1B

**Change Origin**

**Purpose:** Tells the printer the X and Y coordinates of the next RLE data column.

**Default:** 0,0

**Syntax:** 0x21 [*x*, *y*]

where *x* and *y* are the coordinates of the next data column. Values for *x* and *y* range from 0 to 8191.

The change origin command tells the printer where to place the graphic on the label. If you do not send the command, the printer uses the default setting of 0,0.

You can use the command to place different sections of the RLE graphic in different parts of the label.

**Notes:** It is not necessary to use this command for every column. Column-to-column transitions are automatic following the end of line command.

The default origin of any direct graphic (0,0) is in the lower left corner instead of in the upper left corner. The upper left corner is the label format origin.

**End of Bitmap**

**Purpose:** Marks the end of RLE encoded data.

**Syntax:** 0x28

**Notes:** The printer parses subsequent characters as IPL commands.

On the final column of the RLE encoded data, an end of line command does not need to precede the end of bitmap command.

**End of Line**

**Purpose:** Causes the printer to assign subsequent bitmap data to the next column.

**Syntax:** 0x22

**Notes:** The printer images the next data stream in the next column position, incrementing the X position. This command causes an action similar in function to a carriage return.

### Raw Bitmap Data Follows

**Purpose:** Indicates raw bitmap data bytes follow.

**Syntax:** `0x27 [data]`

**Notes:** The printer only uses the first 7 bits of the data byte. If you set a bit to 1, it prints black. The most significant bit prints farthest to the left. Data order runs from right to left, so the first dot in a column is the least significant bit of the first data byte.

### Repeat Last Line

**Purpose:** Causes the printer to copy the previously defined column *n* number of times.

**Syntax:** `0x24n`

Values for *n* range from 0 - 8191.

**Notes:** The printer automatically increments the X origin of each column. This command is only valid when preceded by a column of encoded, raw data or an end of line command.

### Transition Black

**Purpose:** Transition data follows. The first transition is black.

**Syntax:** `0x25 [data, data, ... data]`

where *data* specifies the number of black or white dots. Values for *data* can range from 0 - 8191.

**Notes:** Each transition data specifies the number of dots to draw (either black or white). Each data alternates black and white dot counts.

### Transition White

**Purpose:** Transition data follows. The first transition is white.


**Syntax:** `0x26 [data, data, ... data]`

Where *data* specifies the number of black or white dots. Values for *data* can range from 0 - 8191.

**Notes:** Each transition data specifies the number of dots to draw (either black or white). Each data alternates black and white dot counts.

## Using Direct Graphics Commands

This example consists of two parts: a graphic and a line. The origin of the direct graphic is defined the same as the origin of a normal graphic. In this example, the coordinates for the origin of the complex graphic are X0,Y450; however, once you enter Direct Graphics mode, your printer loads the information in the reverse Y direction. Each column of the graphic loads from the bottom to the top. Y coordinates now start at 0 from the bottom left corner and increase in size as the data loads. So, the printer starts loading data for the complex graphic at X0,Y450 and loads up to X0,Y425. Likewise, the data for the line starts loading at X19,Y450 and loads up to X19,Y0.

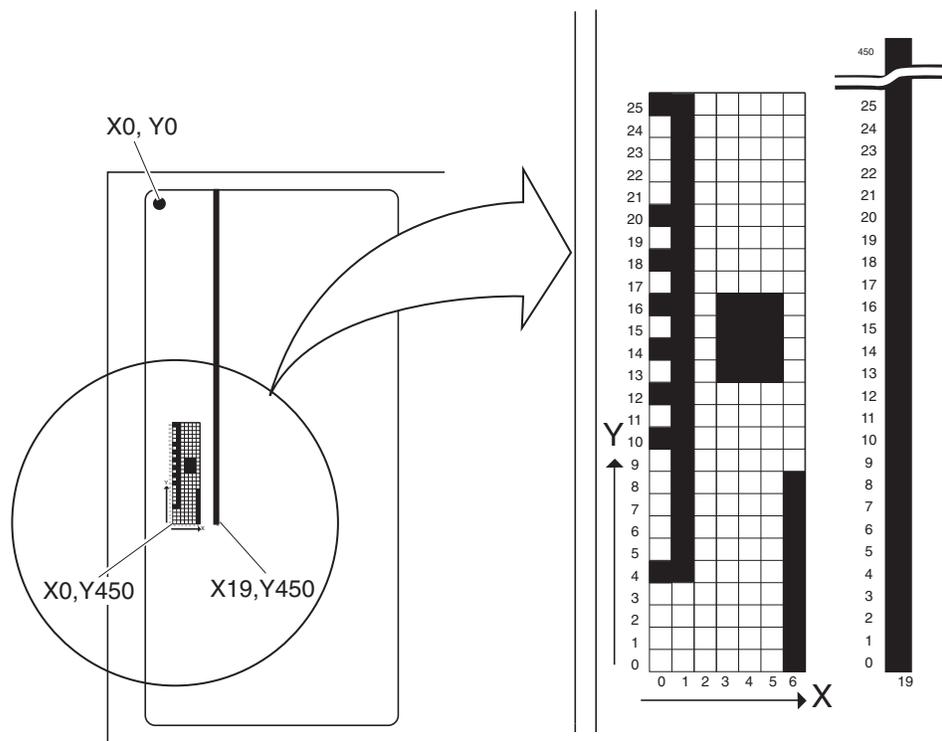

3440A.001

**Direct Graphics Commands:** This example shows how the printer loads information in Direct Graphics mode.

Here is a hex data file for the example above:

```

1B  67  30  21  80  43  C2  27  90  A8  D5
90  22  26  84  96  22  22  26  8C  84  22
24  82  25  88  22  21  93  43  C2  25  43
C2  28
    
```

The next table explains the hex data file in the example.

**Hex Data Commands in Example**

<b>Data</b>	<b>Command</b>	<b>Description</b>
1B 67 30	<ESC>g0	Enter Direct Graphics mode
21 80 43 C2	0x21 80 43 C2	Change origin 80 - 80 (LO) = 0x00 -> X0 43 - 40 (HI) = 0x03 C2 - 80 (LO) = 0x42 (0x03 * 0x80) + 0x42 = 1C2 -> Y450
27 90 A8 D5 90 22	0x27 90 A8 D5 90 0x22	Raw bitmap data follows, starts at Y0 90 - 80 (LO) = 0x10 -> 1 dot at Y4 A8 - 80 (LO) = 0x28 -> 2 dots at Y10 and Y12 D5 - 80 (LO) = 0x45 -> 3 dots at Y14, Y17, and Y20 90 - 80 (LO) = 0x10 -> 1 dot at Y25 End of line
26 84 96 22	0x26 84 96 0x22	Transition white 84 - 80 (LO) = 4 white 96 - 80 (LO) = 22 black End of line
22	0x22	End of line
26 8C 84 22	0x26 8D 84 0x22	Transition white 8D - 80 (LO) = 13 white 84 - 80 (LO) = 4 black End of line
24 82	0x24 82	Repeat last line 82 - 80 (LO) = 2 times
25 88 22	0x25 88 0x22	Transition black 89 - 80 (LO) = 9 black End of line
21 93 43 C2	0x21 93 43 C2	Change origin 93 - 80 (LO) = 0x13 -> X19 43 - 40 (HI) = 0x03 C2 - 80 (LO) = 0x42 (0x03 * 0x80) + 0x42 = 1C2 -> Y450
25 43 C2	0x25 43 C2	Transition black 43 - 40 (HI) = 0x03 C2 - 80 (LO) = 0x42 (0x03 * 0x80) + 0x42 = 1C2 -> Y450
28	0x28	End of bitmap



**Numbers**

12 volt supply value, transmit command, 80, 203

**A**

abort print job command, 80, 86

Advanced mode

on power up command, 119

select command, 80, 91

alphanumeric field separator command, 80, 92

ambient temperature, transmit command, 80, 203

amount of storage, define command, 80, 114

ASCII

control characters, creating with control codes, 4

table of character equivalents, 208

table of control characters, 210

text file of IPL commands, creating, 6

audible alarm, enable or disable command, 80, 114

auto-transmit

1, 2, 3, disable command, 80, 115

1, enable command, 80, 115

2, enable command, 80, 115

3, enable command, 80, 115

commands, 235

**B**

bar code

field

create or edit command, 80, 163

definition, 27

sizing, 37

select type command, 80, 141

Codabar, 143

Code 11, 144

Code 128, 144

Code 16K, 147

Code 2 of 5, 143

Code 39, 142

Code 49, 148

DataMatrix, 154

EAN.UCC Composite, 160

HIBC Code 128, 153

HIBC Code 39, 147

Interleaved 2 of 5, 143

JIS-ITF, 152

MaxiCode, 151

MicroPDF417, 156

PDF417, 148

POSTNET, 148

QR Code, 155

RSS, 157

UPC/EAN, 146

batch

count, set command, 80, 93

printing, optimizing with image bands, 56

bitmap

cell height for graphic or UDF, define command, 80, 164

cell width for graphic or UDF, define command, 80, 166

fonts

creating with IPL, 227

downloading, 10

user-defined font, clear or define command, 80, 167

border around human-readable text, define

command, 80, 167

box field

create or edit command, 80, 168

defining, 28

**C**

change origin command, 243

character

bitmap origin offset, define command, 80, 169

fields, 27

fonts, 27

rotation or bar code ratio, define command, 80, 170

sets

Code Page 850, 214

IBM translation, 213

international, 212

clear

all data command, 80, 93

data from current field command, 80, 93

Codabar, 143

Code 11, 144

Code 128, 144

Code 16K, 147

Code 2 of 5, 143

Code 39, 142

prefix character, define command, 80, 173

table of ASCII characters, 208

Code 49, 148

Code 93, 142

Code Page 850, character table, 214

code page, select, 17

codes, error, 46

command tables, load command, 80, 173

command terminator 1 command, 81, 93

command terminator 2 command, 81, 94

command terminator command, 81, 203

commands

how to find in manual, 63

identifying those supported by your printer, 80

immediate, 72

listed by name, 64

listed by syntax, 68

Print mode, 76

communication port configuration, set

command, 81, 116

- configuration commands
    - amount of storage, define, 114
    - audible alarm, enable or disable, 114
    - auto-transmit
      - 1, 2, 3, disable, 115
      - 1, enable, 115
      - 2, enable, 115
      - 3, enable, 115
    - communication port configuration, set, 116
    - control panel access permission, set, 117
    - cutter, enable or disable, 118
    - dark adjust, set, 118
    - Emulation or Advanced mode on power up, 119
    - end-of-print skip distance, set, 120
    - format, create or edit, 182
    - IBM language translation, enable or disable, 122
    - intercharacter delay, set, 122
    - interlabel ribbon save, enable or disable, 123
    - label
      - rest point, adjust, 123
      - retract distance, set, 124
      - retract, enable or disable, 124
      - stock type, select, 125
      - width, set, 125
    - maximum label length, set, 126
    - media
      - fault recovery mode, set, 127
      - sensitivity number, select, 127
    - message delay, set, 128
    - number of image bands, set, 129
    - online or offline on power up, 130
    - pin 11/20 protocol, set, 130
    - postamble, set, 131
    - preamble, set, 131
    - print speed, set, 132
    - printer language, select, 133
    - printhead
      - loading mode, select, 135
      - pressure, set, 136
      - test parameters, set, 136
    - ribbon save zones, set, 137
    - self-strip, enable or disable, 137
    - slash zero, enable, 138
    - takeup motor torque, increase, 139
    - top of form, set, 139
  - configuration parameters, transmit command, 81, 94
  - connecting the printer to a PC, 5
  - control characters
    - creating ASCII with control codes, 4
    - table of full ASCII, 210
    - using printable, 4
  - control panel access permission, set command, 81, 117
  - creating
    - ASCII text file of IPL commands, 6
    - one bit per byte user-defined graphics, 220
    - user-defined bitmap graphics, 220
    - user-defined fonts, 227
  - current edit session, save command, 81, 174
  - cut command, 81, 94
  - cutter, enable or disable command, 81, 118
- D**
- dark adjust command, in Test and Service mode, 81, 203
  - dark adjust, set command, 81, 118
  - data
    - shift - international characters command, 81, 94
    - source for format in a page, define command, 81, 174
  - DataMatrix, 154
  - deleting
    - fields, 34
    - human-readable field (H0), 31
  - description of IPL commands, 2
  - designing, formats, 22
  - determining print position of a field, 34
  - direct graphics
    - commands
      - change origin, 243
      - direct graphics mode, enter, 242
      - end of bitmap, 243
      - end of line, 243
      - raw bitmap data follows, 244
      - repeat last line, 244
      - transition black, 244
      - using in an example, 245
    - list of IPL commands, 242
    - mode
      - defined, 240
      - enter command, 242
      - select command, 81, 96
    - requirements, 240
    - sending to the printer, 242
  - downloading
    - auto-transmit commands, interface table, 235
    - escape print commands, interface table, 233
    - fonts
      - one bit per byte, 227
      - six bits per byte, 228
      - using IPL commands, 18
      - using IPL commands, 18
      - with PrintSet, 11
    - graphics
      - one bit per byte, 221
      - six bits per byte, 224
    - Print mode commands, interface table, 232
    - protocol commands, interface table, 236
    - shift print commands, interface table, 234
    - status responses, interface table, 235
- E**
- EAN.UCC Composite, 160
  - editing
    - fields, 33
    - labels, 31

## Index

Emulation mode  
  enter command, 81, 97  
  summary of commands supported, 57  
  using, 56  
Emulation or Advanced mode on power up  
  command, 81, 119  
end  
  of bitmap command, 243  
  of line command, 243  
end-of-print skip distance, set command, 81, 120  
entering  
  Print mode, 7  
  Program mode, 7  
error  
  codes, 46  
    request command, 81, 86  
    table, 46, 47  
  conditions, handling, 44  
  image overrun, 45  
  insufficient storage RAM, 45  
  invalid numeric character, 45  
  parameter, 45  
  syntax, 44  
escape print commands, 233  
example  
  label format, 38  
  using direct graphics commands, 245

**F**

factory defaults, reset command, 81, 203  
field  
  bar code, 27  
  character, 27  
  data, define source command, 81, 175  
  decrement, set command, 81, 98  
  delete command, 81, 174  
  deleting, 34  
  direction, define command, 81, 177  
  editing, 31, 33  
  first data entry, select command, 99  
  height, change magnification, 36  
  human-readable, 27  
  human-readable (H0), 31  
  increment, set command, 81, 99  
  label design, 27  
  line or box, 28  
  magnifying, 36  
  origin, define command, 81, 177  
  positioning, 34  
  reimage only modified fields, *See* format, select command  
  rotating, 35  
  scaling, 36  
  select command, 81, 97  
  sizes, 36  
  width, change magnification, 36  
finding commands in the manual, 63  
first data entry field, select command, 81, 99

font  
  additional RAM, 14  
  bit-mapped, 14  
  character width, define command, 81, 178  
  choosing the type to use, 10  
  create and download, 227  
  creating bitmap fonts, 15  
  descriptions, 27  
  downloadable types, 10  
  downloading with PrintSet, 11  
  install international character sets, 13  
  magnifying, 36  
  one bit per byte, 227  
  resident in printer, 28  
  six bits per byte, 228  
  sizes, 36  
  transmit command, 81, 103  
  TrueType, 14  
  type, select command, 82, 180  
  user-defined, 227  
Font, Transmit command, 100  
form feed command, 82, 101  
format  
  create or edit command, 82, 182  
  creating with IPL, 24  
  designing a basic, 22  
  direction in a page, define command, 82, 183  
  erase command, 82, 184  
  offset within a page, define command, 82, 184  
  position from page, delete command, 82, 185  
  position in a page, assign command, 82, 185  
  programming with IPL, 24  
  select command, 82, 101  
  transmit command, 82, 103  
  using, 22  
formats, print command, 82, 204  
full ASCII  
  control characters table, 210  
  table, 208

**G**

graphic or UDC, define command, 82, 186  
graphic select command, 82, 186  
graphics  
  converting to one bit per byte, 221  
  creating  
    and downloading, 224  
    one bit per byte, 220  
    user-defined bitmap, 220  
  six bits per byte, 224

**H**

hardware configuration label, print command, 82, 204  
height magnification of bar, box, or UDC, define command, 82, 187  
HIBC Code  
  128, 153  
  39, 147

- human-readable field (H0), 27, 31
  - create or edit command, 82, 189
  - deleting, 31
- I**
- IBM language translation
  - character table, 213
  - enable or disable command, 82, 122
- image
  - bands
    - description, 51
    - example showing how the printer uses, 53
    - function, 52
    - optimizing with print speed, 52
    - using for batch printing, 56
  - overrun errors, 45
- immediate commands
  - abort print job, 86
  - according to function, 72
  - error code, request, 86
  - label and gap length, transmit, 87
  - remaining quantity and batch count, transmit, 87
  - status dump, 88
  - status enquiry, 89
- increasing throughput, 51
- increment and decrement, disable command, 82, 104
- insufficient storage RAM errors, 45
- intercharacter
  - delay, set command, 82, 122
  - space for UDF, define command, 82, 190
- interlabel ribbon save, enable or disable
  - command, 82, 123
- Interleaved 2 of 5, 143
- international character sets, 212
- interpretive field
  - edit command, 82, 191
  - enable or disable command, 82, 192
- invalid numeric character errors, 45
- IPL commands
  - description, 2, 3
  - sending to the printer, 5
  - using to download fonts, 18
- J, L**
- JIS-ITF, 152
- label
  - and gap length, transmit command, 82, 87
  - design fields, 27
  - designing
    - formats, 22
    - pages, 38
  - editing, 31
  - format
    - command description, 40, 41
    - example, 38
    - using, 22
  - path open sensor value, transmit command, 82, 204
  - rest point, adjust command, 83, 123
  - retract
    - distance, set command, 83, 124
    - enable or disable command, 83, 124
    - stock type, select command, 83, 125
    - storing formats, 22
    - taken sensor value, transmit command, 83, 204
    - width, set command, 83, 125
- languages, international character sets, 212
- length of line or box field, define command, 83, 192
- line field
  - create or edit command, 83, 193
  - defining, 28
- M**
- magnifying
  - bar code fields, 37
  - in label design, 36
- manual roadmap, 8
- MaxiCode, 151
- maximum label length, set command, 83, 126
- media
  - fault recovery mode, set command, 83, 127
  - sensitivity number, select command, 83, 127
- memory
  - increasing amount available, 50
  - usage
    - described, 50
    - limitations, 50
    - problems, 50
    - transmit command, 83, 105
- message delay, set command, 83, 128
- MicroPDF417, 156
- N, O**
- next data entry field, select command, 83, 106
- number of image bands, set command, 83, 129
- numeric field separator command, 83, 106
- one bit per byte graphics, creating, 220
- online or offline on power up command, 83, 130
- options selected, transmit command, 83, 107
- outline font
  - clear or create command, 83, 193
  - download command, 83, 195
  - downloading, 10
- P**
- page
  - create or edit command, 83, 196
  - delete command, 83, 197
  - designing, 38
  - print command, 83, 204
  - select command, 83, 108
  - transmit command, 83, 108
- parameter, errors, 45
- PDF417, 148
- pin 11/20 protocol, set command, 83, 130
- pitch
  - label, print command, 83, 205
  - size, set command, 83, 197

## Index

- point size, set command, 83, 198
- postamble, set command, 83, 131
- POSTNET, 148
- preamble, set command, 83, 131
- print
  - IPL command, 84, 109
  - line dot count limit, set command, 84, 198
  - quality label, print command, 84, 205
  - speed, adjusting for use with image bands, 52
  - speed, set command, 84, 132
- Print mode
  - commands
    - according to function, 76
    - Advanced mode, select, 91
    - alphanumeric field separator, 92
    - batch count, set, 93
    - clear all data, 93
    - clear data from current field, 93
    - command terminator 1, 93
    - command terminator 2, 94
    - configuration parameters, transmit, 94
    - cut, 94
    - data shift - international characters, 94
    - Direct Graphics mode, select, 96
    - download order, 232
    - Emulation mode, enter, 97
    - field decrement, set, 98
    - field first data entry, select, 99
    - field increment, set, 99
    - field, select, 97
    - font, transmit, 100
    - form feed, 101
    - format, select, 101
    - format, transmit, 103
    - increment and decrement, disable, 104
    - memory usage, transmit, 105
    - next data entry field, select, 106
    - numeric field separator, 106
    - options selected, transmit, 107
    - page, select, 108
    - page, transmit, 108
    - print, 109
    - printhead parameters, transmit, 109
  - Program mode, enter, 109
  - program number, transmit, 110
  - quantity count, set, 110
  - start and stop codes (Code 39), print, 110
  - storage area usage, transmit, 111
  - Test and Service mode, enter, 111
  - user-defined character, transmit, 111
  - user-defined tables, transmit, 112
  - warm boot, 112
- entering, 7
- printable control characters, using, 4
- printer
  - batch printing, optimizing, 56
  - connecting to a PC, 5
  - error conditions, 44
  - increasing speed, 51
  - language, select command, 84, 133
  - memory, using efficiently, 50
  - programming, 3
  - RAM, understanding, 50
- printhead
  - loading mode, select command, 84, 135
  - parameters, transmit command, 84, 109
  - pressure, set command, 84, 136
  - resistance test, begin command, 84, 205
  - resistance values, transmit command, 84, 205
  - temperature sensor value, transmit command, 84, 205
  - test parameters, set command, 84, 136
  - volt supply value, transmit command, 84, 205
- PrintSet, using to download fonts, 11
- Program mode
  - commands
    - bar code field, create or edit, 163
    - bar code, select type, 141
      - Codabar, 143
      - Code 11, 144
      - Code 128, 144
      - Code 16K, 147
      - Code 2 of 5, 143
      - Code 39, 142
      - Code 49, 148
      - Code 93, 142
      - DataMatrix, 154
      - EAN.UCC Composite, 160
      - HIBC Code 128, 153
      - HIBC Code 39, 147
      - Interleaved 2 of 5, 143
      - JIS-ITF, 152
      - MaxiCode, 151
      - MicroPDF417, 156
      - PDF417, 148
      - POSTNET, 148
      - QR Code, 155
      - RSS, 157
      - UPC/EAN, 146
    - bitmap
      - cell height for graphic or UDF, define, 164
      - cell width for graphic or UDF, define, 166
      - user-defined font, clear or define, 167
    - border around human-readable text, define, 167
    - box field, create or edit, 168
    - character
      - bitmap origin offset, define, 169
      - rotation or bar code ratio, define, 170
    - Code 39 prefix character, define, 173
    - command tables, load, 173
    - current edit session, save, 174
    - data source for format in a page, define, 174
    - enter, 84
    - enter, 109
    - exit, 84
    - exit, 199

- Program mode
  - commands (*continued*)
    - field
      - data, define source, 175
      - delete, 174
      - direction, define, 177
      - origin, define, 177
    - font
      - character width, define, 178
      - type, select, 180
    - format
      - direction in a page, define, 183
      - erase, 184
      - offset within a page, define, 184
      - position from page, delete, 185
      - position in a page, assign, 185
    - graphic
      - or UDC, define, 186
      - type, select, 186
    - height magnification of bar, box, or UDC, define, 187
    - human-readable field, create or edit, 189
    - intercharacter space for UDF, define, 190
    - interpretive field
      - edit, 191
      - enable or disable, 192
    - length of line or box field, define, 192
    - line field, create or edit, 193
    - outline font, clear or create, 193
    - outline font, download, 195
    - page, create or edit, 196
    - page, delete, 197
    - pitch size, set, 197
    - point size, set, 198
    - print line dot count limit, set, 198
    - Program mode, exit, 199
    - user-defined character field, create or edit, 199
    - user-defined character, clear or create, 199
    - user-defined font character, create, 200
    - width of line, box, bar, or character, define, 201
  - entering, 7
  - program number, transmit command, 84, 110
  - programming Intermec printers, described, 3
  - protocol commands, downloading, 236
- Q, R**
- QR Code, 155
- quantity count, set command, 84, 110
- RAM, using, 50
- raw bitmap data follows command, 244
- reflective sensor value, transmit command, 84, 206
- reimage, modified fields, 55
- remaining quantity and batch count, transmit command, 84, 87
- repeat last line command, 244
- reset command, 84, 87
- ribbon, save zones, set command, 84, 137
- RLE data, 240
- rotating fields, 35
- RSS, 157
- run-length encoded (RLE) data, *See* RLE data
- S**
- self-strip, enable or disable command, 84, 137
- sending IPL commands to the printer, 5
  - using an application, 7
  - using HyperTerminal from Windows, 6
- serial port configuration, set, *See* Communication Port Configuration, Set
- shift commands, 234
- sizing
  - bar code fields, 37
  - fields, 36
- slash zero, enable command, 138
- slash zero, enable or disable command, 84
- software configuration label, print command, 84, 206
- start and stop codes (Code 39), print command, 84, 110
- status
  - dump command, 84, 88
  - enquiry command, 84, 89
  - responses, 235
- storage area usage, transmit command, 111
- storing label formats, 22
- switching between Print mode and Program mode, 7
- syntax errors, 44
- T**
- takeup motor torque, increase command, 84, 139
- Test and Service mode commands
  - 12 volt supply value, transmit, 203
  - ambient temperature, transmit, 203
  - command terminator, 203
  - dark adjust, 203
  - enter, 84, 111
  - exit, 85, 206
  - factory defaults, reset, 203
  - formats, print, 204
  - hardware configuration label, print, 204
  - label path open sensor value, transmit, 204
  - label taken sensor value, transmit, 204
  - pages, print, 204
  - pitch label, print, 205
  - print quality label, print, 205
  - printhead
    - resistance test, begin, 205
    - resistance values, transmit, 205
    - temperature sensor value, transmit, 205
    - volt supply value, transmit, 205
  - software configuration label, print, 206
  - transmissive sensor value, transmit, 206
  - user-defined characters and graphics, print, 206
  - user-defined fonts, print, 206
- throughput, increasing, 51
- top of form, set command, 85, 139
- transition black command, 244
- transmissive sensor value, transmit command, 85, 206
- troubleshooting checklist, 44

## ***Index***

### **U, W**

UPC/EAN, 146

user-defined

  bitmap graphics, creating, 220

  character

    clear or create command, 85, 199

    field, create or edit command, 85, 199

    transmit command, 85, 111

  characters and graphics, print command, 85, 206

  commands, replacing, 231

  font character, clear or create command, 85, 200

  fonts, creating, 227

  fonts, print command, 85, 206

  tables, transmit command, 85, 112

using Emulation mode, 56

warm boot command, 85, 112

width of line, box, bar, or character, define  
  command, 85, 201





**Corporate Headquarters**  
6001 36th Avenue West  
Everett, Washington 98203  
U.S.A.

**tel** 425.348.2600

**fax** 425.355.9551

[www.intermec.com](http://www.intermec.com)

IPL Programmer's Reference Manual



P/N 066396-008