

You may need to unplug the SR60 then plug the SR60 back in

When configuring a SR60 SERIAL to a CV60 the user will have to do the following as well. Start->Control Panel->CV60 Setting->Com Ports->5V Com1 (Checked) Click OK Then go to Intermec Setting->Data Collection->Tethered Scanner->Enable Scanner Por (Checked) File->Save Settings File->Exit



SERIAL CONFIG FOR SR60 TO CV60

Enable UPC-A	
Enable UPC-E	
Enable EAN-13	
Enable EAN-8	
Enable Code 93	
Enable Standard 2 of 5	
Enable IATA	

SERIAL CONFIG FOR SR60 TO CV60



SERIAL CONFIG FOR SR60 TO CV60

