




You may need to unplug the SR60 then plug the SR60 back in

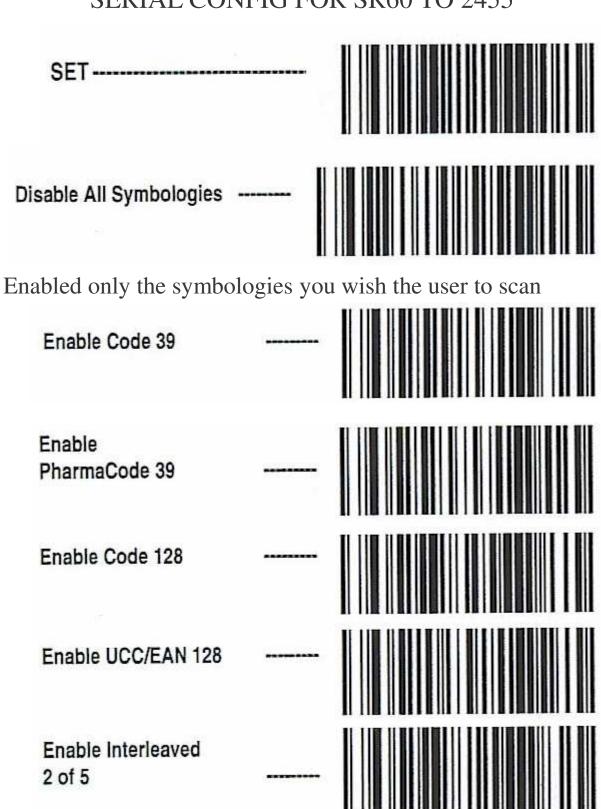

SERIAL CONFIG FOR SR60 TO 2455

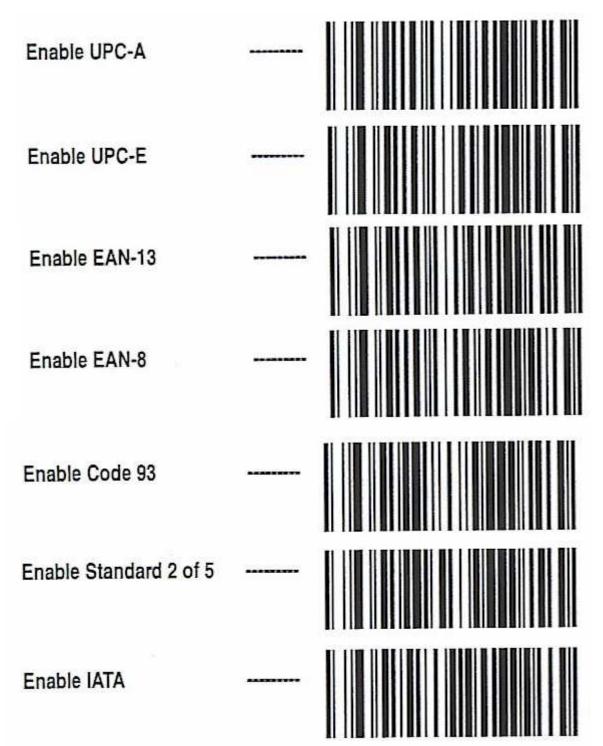

SERIAL CONFIG FOR SR60 TO 2455

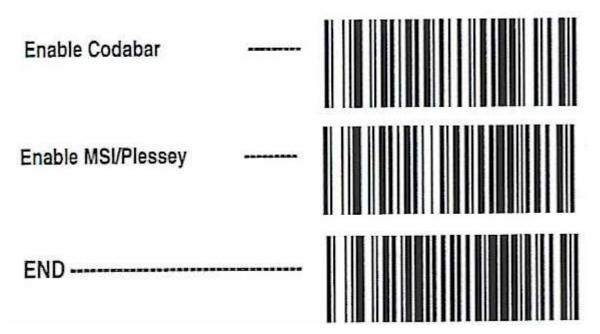

SERIAL CONFIG FOR SR60 TO 2455

