

Chapter 11

Pre-setable Parameters (standard)

11.1 Description

P412 may be enabled to flag several parameters when they have been preset (entered manually). When the Tare, Gross Total or Net Total parameter is preset, the letter P will be displayed and printed before the parameter name.

10.45 lb PTare
115.05 lb PGrTot
97.75 lb PNtTot

The Tare parameter is considered not preset when an auto-tare is performed or when it is cleared by entering **0 [TARE]** or if it is lost after a power interruption (if P161 TrSav = Disbl). When the tare is changed in any other manner it will be considered preset.

The gross and net total parameters are considered not preset if the total value of the parameter is cleared to zero. These parameters are preset when a non-zero value is entered by means other than an accumulation. Performing an accumulation does not affect the preset status of an accumulation parameter.

If one of these parameters is renamed at P602, P603 or P606, then the first letter of the new name will become the preset identifier. For example, if **Tare** is renamed to be **MTare** at P602, then a manual tare entry will be displayed as **MTare** instead of **PTare**, while an auto tare will be displayed only as **Tare**.

Note: If the preset parameter P412 is enabled, then the first letter of a renamed parameter becomes the preset identifier. See the section on preset parameters for more details.

Parameter Number	Parameter Name
2	Tare
3	GrTOT (gross total)
6	NtTOT (net total)
14	TrTar (truck tare)
30	Quantity
31	Quantity Total
34	APW

Table 11-1, Pre-setable Parameters

