



Click on the key number
Click on the key number of ☐
the part you wish to look up. ☐
The part number will be at ☐
the top of the next page that ☐
appears.

CW11



AfterMarket
Parts • Service • Support • Accessories

ServiceParts List

Series: Washdown Indicator

Model: CW11

Status: Active

Key	Figure	Part No.	Description
01		71133506	Overlay & Keypad, CW11
02		71156770	LCD Display(OIML), CD11, CW11
03		71155050	Main PCB, With LCD, CW11
04		71133510	Battery Case, Plastic, CW11
05		71133511	Mounting Bracket, CW11
06		71123593	Transformer, CW11
07		71138643	Power Cord, AUS, CW11
07		71134148	Power Cord, GB, CW11
07		71134043	Power Cord, EU, CW11
07		71134042	Power Cord, US, CW11
08		71127395	Battery Contact, Dual, CW11, TR, TC
08		71127396	Battery Contact, Negative, CW11, TR, TC
08		71127394	Battery Contact Positive, CW11, TR, TC