# DOT MATRIX PRINTER DP8340RC SERIES [PARALLEL INTERFACE]

# **USERS MANUAL**



#### Federal Communications Commission Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference at his own expense.

For compliance with the Federal Noise Interference Standard, this equipment requires a shielded cable.

This statement will be applied only for the printers marketed in U.S.A.

#### Statement of

#### The Canadian Department of Communications Radio Interference Regulations

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectiques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada. *The above statement applies only to printers marketed in Canada.* 

#### Trademark acknowledgments

DP8340RC: Star Micronics Co. Ltd.

#### Notice

- All rights reserved. Reproduction of any part of this manual in any form whatsoever, without STAR's express
  permission, is strictly forbidden.
- The contents of this manual are subject to change without notice.
- All efforts have been made to ensure the accuracy of the contents of this manual at the time of printing. However, should any errors be found, STAR would greatly appreciate being informed of them.
- The above notwithstanding, STAR can assume no responsibility for any errors in this manual.

© Copyright 1986, 1999 Star Micronics Co., Ltd.

# **TABLE OF CONTENTS**

<ol> <li>OUTLINE</li></ol>	1 2 2 3 4
<ul> <li>3. PART IDENTIFICATION AND NOMENCLATURE</li> <li>3-1. Power Supply Unit</li></ul>	5 6 7
<ul> <li>4. INSTALLATION OF INK RIBBON AND PAPER</li></ul>	8 9 10 10 11 12 12
5. CONTROL CODES	13
6. GENERAL SPECIFICATIONS	20
<ul> <li>7. INTERFACE</li></ul>	24 24 24 25 26 27 27
8. WHEN POWER IS SUPPLIED BY THE USER	28
9. CHARACTER CODE LIST	30

# 1. OUTLINE

The DP8340RC series of serial dot matrix printers is for use in ECR, POS, electronic instruments, banking machines and computer peripheral equipment. The DP8340RC series include the following features;

- 1) 2 color printing (Red and Black)
- 2) High-speed bidirectional printing (2 line/sec, 29 or 44 columns per line)
- 3) 9-pin print head
- 4) Parallel interface (Centronics compatible)
- 5) Commands for expanded characters, inverted characters, emphasized characters, red and black printing, and 10CPI or 15CPI characters etc. are provided, which makes the printer very versatile.
- 6) Simultaneous Data Communication and Printing
- 7) 2 Peripheral Drivers
- 8) One line validation printing (Option)

### **Model Name Notation**



# 2. UNPACKING AND INSTALLATION

#### 2-1. Unpacking

After opening the box, check if all necessary accessories are included.

### (A) Printer



- 3 Paper Holders
- (5) Ink Ribbon
- 6 DIP Switch Cover

(B) Power Supply Unit



User's Manual

Figure 2-1. Unpacking

### 2-2. Installation of Paper Holders and Re-Roll Prevention Guard

Install the Paper Holders in the intermost holes in the rear of the printer.



**Figure 2-2. Installation of Paper Holders** 

Install the Re-Roll Prevention Wire in the holes of the printer cover. Twisting the Wire as shown in the figure below, will make the installation easier.



Figure 2-3. Installation of Re-Roll Prevention

### 2-3. Handling Notes

- (1) Install the printer near an easily accessible socket-outlet.
- (2) Place the unit on a flat and stable surface for operation.
- (3) Do not connect the AC Power Plug to the same outlet used for other noise generating devices (large motors, etc.).
- (4) Be careful not to drop paper clips, pins and other foreign objects into the unit.
- (5) Wipe off dirt with a soft cloth soaked in alcohol or benzine. Do not use Lacquer thinner, Trichlorethelene or Ketone solvents because they may damage plastic parts.
- (6) Use a soft brush, etc. for cleaning the printer mechanism and PCB.
- (7) Keep hands out of printer while power is on.
- (8) Do not attempt to print when there is no ink ribbon or paper in the unit. The print head life could be severly reduced.
- (9) If the paper is fastened tightly to the roll, the paper may not detach from the roll when the end is reached. If this happens, the no paper detection function and paper feed will not operate.
- (10) Always keep the printer cover attached when printing to prevent paper jams, noise, and other problems.
- (11) Always turn the power off before opening the printer cover. (e.g. When renewing a ink ribbon)

## **3. PART IDENTIFICATION AND NOMENCLATURE**

### **3-1.** Power Supply Unit



Shape of AC Power plug will vary according to destinations.



### 3-2. Printer





### **3-3.** Part Functional Description

(1)	AC Power Plug	Connect to an outlet of the specified voltage.
(2)	DC Power Outlet	Supplies DC 12V power to the printer.
(3)	Printer Cover	Protects the printer against dust and reduces noise.
(4)	POWER Lamp	Lights up (green LED) when power is on.
(5)	ON LINE Lamp	Lights up (green LED) when the unit is in the online mode.
(6)	ALARM Lamp	Lights up (red LED) when printer operation is not normal, or the printer is out of paper. It is necessary to install paper into the printer and press the ON LINE Button to recover from paper empty status. Turn off the printer power in order to recover from abnormal operation
(7)	ON LINE Button	Toggles between the on-line and off-line modes. The printer will go on-line after turning power on.
(8)	FEED Button	Momentary operation of this button provides one line feed. Pressing this button continuously will cause continuous paper feed. If power is turned on while pressing this button, self printing*1 will be performed.
(9)	Interface Connector	Connects the printer to host computers. Check that both computer and printer are off before connecting.
(10)	DIP Switches	Allows for setting of various functions according to user requirements.
(11)	Peripheral Drive Output	Connects the printer to the peripheral devices such as Cash Drawer, Paper Cutter and Paper Take-Up Device etc. to drive them.
*1	Self Printing	This printer has another convenient function, the Automatic Test Printing. With the ink ribbon and paper properly installed in the printer, turn the power ON while holding down the Feed switch. Test print- ing will start and stop again automatically.

# 4. INSTALLATION OF INK RIBBON AND PAPER

### 4-1. Installation of Ink Ribbon

- (1) Turn power off, lift the Printer Cover up and remove it.
- **Note:** Be careful not to touch the print head immediately after printing, because it can get very hot.



Figure 4-1. Printer Cover Removal

- (2) Unwind ribbon so that the spools are separated as shown in Figure 4-3. Hold the ribbon taut as shown with the drive pins facing down and slide the ribbon between the print head and the platen. While keeping the ribbon taut, wrap one side around the black ribbon guide on the end of the platen and drop one spool on the spool shaft. As you move the spool downwards, move the detecting lever aside to allow the spool to drop into place. Make sure the spool drive pins engage with the spool drive holes. As the spool drops into place there will be a click.
- (3) While continuing to hold the ribbon taut, install the remaining ribbon spool in a similar fashion.
- (4) Turn the spool that rotates freely to take up the ribbon slack.

Description	Ribbon life	
Description	Black	Red
SF-03BR	Approx.	Approx.
(Fuji Kagakushi	0.8 million	0.4 million
Kogyo Co., Ltd.)	characters	characters

Ribbon	Life



Figure 4-2. Installation of Ink Ribbon



Figure 4-3. Ribbon Spools

### 4-2. Removal of Ink Ribbon

Hold the spool and lift gently, rotating it until the ribbon sags. Push the ribbon detecting lever out, lift the spool until it comes off the shaft. Remove the second spool in a similar manner.

(Do not apply excessive force when lifting spools.)

### 4-3. Paper Insertion

### 4-3-1. For Roll Paper

- (1) Cut the Roll Paper end straight and square. Hold the roll so that the paper comes from the bottom.
- (2) Attach the Roll Paper to the Holders Paper by slipping one side of the roll onto the Hub and pulling the other Hub out to allow the roll to slip in place.
- (3) Insert the paper evenly into the Paper Insertion Slot.
- (4) Turn the Power Switch "ON", and press the FEED Button. The paper will be fed into the unit.



Figure 4-4. Paper Insertion (1)



Figure 4-5. Paper Insertion (2)

### 4-3-2. Roll Paper Installation (When using the optional Printer Cover 8340R)

When installing roll paper with the optional "Ptinter Cover 8340R", please use the following procedure.

- (1) Turn power off, lift the Printer Cover up and remove it.
- **Note:** Be careful not to touch the print head immediately after printing because it can get very hot.
- (2) Insert paper into the printer, and feed the paper so it extends 3 inches or more above the top surface of the printer.
- (3) Insert the paper into the slot in the "Printer Cover 8340R".
- (4) Install the "Printer Cover 8340R" on the printer.



Figure 4-6. Replace the Printer Cover



Figure 4-7. Printer Cover 8340R

### 4-3-3. Validation Option Installation

The validation printing requires the optional printer cover 8340R. Refer to item 4-3-2 for the installation.

- (1) Turn power ON.
- (2) Enter the printer the validation mode. (Refer to the control code "GS" in Chapter 5.)
- (3) Insert the material to be validated against the right side of the slot in the Printer Cover 8340R.



Figure 4-8. Insertion of Material to be validated

#### 4-4. Roll Paper Removal

Cut the paper close to the slot and use the feed button until paper has passed completely through the printer.

**Note:** Do not try to remove the paper by hand as it could become crooked and get jammed inside the printer.

# 5. CONTROL CODES

CODE	LF (0А)н
FUNCTION	Print and line feed instruction
OUTLINE	The LF code causes the data in the line buffer to be printed, followed by a single line feed. When the line buffer is empty, only the feed takes place.
CODE	CR (0D) <sub>H</sub>
FUNCTION	Print and line feed instruction
OUTLINE	Same function as of LF code. However, when the DIP switch 3 is ON, the CR code be- comes invalid.
CODE	SO (0E) <sub>H</sub>
FUNCTION	Expanded character instruction
OUTLINE	This code causes the printer to print expanded characters twice as wide as the regular ones. This remains in effect until a DC4 code is received.
CODE	DC4 (14) <sub>H</sub>
FUNCTION	Release from expanded characters
OUTLINE	The expanded character instruction is released by the DC4 code, and the succeeding data is printed as regular width characters.
CODE	ESC-1 (1В)н (2D)н (01)н or (1В)н (2D)н (31)н
FUNCTION	Underline mode selection
OUTLINE	All data received after this code is underlined until a ESC-0 is received.
CODE	ESC-0 (1В)н (2D)н (00)н or (1В)н (2D)н (30)н
FUNCTION	Release from underline mode
OUTLINE	The underline mode selection is released by this code.

ഹ	n	Г
υU	υ	E

SI (0F)н

FUNCTION	
OUTLINE	

Inverted print instruction

This function causes the printing to be inverted. This code must be received at the beginning of a line. If this code is received anywhere other than at the beginning of a line, it is disregarded. Accordingly, normal characters and inverted characters, can not be mixed on the same line.

CODE	DC2 (12)н
FUNCTION	Release from inverted print instruction
OUTLINE	The inverted print instruction is release

ESC E (1В)н (45)н

The inverted print instruction is released by this code. This code must be received at the beginning of a line.

CODE	
FUNCTION	

Emphasized print mode instruction

OUTLINE Data following this command is printed with emphasized characters.

In this mode, characters are printed in a single direction.

CODE	ESC F
	(1В)н (46)н
FUNCTION	Release from emphasized print instruction
OUTLINE	Emphasized print is released.
CODE	ESC 4 (1B) <sub>H</sub> (34) <sub>H</sub>
FUNCTION	Red character print instruction
OUTLINE	This command causes subsequent data to be printed with red characters. The instruction is released by the code, ESC 5.
	Red and black characters may be intermixed. This command is ignored when DIP SW 5 is OFF.
CODE	ESC 5

LDC .	,
(1 <b>B</b> )н	(35)н

FUNCTION	
OUTLINE	

Release from red character print instruction The red character print instruction is released by this code.

ഹ	n	Г
υU	υ	E

ESC a n (1В)н (61)н n

n-line feed

**FUNCTION** OUTLINE

After printing the data in the current line, n lines are fed by this code. The value of n ranges from 1 to 120.

20	J	Г
U.U	IJ	г
-		l

ESC C n (1В)н (43)н n

FUNCTION	

 $(1B)_{H}$  (43)<sub>H</sub> n Sets page length in lines

Sets bottom margin in lines

OUTLINE

This code sets the length of a page to n lines. The value of n ranges from 1 to 120. On initialization, the page length default condition will be 42 lines. The line feed pitch is one-sixth inch.

20	J	
U.U	IJ	F
00	-	-

ESC Nn (1В)н (4Е)н n

FUNCTION	
OUTLINE	

Upon receiving this code, the bottom margin is set to n lines.  $0 \le n \le 120$ ; Default Value n = 0



C0	DE	

ESC O

(1В)н (4F)н

Cancels bottom margin.

FUNCTION	
OUTLINE	

Upon input of this code, bottom margin setting is cleared.

$\sim$	J	Г
υU	υ	E

FF (0С)н

FUNCTION OUTLINE Form feed

The FF code prints the data in the current line and transports the paper to the start of the next page.

CODE	ESC @ (1В)н (40)н
FUNCTION	Printer initialization

OUTLINE

All printing conditions except ESC BEL n1 n2, the line buffer and data buffer are set to the power on default condition.

20	J	1
U.U	IJ	г
90	-	

ESC BEL n1 n2 (1B)<sub>H</sub> (07)<sub>H</sub> n1 n2

FUNCTION	Sets p	
OUTLINE	This	

Sets peripheral unit drive 1 pulse duration. This command sets the pulse duration for peripheral unit drive (Paper Cutter, Take-Up Device, cash drawer, etc.) Pulse Duration =  $10 \times n_1$  (ms) Delay =  $10 \times n_2$  (ms)  $1 \le n_1 \le 127$ ;  $1 \le n_2 \le 127$ 

Default value:  $n_1 = n_2 = 20$ 



Executed by BEL code and FS code after printing.

CODE	ВЕL (07)н
FUNCTION	Trigger peripheral unit drive 1 (Deferred)
OUTLINE	Causes a peripheral drive 1 pulse to be generated. This code
	is normally stored in the buffer and is performed as it is

received from the data queue.

CODE	FS (1С)н
FUNCTION	Trigger peripheral unit drive 1 (immediate)
OUTLINE	Causes a peripheral drive 1 pulse to be generated immediately
CODE	SUB (1A) <sub>H</sub>
FUNCTION	Trigger peripheral unit drive 2 (immediate)
OUTLINE	This command causes a peripheral unit drive 2 pulse to be generated.
	Pulse Duration : 200ms (fixed)
	Delay : 200ms (fixed)
REMARKS	It is impossible to drive peripheral devices 1 and 2 at the same time.
CODE	CAN (18) <sub>H</sub>
FUNCTION	Clears print buffer
OUTLINE	Upon input of this code the data buffer and line buffer are cleared.
CODE	ESC Р (1В)н (50)н
FUNCTION	Select 10 CPI
OUTLINE	This code causes the printer to print at 10 CPI. The number of columns per is 29.
CODF	ESC M

CODE	ESC M (1В)н (4D)н
FUNCTION	Select 15 CI

OUTLINE

elect 15 CPI

This code causes the printer to print at 15 CPI. The number of columns per line is 44. When the power is turned on, the 15 CPI mode is selected.

CODE	GS (1D) <sub>H</sub>
	Validation printing instruction
OUTLINE	This code causes the printer to perform validation printing of a maximum of 32 subsequent characters (at 15 CPI, from the thirteenth to the forty-forth column).
	After the GS code is received, a maximum of 32 characters should be input, followed by the LF code which indicates
	the end of the validation printing data. (At this time, control codes except FS, ENQ, CAN and SUB codes, or any character received beyond the limit of 32 characters are ignored.)
	When the printer enters the validation mode, the ribbon is shifted up and the ON-LINE lamp blinks. (This lamp goes on and off at a 0.5-second interval until the end of the va-
	lidation mode.) After the material to be validated is inserted, and the LF button is pressed, the validate line is printed, followed by a single line feed. When the check is removed and the ON-LINE button is pressed, the printer returns to regular mode and is set to ON-LINE status.
REMARKS	1) The print settings by commands (such as emphasized mode and underline mode) are invalid only during validation printing.
	2) When the CAN code is received in the validation mode, the printer returns to regular mode, and the mechanism is initialized.
	3) If the FS or SUB codes is received in the validation mode, these codes are executed just after the printer returns to regular mode.
	4) In the validation mode, the LF button and the ON-LINE button do not work except the above behavior.
	5) If the printer has a Red black ribbon installed, the va- lidate line will be printed in red.

### **Character Code List**

	Character	Code	Function
1	LF	(0A)H	Print and line feed instruction
2	CR	(0D)H	Print and line feed instruction
			(same as LF)
3	SO	(0E)H	Expanded character instruction
4	DC4	(14)H	Expanded character release
5	ESC-1	(1B)H (2D)H(01)H	Underline instruction
		(1B)H (2D)H (31)H	
6	ESC-0	(1B)H (2D)H(00)H	Underline release
		(1B)H (2D)H (30)H	
7	SI	(0F)H	Inverted print instruction
8	DC2	(12)H	Inverted print release
9	ESC E	(1B)H (45)H	Emphasized print instruction
			(one-way printing)
10	ESC F	(1B)H (46)H	Emphasized print release
11	ESC 4	(1B)H (34)H	Red character print instruction
12	ESC 5	(1B)H (35)H	Red character print release
13	ESC a n	(1B)H (61)H n	n-line feed instruction
14	ESC C n	(1B)H (43)H n	Sets page length in lines
			$1 \leq n \leq 120$ (default n = 42)
15	ESC N n	(1B)H (4E)H n	Set bottom margin in lines
			$0 \leq n \leq 120$ (default $n = 0$ )
16	ESC O	(1B)H (4F)H	Cancel Bottom margin
17	FF	(0C)H	Form feed
18	ESC @	(1B)H (40)H	Printer initialization instruction
19	ESC BEL	(1B)H (07)H	Set peripheral unit drive 1 pulse duration
	n1 n2	n1 n2	$1 \leq n_1 \leq 127, 1 \leq n_2 \leq 127$
			(default n1 = n2 = 20)
20	BEL	(07)H	Trigger peripheral unit drive 1 (Deferred)
21	FS	(1C)H	Trigger peripheral unit drive 1
			(Immediate)
22	SUB	(1A)H	Trigger peripheral unit drive 2
			(Immediate)
23	CAN	(18)H	Clears print buffer
24	ESC P	(1B)H (50)H	Select 10 CPI
25	ESC M	(1B)H (4D)H	Select 15 CPI (Default value)
26	GS	(1D)H	Validation printing instruction

# 6. GENERAL SPECIFICATIONS

Printing method	Serial impact dot matrix printing,			
	9 wires			
Number of print columns	29 columns (10CPI), 44 columns (15CPI)			
Print speed	Approx. 2 lines/sec			
Print direction	Bi-dire	ctional		
Line spacing	1/6 inc	h		
Paper feed method	Friction	n Feed		
Paper feed speed	Approx	x. 12 lines/sec		
Character set	ASCII		96 characters	
	Special	1	64 characters	
	Block g	graphics*	64 characters	
	Kataka	na (Japanese)	64 characters	
Font configuration	10CPI	Ordinary characters	$5 \times 9$ dots	
-		Block graphics*	$6 \times 6$ dots	
	15CPI	Ordinary characters	$7 \times 9$ half dots	
		Block graphics*	$5 \times 6$ dots	
* Graphic Feed Not Availa	able			
Character size	10CPI	10CPI 2.00 (H) $\times$ 2.42 (V) mm		
	15CPI	$1.32 (H) \times 2.42 (V)$	mm	
Character spacing	10CPI	2.55 mm (1/10 inch	ı)	
	15CPI 1.70 mm (1/15 inch)			
Dot spacing	10CPI	H=0.425 mm V=0.	.353 mm	
	15CPI	H=0.340 mm V=0.	.353 mm	
Gross dot	10CPI	174 dots/wire/line		
	15CPI	220 dots/wire/line		
Print area	10CPI 73.53 mm			
	15CPI	74.46 mm		
Print Buffer	Approx	к. 1.5 KB		
Interface	Paralle	1 Interface (Centronics	s compatible)	
Peripheral drive	2 outpu	its (each 1A max. at	12V. Both cannot	
I	operate	e at the same time.)		
External dimensions	1	,		
(Printer)	202(W	$) \times 200(D) \times 98(H) m$	m	
	(without paper holder DC Power Connector)			
(Power supply unit)	$60(W) \times 120(D) \times 36(H) \text{ mm}$ (without AC cable)			
Weight	- ~ ( · · )		(	
(Printer)	Approv	x. 1.9 kg		
(Power supply unit)	Approx. 0.4 kg (without AC cable)			
(1 o wer suppry unit)	repros. 0.4 kg (without AC caule)			

Power supply unit Four supplies available with following ratings

Input	Output
AC 100 – 240 V	DC 12.0 V ± 5%
47Hz – 63 Hz	
0.8 A Max	2.0 A
Paper specification	

Paper specification					
Paper type	Ordinary and carbonless copy paper				
Size Paper width	$82.55 \pm 0.5$ mm (3.25 inches)				
Roll diameter	80 mm outer diameter (Max)				
Thickness (single)	$0.07 \text{ mm} (52.3 \text{ g/m}^2) \text{ to}$	$0.09 \text{ mm} (64 \text{g/m}^2)$			
(2 copy)	One copy and one origi	inal (max 0.13 mm)			
Paper end	Paper should not be atta	ached to the core			
One line validation	Check (Refer to Fig. 6-	2)			
	Paper width 70 to 9	0 mm			
	Thickness 0.1 to 0.1	15 mm			
	* Requires the option	al Printer Cover 8340R			
Ink ribbon specification					
Color	Black and red / Black only				
Ribbon material	Nylon (#40 denier)				
Ribbon size	13mm × 6m				
Spool	13mm (width), 35mm i	n diameter (two spool)			
Recommended ribbon	SF-03BR (Black and re	ed), SF-03B (Black)			
	(manufactured by Fuii)	Kagakushi Kogyo Co., Ltd.)			
	or approved equivalent				
Operating conditions	Temperature	$+5^{\circ}C - +40^{\circ}C$			
1 0	Humidity	10% — 80% RH			
Storage conditions	Temperature	-20°C +70°C			
C	Humidity	5% — 95%RH (+40°C)			
Head life	70 million characters	× ,			
Printer reliability	5.0 million lines MCBF (except head life)				
		(			



Figure 6-1. Roll Paper and Print Area



Unit: mm (in.)

### Figure 6-2. Material to be validated and One Line Validation Printing



Figure 6-3. External Dimensions (Printer)



Shape of AC Power plug will vary according to destinations.

### Figure 6-4. External Dimensions (Power Supply Unit)

# 7. INTERFACE

### 7-1. Interface Specifications

This printer has a parallel interface to communicate with the computer. The operating specifications of the parallel interface are as follows.

- (1) Data transfer rate
- 1000 to 6000 characters per second
- (2) Synchronization Via externally supplied STROBE pulses
- (3) Handshaking ACK and BUZY signals
- (4) Logic level Compatible with TTL level



Figure 7-1. Interface Timing Diagram

Signal Name		Circuit Example		
	DATA1-DATA8 (To Printer)	4.7k $\Omega$ 74HC Compatible 4.7k $\Omega$ 4.7k $\Omega$		
	STROBE (To Printer)	4.7k $\Omega$ 74HC Compatible $100\Omega$ $470pF \frac{1}{m}$		
	BUZY, ACK (From Printer)	4.7kΩ 74LS Compatible		

#### Figure 7-2. Typical Interface Circuit

### 7-3. Connectors and Signals

Pin No.	Signal Name	IN/OUT	Function
1	STROBE	IN	Signals when data is ready to be read.Signal gose from HIGH to LOW (for at least 0.5 microsec.) when data is available.
2-9	DATA1-8	IN	These signals provide the information of the first to eighth bits of parallel data.Each signal is at HIGH level for a logical 1 and at a LOW level for a logical 0.
10	ĀCK	OUT	A 9 microsecond LOW pulse acknowledges receipt of data.
11	BUSY	OUT	<ul><li>When this signal goes LOW, the printer is ready to accept data. When the printer is in one of the conditions below."HIGH" is set.</li><li>1. Data being entered.</li><li>2. Off line.</li><li>3. Error condition.</li></ul>
12	PAPER OUT	OUT	This signal is normally LOW. It will go HIGH if the printer runs out of paper.
13	SELECTED	OUT	This signal is HIGH when the printer is online.
14-15	N/C		Unused
16	SIGNAL GND		Signal ground.
17	CHASSIS GND		Chassis ground, isolated from logic ground.
18	N/C		Unused
19-30	GND		Twisted pair return signal ground level.
31	RESET	IN	When this signal gose LOW, the printer is reset to its power-on condition.
32	ERROR	OUT	This signal is normally HIGH. This signal goes LOW to signal that the printer cannot print due to an error condition. Refer to Item 7-6 Emergency Suspension.
33	EXT GND		External ground.
34-36	N/C		Unused.



This connector mates with an Amphenol 57-30360 connector.



### 7-4. Setting of the DIP Switches

Factory settings : all ON

Switch	Function	ON	OFF		
1	Character Table	U.S.A. & Europe	Japan		
2	Unused				
3	CR cord	Disable	Enable		
4	Unused				
5 (*1)	Ink Ribbon	2-color	Monochrome		
6					
7	International Character Set (See below)				
8					

(\*1) DIP Swich 5 should be set to ON when you use a 2-color ribbon for 2-color printing.

It should be set to OFF when a monochrome ribbon is used.

SW NO.	USA	France	Germany	England	Denmark	Sweden	Itary	Spain
6	ON	OFF	ON	OFF	ON	OFF	ON	OFF
7	ON	ON	OFF	OFF	ON	ON	OFF	OFF
8	ON	ON	ON	ON	OFF	OFF	OFF	OFF

International Character Set

Note: When DIP Switches 1 is set to OFF, the printer always selects the Japan international character set regardless of the status of DIP Switches 6, 7 and 8.

When DIP Swiches 1 is otherwise set, the printer selects the character set determined by DIP Switches 6, 7 and 8.



Figure 7-4. DIP Switch Setting

#### **Peripheral Unit Drive Circuit** 7-5.

The Control Board of this printer is equipped with a circuit for driving peripheral units (Paper Cutter, Take-Up Device, Cash Drawer, etc.)

The 6P Modular Jack is used as the Drive Circuit. When using this circuit, connect the peripheral unit cable to the 6P Modular Jack (cable is not included).

- Note: Peripheral unit drive circuit connector only connects to peripheral units such as cash drawers, etc.Do not connect it to a telephone.
- 1 Drive Circuit



Figure 7-6. 6P Modular Jack Connector

Figure 7-7. Recommend Cable

**Note:** Make sure that the metal structural parts of the peripheral device are connected to frame Ground (Pin 1) to provide a static drain path.

### 2. Control code

Codes for Drive Circuit control are ESC BEL n1 n2, BEL, FS and SUB. Refer to the Control Codes in Section 5.

#### 7-6. **Error Condition Alarm Mode**

If an error condition is detected during operation, the printer will stop printing and cause the ERROR signal to go Low. All solenoids & motors will be deenergized. It is necessary to turn the printer power off and on again in order to recover from the alarm mode.

The printer can detect the following error conditions:

- a. Motor Lock
- b. Defective timing detector
- c. Micro-processor out of program sequence

# 8. WHEN POWER IS SUPPLIED BY THE USER

When printer power is supplied by the user rather than through the accessory power source unit, please be careful of the following points.

- **Note 1:** The power supply must be  $+12V_{-5\%}^{+10\%}$  2A or above. An electrolytic capacitor (C =  $4700\mu F/25V$  to  $6800\mu F/25V$ ) must be connected across the output of the power supply.
- Note 2: A DC power plug is available as an option. (Parts No. 80925470) Cable unit 8340 (Parts No. 04991220) Cord busing SR-5N-4 WHITE (GND) FRAME GND FRAME GND

(Parts No. 09106003) Connector PP812A

Reference: Design the power supply referring to the power supply circuit shown below.



**Note:** A line noise filter must be used to prevent line transients from passing through power supply. Filter design to be determined by environmental noise requirements.

VAC	14V	C2	100 ~ 200μF/25V
VDC	$12V^{+10\%}_{-5\%}$	ZD1	VZD = 14V (1W)
IAC	2 ~ 3A	C3	4700 ~ 6800µF/25V
C1	6800μF/25V	TR1	2SD633 (TOSHIBA)

Other parameters may be determined by user.

### Figure 8-1. Power Supply Reference Circuit

# 9. CHARACTER CODE LIST

### 1) U.S.A. & Europe (DIP SW1: ON)

Hexa- decimal	0		1		2		3		4		5		6		7	
0					SP		0		@		Ρ		•		р	
		0		16		32		48		64		80		96		112
1					!		1		Α		Q		а		<b>p</b>	
-		1		17		33		49		65		81		97		113
2			DC	2	14		2		B		R		b		r	
2		2		18	]	34		50		66		82		98		114
2					#		3		С		S		С		s	
3		3	1	19	1	35		51	1	67	1	83	1	99	1	115
			DC	4	\$		4	<b>.</b>	D		Т	1	d	•	t	1
4		4	1	20		36		52		68	1	84		100		116
F		1		<b>I</b>	%		5	<b>_</b>	Ε	1	U		е	<u> </u>	u	1
5		5		21		37	1	53		69		85		101	-	117
c		1			&	1	6	1	F	L <u></u>	V		f	1	v	1
6		6	ĺ	22		38		54		70		86		102		118
	BE	L			,	<u> </u>	7	1	G		w		ø	1	w	1
/		7		23		39		55	-	71		87	0	103	••	119
•		<u> </u>	CAN	1	(		8	1	н		X		h	1	x	1
8		8		24		40		56		72		88		104	Â	120
		· · ·			)		9		T		Y		i		v	1120
9		9		25		41		57	1	73	•	89		105	y	121
	1 F		SU	3	*	7.	•		1		7	05	i	105	7	121
A	-	10		26		42	•	58	J	74	~	an	J	106	2	122
		10	FS	20	+	72	•	50	K		Г	30	k	100	5	122
B		11	201	27		43	,	50		75	L	01	n	107	l	122
	FF		E C	61			~	35	1	1,1		71	1	107	1	123
C	• •	12	13	22	,	<b>A A</b>		60	<b>L</b>	76		02	1	100	I	124
	CP	12	20	20		44		00	N.A.	/0		92		100	1	124
D	UR	12	00	20		AE	-	61	fVI				m	100	3	105
	50	12		29		40		01	NI.	11		93		103		125
E	30		l		•	40	>	60	IN				n		$\sim$	1.00
	<u> </u>	14		30		46	2	62		/8		94		110		126
F	21		I		/		!		υ		—		0		*	r1
		15		31		47		63		79		95		111		127

(SP: Space)

Hexa- decimal	8		9		A		В		С		D		E		F	
0	SP				Ä		é		ù		ā				Τ	
0		128		144		160		176		192		208		224		240
1	I		Г	_	Ö		è		ū		â					
<b>*</b>		129		145		161		177		193		209		225		241
2			-		Ü		ē		û		•				-	
2		130		146		162		178		194		210		226		242
2	I				β		ê		Ç		°C				_	
3		131		147		163		179		195		211		227		243
	-	•			§	•	ï	•	ż		°F	·	+			
4		132		148		164		180		196		212		228		244
E	1				<u>a</u>		í	•	Ñ		Ω		J		1	
5		133		149		165		181		197		213		229		245
C	-		/		<u>0</u>	•	ì		ñ	• • • • •	μ		L	•	I	±
Ø		134	-	150		166		182		198		214		230		246
7	1			<b>.</b>	f	· · · · · ·	ī	- <b></b>	Ē		Σ	1	٦	-	٩.	
		135		151	-	167		183		199		215		231		247
•	_	1 -		<b></b>	¢	-	î		0	·	σ				┛	
8		136		152		168	-	184		200		216		232		248
-	I			-	1/2	1	ö	-	i		x	•	**	·		
9		137		153		169		185		201		217		233		249
		±	-	+	N		ó	±	Å	· - 1	Т.	L	Г			
A		138	•	154	1	170		186	11	202	• L	218		234	_	250
	1	<u>+</u>	L	<b></b>	Ţ		ð		Ъ		X	·	4	·	_	
В	-	139		155	~	171	_	187	r	203		219	•	235		251
	┣	<u> </u>	Ŧ	*	¥	<u> </u>	ō	-	θ		$\infty$		↑		11	
C	-	140	-	156	-	172	_	188	-	204		220	•	236		252
_	_	-	4	<u> </u>	1/4		ô		ล่	·	+	L	→	·	L	
D		141	•	157		173	U	189	•	205		221	•	237		253
<b>_</b>	L		•		Ā	· _	ü	<u> </u>	á	<u> </u>	÷		T		_ ر	·
E		142		158	••	174	-	190	-	206		222	•	238		254
_	٦	<u>+</u>	X	-	ë	<b>`</b>	ú	·	à		π		~			<u> </u>
F	-	143		159		175		191		207		223	•	239	•	255

### 2) JAPAN (DIP SW1: OFF)

Hexa- decimal	0		]	1		2		3		1	Ę	5	(	5	-	7		
•					SP		0		@		Ρ		۲		р			
U		0		16		32		48		64		80		96		112		
1					!		1		Α		Q		а		q			
•		1		17		33		49		65		81		97		113		
່ <u>ເ</u>			DC	2	H		2		В		R		b		r			
2		2		18		34		50		66		82		98		114		
2					#		3		С		S		С		S			
3		3		19		35		51		67		83		99		115		
			DC	4	\$		4		D		Τ		d		t			
4		4		20		36		52		68		84		100		116		
E					%		5		Ε		U		е		u			
5		5		21		37		53		69		85		101		117		
C					&		6		F		۷		f		v			
D		6		22	1	38		54		70		86		102		118		
	BEL		BEL				9		7	<u> </u>	G		W		g		w	
/		7		23	1	39		55		71		87		103		119		
			CAN	1	(		8		Η		Х		h		х			
8		8		24	1	40		56		72		88	1	104		120		
					)		9	·	T		Y	·	i		v	<b>L</b>		
9		9		25	ĺ	41	-	57	•	73		89		105		121		
	LF		SU	3	*		:	<b>.</b>	J		Ζ	L	i		z			
A		10		26	1	42		58	-	74		90	1	106		122		
			ES	0	+	·	:		Κ		[		k		{			
В		11		27	1	43		59		75	-	91		107		123		
	FF		FS	L			<	<b>L</b>	L		¥		1					
		12		28	1	44		60		76		92		108	ľ	124		
	CR		GS		-		=		М	· · · ·	]		m	•	}			
טן		13		29	1	45		61		77	-	93		109	Í	125		
	SO						>	•	Ν		^	•	n	•	-			
E		14		30	1	46	1	62		78		94		110		126		
F	SI	ı		<u>ا</u> آ	1	L	?	•	0				0	1	*			
		15		31	1	47		63	-	79		95	1	111	~	127		

Hexa decimal	8		3 9		Α		В		С		D		E		F	
•	SP				SP		-		3						Т	
0		128		144		160		176		192		208		224		240
•	1	• • • •	Г	<u> </u>	0		ア		F		4				-	
L 1		129	1	145		161		177		193		209		225		241
<u> </u>	-	<b>.</b>			Г		イ		ッ		×				-	
2		130		146		162		178		194		210		226		242
2	I	•		<u> </u>	L		ゥ		テ		Ŧ				-	
3		131	1	147		163		179		195		211		227		243
	-	•		<b>L</b>	•	<b></b>	I		٢		ヤ	•	╋			
4		132	1	148		164		180		196		212		228		244
E	1	1		<u> </u>	•		オ		+		ュ		L		I	
5		133	1	149	1	165		181		197		213		229		245
C	-	<b>1</b>	1		ヲ		カ	•	=		Э		L			
Ö		134		150		166		182		198		214		230		246
-	I	•	1		ア		+		ד		ラ		٦		٩.	
		135		151		167		183		199		215		231		247
0		<b>_</b>			1		ク		ネ		リ				•	
ð		136	1	152		168		184		200		216		232		248
0	I				ゥ		ケ		1		ル		**			
9		137		153		169		185		201		217		233		249
•		•	F		I		П		ハ		レ		Т			
A		138		154		170		186		202		218		234		250
D	I		┺		オ		サ		E				←		=	
D		139		155		171		187		203		219		235		251
	┢		Ŧ		Ŧ		シ		7		7		↑			
		140		156		172		188		204		220		236		252
D	-		4		Ъ		ス		~		ン		→		L	
U		141		157		173		189		205		221		237		253
E	L		٠		э		セ		ホ		"		Ł		ر	
		142		158		174		190		206		222		238		254
F	٦		×		ッ		ソ		マ		0		r		<b>ר</b>	
		143		159		175		191		207		223		239		255

(SP: Space)

Hexadecimal 5C 5E 7C 7D 23 24 40 5**B** 5D 7**B** 7E 60 ~ ^ # [ 1 { ! } U.S.A. \$ 0  $\mathbf{N}$ e ... • S # \$ à ^ é è France ç ù e ö s Ä Ü ^ ä ö ü # \$ Germany e ß ~ ^ ł ] England £ 0 [  $\mathbf{N}$ e { } \$ ^ ~ Ø A â Denmark ŧ \$ 0 Æ e æ ø Sweden # É Ä ö A Ü ä ö ¤ é a ü • ^ # \ é Italy \$ 0 ù à δ è ì ^ ... ~ Ŗ \$ 0 i Ñ ż Spain , ñ } \_ } Japan # \$ 0 [ ¥ 1 ۰. e { L

### **International Character Sets**



### ELECTRONIC PRODUCTS DIVISION STAR MICRONICS CO., LTD.

536 Nanatsushinnya, Shimizu, Shizuoka 424-0066 Japan Tel: 0543-47-0112, Fax: 0543-48-5013

Please access the following URL http://www.star-micronics.co.jp/service/ frame\_sp\_spr\_e.htm for the lastest revision of the manual.

#### OVERSEAS SUBSIDIARY COMPANIES STAR MICRONICS AMERICA, INC.

1150 King Georges Post Road, Edison, NJ 08837-3729 U.S.A. Tel: 732-623-5555, Fax: 732-623-5590 http://www.starmicronics.com

#### STAR MICRONICS U.K. LTD.

Star House, Peregrine Business Park, Gomm Road, High Wycombe, Bucks, HP13 7DL, U.K. Tel: 01494-471111, Fax: 01494-473333 http://www.starmicronics.co.uk