

● DL-N Calibration

1. Turn on scale and note the units of measure when the scale powers up.
2. Turn off scale
3. Turn on power with pressing CAL Switch
4. Select C-3 by pressing "tare" key
5. Press "zero" key to enter C-3 mode.
6. 5.Scale show ULOAD
7. Empty platter and press zero key
8. Scale shows LOAD.
9. Put on weight equivalent of scale capacity
- 10.Press zero key
- 11.Scale will show end and go to C-3
- 12.Remove weight
- 13.Press tare key to go to C-0
- 14.Press zero key
- 15.Test the scale.



(DL-1N Head's CAL S/W)