

Technical Service Bulletin :

- MODELS : KPC 5000-2/5
 - ACTION : **Calibration Manual**
-

1. Keep pressing “MODE” button first, then press “ON/TARE” button to power on the scale, after self-examine, the scale will display the inner code “06000” (the inner code should be within 20000), now loose “MODE” button.
2. Press “ON/TARE” button again, the reading will be 00000, now put the max. capacity weight of 5kg on the scale, after 3-5 seconds, press “ON/TARE” button again, the scale will display 20000, then the calibration has been done.
3. Press “OFF” button to power off the scale.
4. Power on the scale, put the 5kg weight on the scale again and check if the scale show the correct weight, if yes, the calibration succeed, if not, follow step 1-3 again.

K I L O T E C H

- ▣ MODELS : KPC 5000-2/5
 - ▣ ACTION : Auto off function
-

Power on the scale.

Press MODE button till the scale displays "oF - 0", press MODE button again to choose the shut down delay. 0, 1, 3, 5, 10, 30 min. Press ON button to normal weighing mode, or press OFF button to power off the scale.