

LP15 Model Service Manual

1st Generation LP15kg or LP15lb
2nd Generation LP15kg/lb/100g


- ◆ LP15 Repair Overview
- ◆ Calibration Instructions
- ◆ Technical Service Bulletins
- ◆ Recommended Parts List



If you should have any questions, please call 1.800.694.4445
and ask for our Technical Service Specialist.

K I L O T E C H

LP15 LABEL PRINTING, PRICE COMPUTING SCALE

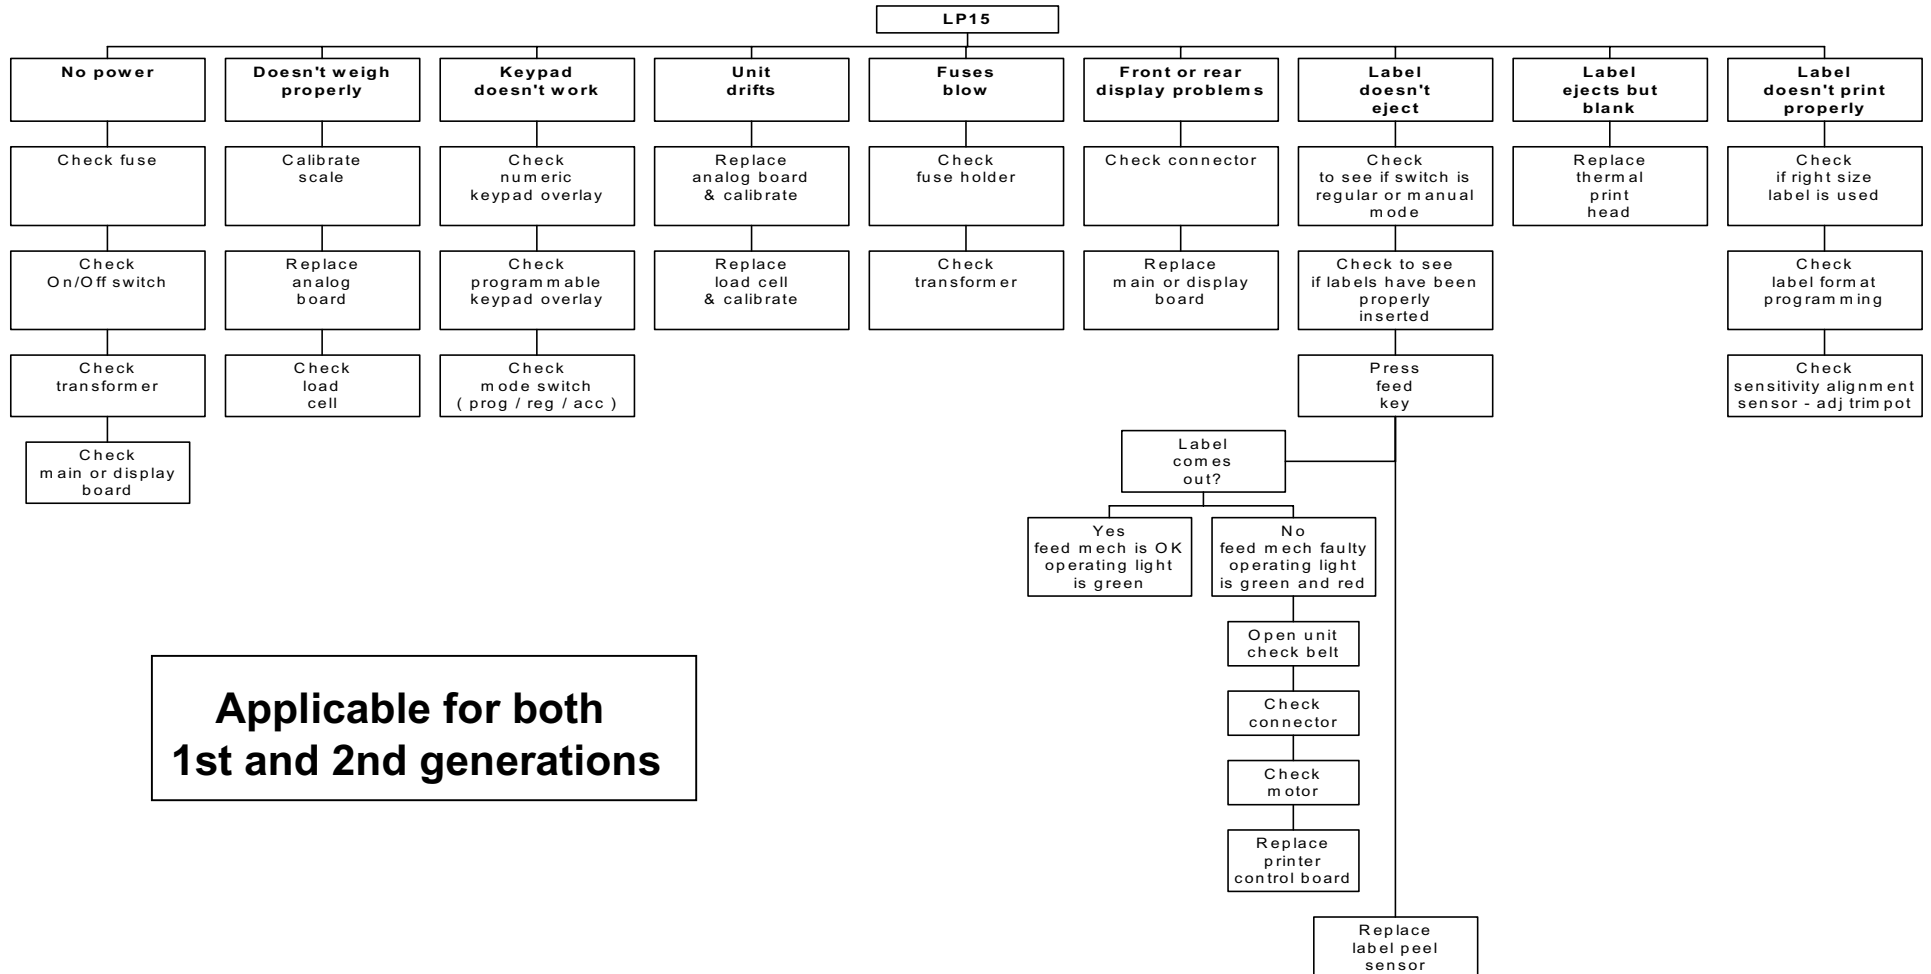

Calibration Instructions

LP15-C001	1 st generation
LP15-C002	2 nd generation

If you should have any questions, please call 1.800.694.4445
and ask for our Technical Service Specialist.

 
Calibration Instructions : LP15-C001

MODELS : LP15 kg or lb models (1st generation)


ACTION : Calibration instruction

To calibrate the LP15kg or LP15lb model, please note the following instructions:

1. Remove the top platter
2. Remove the seal cover
3. Set the scale to "Calibration" mode



Normal mode

 

Calibration mode

4. Replace top platter on scale
5. Turn power on – display will read CAL
6. Press the "3" key – display will read ULOAD
7. Press the "PRINT" key – display will read LOAD
8. Put weights equivalent to a full load on the scale platter (15kg or 30lb depending on the model)
9. Press the "PRINT" key
10. When the display shows "CAL" – calibration is completed
11. Remove the weights and return the scale to the "Normal" mode

The scale has been calibrated and is now ready for use.

If you should have any questions, please call 1.800.694.4445
and ask for our Technical Service Specialist.

Calibration Instructions : LP15-C002

MODELS : LP15 kg/lb/100g model (2nd generation)

ACTION : Calibration instruction

To calibrate the LP15kg/lb/100g model, please note the following instructions:

1. Remove the top platter
2. Remove the seal cover
3. Set the scale to "Calibration" mode



Normal mode



Calibration mode

4. Replace top platter on scale
5. Turn power on – display will read CAL
6. Press the "3" key – display will read ULOAD
7. Press the "PRINT" key – display will read LOAD
8. Put weights equivalent to a full load on the scale platter – note that depending on the unit of weight you choose, whether 15kg or 30lb, it will determine what measurement unit the scale will default when powered on.
9. Press the "PRINT" key
10. When the display shows "CAL" – calibration is completed
11. Remove the weights and return the scale to the "Normal" mode

The scale has been calibrated and is now ready for use.

If you should have any questions, please call 1.800.694.4445
and ask for our Technical Service Specialist.

Technical Service Bulletin : LP15-TSB001

MODELS : LP15 kg/lb/100g (2nd generation)

ACTION : Set weight default in kg or lb.

If a customer so desires, it is possible to preset the weight default, in kg or lb, when the LP15 unit is powered on.

Simply reference the calibration instructions (LP15-C002) for complete step by step instructions.

If you should have any questions, please call 1.800.694.4445
and ask for our Technical Service Specialist.

Technical Service Bulletins

LP15-TSB001 Set default in kg or lb (2nd generation)

If you should have any questions, please call 1.800.694.4445
and ask for our Technical Service Specialist.

Recommended Parts List LP15 model

<u>Item Description</u>	<u>Item Number</u>	<u>Generation</u>
Eprom – Model A	863241	All
Eprom – Model B	863260	All
Eprom – Model C	863264	All
Main PCB board	863253	1 st
Main PCB board	863302	2 nd
Numeric keypad	863250	All
PLU keypad	863248	All
Power supply	863252	All
Thermal printer head	863251	All
Analog board	863259	All
Photo sensor	863244	All
Fuse holder	863261	All

If you should have any questions, please call 1.800.694.4445
and ask for our Technical Service Specialist.