

# VS 2000

## Calibration Procedure

### CALIBRATION

---

- Procedure

1. Switching on scale and depressing unit key for 3 seconds to enter into calibration mode.
2. LCD display **CAL** and then ready to calibrate.
3. LCD display **LoAd** → X X.X X (weight for calibration)
4. Load dead weight according to weight showed on LCD, Press **Unit** key to confirm calibration.
5. When calibration is completed LCD display real weight. Then unload dead weight and switch off the scale to complete procedure.