

STANDARD COUNTING SCALE PACKAGE

QUICK START GUIDE

Models XTCP

TURNING ON THE SCALE AND THE PRINTER

1. Turn the power switch located on the bottom right hand side of the scale to ON. The scale will automatically zero.
2. Set the power switch located on the left side of the printer to ON. The POWER lamp on the control panel will light up.



BASIC WEIGHING AND PRINTING

1. Add the samples to the container, enter the number of samples on the numeric keyboard, and hit "SPL". Remove the samples. Place an empty container on the scale and press the green "TARE" button. Add the items to be counted to the container.
3. Once the data has been printed, press "FEED" on the printer to forward feed the paper.



2. Press  (Enter/Print) to send the data to the printer.



CUSTOMIZING THE PRINTOUT

Please see detailed explanations in your manual on the CD-ROM.

1. Enter the Setup mode by pressing and holding the ENTER key  for about seven seconds and then releasing the key.
2. Press the ENTER key  to flip through the setup pages until you see F6.2 in the weight display. By pressing the TARE key  toggle the value from ON to OFF. This changed the Print Line Format from Single Line to Multi Line.
3. Press CLEAR  to exit the setup. Press the ENTER key  twice to store your configuration. The scale automatically restarts.
4. In the same fashion, you can also change the following parameters:

Weight	Data	Count
F1	uSER	
>< ID IN g HW	ID APW IN T PT	M < > POS

Weight	Data	Count
F6.2	on	
>< ID IN g HW	ID APW IN T PT	M < > POS

Weight	Data	Count
End	SAVE	
>< ID IN g HW	ID APW IN T PT	M < > POS

F6.2 Print Line Format	Off = Multiple line format On = Single line format
F6.3 Print ID	Off = Disable printing of ID On = Enable printing of ID
F6.4 Print Gross	Off = Disable printing of gross weight On = Enable printing of gross weight
F6.5 Print Tare	Off = Disable printing of tare On = Enable printing of tare

F6.6 Print Net	Off = Disable printing of net weight On = Enable printing of net weight
F6.7 Print Average Piece Weight (APW)	Off = Disable printing of APW On = Enable printing of APW
F6.8 Print Pieces	Off = Disable printing of pieces On = Enable printing of pieces
F6.9 Print Item No	Off = Disable printing of Item No. On = Enable printing of field Item No.

STANDARD COUNTING SCALE PACKAGE

INSTALLATION INSTRUCTIONS


Models XTCP

UNPACKING

Thank you for purchasing a **METTLER TOLEDO Xpress** product. Please inspect the package immediately upon receipt. If the box is damaged, check for internal damage and file a freight claim with the carrier if necessary. If the container is undamaged, open the box and remove the contents.

Please keep the packing material and shipping insert in case you need to return the scale to a **METTLER TOLEDO Xpress** representative. Package contents for all **METTLER TOLEDO Xpress** Standard Counting Scale Packages include:

Main Package Contents

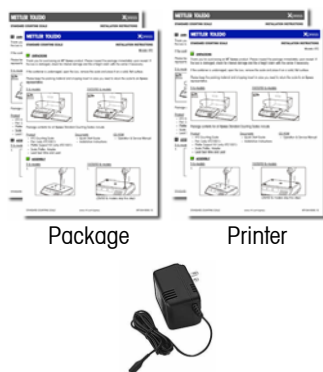

- Package
 - Installation Instructions
 - Quick Start Guide
- XPR-TSP613 Printer
 - Installation Instructions
 - Quick Start Guide
- Power Supply XPR-TSP613

XTC Counting Scale



- XTC Installation Instructions
- XTC Quick Start Guide
- CD-ROM (Operation Manual)
- Power Supply XTC
- RS-232 Serial Cable
- Pan (only XTC1001)

XPR-TSP613 Printer



- XPR-TSP613 High Speed Thermal Printer
- Operation Manual
- Paper Roll

ASSEMBLY



1. Open the XTC Standard Counting Scale box and install the scale according to the installation instructions supplied with the scale.

Continued.



2. Open the printer box and install the printer according to the installation instructions supplied with the printer. Use the power supply from the main box contents.



3. Connect the included serial cable to the printer and to the scale. To connect the cable to the counting scale, open the compartment on the bottom side of the XTC counting scale and connect the cable to the existing plug. As the last step, connect the larger serial cable plugs to the back side of the printer.



4. Please use our supplied Quick Start Guide to get started with your Standard Counting Scale and Printer Package.

For detailed product information, please consult the **Operation & Service Manual** provided on the CD-ROM.

CUSTOMER SERVICE

We at **METTLER TOLEDO Xpress** want to make sure you received the product you expected. It is important to us that you are satisfied with your purchase. If there is anything we can help you with, or if you are not satisfied with either your product or the services received from the **Xpress** representative, let us know:

24/7 Information and Support:

www.mt.com/xpress

8 AM to 8 PM EST

xpress@mt.com

Toll Free: 1-866-MTXPRESS

Xpress

Mettler-Toledo, Inc.

60 Collegeview

Westerville, OH 43081

STANDARD COUNTING SCALE

OPERATION & SERVICE MANUAL

Model XTC



ABOUT THIS MANUAL AND MT Xpress

Thank you for purchasing an **MT Xpress** product.

All of our equipment is assembled and packed with great care. If you should find any incorrect item, please contact your **Xpress** Dealer immediately.

This **MT Xpress** product was developed, produced, and tested in a METTLER TOLEDO facility that has been audited and registered according to international ISO 9001 quality standards and ISO 14000 environment control program. Properly used and maintained, this product will provide years of accurate weighing. Handle it as you would any piece of fine electronic equipment.

Please READ this manual BEFORE operating or servicing this equipment. Follow the instructions carefully and save this manual for future reference.

We at **MT Xpress** want to make sure you received the product you expected. It is important to us that you are satisfied with your purchase. If there is anything we can help you with, or if you are not satisfied with either your product or the services received from the **Xpress** representative, let us know.

How can you reach us?

XPRESS CUSTOMER CARE CENTER, USA

24/7 Information and Support:

www.mt.com/xpress
xpress@mt.com

8 AM to 8 PM EST

Toll Free: 1-866-MTXPRESS

Xpress

Mettler-Toledo, Inc.
60 Collegeview
Westerville, OH 43081


FCC Approval

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CONTENTS

SAFETY NOTICE	5
PREPARING THE SCALE FOR USE	6
ENVIRONMENT	6
UNPACKING AND ASSEMBLY	6
YOUR XPRESS SCALE AT A GLANCE	8
DISPLAY	8
KEYPAD	8
DISPLAY WINDOWS	8
CURSORS (VFD)	9
OPERATING YOUR SCALE	10
STRAIGHT COUNTING	10
PUSH-BUTTON TARE	10
KEYBOARD TARE	11
DECREMENT COUNTING	12
SPECIAL OPERATION FUNCTIONS	13
ID FUNCTION	13
ACCUMULATION FUNCTION	14
RECALL AND EXIT THE ACCUMULATOR	14
AVERAGE PIECE WEIGHT (APW) FUNCTION	14
COMMUNICATION FUNCTION	15
DATA OUTPUT	15
EXTERNAL COMMANDS	15
RECALL FUNCTION	16
COUNT TARGET ALARM	16
PRESET THE TARGET ZONE	16
APW ENHANCEMENT	17
SPECIAL MODES – SETUP MODE	18
ENTERING THE SETUP MODE	18
FUNCTION OF THE KEYS	18
DISPLAY ILLUSTRATION	19
CONFIGURATION	19
CLEANING AND MAINTAINING YOUR SCALE	23
CLEANING AND MAINTENANCE	23
TROUBLESHOOTING	23
SERVICING YOUR SCALE	24
ENTERING SERVICE MODE	24
FUNCTION OF THE KEYS	24
CONFIGURATION	25
COMMUNICATION	28
APPENDIX	31
SETUP MODE PARAMETER OVERVIEW	31
ERROR MESSAGES	32
SPECIFICATIONS	33
GEO VALUE TABLE	34
PHYSICAL DIMENSIONS	35

SAFETY NOTICE

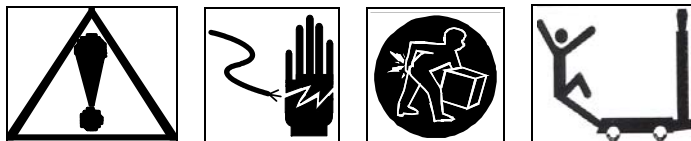

Product safety is a fundamental concern at MT Xpress. Use common sense and follow the simple precautions listed below to ensure your safety and to optimize the use and performance of this product.

- Read this manual before operating or servicing this product. Save this manual for future reference.
- Observe safety warnings located throughout this manual.
- Use caution when lifting or moving heavy equipment.
- This product should only be serviced by qualified personnel. Exercise care when moving, testing, or adjusting this product.
- Disconnect all power to this product before installing, servicing, or cleaning.
- Use only **MT Xpress** parts for repair.
- Observe electrostatic handling precautions for electronic components. Allow at least 30 seconds after power is disconnected to allow charges to dissipate before servicing any electronic components.
- Allow the product to adjust to room temperature before connecting the power source.

FAILURE TO FOLLOW THESE PRECAUTIONS COULD RESULT IN DAMAGE TO OR DESTRUCTION OF THE EQUIPMENT, OR BODILY HARM.

FCC NOTICE

This equipment has been tested and found to comply with the limits of the United States of America FCC rules for a Class A digital device, pursuant to Part 15 of the FCC Rules. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction in this manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

PREPARING THE SCALE FOR USE

The XTC Standard Counting Scale is a high performance industrial counting scale that accurately and dependably counts parts of all shapes and sizes.

This manual provides not only the detailed information on how to operate the scale, but also useful messages for service and maintenance.

Please read this manual thoroughly and familiarize yourself with all the safety requirements. All service procedures must only be performed by authorized personnel.

This chapter gives detailed instructions and important information regarding the successful installation of the **Xpress** Standard Counting Scale.

ENVIRONMENT

Before you install the scale, identify the best location for the equipment. The proper environment enhances its operation and longevity. Keep in mind the following factors, which might have a negative influence on the scale's operation:

Vibration: Vibration diminishes the scale's ability to measure accurately. Electrical machinery such as conveyors and drill presses can cause inaccurate and non-repeatable readings. The scale may also read inaccurately if it is not leveled properly.

Air currents: Moving air can cause the scale to read wind movement as an additional force and cause inconsistency in the weighing results.

Friction: A scale cannot measure accurately if an object is rubbing or pressing against the scale platform.

UNPACKING AND ASSEMBLY

Please inspect the package immediately upon receipt. If the box is damaged, check for internal damage and file a freight claim with the carrier if necessary. If the container is undamaged, open the box, remove the scale and place it on a solid, flat surface. Please keep the packing material and shipping insert in case you need to return the scale to an **Xpress** representative.

Package contents for all **Xpress** Standard Counting Scales include:

Product

- XTC Counting Scale
- Pan (only with XTC1001)
- Platter Supports Kit
(only with XTC1001)
- Scale Platter
- Adapter
- Lead seal wire and lead

Documents


- Quick Start Guide
- Installation Instructions

CD-ROM

- Operation & Service Manual

5 lb models


1.

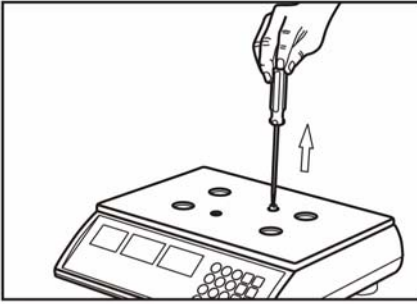


2.




3.

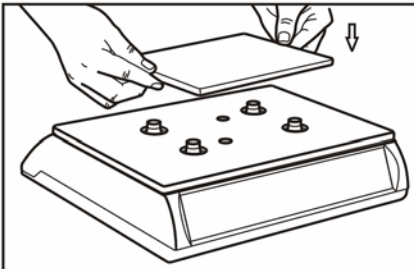

4.

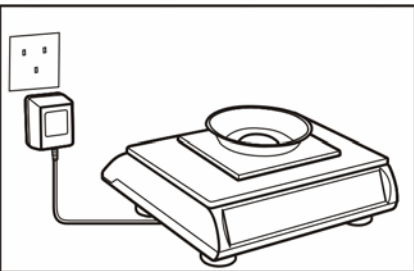
10/20/50 lb models

1.

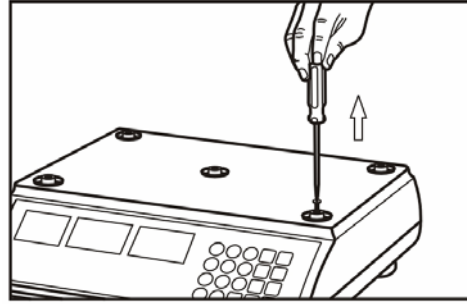

(20/50 lb models skip this step)

2.

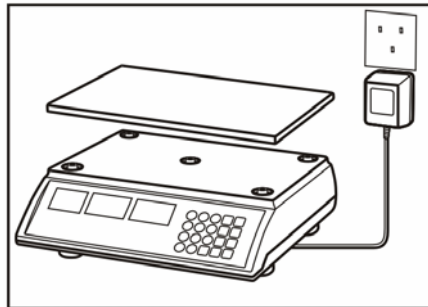All models

Level the scale by adjusting the four rubber feet until the leveling bubble is centered in the level indicator.

Proper alignment




Improper alignment



YOUR XPRESS SCALE AT A GLANCE

DISPLAY

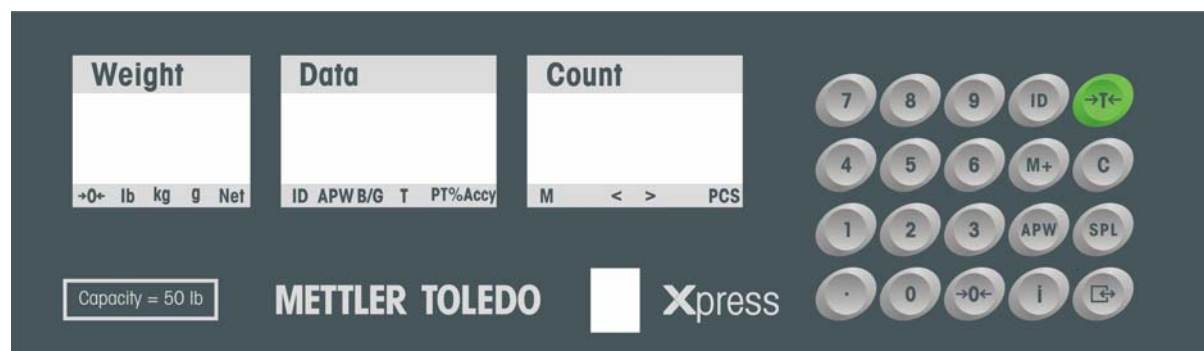

KEYPAD

Key	Name	Function
	Numeric	Data entry (0-9)
	Decimal	Enters a decimal point/Toggles alarm beep
	Zero	Zeroes the scale
	Tare	Subtracts tare value and switches from gross to net mode
	Clear	Clears data from the display
	APW	Initiates Average Piece Weight (APW) entry
	Sample	Initiates sampling
	Recall	Recalls the accumulated quantity and times
	ID	Store ID number, APW, tare and item number
	Accumulation	Adds the accumulator counts or recalls accumulation
	Enter/Print	Confirms an operation or initiates data output

DISPLAY WINDOWS

Window	Description
Weight Display (Weight)	Displays the weight.
Data Display (Data)	Displays item number, APW, gross weight, tare, push-button tare or accuracy percentage sequentially with each time the key is pressed. The default display is APW.
Count Display (Count)	Displays the counts.

 CURSORS (VFD)

Key	Description
→0←	When the scale is at the gross zero, this cursor will be lit
lb, kg, g	Weight unit cursor; Weight unit can be set in Setup Mode
Net	When net weight is displayed, this cursor will be lit
ID	When item number is recalled, this cursor will be lit
APW	When Average Piece Weight (APW) is recalled, this cursor will be lit
B/G	When gross weight is recalled, this cursor will be lit
T	When push-button tare weight is recalled, this cursor will be lit
PT	When keyboard tare is recalled, this cursor will be lit
%Accy	When the counting accuracy percentage is recalled, this cursor will be lit
M	When the value in the accumulator is not zero, this cursor will be lit
PCS	When the count is displayed, this cursor will be lit
>	Target Alarm: Indicates the count is above the Over value
<	Target Alarm: Indicates the count is below the Under value
< >	When both > and < cursors are lit, it indicates that the count is within the target zone

OPERATING YOUR SCALE

STRAIGHT COUNTING

Weight 0000	Data 0	Count M < > PCS
Weight 0020	Data 0	Count M < > PCS
Weight 0020	Data 10	Count M < > PCS
Weight 0020	Data 000200	Count 10 M < > PCS

The XTC counting scale is in the weight mode and ready for counting operation.

Place the samples on the platter (e.g. 10 pieces, total weight is 0.020 lb).

Press the keys **1** **0** to input the sample pieces.

Press the key **SPL** to initiate Average Piece Weight (APW).

Note: If the sample weight is less than the minimum sample weight set in the Setup Mode, the count window will show "ADD XX" indicating that "XX" more pieces should be added on the platter. After adding the required quantity, press the key **SPL** to re-sample.

Weight 3000	Data 000200	Count 1500 M < > PCS
Weight 0000	Data 000200	Count 0 M < > PCS
Weight 0000	Data 0	Count M < > PCS

Place the items to be counted on the platter (e.g. 1500 pieces including samples).

Remove all the items from the platter.

Press the key **C** to clear the APW.

PUSH-BUTTON TARE

Weight 0000	Data 0	Count M < > PCS
Weight 0020	Data 000200	Count 10 M < > PCS

Place the empty container or wrapping material on the platter (e.g., 0.2 lb), and then press **T**.

Place the samples in the container or on the wrapping material and then onto the platter (e.g. 10 pieces, total weight is 0.02 lb). Initiate APW by pressing the keys **1** **0** **SPL**.

Weight 3000	Data 000200	Count 1500 M < > PCS
Weight -0200	Data 000200	Count 100 M < > PCS
Weight -0200	Data 0	Count M < > PCS
Weight 0000	Data 0	Count M < > PCS

Place the items to be counted in the container or on the wrapping material and then onto the platter (e.g. 1500 pieces including samples).

Remove all the items from the platter.

Clear the APW data by pressing **C**.

Clear the tare by pressing **C** again.

KEYBOARD TARE

There are two operation procedures for this function.

Operation Procedure 1

Weight 0000	Data 01	Count
Weight -0100	Data 0	Count
Weight 0020	Data 000200	Count 10
Weight 3000	Data 000200	Count 1500
Weight -0100	Data 000200	Count 50
Weight -0100	Data 0	Count
Weight 0000	Data 0	Count

Press the appropriate keys for the known tare value (e.g. 0.1 lb, press the keys **0** **.** **1** to input tare value 0.1).

Press the key **→T←** to initiate the input value as tare.

Place the samples in the container or on the wrapping material and then onto the platter (e.g. 10 pieces, total weight is 0.02 lb). Initiate APW by pressing the keys **1** **0** **SPL**.

Place the items to be counted in the container or on the wrapping material and then onto the platter (e.g. 1500 pieces including samples).

Remove all the items and the container or wrapping material from the platter.

Clear the APW by pressing **C**.

Clear the tare by pressing **C** again.

Operation Procedure 2

Weight 0020	Data 0	Count
Weight 0020	Data 000200	Count 10
Weight 3500	Data 000200	Count 1750
Weight 3500	Data 05	Count
Weight 3000	Data 000200	Count 1500
Weight -0500	Data 000200	Count 250
Weight -0500	Data 0	Count
Weight 0000	Data 0	Count

Place the samples on the platter (e.g. 10 pieces, total weight is 0.02 lb).

Press the keys **1** **0** **SPL** to initiate APW.

Place the items to be counted in the container or on the wrapping material and then onto the platter, (e.g. 1500 pieces including samples).

Input the data by pressing the keys **0** **.** **5**.

Press the key **→T←** to initiate the tare as 0.5lb.

Remove all the items and the container or wrapping material from platter.

Clear the APW by pressing **C**.

Clear the tare by pressing **C** again.

DECREMENT COUNTING

There are two decrement counting modes.

Mode 1

Weight 0000	Data 0	Count M < > PCS
Weight - 0020	Data 0	Count M < > PCS
Weight - 0020	Data 000200	Count 10
Weight - 2000	Data 000200	Count 1000
Weight - 3000	Data 000200	Count 1500
Weight - 3000	Data 0	Count M < > PCS
Weight 0000	Data 0	Count M < > PCS

Mode 2

Weight 0000	Data 0	Count M < > PCS
Weight - 0020	Data 0	Count M < > PCS
Weight - 0020	Data 000200	Count 10
Weight 2980	Data 000200	Count 1490
Weight - 0500	Data 000200	Count 250
Weight 0000	Data 0	Count M < > PCS

Place the items to be counted in the container or on the wrapping material and then onto the platter (e.g. 3 lb including tare). Press the key $\rightarrow T \leftarrow$.

Remove the samples from the platter (e.g. 10 pieces, total weight is 0.02 lb).

Initiate APW by pressing the keys **1** **0** **SPL**.

Remove all the items from the container or the wrapping material (e.g. 1000 pieces including the samples). The count stands for the pieces removed from the platter including the sample.

Remove the container or wrapping material from the platter.

Clear the APW by pressing the key **C**.

Clear the tare by pressing the key **C** again.

Place the items in the container or on the wrapping material and then onto the platter (e.g. 3.5 lb including tare), then press the key $\rightarrow T \leftarrow$.

Remove the samples from the platter (e.g. 10 pieces, total weight is 0.02 lb).

Initiate APW by pressing the keys **1** **0** **SPL**.

Input the known tare (e.g. 0.5 lb) by pressing the keys **0** **•** **5** $\rightarrow T \leftarrow$.

The count stands for the pieces in the container or on the wrapping material, not including the samples already removed.

Remove all the items and the container or wrapping material from the platter.

Clear the APW and tare by pressing the key **C** twice.

SPECIAL OPERATION FUNCTIONS

ID FUNCTION

20 ID can be stored with 2-digit ID No. and APW and 6-digit item No. and tare. ID data will not be lost when power is off. Emptying the item No. can clear an ID. The tare stored in the ID is keyboard tare.

Store an ID

Weight I d ?	Data	Count
>0< ID In g Net	ID APW B/D T PT %Key	M < > PCS
Weight I d ?	Data	Count
>0< ID In g Net	ID APW B/D T PT %Key	M < > PCS
Weight APU?	000000	Count
>0< ID In g Net	ID APW B/D T PT %Key	M < > PCS
Weight tARE?	0000	Count
>0< ID In g Net	ID APW B/D T PT %Key	M < > PCS
Weight I tno?	0	Count
>0< ID In g Net	ID APW B/D T PT %Key	M < > PCS
Weight I tno?	789012	Count
>0< ID In g Net	ID APW B/D T PT %Key	M < > PCS
Weight 0000	0	Count 0
>0< ID In g Net	ID APW B/D T PT %Key	M < > PCS

In the count or weight mode, press the key **ID** to enter the ID entry mode.

Enter a numeric value 1 (acceptable from 1 to 20).

Press key **↵** to display the existing APW (if this ID has existed) or current APW (if this ID is a new one) to waiting new APW input.

Press the key **↵** directly or input the known APW then press the key **↵** to wait for new tare input.

Press the key **↵** directly or input the known tare then press the key **↵** to wait for the item No. input.

Input the item No. up to 6 digits (e.g. 789012)

Press the key **↵** to accept the input and return the scale the previous mode.

Recall an ID

Weight 00000	Data 1	Count
>0< ID In g Net	ID APW B/D T PT %Key	M < > PCS
Weight -0020	000200	Count 10
>0< ID In g Net	ID APW B/D T PT %Key	M < > PCS
Weight no I d	0	Count
>0< ID In g Net	ID APW B/D T PT %Key	M < > PCS
Weight 0000	0	Count
>0< ID In g Net	ID APW B/D T PT %Key	M < > PCS

In count or weight mode, press the desired numeric key (e.g.: the key **1**) to input ID No. (e.g. ID No. is 1).

Press the key **ID** to recall the desired ID (e.g.: ID1), the data in ID1 will be recalled from the memory, while active the accumulator with the same No.

If no ID, the Weight window shows "no id" for 2 seconds, then back to previous mode.

After finishing all transactions, press **C** key to clear ID and active accumulator 0.

Note: the recalled APW or tare can be modified temporarily.

ACCUMULATION FUNCTION

There are 21 accumulators to store the total counts. The data in the accumulator will be lost when power to the scale is lost.

Weight	Data	Count
3000	000200	1500
>0< 0 10 5 Net	ON APW B/D T PT %dew	M < > PCS

When the scale is in the count mode and the count is not zero, press the **M+** key. The beeper will give a double beep to indicate the displayed counts have been added into the accumulator and the "M" cursor will be lit.

Repeat above steps until all transactions are accumulated.

Note: The weight should return to zero before the next accumulation.

Press the key **C** to clear the APW.

Weight	Data	Count
0000	0	
>0< 0 10 5 Net	ON APW B/D T PT %dew	M < > PCS

RECALL AND EXIT THE ACCUMULATOR

Weight	Data	Count
total	Cn 2	3250
>0< 0 10 5 Net	ON APW B/D T PT %dew	M < > PCS

In weight mode, press the key **M+** to recall the accumulated count in the temporary accumulator.

Press the numeric keys (e.g.: **1 0**) and **M+** to recall the accumulated count in the corresponding accumulator (e.g.: accumulator 10).

In accumulation display mode, there are two ways to return the scale to the previous mode.

Weight	Data	Count
0000	0	
>0< 0 10 5 Net	ON APW B/D T PT %dew	M < > PCS

Pressing the key **C** to clear the accumulator and return the scale back to the previous mode.

Weight	Data	Count
0000	0	
>0< 0 10 5 Net	ON APW B/D T PT %dew	M < > PCS

Pressing the key **M+** to return the scale back to the previous mode without clearing the accumulator.

AVERAGE PIECE WEIGHT (APW) FUNCTION

Weight	Data	Count
0000	00095	
>0< 0 10 5 Net	ON APW B/D T PT %dew	M < > PCS

In the count and weight mode, enter the APW data (e.g. 0.0095 lb) by pressing the keys **0 . 0 0 9 5**.

Weight	Data	Count
0000	000950	0
>0< 0 10 5 Net	ON APW B/D T PT %dew	M < > PCS

Press the key **APW** to initiate APW.

Weight	Data	Count
0950	000950	100
>0< 0 10 5 Net	ON APW B/D T PT %dew	M < > PCS

Place the items to be counted on the platter.

Weight	Data	Count
0000	000950	0
>0< 0 10 5 Net	ON APW B/D T PT %dew	M < > PCS

Remove all the items from the platter.

Weight	Data	Count
0000	0	
>0< 0 10 5 Net	ON APW B/D T PT %dew	M < > PCS

Press the key **C** to clear the APW.

COMMUNICATION FUNCTION

With the optional RS-232 cable kit, the XTC can communicate to a printer or a PC.

DATA OUTPUT

Weight total	Data Cn 3	Count 4500
g OZ In S Net	ON APW NO T PT %dwt	M < > PCS

In accumulation display mode, press  to print the total counts and CN or transmit the data to a PC.

Weight - 0020	Data 000200	Count 10
g OZ In S Net	ON APW NO T PT %dwt	M < > PCS

In count or weight mode, press  to print the APW, tare, pieces, and/or gross weight (The items depend on the soft switch setting in the Setup Mode.) or transmit the data to a PC.

EXTERNAL COMMANDS

The XTC can accept some ASCII coded commands from a host PC. The commands are identified as follows:

Keys	Description
[T][Enter]	Equal to push-button tare operation
[Z][Enter]	Equal to zero operation
[P][Enter]	Equal to print operation
[C][Enter]	Equal to clearing operation
[C][C][Enter]	Equal to pressing the key  twice
[T][XXXXXX][Enter]	Initiate XXXXXX as the tare
[S][XXXXXX][Enter]	Initiate an APW. XXXXXX is the sample pieces and the weight on the platter is the sample weight
[A][XXXXXXXX][Enter]	Initiate XXXXXXXX as the APW

For example:

Weight 0950	Data 000950	Count 100
g OZ In S Net	ON APW NO T PT %dwt	M < > PCS
Weight 0000	Data 000950	Count 0
g OZ In S Net	ON APW NO T PT %dwt	M < > PCS

The scale is in the count mode.

Press the keys [T][Enter] on the keyboard of a PC. The XTC will accept this command and tare the scale.

RECALL FUNCTION

The XTC can subtract some data via the key . The default data is APW when the scale powers up.

Weight 3000	Data 000200	Count 1500
Weight 3000	Data 35000	Count 1500
Weight 3000	Data 05000	Count 1500

The scale is in the count or weight mode. (Weight window shows the weight value.)

Press the key . The **B/G** cursor will light and the Data window will display gross weight (e.g. 3.5 lb).

Press the key  and the **T** cursor will light. If the current tare is a push-button tare, the Data display will show the tare value. If the tare is a keyboard tare or no tare exists, it will be 0.0000.

Weight 3000	Data 00000	Count 1500
Weight 3000	Data 9995	Count 1500
Weight 3000	Data 8	Count 1500
Weight 3000	Data 000200	Count 1500

Press the key  and the **PT** cursor will light. The Data display will show the tare that was input via the keyboard. If the tare is a push-button tare or no tare exists, it will show 0.0000.

Press the key  , the **%Accy** cursor is lit, the Data display will show the counting accuracy percentage.

Press the key  , the **ID** cursor is lit, the Data display will show the value of the item No..

Press the key  and the **APW** cursor will light. The Data display will show the APW.

COUNT TARGET ALARM

A target zone (>/<) can be preset via keyboard. If the target alarm is enabled in the Setup Mode, the scale will beep continually when the piece count is within or outside of this range depending on the soft switch setting. If the target zone has been preset, the under cursor "<" will be lit when the piece count is below the Under value. When the piece count is above the Over value, the over cursor ">" will be lit. If both, the Over and Under values are 0, the target alarm will be disabled.

PRESET THE TARGET ZONE

Weight	Data under?	Count 1200
Weight	Data under?	Count 1800
Weight	Data OUER ?	Count 1250
Weight	Data OUER ?	Count 1830
Weight 3000	Data 000200	Count 1500

In count or weight mode, press and hold the key  for about three seconds, then release the key. The scale will enter into target zone setting mode.

Press the key  to accept the displayed value, or enter a new value and then press  to accept it.

After entering the Under value, the display will show prompts as the illustrated.

Press the key  to accept the displayed value, or enter a new value and then press  to accept it.

After entering the Over value, the scale will return to the previous mode automatically.

Note: Both Over and Under values equal to 0 will disable the Target Alarm function.

APW ENHANCEMENT

APW enhancement improves the accuracy of an APW. APW enhancement is based on the fact that an inaccurate APW, while not able to accurately count large numbers of parts, will reliably count a small number. This allows a determination of APW based on a larger weight. Given enough enhancements, the APW becomes very accurate.

This function permits the operator to continuously update the APW based on larger and larger samples. As additional pieces are placed on the scale, a new APW can be calculated based on the new total sample weight and count.

The APW can be enhanced constantly up to 4% of the scale capacity. To ensure a minimum APW initial accuracy, a sample weight of at least five display increments must be used. There is a selection in setup mode which increases the minimum sample to 0.015%, 0.1% or 0.2% of capacity.

When using APW enhancement, you must not add more pieces to the scale than what can be counted accurately using the current APW (about the same pieces, which have already been counted). If this maximum is exceeded, a warning of [OVER] will be displayed for approximately two seconds then will automatically clear. The operator can remove parts until [OVER] will not be displayed again.

If the operator ignores the [OVER] display and adds more pieces (or removes more in count-out sample mode), no further APW enhancement will be done for the current transaction. If the proper procedure is followed, the scale will continue to enhance the APW until 4% of the scale capacity is reached. Once the counting weight reaches 4%, APW enhancement is discontinued.

Notice: The APW inputted via keyboard or recalled from an ID can not be enhanced.

SPECIAL MODES – SETUP MODE

ENTERING THE SETUP MODE

The operating parameters can be configured in the Setup Mode. When “Full Operator Access” is enabled in the Service Mode, step S3.1, the Setup Mode can be accessed by pressing and holding the key  for about seven seconds and then releasing the key.


FUNCTION OF THE KEYS

After Setup Mode is accessed, use the four keys, **FINISH**, **BACKUP**, **TOGGLE** and **ACCEPT**, to configure the parameters.

In the Setup Mode, the functions of the keys will be as follows:

Key	Function	Description
	Finish	Used to end scale configuration and proceed to End Block.
	Backup	Used to step back through program blocks and sub-blocks.
	Toggle	Used to step through the blocks. Once a block is accessed, this key is used to toggle settings On and Off or to step through the setting options of the sub-block.
	Accept	Used to access the program block or to accept the displayed option. Once a displayed sub-block option is accepted, the scale will step forward to the next sub-block or block.

The following diagram gives an overview of the program blocks and sub-blocks.

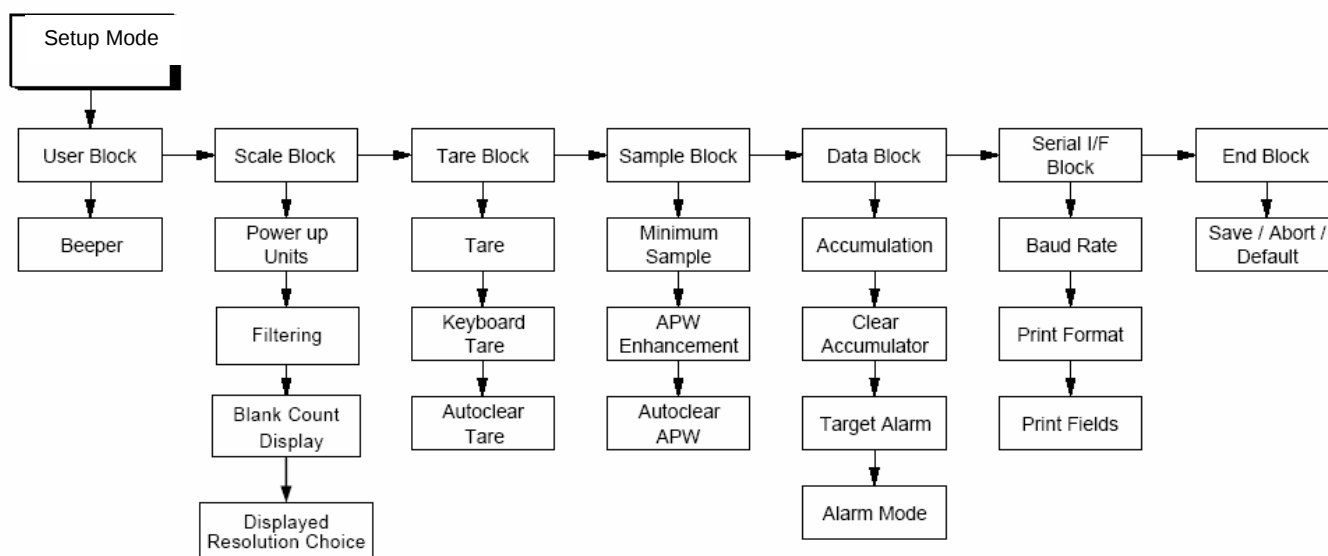

DISPLAY ILLUSTRATION

The scale automatically moves to the first block as soon as the master mode is accessed. Press the key  to toggle among blocks [SCALE], [tArE], [SAMPLE], [dAtA], [SEriAL], [id] and [End]. When a block is displayed, press the key  to access the first sub-block or  to go to end block.

Setup Mode Sample Display—Major block

Weight	Data	Count
F1	uSEr	
g lb oz g oz g oz	ON APW NO T PT	M < > PCS

Setup Mode Sample Display—Sub-block

Weight	Data	Count
F11	OFF	
g lb oz g oz g oz	ON APW NO T PT	M < > PCS

CONFIGURATION

Blocks	Sub Blocks/Parameters
F1 User Block	F1.1 Beeper Off = Disable beeper On = Enable beeper
F2 Scale Block	F2.1 Power-up Weight Units 1 = kg 2 = lb 3 = g The cursor corresponding to the selected unit should be “on” during this block. F2.3 Digital Filter 0 = No filtering 1 = Light filtering 2 = Heavy filtering F2.4 Blank Count Blank Off = The count display will show whatever residual count is existing based on the scale internal divisions and the APW entered, regardless of the weight displayed. On = When the weight display (gross and net) is reading zero, the count display will be zero. F2.5 Displayed Resolution Choice 0 = 5 lb/0.002 lb, 10 lb/0.005 lb, 20 lb/0.01 lb, 50 lb/0.02 lb 1 = 5 lb/0.001 lb, 10 lb/0.002 lb, 20 lb/0.005 lb, 50 lb/0.01 lb 2 = 5 lb/0.0005 lb, 10 lb/0.001 lb, 20 lb/0.002 lb, 50 lb/0.005 lb 3 = 5 lb/0.0002 lb, 10 lb prohibit, 20 lb/0.001 lb, 50 lb/0.002 lb
F3 Tare Block	F3.1 Tare Off = Disable tare On = Enable tare F3.2 Keyboard Tare Off = Disable keyboard tare On = Enable keyboard tare

	F3.3 Auto Clear Tare Off = Disable auto clear tare On = Enable auto clear tare Automatic clear of tare occurs when net weight exceeds 9d. It settles to no motion and then returns to within +/-3d from gross zero.
F4 Sample Block	F4.1 Minimum Sample Off = No minimum sample weight is required. The APW will "flash", if the sample weight is below 0.05% of the capacity until the weight used to calculate the new APW due to APW enhancement goes above 0.05%. 0.05 = Minimum sample is 0.05% of capacity. If the sample weight is below this minimum sample weight, the count display will show "add XX" to require additional samples and data display will blank out to indicate APW calculation is forbidden until the sample weight is more than 0.05% of capacity and the new APW is calculated. 0.10 = Minimum sample is 0.10% of the capacity. 0.20 = Minimum sample is 0.20% of the capacity. F4.2 Average Piece Weight (APW) Enhancement Off = Disable APW enhancement On = Enable APW enhancement F4.3 Auto Clear APW Off = Disable automatic clear of APW On = Enable automatic clear of APW Automatic clear of APW occurs when gross weight (or net weight if a tare has been taken) exceeds 9d, settles to no motion, and then returns to within +/-3d from gross zero.
F5 Data Block	F5.1 Accumulation Off = Disable accumulation On = Enable accumulation F5.2 Clear Accumulator after Print Off = Disable clear after print On = Enable clear after print F5.3 Target Alarm Off = Disable target alarm On = Enable target alarm F5.4 Alarm Mode Off = Scale beeps continuously when count is within the target range On = Scale beeps continuously when count is out of target range F5.5 Alarm Type Off = Weight alarm On = Quantity alarm
F6 Serial Interface	F6.1 Baud Rate

Block	300 = 300 baud 1200 = 1200 baud 2400 = 2400 baud 4800 = 4800 baud 9600 = 9600 baud F6.2 Print Line Format Off = Multiple line format On = Single line format F6.3 Print ID Off = Disable printing of ID On = Enable printing of ID F6.4 Print Gross Off = Disable printing of gross weight On = Enable printing of gross weight F6.5 Print Tare Off = Disable printing of tare On = Enable printing of tare F6.6 Print Net Off = Disable printing of net weight On = Enable printing of net weight F6.7 Print Average Piece Weight (APW) Off = Disable printing of APW On = Enable printing of APW F6.8 Print Pieces Off = Disable printing of pieces On = Enable printing of pieces F6.9 Print Item No. Off = Disable printing of Item No. On = Enable printing of field Item No. F6.10 Output 0 = Command output 1 = Stable output
F7 ID Block	F7.1 ID

	Off = Disable ID On = Enable ID F7.2 Auto Clear ID Off = Disable auto clear ID On = Enable auto clear ID
End Block	This block is used to exit the Setup Mode. After exiting the Setup Mode, the scale will self-test automatically and enter into weight mode. Save = Save all the changes and exit Setup Mode. Abort = Abort any changes and exit Setup Mode. Default = Reset all parameters to the factory defaults and exit the Setup Mode.

CLEANING AND MAINTAINING YOUR SCALE



CLEANING AND MAINTENANCE

- DO NOT allow untrained personnel to operate, clean, inspect, maintain, service, or tamper with this equipment.
- DO NOT attempt to remove the cover or to perform service/maintenance on the internal parts of the scale.
- ALWAYS DISCONNECT this equipment from the power source before cleaning or performing maintenance.
- KEEP the scale clean. Periodically clean the keyboard and cover with a soft clean cloth that has been dampened with a mild window cleaner or detergent. DO NOT USE ANY TYPE OF INDUSTRIAL SOLVENT OR CHEMICALS. DO NOT SPRAY CLEANER DIRECTLY ONTO THE UNIT.
- DO NOT put the scale under water. Use a damp cloth to clean the scale.

TROUBLESHOOTING

If operational difficulties are encountered, first obtain as much information as possible regarding the problem. Failures and malfunctions can often be traced to simple causes such as loose connections or improper setup.

Additional troubleshooting can be performed by your authorized **Xpress** Service representative.

SERVICING YOUR SCALE



For the following services, please contact your **Xpress** representative at www.mt.com/xpress.

	WARNING DISCONNECT ALL POWER TO THIS UNIT BEFORE INSTALLING, SERVICING, CLEANING, OR REMOVING THE FUSE. FAILURE TO DO SO COULD RESULT IN BODILY HARM AND/OR PROPERTY DAMAGE.
--	---



CAUTION

BEFORE CONNECTING OR DISCONNECTING ANY INTERNAL ELECTRONIC COMPONENTS OR INTERCONNECTING WIRING BETWEEN ELECTRONIC EQUIPMENT, ALWAYS REMOVE POWER AND WAIT AT LEAST THIRTY (30) SECONDS. FAILURE TO OBSERVE THESE PRECAUTIONS COULD RESULT IN DAMAGE TO OR DESTRUCTION OF THE EQUIPMENT, OR BODILY HARM.

ENTERING SERVICE MODE

- 1: Remove the calibration plate on the bottom right side of the scale.
- 2: Slide the set up switch backward to back side, the weight and data displays will show "S1" and "TEST" respectively.

FUNCTION OF THE KEYS

After the Service Mode is accessed, use the four keys, **FINISH**, **BACKUP**, **TOGGLE**, and **ACCEPT**, to configure the parameters.

In the Service Mode, the functions of the keys will be as follows:

Key	Function	Description
	Finish	Used to end scale configuration and proceed to End Block.
	Back	Used to step back through program blocks and sub-blocks.
	Toggle	Used to step through the blocks. Once a block is accessed, this key is used to toggle settings on and off or step through the setting options of the sub-block.
	Accept	Used to access the program block or accept the displayed option. Once a displayed sub-block option is accepted, the scale will step forward to the next sub-block or block.

Press the key , the scale will start capturing span and counting down from 5 to 0. Then scale will automatically step forward to the next block.

If "yes" in S2.5 is chosen, the scale needs two points for calibrating the scale. The procedure to add weight will be as follows (take 5lb scale as example): After capturing the zero, it will show:

Weight	Data	Count
S 2 6	A D D	H A L F
>0<  lb g Net	 APW B/B T PT %dev	M < > PCS

Apply test weight (35%FS~65%FS) on the platter and then press the key . The display reads as follows:

Weight	Data	Count
S 2 6	0	H A L F
>0<  lb g Net	 APW B/B T PT %dev	M < > PCS

Input a weight data.

Weight	Data	Count
S 2 6	2	h a l f
>0<  lb g Net	 APW B/B T PT %dev	M < > PCS

Press the key , the scale will start capturing span and counting down from 5 to 0. Then scale will automatically step forward to the next step and show:

Weight	Data	Count
S 2 6	A D D	F U L L
>0<  lb g Net	 APW B/B T PT %dev	M < > PCS

Apply test weight (>85%FS) on the platter and then press the key . The display reads as follows:

Weight	Data	Count
S 2 6	0	F U L L
>0<  lb g Net	 APW B/B T PT %dev	M < > PCS

Input a weight data.

Weight	Data	Count
S 2 6	5	f u l l
>0<  lb g Net	 APW B/B T PT %dev	M < > PCS

Press the key , the scale will start capturing span and counting down from 5 to 0. Then scale will automatically step forward to the next block


Note: If no calibration is done, the changes on the calibration weight and capacity will be ignored.

S3 Control Block	S3.1 Operator Access to Master Mode Off = No access is allowed to Setup Mode by pressing the key  On = Full access is allowed to Setup Mode when the key  is pressed and held for about 7 seconds Enable tare S3.2 Country 2 = Export version 3 = China version
End Block	This block is used to save or abort the changed parameters, and then exit the Service Mode Save = Save all the changes and exit Service Mode. Abort = Exit Service Mode without saving any changes
Exit Service Mode	Pressing the key  in Service Mode will lead to the end block. In the end block, press the key  to enter the sub-block. Press the key  to toggle between save or abort. Press the key  to accept the choice and exit the Service Mode. Then the Weight window and Data window will display "SETuP" and "OFF" message respectively. Slide the calibration switch back to the normal position, then the scale will go through a power-up sequence and enter into weight mode.

COMMUNICATION

The XTC support bi-directional RS-232 serial communication. Using the optional cable with RS-232 convert circuit, the XTC can communicate with a printer or host like PC.

Serial port wiring diagram

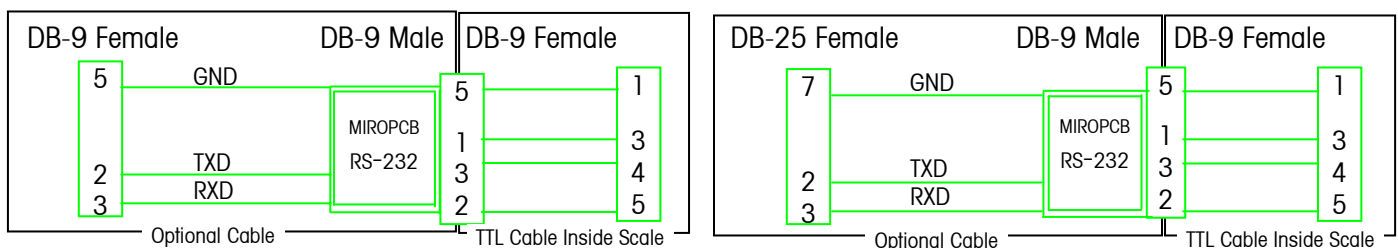

Communication parameter format

Baud rate: 300, 1200, 2400, 4800 and 9600 can be selected via softswitch setting.

Data: 11 bits ASCII codes, among these, there is 1 start bit, 7 ASCII coded data bits, 1 even parity bit and 2 stop bits.

Data Output Format

There are two data output formats are available: single line output and multi-line output. It can also be selected to disable output of some data.

Single Line Output Format

The following is the outputted contents and the related format.

CN: Add one after each printing operation.

STX	X	X	X	SP	SP
-----	---	---	---	----	----

Item No.

X	X	X	X	X	X	SP	I	T	E	M	SP	N	o	.	SP
---	---	---	---	---	---	----	---	---	---	---	----	---	---	---	----

Gross weight

X	X	X	X	X	X	SP	I	b	SP
---	---	---	---	---	---	----	---	---	----

Tare weight

X	X	X	X	X	X	SP	I	b	SP	T	R	SP
---	---	---	---	---	---	----	---	---	----	---	---	----

Net weight

X	X	X	X	X	X	SP	I	b	SP	N	E	T	SP
---	---	---	---	---	---	----	---	---	----	---	---	---	----

Average piece weight (APW)

X	X	X	X	X	X	X	SP	I	b	SP	A	P	W	SP
---	---	---	---	---	---	---	----	---	---	----	---	---	---	----

Pieces

X	X	X	X	X	X	SP	P	C	S	CR	LF
---	---	---	---	---	---	----	---	---	---	----	----

Note:

- [STX] Document Head, ASCII Code 02H.
- [SP] Space Bar, ASCII Code 20H.
- [CR] Enter Key, ASCII Code 0DH.
- [LF] Line Feed, ASCII Code 0AH.
- The actual weight unit printed depends on the softswitch setting of Power-up Weight Unit.

The meaning of the same characters in the following charts will not be illustrated.

Multi-line Output Format

CN: Add one after each printing operation.

STX	X	X	X	CR	LF
-----	---	---	---	----	----

Item No.

STX	X	X	X	X	X	X	SP	I	T	E	M	SP	N	o	.	CR	LF
-----	---	---	---	---	---	---	----	---	---	---	---	----	---	---	---	----	----

Gross weight

X	X	X	X	X	X	SP	I	b	CR	LF
---	---	---	---	---	---	----	---	---	----	----

Tare weight

X	X	X	X	X	X	SP	I	b	SP	T	R	CR	LF
---	---	---	---	---	---	----	---	---	----	---	---	----	----

Net weight

X	X	X	X	X	X	SP	I	b	SP	N	E	T	CR	LF
---	---	---	---	---	---	----	---	---	----	---	---	---	----	----

	Average piece weight
	X X X X X X X SP I b SP A P W CR LF
	Pieces
	X X X X X X SP P C S CR LF
Accumulation Output Format	Notice: The actual weight unit printed depends on the softswitch setting of Power-up Weight Unit.
	When the weight unit is g, the APW should be:
	X X X X X X X X X X SP k g SP A P W CR LF
	STX C N SP X X X SP SP
	I T E M SP N o . SP X X X X X X X SP SP
	T O T SP P C S SP X X X X X X CR LF

External Control Input

External ASCII coded commands input are acceptable to complete the Tare, Zero, Clear, Print and Sampling operations. The commands are detailed as below.

[T][CR]	Push-button tare
[Z][CR]	Zero Command
[P][CR]	Print Command
[C][CR]	Clear APW, if APW is not zero, clear tare if APW is zero.
[C][C][CR]	Clear Command. Clear the APW, then clear tare.
[T][XXXXXX][CR]	Enter tare. XXXXXX is the value of tare. The last digit of the tare entered should agree with the scale divisions. Otherwise, it shall be invalid.
[S][XXXXXX][CR]	Enter the number of pieces (XXXXXX) as the sample count.
[A][XXXXXXXX][CR]	Enter the value XXXXXXXX as the APW.

APPENDIX

■ SETUP MODE PARAMETER OVERVIEW

Block	Soft Switch	Description	Default
F1		User Block	
	F1.1	Beeper	ON
F2		Scale Block	
	F2.1	Power-up Weight Unit	2
	F2.3	Digital Filter	1
	F2.4	Blank Count Display	ON
	F2.5	Displayed Resolution Choice	2
F3		Tare Block	
	F3.1	Tare	ON
	F3.2	Keyboard Tare	ON
	F3.3	Auto Clear Tare	OFF
F4		Sample Block	
	F4.1	Minimum Sample	0.20
	F4.2	APW Enhancement	OFF
	F4.3	Auto Clear APW	OFF
F5		Data Block	
	F5.1	Accumulation	ON
	F5.2	Clear Accumulation after Print	OFF
	F5.3	Target Alarm	ON
	F5.4	Alarm Mode	OFF
	F5.5	Alarm Type	ON
F6		Serial Interface Block	
	F6.1	Baud Rate	9600
	F6.2	Print Line Format	OFF
	F6.3	Print CN	ON
	F6.4	Print Gross	ON
	F6.5	Print Tare	ON
	F6.6	Print Net	ON
	F6.7	Print APW	ON
	F6.8	Print Pieces	ON
	F6.9	Print Item No.	ON
	F6.10	Output	0
F7		ID Block	
	F7.1	ID	ON
	F7.2	Auto Clear ID	OFF
F7		End Block	
	End	Save/Abort	SAVE

ERROR MESSAGES

The scale will display an error message if a problem or an incorrect keyboard entry is sensed. The error codes are:

Display	Possible Cause	Troubleshooting
E11	RAM error	1. Restart the scale. 2. Recalibrate the scale. 3. Change the main PCB.
E16	ROM checksum error	1. Restart the scale. 2. Recalibrate the scale. 3. Change the main PCB.
E18	EPROM checksum error	1. Restart the scale. 2. Recalibrate the scale. 3. Change the main PCB.
uuuuu	Under capacity	1. Put the scale pan on. 2. Press the key  to zero scale.
nnnnn	Count data or total counts are above 999,999, the weight on the platter is 5d above the full capacity.	Remove the items until error message disappears or clear the accumulator.
-----	Cannot capture zero	1. Restart the scale with no weight. 2. Recalibrate the scale. 3. Change the load cell or main PCB.

SPECIFICATIONS

Display

3 part display (5 digit Weight, 6 digit Data, 6 digit Count)

12 mm height, green VFD

Internal Resolution

1/500,000

Displayed Resolution

Default: 1/10'000

Maximum: 1/25'000

Keyboard

20 membrane keyboard

Platter

5 lb model: 6.6" x 7.7" Stainless Steel

10/20/50 lb models: 9.5" x 13.5" Stainless Steel

Scale Dimensions

13.6" (L) x 13.6" (W) x 4.8" (H)

Units

lb, kg, g

Interface

RS232 (Accessory)

Power

External adapter 12V/600mA

Recommended APW

>1/5d (0.2d)

APW Enhanced

Operating Temperature

32°F to 104°F (0°C to +40°C)



10 to 90% humidity, non-condensing

Specifications are subject to change without notice.

 GEO VALUE TABLE

Use the following geo codes if you relocate your scale to a site other than the original location where it was calibrated.

Northern and Southern latitude in degrees and minutes	Height above sea-level in meters										
	0 325	325 650	650 975	975 1300	1300 1625	1625 1950	1950 2275	2275 2600	2600 2925	2925 3250	3250 3575
	Height above sea-level in feet										
	0 1060	1060 2130	2130 3200	3200 4260	4260 5330	5330 6400	6400 7460	7460 8530	8530 9600	9600 10,660	10,660 11,730
0° 0' — 5° 46'	5	4	4	3	3	2	2	1	1	0	0
5° 46' — 9° 52'	5	5	4	4	3	3	2	2	1	1	0
9° 52' — 12° 44'	6	5	5	4	4	3	3	2	2	1	1
12° 44' — 15° 6'	6	6	5	5	4	4	3	3	2	2	1
15° 6' — 17° 10'	7	6	6	5	5	4	4	3	3	2	2
17° 10' — 19° 2'	7	7	6	6	5	5	4	4	3	3	2
19° 2' — 20° 45'	8	7	7	6	6	5	5	4	4	3	3
20° 45' — 22° 22'	8	8	7	7	6	6	5	5	4	4	3
22° 22' — 23° 54'	9	8	8	7	7	6	6	5	5	4	4
23° 54' — 25° 21'	9	9	8	8	7	7	6	6	5	5	4
25° 21' — 26° 45'	10	9	9	8	8	7	7	6	6	5	5
26° 45' — 28° 6'	10	10	9	9	8	8	7	7	6	6	5
28° 6' — 29° 25'	11	10	10	9	9	8	8	7	7	6	6
29° 25' — 30° 41'	11	11	10	10	9	9	8	8	7	7	6
30° 41' — 31° 56'	12	11	11	10	10	9	9	8	8	7	7
31° 56' — 33° 9'	12	12	11	11	10	10	9	9	8	8	7
33° 9' — 34° 21'	13	12	12	11	11	10	10	9	9	8	8
34° 21' — 35° 31'	13	13	12	12	11	11	10	10	9	9	8
35° 31' — 36° 41'	14	13	13	12	12	11	11	10	10	9	9
36° 41' — 37° 50'	14	14	13	13	12	12	11	11	10	10	9
37° 50' — 38° 58'	15	14	14	13	13	12	12	11	11	10	10
38° 58' — 40° 5'	15	15	14	14	13	13	12	12	11	11	10
40° 5' — 41° 12'	16	15	15	14	14	13	13	12	12	11	11
41° 12' — 42° 19'	16	16	15	15	14	14	13	13	12	12	11
42° 19' — 43° 26'	17	16	16	15	15	14	14	13	13	12	12
43° 26' — 44° 32'	17	17	16	16	15	15	14	14	13	13	12
44° 32' — 45° 38'	18	17	17	16	16	15	15	14	14	13	13
45° 38' — 46° 45'	18	18	17	17	16	16	15	15	14	14	13
46° 45' — 47° 51'	19	18	18	17	17	16	16	15	15	14	14
47° 51' — 48° 58'	19	19	18	18	17	17	16	16	15	15	14
48° 58' — 50° 6'	20	19	19	18	18	17	17	16	16	15	15
50° 6' — 51° 13'	20	20	19	19	18	18	17	17	16	16	15
51° 13' — 52° 22'	21	20	20	19	19	18	18	17	17	16	16
52° 22' — 53° 31'	21	21	20	20	19	19	18	18	17	17	16
53° 31' — 54° 41'	22	21	21	20	20	19	19	18	18	17	17
54° 41' — 55° 52'	22	22	21	21	20	20	19	19	18	18	17
55° 52' — 57° 4'	23	22	22	21	21	20	20	19	19	18	18
57° 4' — 58° 17'	23	23	22	22	21	21	20	20	19	19	18
58° 17' — 59° 32'	24	23	23	22	22	21	21	20	20	19	19
59° 32' — 60° 49'	24	24	23	23	22	22	21	21	20	20	19
60° 49' — 62° 9'	25	24	24	23	23	22	22	21	21	20	20
62° 9' — 63° 30'	25	25	24	24	23	23	22	22	21	21	20
63° 30' — 64° 55'	26	25	25	24	24	23	23	22	22	21	21
64° 55' — 66° 24'	26	26	25	25	24	24	23	23	22	22	21
66° 24' — 67° 57'	27	26	26	25	25	24	24	23	23	22	22
67° 57' — 69° 35'	27	27	26	26	25	25	24	24	23	23	22
69° 35' — 71° 21'	28	27	27	26	26	25	25	24	24	23	23
71° 21' — 73° 16'	28	28	27	27	26	26	25	25	24	24	23
73° 16' — 75° 24'	29	28	28	27	27	26	26	25	25	24	24
75° 24' — 77° 52'	29	29	28	28	27	27	26	26	25	25	24
77° 52' — 80° 56'	30	29	29	28	28	27	27	26	26	25	25
80° 56' — 85° 45'	30	30	29	29	28	28	27	27	26	26	25
85° 45' — 90° 00'	31	30	30	29	29	28	28	27	27	26	26

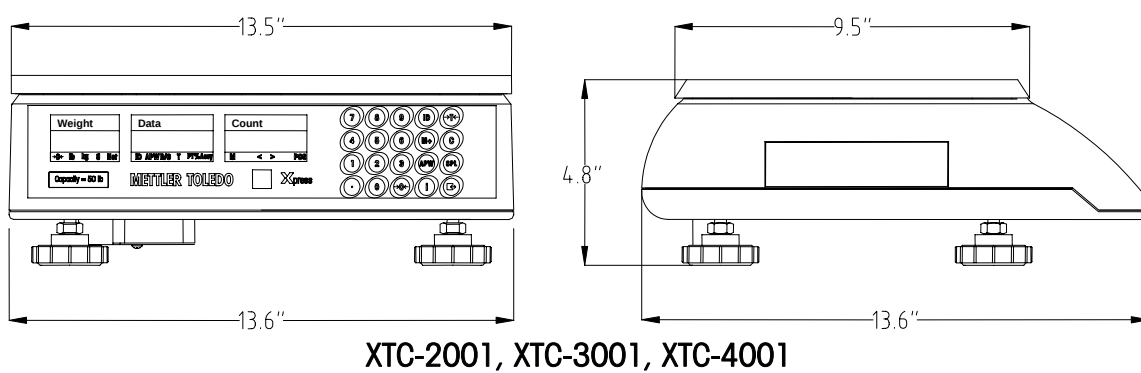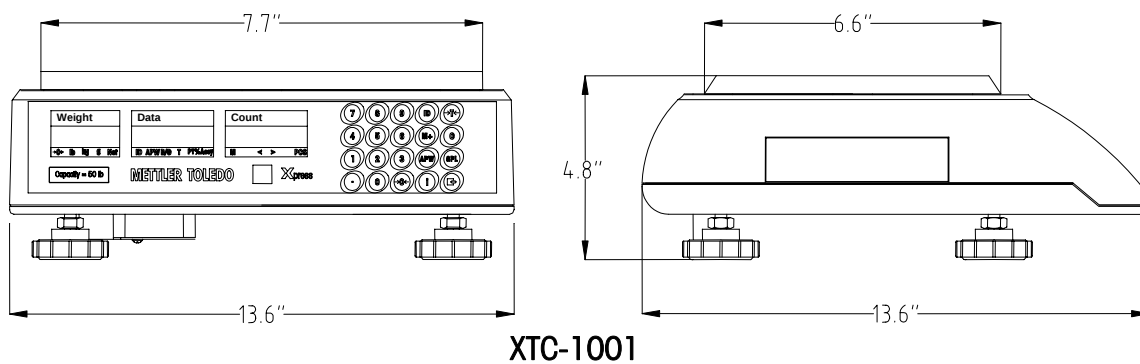 PHYSICAL DIMENSIONS

Notes

Notes

Xpress

Mettler-Toledo, Inc.
60 Collegeview
Westerville, OH 43081


5/2004
MTX04-OM007.1E

STANDARD COUNTING SCALE

QUICK START GUIDE

Models XTC

DISPLAY

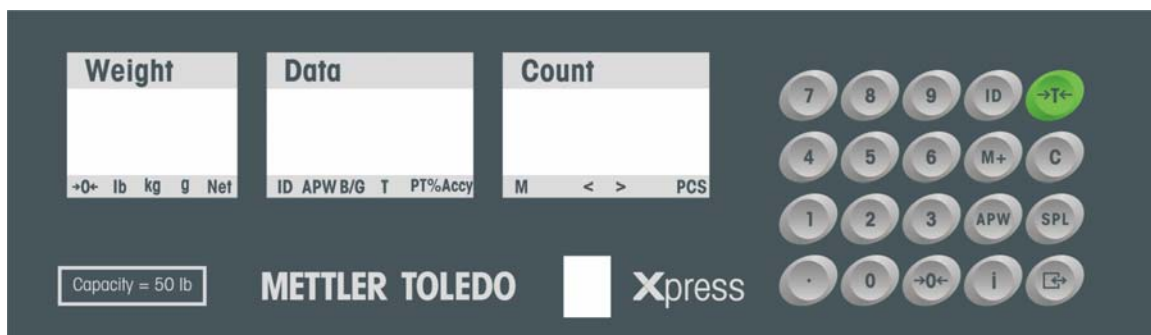

KEYPAD

Key	Name	Function
0 ~ 9	Numeric	Data entry (0-9)
.	Decimal	Enters a decimal point/Toggles alarm beep
→0←	Zero	Zeroes the scale
→T←	Tare	Subtracts tare value and switches from gross to net mode
C	Clear	Clears data from the display
APW	APW	Initiates Average Piece Weight (APW) entry
SPL	Sample	Initiates sampling
i	Recall	Subtracts the accumulated quantity and number of repeated entries
ID	ID	Stores ID number, APW, tare, and item number
M+	Accumulation	Adds to the accumulator count or subtracts accumulation.
↵	Enter/Print	Confirms an operation or initiates data output

CURSORS (VFD)

Key	Description
→0←	When the scale is at the gross zero, this cursor will be lit
lb, kg, g	Weight unit cursor; Weight unit can be set in Setup Mode
Net	When net weight is displayed, this cursor will be lit
ID	When item number is recalled, this cursor will be lit
APW	When Average Piece Weight (APW) is recalled, this cursor will be lit
B/G	When gross weight is recalled, this cursor will be lit
T	When push-button tare weight is recalled, this cursor will be lit
PT	When keyboard tare is recalled, this cursor will be lit
%Accy	When the counting accuracy percentage is recalled, this cursor will be lit
M	When the value in the accumulator is not zero, this cursor will be lit
PC S	When the count is displayed, this cursor will be lit
>	Target Alarm: Indicates the count is above the Over value
<	Target Alarm: Indicates the count is below the Under value
< >	When both > and < cursors are lit, it indicates that the count is within the target zone

DISPLAY WINDOWS


Window	Description
Weight Display (Weight)	Displays the weight.
Data Display (Data)	Displays item No., APW, gross weight, tare, push-button tare or accuracy percentage sequentially with each time the key i is pressed. The default display is APW.
Count Display (Count)	Displays the counts.

STANDARD COUNTING SCALE

QUICK START GUIDE

ZERO


Weight	Data	Count
0 2 0 0	0 0 0 0 0 0	
>0< lb kg g Net	ID APW B/G T PT %Accy	M < > PCS

 

Weight	Data	Count
0 0 0 0	0 0 0 0 0 0	
>0< lb kg g Net	ID APW B/G T PT %Accy	M < > PCS

TARE


Weight	Data	Count
0 2 0 0	0 0 0 0 0 0	
>0< lb kg g Net	ID APW B/G T PT %Accy	M < > PCS

 

Weight	Data	Count
0 0 0 0	0 0 0 0 0 0	
>0< lb kg g Net	ID APW B/G T PT %Accy	M < > PCS

SAMPLING (e.g. 20 pieces)


Weight	Data	Count
1 0 0 0	0 0 0 0 0 0	
>0< lb kg g Net	ID APW B/G T PT %Accy	M < > PCS

 

Weight	Data	Count
1 0 0 0	0 5 0 0 0 0	2 0
>0< lb kg g Net	ID APW B/G T PT %Accy	M < > PCS

INPUT A KNOWN AVERAGE PIECE WEIGHT (e.g. APW = 0.05 lb)

Weight	Data	Count
1 0 0 0	0 0 0 0 0 0	
>0< lb kg g Net	ID APW B/G T PT %Accy	M < > PCS

 

Weight	Data	Count
1 0 0 0	0 0 5 0 0 0	2 0 0
>0< lb kg g Net	ID APW B/G T PT %Accy	M < > PCS

STANDARD COUNTING SCALE

INSTALLATION INSTRUCTIONS

Models XTC


UNPACKING

Thank you for purchasing an **MT Xpress** product. Please inspect the package immediately upon receipt. If the box is damaged, check for internal damage and file a freight claim with the carrier if necessary.


If the container is undamaged, open the box, remove the scale and place it on a solid, flat surface.

Please keep the packing material and shipping insert in case you need to return the scale to an **Xpress** representative.

5 lb models

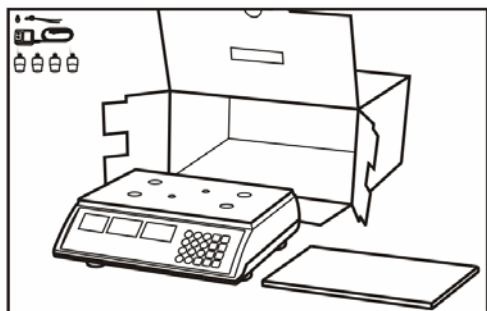

10/20/50 lb models

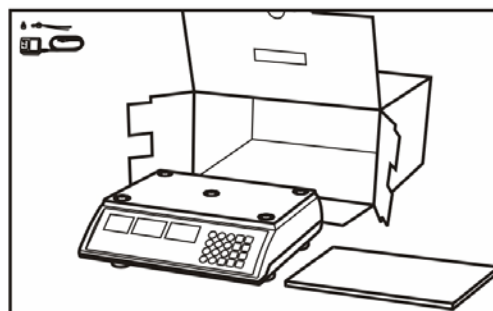

Package contents for all **Xpress** Standard Counting Scales include:

Product

- XTC Counting Scale
- Pan (only XTC1001)
- Platter Support Kit (only XTC1001)
- Scale Platter, Adapter
- Lead Seal Wire and Lead

Documents

- Quick Start Guide
- Installation Instructions


CD-ROM

- Operation & Service Manual

ASSEMBLY


5 lb models

1.

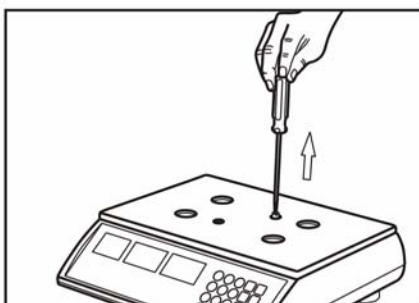

10/20/50 lb models


1.

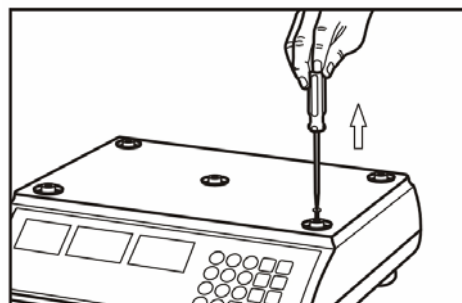


(20/50 lb models skip this step)

5 lb models continued


2.

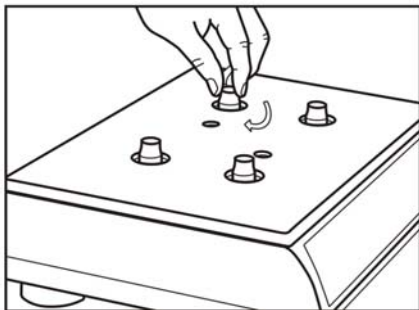

3.

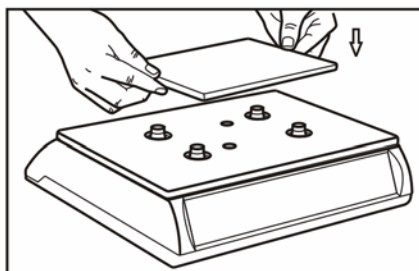


4.

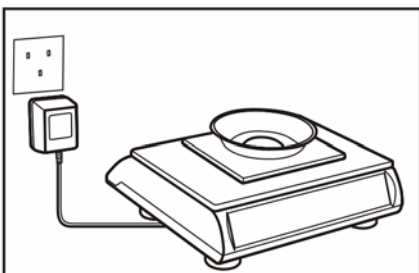

10/20/50 lb models continued

2.

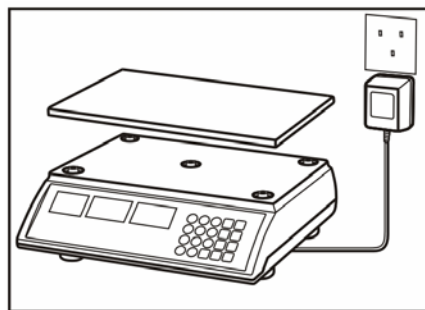

All models:

Level the scale by adjusting the four rubber feet until the leveling bubble is centered in the level indicator.

Proper alignment



Improper alignment



For detailed product information, please consult the Operation & Service Manual provided on the CD-ROM.

CUSTOMER SERVICE

We at **MT Xpress** want to make sure you received the product you expected. It is important to us that you are satisfied with your purchase. If there is anything we can help you with, or if you are not satisfied with either your product or the services received from the **Xpress** representative, let us know:

24/7 Information and Support:

www.mt.com/xpress

xpress@mt.com

8 AM to 8 PM EST

Toll Free: 1-866-MTXPRESS

Xpress

Mettler-Toledo, Inc.

60 Collegeview

Westerville, OH 43081

THERMAL PRINTER

TSP600 SERIES

USER'S MANUAL

MODE D'EMPLOI

BEDIENUNGSANLEITUNG

MANUALE DI ISTRUZIONI



**Federal Communications Commission
Radio Frequency Interference
Statement**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

For compliance with the Federal Noise Interference Standard, this equipment requires a shielded cable.

This statement will be applied only for the printers marketed in U.S.A.

**Statement of
The Canadian Department of Communications
Radio Interference Regulations**

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

The above statement applies only to printers marketed in Canada.

**CE
Manufacturer's Declaration of Conformity**

EC Council Directive 89/336/EEC of 3 May 1989

This product, has been designed and manufactured in accordance with the International Standards EN 50081-1/01.92 and EN 50082-1/01.92, following the provisions of the Electro Magnetic Compatibility Directive of the European Communities as of May 1989.

EC Council Directive 73/23/EEC and 93/68/EEC of 22 July 1993

This product, has been designed and manufactured in accordance with the International Standards EN 60950, following the provisions of the Low Voltage Directive of the European Communities as of July 1993.

The above statement applies only to printers marketed in EU.

Trademark acknowledgments

TSP600: Star Micronics Co., Ltd.

ESC/POS: Seiko Epson Corporation

Notice

- All rights reserved. Reproduction of any part of this manual in any form whatsoever, without STAR's express permission is forbidden.
- The contents of this manual are subject to change without notice.
- All efforts have been made to ensure the accuracy of the contents of this manual at the time of going to press. However, should any errors be detected, STAR would greatly appreciate being informed of them.
- The above notwithstanding, STAR can assume no responsibility for any errors in this manual.

TABLE OF CONTENTS

1. Parts Identification and Nomenclature	1
2. Consumable Parts and AC Adapter	4
3. Connecting Cables and AC Adapter	6
3-1. Interface Cable	6
3-2. Connecting to a Peripheral Unit	8
3-3. Connecting the Optional AC Adapter	9
3-4. Turning Power On	10
4. Control Panel and Other Functions	11
4-1. Control Panel	11
4-2. Errors	11
4-3. Self Printing	13
5. Loading the Roll Paper	14
6. Adjusting the Near-end Sensor	17
7. Preventing and Clearing Paper Jams	19
7-1. Preventing Paper Jams	19
7-2. Removing Paper Jam	19
7-3. Releasing a locked Cutter (Auto Cutter Mode only)	20
8. Periodical Cleaning	22
8-1. Cleaning the Thermal Head	22
8-2. Cleaning the Paper Holder	22
Appendix A: Specifications	95
A-1. General Specifications	95
A-2. Auto Cutter Specifications	96
A-3. Interface	96
A-4. Electrical Characteristics	96
A-5. Option	96
A-6. Environmental Requirements	97
A-7. Reliability	97
Appendix B: Dip Switch Setting	98
B-1. Parallel Interface Type	99
B-2. Serial Interface Type	101
Appendix C: Parallel Interface	104
Appendix D: Serial Interface	105
D-1. RS-232C Connector	106
D-2. Cable Connections	107
D-3. Electrical Characteristics	107
Appendix E: Peripheral Unit Drive Circuit	108
Appendix F: Memory Switch Settings	109


Please access the following URL

http://www.star-micronics.co.jp/service/frame_sp_spr_e.htm


for the latest revision of the manual.

1. Parts Identification and Nomenclature

Auto Cutter Model

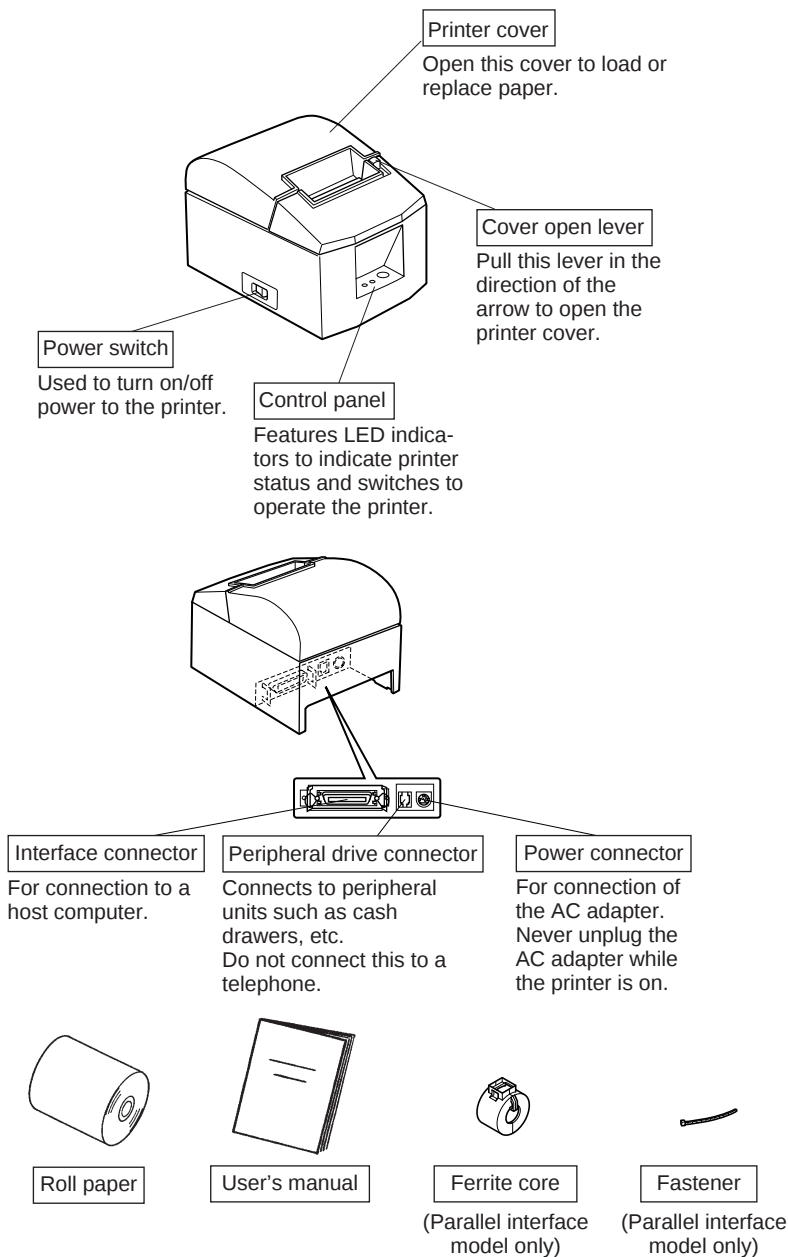

Tear Bar Model

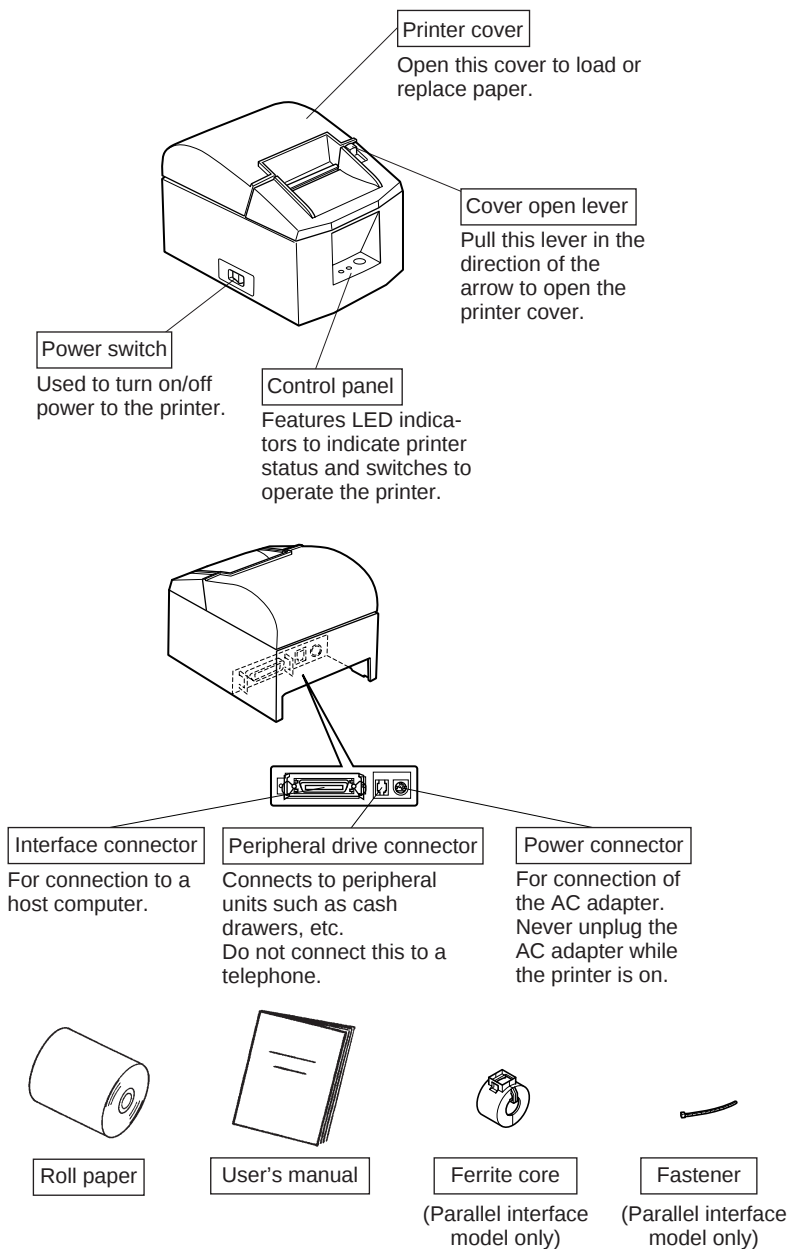

Choosing a place for the printer

Before actually unpacking the printer, you should take a few minutes to think about where you plan to use it. Remember the following points when doing this.

- ✓ Choose a firm, level surface where the printer will not be exposed to vibration.
- ✓ The power outlet you plan to connect to for power should be nearby and unobstructed.
- ✓ Make sure that the printer is close enough to your host computer for you to connect the two.
- ✓ Make sure that the printer is not exposed to direct sunlight.
- ✓ Make sure that the printer is well away from heaters and other sources of extreme heat.
- ✓ Make sure that the surrounding area is clean, dry, and free of dust.
- ✓ Make sure that the printer is connected to a reliable power outlet. It should not be on the same electric circuit as copiers, refrigerators, or other appliances that cause power spikes.
- ✓ Make sure that the room where you are using the printer is not too humid.

2. Consumable Parts and AC Adapter

When consumable parts have run out, use those specified in the table below. Make sure that the AC adapter specified in the table is used.

Use of consumable parts or AC adapter which are not specified in the table may result in damage to the printer, fire or electric shock.

(1) Roll paper specification

Thermal paper

Thickness: 65~85 μm

Width: 79.5 $\pm$ 0.5 mm (57.5 $\pm$ 0.5 mm when the optional paper roller holder is used)

Outer roll diameter: $\varnothing$ 90 mm or less

Take up paper roll width: 80 $^{+0.5}_{-1}$ mm or (58 $^{+0.5}_{-1}$ mm when the optional paper roller holder is used)

Core outer/inner diameter

Paper thickness	Core outer	Core inner
65~85 μm	$\varnothing$ 18 $\pm$ 1 mm	$\varnothing$ 12 $\pm$ 1 mm

Printed surface: Outer edge of roll

Tail end handling: Do not use paste or glue to secure the roll paper or its core.

Do not fold the tail end of the paper.

(2) Recommended paper

Mitsubishi Paper Mills Limited

P220AG (normal type paper), 65 μm (thickness)

HP220A (high image stability paper), 65 μm (thickness)

HP220AB-1 (high image stability paper), 75 μm (thickness)

P220AB (normal type paper, card ticket), 85 μm (thickness)

Oji Paper Co., Ltd.

PD150R (normal type paper), 75 μm (thickness)

PD160R (high image stability paper), 65/75 μm (thickness)

Nippon Paper Industries

TF50KS-E2C (normal type paper), 65 μm (thickness)

Depending on the type and thickness of the paper, it may be necessary to change the settings for printing darkness. To change the darkness settings, use the printing darkness settings command <ESC><RS> 'd' n. Refer to the separate programmer's manual for details.

(3) AC adapter (option)

Model name: PS60-24 A

Input: 100 to 240 V AC, 50/60 Hz

Output: DC24 $\pm$ 5%, 2.0 A (5.0 A Load 10 sec. Max)

Important!


Access the following URL for the information of the recommended paper.
<http://www.star-micronics.co.jp/>

3. Connecting Cables and AC Adapter


3-1. Interface Cable

3-1-1. Ferrite Core Installation (Parallel interface model only)


- (1) For only the parallel interface model, affix the ferrite core onto the cable as shown in the illustration below.

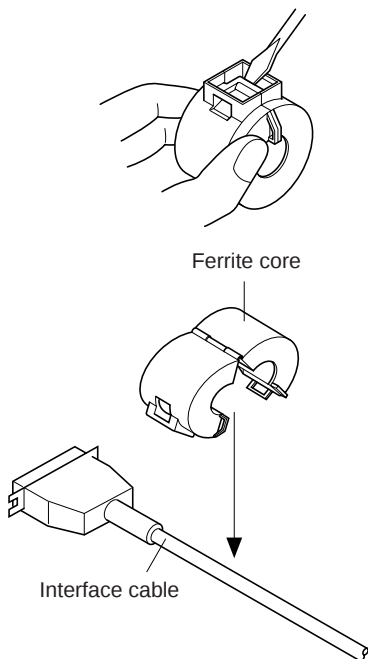

- (2) Pass the fastener through the ferrite core.

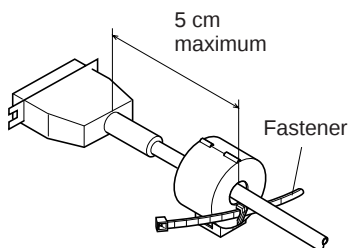

- (3) Loop the fastener around the cable and lock it. Use scissors to cut off any excess.

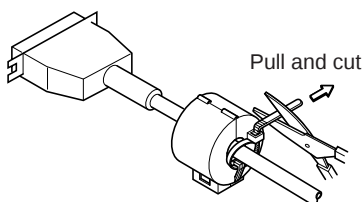


3-1-2. Connecting the Interface Cable

Note: Before connecting/disconnecting the interface cable, make sure that power to the printer and all the devices connected to the printer is turned off.

Also make sure the power cable plug is disconnected from the AC outlet.

- (1) Connect the interface cable to the connector on the rear panel of the printer.
- (2) In the case of a serial interface, tighten the connector screws. In the case of a parallel interface, fasten the connector clasps.

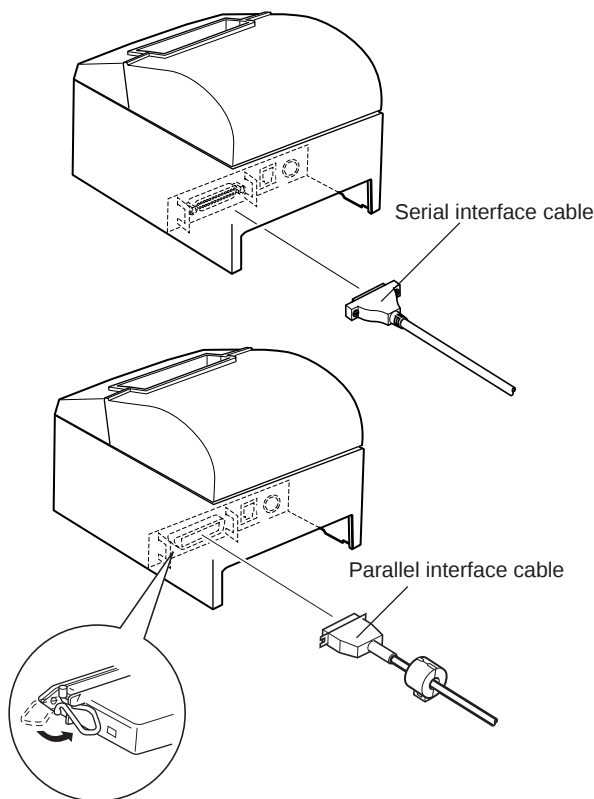

3-2. Connecting to a Peripheral Unit

You can connect a peripheral unit to the printer using a modular plug. The following describes how to install the ferrite core and make the actual connection. See “Modular plug” on page 108 for details about the type of modular plug that is required. Note that this printer does not come with a modular plug or wire, so it is up to you to obtain one that suits your needs.


Important!

Make sure that the printer is turned off and unplugged from the AC outlet and that the computer is turned off before making connections.

- (1) Connect the peripheral drive cable to the connector on the rear panel of the printer.

Important!

Do not connect a telephone line into the peripheral drive connector. Failure to observe this may result in damage to the printer. Also, for safety purposes, do not connect wiring to the external drive connector if there is a chance it may carry peripheral voltage.

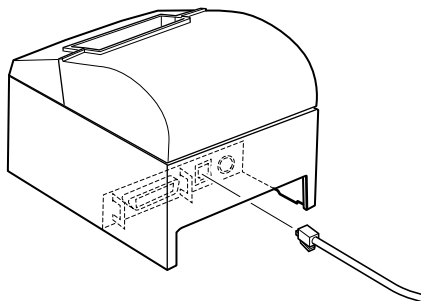

3-3. Connecting the Optional AC Adapter


Note: Before connecting/disconnecting the AC adapter, make sure that power to the printer and all the devices connected to the printer is turned off. Also make sure the power cable plug is disconnected from the AC outlet.

(1) Connect the AC adapter to the power cable.

Note: Use only the standard AC adapter and power cable.

(2) Connect AC adapter to the connector on the printer.

(3) Insert the power cable plug into an AC outlet.

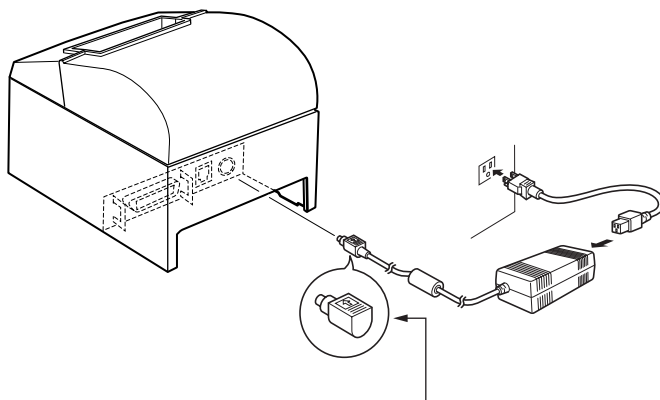

Important!


When disconnecting the power cable, take hold of the cable connector to pull it out. Releasing the lock makes it easy to disconnect the connector.

Pulling the power cable excessively could cause damage to the connector.

3-4. Turning Power On

Make sure that the AC adapter has been connected as described in 3-3.

- (1) Set the power switch located on the front of the printer to on.
The POWER lamp on the control panel will light up.


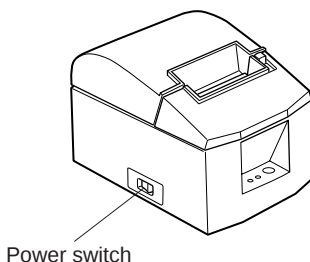


Important!

We recommend that you unplug the printer from the power outlet whenever you do not plan to use it for long periods. Because of this, you should locate the printer so that the power outlet it is plugged into is nearby and easy to access.

4. Control Panel and Other Functions

4-1. Control Panel

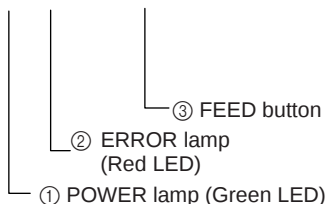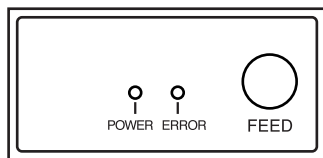

① POWER lamp (Green LED)
Lights when the power is ON

② ERROR lamp (Red LED)
Indicates various errors in combination with POWER lamp

③ FEED button
Press the FEED button to feed roll paper.

4-2. Errors

1) Automatically recoverable error

Error Description	POWER lamp	ERROR lamp	Recovery Conditions
Head high temperature detection	Flashes at 0.5 second intervals	Off	Automatically recovered after the print head has cooled.
Cover open error	On	On	Automatically recovered by closing the printer cover.

2) Non recoverable error

Error Description	POWER lamp	ERROR lamp	Recovery Conditions
RAM error	Off	On	This is not a recoverable error. Consult dealer for repairs.
Memory SW error	Flashes at 0.25 second intervals	Flashes at 0.25 second intervals	This is not a recoverable error. Consult dealer for repairs.
Thermistor error	Flashes at 0.5 second intervals	Flashes at 0.5 second intervals	This is not a recoverable error. Consult dealer for repairs.
Power supply error	Flashes at 1 second intervals	Flashes at 1 second intervals	This is not a recoverable error. Consult dealer for repairs.

Note

- 1) If a non recoverable error occurs, turn the power OFF immediately.
- 2) When Power supply error occurs, there is a possibility that the power supply unit has a trouble.
For other non recoverable errors, please consult the dealer for repairs.

3) Paper cut error

Error Description	POWER lamp	ERROR lamp	Recovery Conditions
Paper cut error	Off	Flashes at 0.125 second intervals	Recovered If the cutter returns to the home position after turning the power OFF and ON. Restoration is also possible with the <DLE><ENQ>n command when in the ESC/POS mode.

Note

- 1) If the cutter doesn't return to the home position, or doesn't perform the initial movement, it cannot be recovered.
- 2) If the paper is jammed, turn the power off, clear the jammed paper, then turn the power ON.
- 3) Handling paper cut errors that occur in the printer status.
STAR Mode: Non recoverable error
ESC/POS MOde: Recoverable error

4) Paper detection error

Error Description	POWER lamp	ERROR lamp	Recovery Conditions
Paper out error	On	Flashes at 0.5 second intervals	Automatically recovered by loading a new paper roll, then closing the printer cover.
Paper near end	On	Flashes at 2 second intervals	An error is displayed in the STAR mode, but printing continues without stopping. Operations in the ESC/POS mode are determined by the <ESC> "c4" n command. In other words, recovery will be attained automatically when paper is set in the printer and the cover closed after printing has stopped if the parameter has been set to cease printing. If the parameter has not been set to cease printing, the error will be displayed but printing will continue.

(1) Test Printing

Turn the power on while holding the FEED button depressed.

Test printing will be performed according to the Ver. No., DIP switch settings and character order. When the FEED button is depressed at the time of the end of test printing, only the characters will be printed out repeatedly.

*** TSP600 Ver1.00

Interface : Parallel

DIP Switch 1

SW 12345678

On *****

Off

\$ % & ' () * + , - . : ; < = > ? @ A B C D E F G H I J K L M N O P Q R S T U V W X Y Z [\] ^ _ ` a b c d e f g h i j k l m n o p q r s t u v w x y z { | } ~ ¡ ¢ £ ¤ ¥ ¦ § ¨ © ª « ¬ ® ¯ ° ± ² ³ ´ µ ¶ · ¸ ¹ º » ¼ ½ ¾ ¿

(2) Hexadecimal Dump Mode

Open the printer cover, then turn the power on while holding the FEED button. When the cover is closed, “*** HEX DUMP PRINTING ***” is printed, and the printer enters the Hexadecimal Dump Mode.

Each of the signals sent from the computer to the printer will be printed out in hexadecimal code.

This function allows you to check if a control code sent to the printer by the program being used is correct or not. The final line is not printed if its data is less than one full line. However, if the FEED button is pushed, the final line is printed. To turn off the mode, it is necessary to turn off the printer completely.


*** HEX DUMP PRINTING ***

20	21	22	23	24	25	26	27	!"#\$%&'
28	29	2A	2B	2C	2D	2E	2F	()**,-./
30	31	32	33	34	35	36	37	01234567
38	39	3A	3B	3C	3D	3E	3F	89:;<=>?
40	41	42	43	44	45	46	47	@ABCDEFG
48	49	4A	4B	4C	4D	4E	4F	HIJKLMNO
50	51	52	53	54	55	56	57	PQRSTUVWXYZ


5. Loading the Roll Paper

Be sure to use roll paper that matches the printer's specification.



When using a paper roll with an 57.5 mm width, install the optional paper roll holder as described on the following page.

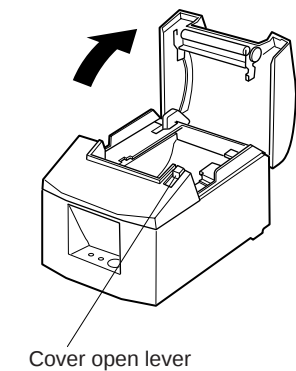


- 1) Push the Cover open lever, and open the printer cover.

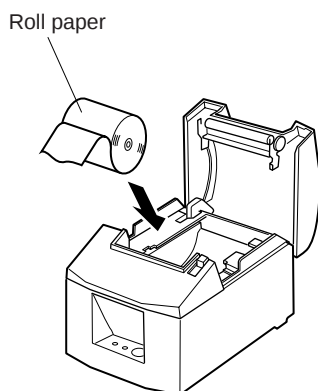


- 2) While observing the direction of the roll, set the paper roll into the hollow, and pull on the leading edge of the paper toward you.

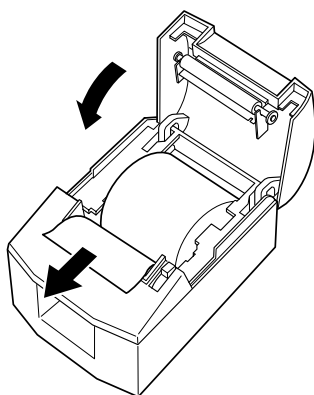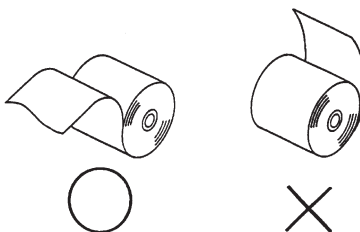

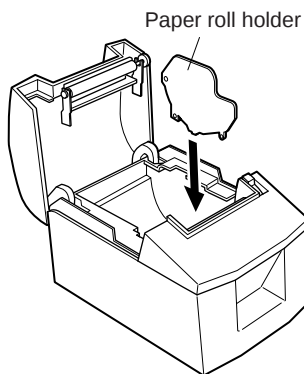


Note: When using a paper roll with an 57.5 mm width, install the optional paper roll holder in the groove in the printer.

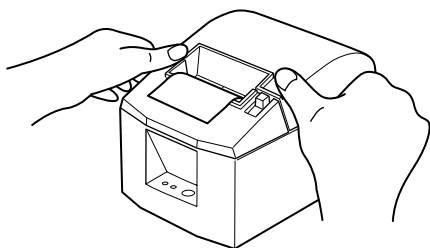

3) Push down both sides of the printer cover to close.

Note: Make sure that the printer cover is securely closed.

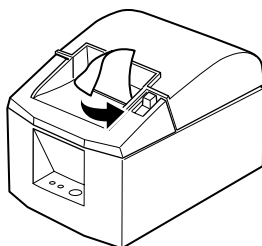

Tear Bar Model

4) **Tear Bar Model:**

Tear off the paper as shown.

Auto Cutter Model:

If the printer cover is closed after turning on the power, the cutter operates automatically and the front end of the paper is cut.

Important!


1. *Do not touch the cutter blade.*
 - *There is a cutter inside the paper outlet slot. Not only should you not put your hand in the paper outlet slot while printing is in progress, never put your hand into the outlet even when printing is not in progress.*
 - *The printer cover can be opened when replacing the paper. However, since the cutter blade is on the inside of the printer cover, be careful not to place your face or hands too close to the cutter blade.*
 2. *Do not pull the cover open lever and open the printer cover when printing is in progress or when the auto cutter is operating.*
 3. *Do not operate the cover open lever while pressing on the printer cover with your hand.*
 4. *Do not pull out paper while the printer cover is closed.*
 5. *The heating element and the driver IC of the thermal head are easily damaged. Do not touch them with metal objects, sandpaper, etc.*
 6. *During and immediately after printing, the area around the thermal head is very hot. Do not touch it, as you could be burned.*
 7. *Printing quality may suffer if the thermal head heating element becomes soiled by being touched with your hands. Do not touch the thermal head heating element.*
 8. *There is a risk of damage to the driver IC of the thermal head from static electricity. Never directly touch the IC.*
 9. *The printing quality and working life of the thermal head cannot be guaranteed if any paper other than that recommended is used. In particular, paper containing [Na⁺, K⁺, Cl⁻] may drastically reduce the working life of the thermal head. Please exercise caution.*
 10. *Do not operate the printer if there is moisture on the front surface of the head from condensation, etc.*
-

6. Adjusting the Near-end Sensor

Use the following procedure to adjust the near-end sensor so it is compatible with the size of roll paper you are using.

- ① Open the printer cover.
- ② Determine the diameter of the roll paper you are using and find the required setting in the table below.
- ③ Insert the tip of a ballpoint pen or similar object into the hole of the adjuster, and then push and side the adjuster to the desired setting.

When changing the setting, make sure that the position of the hole is aligned with the alignment mark indicated by the arrow.

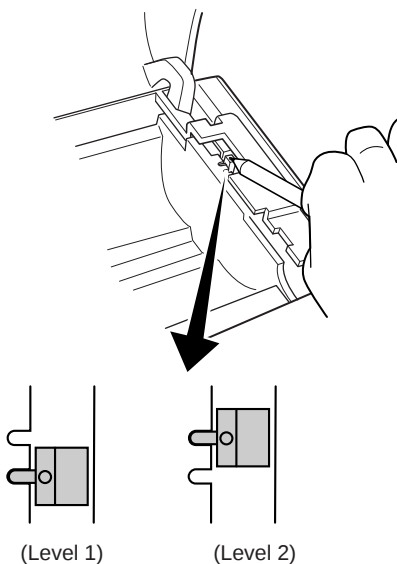


(Level 1)

(Level 2)

Adjustment value according to the paper you are using

Paper thickness (μm)	When using the paper roll with a core whose inside diameter (A): $\varnothing 12$, outside diameter (B): $\varnothing 18$			
	Detected diameter (C) (Approx. mm)		Remained paper length (Approx. m)	
	Level 1	Level 2	Level 1	Level 2
65	$\varnothing 23$	$\varnothing 29$	2.7	7.3
85	$\varnothing 21$		1.2	5.5

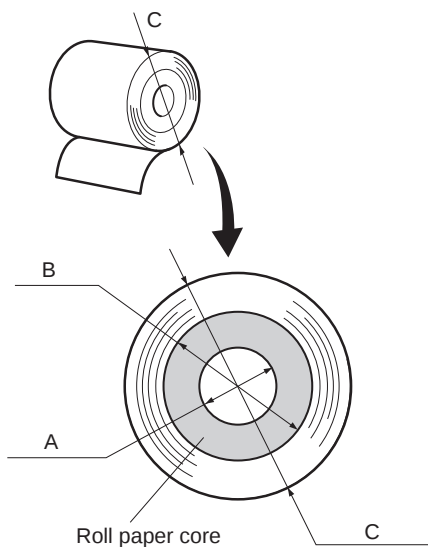

Note

- 1) The standard model is set to level 1 prior to being shipped from the factory.
- 2) The C dimension and the remained paper length are the calculated values. There may be some variations in actual mechanism.
- 3) As looseness will occur with the paper, leading to an increase in discrepancies between the C dimensions and remaining paper length, when the paper being used has a printer thickness of $85\mu\text{m}$, it is recommended that Level 2 is used.

7. Preventing and Clearing Paper Jams

7-1. Preventing Paper Jams

The paper should not be touched during ejection and before it is cut. Pressing or pulling the paper during ejection may cause a paper jam, paper cutting failure or line feed failure.

7-2. Removing Paper Jam

If a paper jam occurs, clear it as described below.

(1) Set the power switch to off to turn off power to the printer.

(2) Pull the lever toward you to open the printer cover.

If the printer cover will not open on auto cutter models, it means that the auto cutter is not at the home position. In this case, return the auto cutter to the home position by following the instructions provided in section 7-3. Then open the printer cover after the paper jam has been removed.

(3) Remove the jammed paper.

Note: Take care not to damage the printer when removing the jammed paper. Since it is easy to damage the thermal head in particular, take care not to touch it.

(4) Position the roll paper straight and close the printer cover gently.

Note 1: Make sure that the paper is positioned straight. If the printer cover is closed with the paper skewed, a paper jam may result.

Note 2: Lock the printer cover by pressing down on the sides. Do not try to close it by pressing down on the center. The cover may not lock properly.

(5) Set the power switch to on to turn on power to the printer. Make sure that the ERROR LED is not lit.

Note: While the ERROR LED is lit, the printer will not accept any commands such as the print command, so make sure that the printer cover is locked properly.

7-3. Releasing a Locked Cutter (Auto Cutter Mode only)

If the auto cutter locks up or fails to cut the paper, follow the steps below.


Caution

Since working on the cutter may be dangerous, be sure to turn off the printer first.

- (1) Set the power switch to OFF to turn off the printer.
- (2) Slide off the front cover to reveal the auto cutter.
- (3) Remove any jammed paper.

Note: Be careful not to damage the printer while removing any jammed paper.

Since the thermal print head is particularly sensitive, be sure not to touch it.

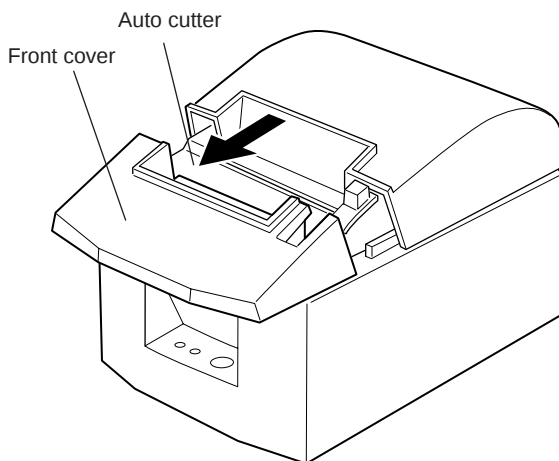


- (4) If the cutter's moving blade is protruding, use a Phillips screwdriver to turn the Phillip-head screw and return the moving blade to its home position. When the check window is completely white, the moving blade is at its home position.

Note 1: Do not apply extreme pressure to the moving blade.

Note 2: If the moving blade is protruding too much, the printer cover cannot be opened. Trying to open the printer cover may damage the cutter.

- (5) Open the printer cover, remove any jammed paper, and then re-install the paper roll.
- (6) Install the front cover, and then set the power switch to ON.

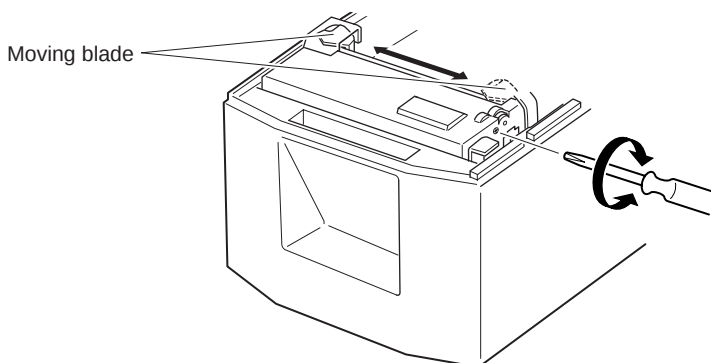

8. Periodical Cleaning

Printed characters may become partially unclear due to accumulated paper dust and dirt. To prevent such a problem, paper dust collected in the paper holder and paper transport section and on the surface of the thermal head must be removed periodically. Such cleaning is recommended to be carried out once six month or one million lines.

8-1. Cleaning the Thermal Head

To remove blackish dust collected on the surface of the thermal head, wipe it with Isopropyl alcohol (IPA).

Note: The thermal head is easy to damage, so clean it gently with a soft cloth. Take sufficient care not to scratch it when cleaning it.

8-2. Cleaning the Paper Holder

Use a soft cloth to remove paper dust from the paper holder and paper transport section.

TABLE DES MATIERES

1. Identification des pièces et nomenclature	25
2. Consommables et adaptateur secteur	28
3. Câbles de connexion et adaptateur secteur	30
3-1. Câble d'interface	30
3-2. Raccordement d'un appareil périphérique	32
3-3. Connexion de l'adaptateur secteur optionnel	33
3-4. Mise sous tension de l'imprimante	34
4. Panneau de commande et autres fonctions	35
4-1. Panneau de commande	35
4-2. Erreurs	35
4-3. Auto-impression	37
5. Chargement du rouleau de papier	38
6. Réglage du capteur de fin de rouleau	41
7. Prévention et correction de bourrages de papier	43
7-1. Prévention des bourrages de papier	43
7-2. Correction de bourrages de papier	43
7-3. Libération d'une unité de découpage bloquée (mode coupe-papier automatique uniquement)	44
8. Nettoyage	46
8-1. Nettoyage de la tête d'impression	46
8-2. Nettoyage du support de papier	46
APPENDICE	95


L'appendice n'est pas traduit.

Pour obtenir la dernière version de ce manuel, consultez l'adresse URL suivante:
http://www.star-micronics.co.jp/service/frame_sp_spr_e.htm.

1. Identification des pièces et nomenclature






Modèle avec coupe-papier automatique

FRANÇAIS

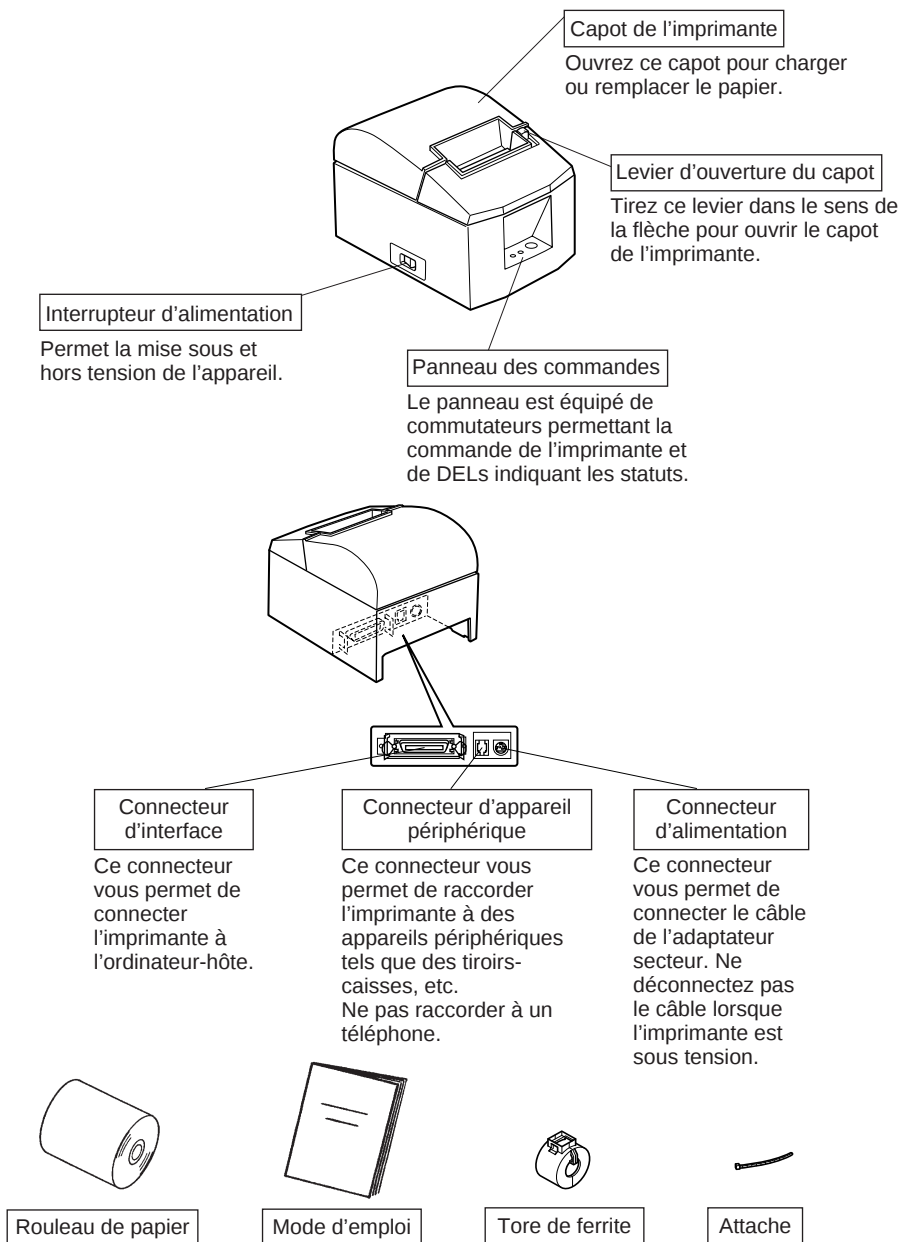

(Modèle avec interface parallèle seulement) (Modèle avec interface parallèle seulement)

Modèle avec barre de tension

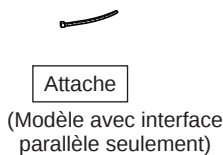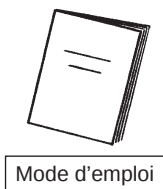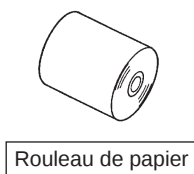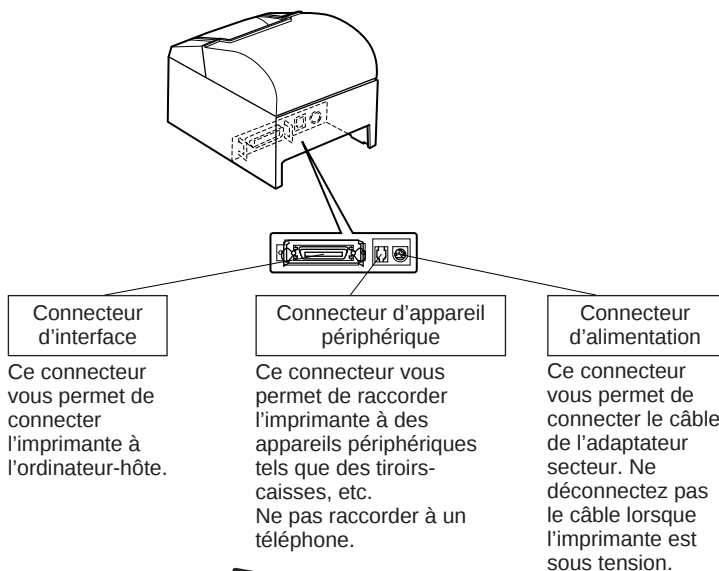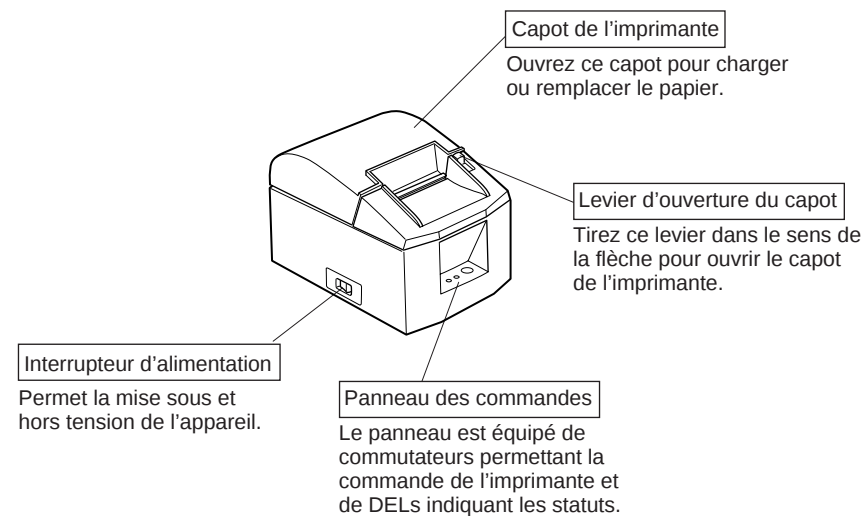

Emplacement de l'imprimante

Avant de déballer l'imprimante, déterminez l'emplacement où vous souhaitez l'installer. Veuillez observer les points ci-dessous lors de votre choix.

- ✓ Choisissez une surface stable et de niveau sur laquelle l'imprimante ne sera exposée à aucune vibration.
- ✓ Assurez-vous que l'emplacement dispose d'une prise secteur proche et d'accès aisé.
- ✓ Assurez-vous que la distance entre l'imprimante et l'ordinateur-hôte vous permet de les raccorder aisément.
- ✓ Assurez-vous que l'imprimante n'est pas exposée directement aux rayons du soleil.
- ✓ Tenez l'imprimante à l'écart des sources de chaleur importante, telles que les appareils de chauffage, etc.
- ✓ Assurez-vous que le lieu où vous souhaitez installer l'imprimante est propre, sec et n'est pas poussiéreux.
- ✓ Assurez-vous que la prise secteur à laquelle vous raccordez l'imprimante délivre une tension stable. Évitez de raccorder l'imprimante à la prise secteur d'un circuit alimentant de gros consommateurs de courant, tels qu'un photocopieur, réfrigérateur, etc.
- ✓ Assurez-vous que le lieu où vous installez l'imprimante n'est pas excessivement humide.

2. Consommables et adaptateur secteur

Il convient d'utiliser exclusivement les types de papier figurant dans le tableau ci-dessous. Veillez également à utiliser l'adaptateur secteur qui figure dans le tableau. L'utilisation d'un type de papier et d'adaptateur ne figurant pas dans le tableau risque d'endommager l'imprimante, de causer un incendie ou une décharge électrique.

(1) Rouleau de papier, caractéristiques

Papier thermique

Épaisseur: 65~85 μ m

Largeur: 79,5 $\pm$ 0,5 mm (57,5 $\pm$ 0,5 mm quand le support de papier en option est utilisé)

Diamètre extérieur du rouleau: $\varnothing$ 90 mm or less

Largeur du rouleau de papier: 80 $^{+0,5}_{-1}$ mm (58 $^{+0,5}_{-1}$ mm quand le support de papier en option est utilisé)

Diamètre extérieur/intérieur du support de rouleau

Épaisseur du papier	Extérieur du support de rouleau	Intérieur du support de rouleau
65~85 μ m	$\varnothing$ 18 $\pm$ 1 mm	$\varnothing$ 12 $\pm$ 1 mm

Surface imprimée: Bord extérieur du rouleau

Extrémité arrière: Ne pas utiliser de colle pour immobiliser le rouleau de papier ou son noyau.

Ne pas plier l'extrémité arrière du papier.

(2) Papier conseillé

Mitsubishi paper mills limited

P220AG (papier de type normal), 65 μ m (épaisseur)

HP220A (papier à stabilité d'image élevée), 65 μ m (épaisseur)

HP220AB-1 (papier à stabilité d'image élevée), 75 μ m (épaisseur)

P220AB (papier de type normal, ticket), 85 μ m (épaisseur)

Oji paper Co., Ltd.

PD150R (papier de type normal), 75 μ m (épaisseur)

PD160R (papier à stabilité d'image élevée), 65/75 μ m (épaisseur)

Nippon paper industries

TF50KS-E2C (papier de type normal), 65 μ m (épaisseur)

Suivant le type et l'épaisseur du papier, il peut être nécessaire de changer le réglage de clarté d'impression. Pour changer le réglage de la clarté d'impression, utilisez la commande de réglage de clarté d'impression <ESC><RS>'d'n. Reportez-vous au manuel de programmation séparé pour les détails.

(3) Adaptateur secteur (option)

Nom du modèle: PS60-24 A

Entrée: CA100 à 240 V, 50/60 Hz

Sortie: CC24±5%, 2,0 A (charge de 10 sec à 5,0 A max.)


Attention!

Pour obtenir des informations concernant le papier recommandé, consultez l'adresse URL suivante : <http://www.star-micronics.co.jp/>.


3. Câbles de connexion et adaptateur secteur

3-1. Câble d'interface


3-1-1. Installation du tore de ferrite (modèle avec interface parallèle seulement)

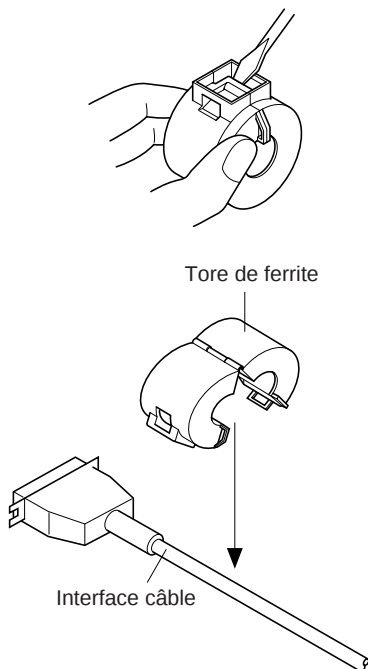

- (1) Modèle avec interface parallèle seulement: fixez la grande gaine en ferrite sur le câble comme illustré.

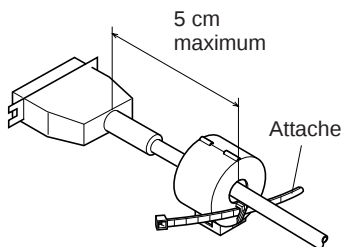

- (2) Passez l'attache dans le tore de ferrite.

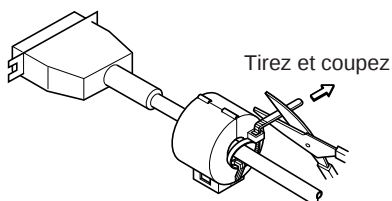


- (3) Passez l'attache autour du tore de ferrite et serrez-la. Coupez l'extrémité de l'attache à l'aide de ciseaux.

3-1-2. Connexion du câble d'interface

Remarque: Avant de connecter ou déconnecter le câble d'interface, veuillez à ce que l'imprimante et tous les appareils qui y sont connectés soient hors tension.

Veillez également à débrancher le câble d'alimentation de la prise secteur.

- (1) Connectez le câble d'interface à la borne figurant sur le panneau arrière de l'imprimante.
- (2) Dans le cas d'une interface série, resserrez les vis du connecteur. Dans le cas d'une interface parallèle, fixez le connecteur avec les fermoirs.

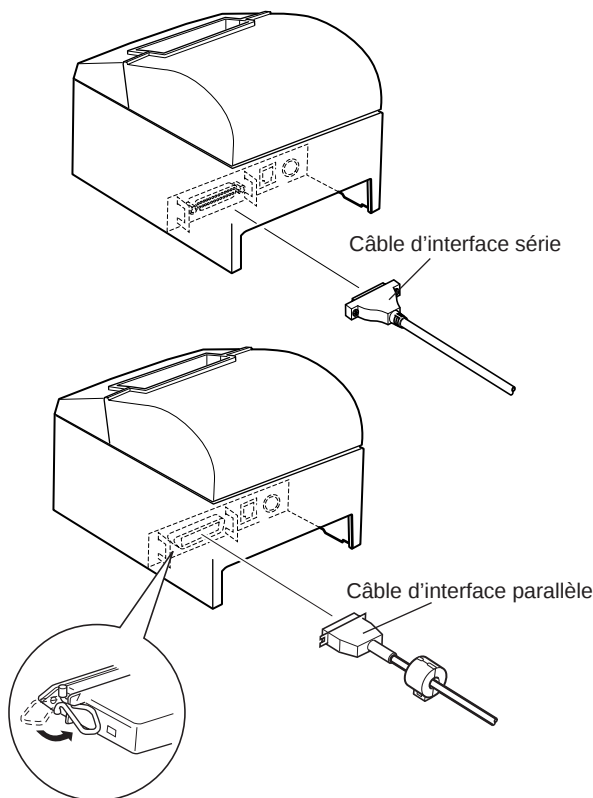

3-2. Raccordement d'un appareil périphérique

Vous pouvez raccorder un appareil périphérique à l'imprimante à l'aide d'une fiche modulaire. Nous expliquons ci-dessous comment installer le tore de ferrite et faire le raccordement proprement dit. Pour les détails sur le type de fiche modulaire à utiliser, reportez-vous à la page 108. Notez que le fil ou la fiche modulaires ne sont pas fournis avec l'imprimante. Vous devrez donc vous les procurer.


Attention!

Assurez-vous que l'imprimante est hors tension, qu'elle est débranchée de la prise secteur et que l'ordinateur est hors tension avant d'effectuer les connexions.

- (1) Connectez le câble de pilote de périphérique à la borne figurant sur le panneau arrière de l'imprimante.
-

Attention!

Ne connectez pas une ligne de téléphone à la borne du pilote de périphérique, sous peine de risquer d'endommager l'imprimante. Pour des raisons de sécurité, il convient également de ne pas brancher d'appareil périphérique en cas de risque de survoltage.

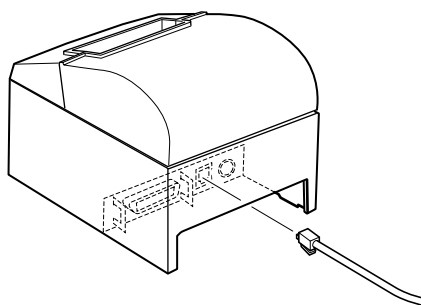


3-3. Connexion de l'adaptateur secteur optionnel

Remarque: Avant de connecter ou déconnecter l'adaptateur secteur, veillez à ce que l'imprimante et tous les appareils qui y sont connectés soient hors tension. Veillez également à débrancher le câble d'alimentation de la prise secteur.

- (1) Connectez l'adaptateur secteur au câble d'alimentation.

Remarque: Utilisez exclusivement l'adaptateur secteur et le câble d'alimentation destinés à l'imprimante.

- (2) Connectez l'adaptateur secteur à la borne de l'imprimante.
- (3) Branchez la prise du câble d'alimentation à la prise secteur.

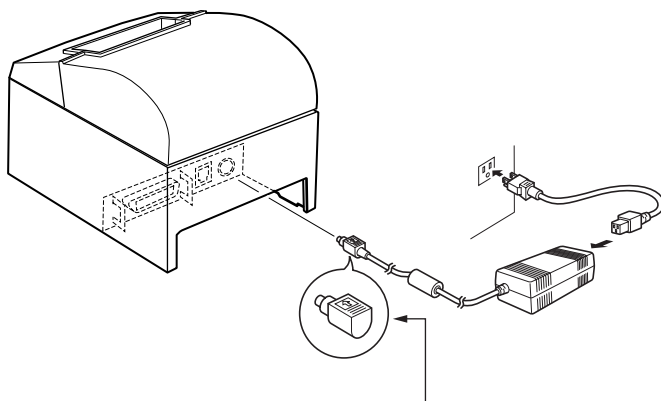

Attention!


Lorsque vous débranchez le câble, saisissez la prise du câble pour tirer dessus. Vous pourrez débrancher plus facilement la prise après avoir libéré le verrou. Ne tirez pas violemment sur le câble car vous risqueriez d'endommager la prise.

3-4. Mise sous tension de l'imprimante

Assurez-vous d'avoir bien connecté l'adaptateur secteur comme décrit à la section 3-3.

(1) Placez l'interrupteur d'alimentation, situé à l'avant de l'imprimante, sur la position sous tension.

La DEL POWER s'allume au panneau des commandes.

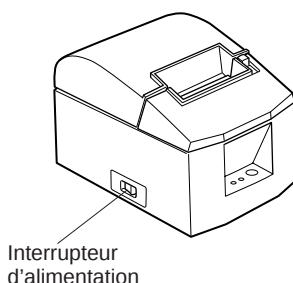


Attention!

Nous vous recommandons de débrancher l'imprimante du secteur lorsque vous ne comptez pas l'utiliser pendant une période prolongée. Par ailleurs, veuillez lors de l'installation à ce que la prise secteur alimentant l'imprimante soit proche et d'accès facile.

4. Panneau de commande et autres fonctions

4-1. Panneau de commande

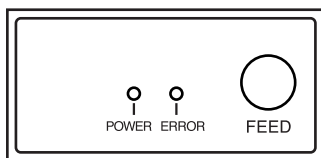

① Témoin POWER (DEL verte)
S'allume quand l'appareil est sous tension.

② Témoin ERROR (DEL rouge)
Indique des erreurs variées en combinaison avec le témoin POWER.

③ Témoin FEED
Appuyez sur la touche FEED pour faire avancer le papier.

③ Témoin FEED
(avance de papier)
② Témoin ERROR (erreur)
① Témoin POWER (alimentation)

4-2. Erreurs

1) Erreur récupérable automatiquement

Description de l'erreur	Témoin POWER	Témoin ERROR	Conditions de récupération
Détection de température élevée de la tête	Clignote à 0,5 seconde d'intervalle	Hors tension	Récupération automatique après refroidissement de la tête.
Erreur d'ouverture du capot de l'imprimante	Sous tension	Sous tension	Récupération automatique après fermeture du capot de l'imprimante.

2) Erreur non récupérable

Description de l'erreur	Témoin POWER	Témoin ERROR	Conditions de récupération
Erreur de mémoire vive	Hors tension	Sous tension	Ce n'est pas une erreur récupérable. Consultez votre revendeur pour des réparations.
Erreur de protection de mémoire	Clignote à 0,25 seconde d'intervalle	Clignote à 0,25 seconde d'intervalle	Ce n'est pas une erreur récupérable. Consultez votre revendeur pour des réparations.
Erreur de thermistor	Clignote à 0,5 seconde d'intervalle	Clignote à 0,5 seconde d'intervalle	Ce n'est pas une erreur récupérable. Consultez votre revendeur pour des réparations.
Erreur d'alimentation	Clignote à 1 seconde d'intervalle	Clignote à 1 seconde d'intervalle	Ce n'est pas une erreur récupérable. Consultez votre revendeur pour des réparations.

Remarque

- 1) Si une erreur non récupérable se produit, mettez immédiatement l'appareil hors tension.
- 2) Quand une erreur d'alimentation se produit, il est possible que le bloc d'alimentation soit en panne. Pour d'autres erreurs non récupérables, veuillez consulter votre revendeur pour des réparations.

3) Erreur de découpe du papier

Description de l'erreur	Témoin POWER	Témoin ERROR	Conditions de récupération
Erreur de découpe du papier	Hors tension	Clignote à 0,125 seconde d'intervalle	Récupération si l'unité de découpage revient dans sa position d'origine après la mise hors tension et sous tension. La restauration n'est pas possible avec la commande <DLE> <ENQ> dans le mode ESC/POS.

Remarque

- 1) Si l'unité de découpage ne revient pas dans sa position d'origine ou n'effectue pas le mouvement initial, la récupération est impossible.
- 2) Si le papier est coincé, mettez l'appareil hors tension, dégagez le bourrage de papier, puis mettez l'appareil sous tension.
- 3) Erreurs de coupure de papier dans le statut de l'imprimante.
Mode STAR: Erreur irrécupérable
Mode ESC/POS: Erreur récupérable

4) Erreur de détection de papier

Description de l'erreur	Témoin POWER	Témoin ERROR	Conditions de récupération
Erreur de sortie de papier	Sous tension	Clignote à 0,5 seconde d'intervalle	Récupération automatique après chargement d'un nouveau rouleau de papier et fermeture du capot de l'imprimante.
Le rouleau de papier est presque terminé	Sous tension	Clignote à 2 seconde d'intervalle	Une erreur s'affiche en mode STAR, mais l'impression continue sans s'arrêter. Les opérations en mode ESC/POS sont déterminées par la commande <ESC> "c4" n. En d'autres termes, la récupération s'effectue automatiquement lorsque le papier est dans l'imprimante et le capot de l'imprimante fermé lorsque l'impression s'arrête si le paramètre a été réglé de façon à cesser l'impression. Si le paramètre n'a pas été réglé de façon à cesser l'impression, l'erreur s'affiche mais l'impression continue.

4-3. Auto-impression

(1) Essai d'impression

Mettez l'appareil sous tension tout en maintenant la touche FEED enfoncée. L'essai d'impression sera effectué en fonction du numéro de version, des réglages du commutateur DIP et de l'ordre des caractères. Si vous appuyez sur la touche FEED à la fin de l'essai d'impression, seuls les caractères seront imprimés à plusieurs reprises.

*** TSP600 Ver1.00


Interface : Parallel

DIP Switch 1

Sw 12345678

On *****

Off

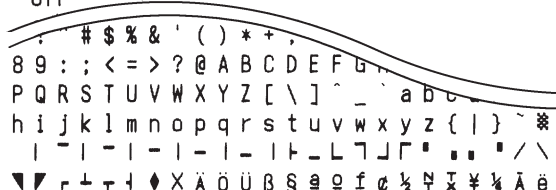

! " # \$ % & ' () * + ,
8 9 : ; < = > ? @ A B C D E F G
P Q R S T U V W X Y Z [\] ^ _ ` a b c
h i j k l m n o p q r s t u v w x y z { | } ~ *
! " # \$ % & ' () * + , - . / : ; < = > ?
@ A B C D E F G H I J K L M N O P Q R S T U V W X Y Z

(2) Mode de vidage hexadécimal

Ouvrez le capot de l'imprimante, puis mettez l'appareil sous tension tout en maintenant la touche FEED enfoncée. Quand le capot est fermé, "**** HEX DUMP PRINTING ****" est imprimé et l'imprimante entre en mode de vidage hexadécimal.

Chacun des signaux envoyés par l'ordinateur à l'imprimante sera imprimé dans le code hexadécimal.

Cette fonction vous permet de vérifier si un code de commande envoyé à l'imprimante par le programme utilisé est correct ou non. La ligne finale n'est pas imprimée si ses données sont inférieures à une ligne complète. Néanmoins, si vous appuyez sur la touche FEED, la ligne finale sera imprimée. Pour désactiver ce mode, il est nécessaire de mettre l'imprimante complètement hors tension.


*** HEX DUMP PRINTING ***

20 21 22 23 24 25 26 27	! " # \$ % & ' () * + , - . /
28 29 2A 2B 2C 2D 2E 2F	01234567
30 31 32 33 34 35 36 37	89 : ; < = > ?
38 39 3A 3B 3C 3D 3E 3F	@ A B C D E F G
40 41 42 43 44 45 46 47	H I J K L M N O
48 49 4A 4B 4C 4D 4E 4F	P Q R S T U V W
50 51 52 53 54 55 56 57	

5. Chargement du rouleau de papier



Veillez à utiliser un rouleau de papier qui correspond aux spécifications de l'imprimante.

Lors de l'utilisation d'un rouleau de papier de 57,5 mm de large, chargez le rouleau de papier comme indiqué à la page suivante.

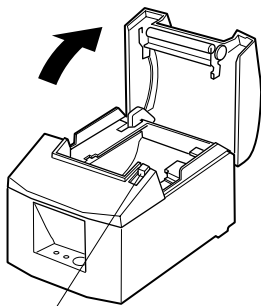



Levier d'ouverture du capot

Rouleau de papier

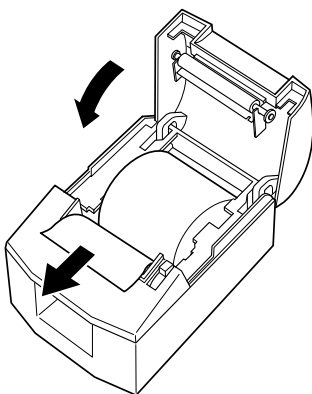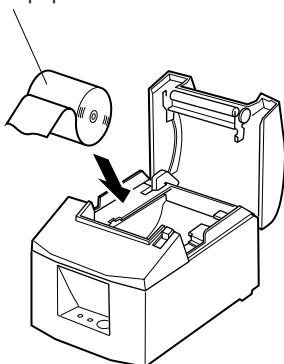


- 1) Poussez le levier d'ouverture du capot et ouvrez le capot de l'imprimante.


- 2) Mettez le rouleau de papier en place dans le creux tout en respectant son orientation, et tirez sur l'extrémité du papier.

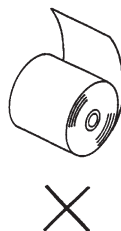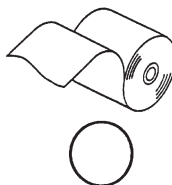

Support du rouleau de papier

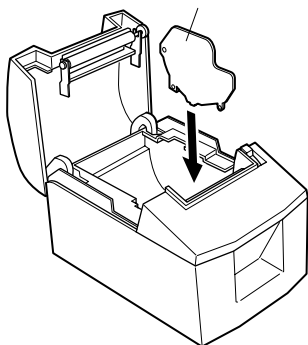


Remarque: Lors de l'utilisation d'un rouleau de papier de 57,5 mm de large, installez le support de papier dans le logement prévu dans l'imprimante.

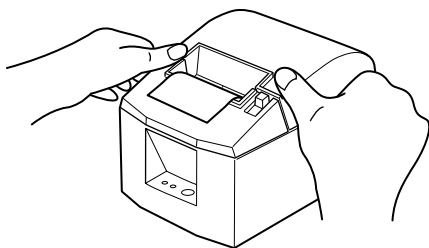

- 3) Poussez vers la bas les deux côtés du capot de l'imprimante pour le fermer.

Remarque: Assurez-vous que le capot de l'imprimante est bien fermé.

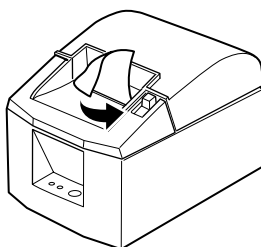

Modèle avec barre de tension

- 4) **Modèle avec barre de tension:**

Déchirez le papier comme illustré.

Modèle avec coupe-papier automatique:

Si le couvercle de l'imprimante est fermé après la mise sous tension, le coupe-papier coupe automatiquement la partie avant du papier.

Attention!

 

1. *Ne pas toucher la lame du coupe-ruban.*
 - *Une lame se trouve dans la fente de sortie de papier. Il est fortement déconseillé de mettre sa main dans la fente de sortie de papier non seulement pendant l'impression mais aussi en toute autre circonstance, même quand l'impression n'est pas effectuée.*
 - *Le capot de l'imprimante peut être ouvert pour remplacer le papier. Néanmoins, la lame du coupe-ruban se trouvant à l'intérieur du capot de l'imprimante, veuillez faire attention à ne pas rapprocher votre figure ou vos mains trop près de la lame du coupe-ruban.*
 2. *Ne tirez pas le levier d'ouverture du couvercle et n'ouvrez pas le couvercle pendant l'impression ou pendant le fonctionnement du coupe-papier.*
 3. *Ne pas faire fonctionner le levier d'ouverture du capot tout en appuyant sur le capot de l'imprimante avec la main.*
 4. *Ne pas tirer sur le papier pour le faire sortir quand le capot de l'imprimante est fermé.*
 5. *L'élément de chauffage et le circuit imprimé de la tête d'impression thermique sont facilement endommagés. Ne pas les toucher avec des objets métalliques, du papier de verre, etc.*
 6. *Pendant et immédiatement après l'impression, la zone autour de la tête d'impression thermique est très chaude. Ne pas la toucher car vous pourriez vous brûler.*
 7. *La qualité d'impression peut être affectée si l'élément de chauffage de la tête d'impression thermique est souillé par un contact avec vos mains, Ne pas toucher l'élément de chauffage de la tête d'impression thermique.*
 8. *Le circuit imprimé de la tête d'impression thermique peut être endommagé par l'électricité statique. Ne touchez jamais directement le circuit imprimé.*
 9. *La qualité d'impression et la durée de vie utile de la tête d'impression thermique ne peuvent pas être garanties si un papier quelconque différent de celui recommandé est utilisé. En particulier, le papier contenant les éléments suivants: NA+, K+, C1-, peut réduire de façon importante la durée de vie utile de la tête d'impression thermique. Veuillez prendre des précautions.*
 10. *Ne pas faire fonctionner l'imprimante si de l'humidité provenant de la condensation, etc., est présente sur la surface avant de la tête.*
-

6. Réglage du capteur de fin de rouleau


Utilisez la procédure suivante pour régler le capteur de fin de rouleau conformément à la taille du rouleau de papier utilisé.

- ① Ouvrez le capot de l'imprimante.
- ② Déterminez le diamètre du rouleau de papier utilisé et identifiez le réglage requis dans le tableau ci-dessous.
- ③ Insérez la pointe d'un stylo à bille ou d'un instrument similaire dans le trou du curseur de réglage, puis tout en appuyant sur le curseur de réglage, faites-le glisser jusqu'à la position souhaitée.

Lorsque vous changez le réglage, assurez-vous que le trou est bien aligné sur le repère d'alignement indiqué par la flèche.

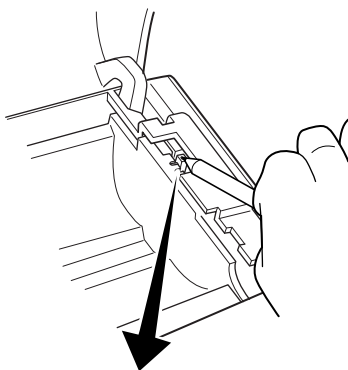


(Niveau 1)

 

(Niveau 2)

Valeur de réglage correspondant au papier utilisé.

Épaisseur du papier (μm)	Quand vous utilisez un rouleau de papier dont le diamètre intérieur du support est de (A): $\varnothing 12$ et le diamètre extérieur de (B): $\varnothing 18$			
	Diamètre détecté (C) (Env. mm)		Longueur de papier restante (Env. m)	
	Niveau 1	Niveau 2	Niveau 1	Niveau 2
65	$\varnothing 23$	$\varnothing 31$	2,7	7,3
85	$\varnothing 21$		1,2	5,5

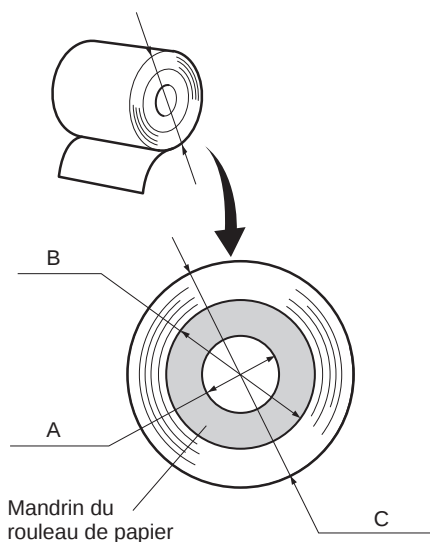

Remarque

- 1) Le curseur de réglage du modèle standard est réglé sur le niveau 1 en usine.
- 2) La dimension C et la longueur de papier restante sont les valeurs calculées. Il est possible qu'il y ait quelques différences dans le mécanisme actuel.
- 3) Il est conseillé d'utiliser le niveau 2, car le papier peut se détendre, ce qui entraînera une disproportion entre les dimensions C et la longueur de papier restante, lorsqu'une épaisseur de papier de $85 \mu\text{m}$ est utilisée.

7. Prévention et correction de bourrages de papier

7-1. Prévention des bourrages de papier

Il convient de ne jamais toucher le papier pendant son éjection et avant qu'il soit coupé. Appuyer ou tirer sur le papier pendant son éjection risque de provoquer un bourrage, des problèmes de coupure ou d'avance de ligne.

7-2. Correction de bourrages de papier

En cas de bourrage de papier, procédez comme suit afin d'y remédier :

(1) Mettez l'appareil hors tension.

(2) Tirez le levier tout à fait vers le bas afin d'ouvrir le capot de l'imprimante. Si le couvercle de l'imprimante ne s'ouvre pas sur les modèles à coupe-papier automatique, c'est que celui-ci n'est pas à sa position d'origine. Dans ce cas, ramenez le coupe-papier à sa position d'origine en suivant les instructions de la section 7-3. Ouvrez le couvercle de l'imprimante lorsque le papier coincé a été retiré.

(3) Retirez le papier bloqué.

Remarque: Veillez à ne pas endommager l'imprimante lors du retrait du papier bloqué.

Veillez particulièrement à ne pas toucher la tête d'impression thermique en raison de sa fragilité.

(4) Veillez à insérer le rouleau de papier tout droit et refermez avec soin le capot de l'imprimante.

Remarque 1: Le papier doit être placé bien droit. Si vous refermez le capot de l'imprimante alors que le papier est de travers (voir illustration), un bourrage peut se produire.

Remarque 2: Verrouillez le capot de l'imprimante en appuyant sur les côtés. Ne pas essayer de refermer le capot en appuyant sur son centre. Le capot pourrait ne pas se verrouiller correctement.

(5) Mettez l'imprimante sous tension. Assurez-vous que la DEL ERROR n'est pas allumée.

Remarque: Tant que la DEL ERROR est allumée, l'imprimante n'accepte aucune commande. Il faut donc veiller à ce que le capot de l'imprimante soit verrouillé.

7-3. Libération d'une unité de découpage bloquée (mode coupe-papier automatique uniquement)

Si l'unité de découpage automatique se bloque ou ne coupe pas le papier, suivez les étapes ci-dessous.


Attention

Le travail sur l'unité de découpage étant dangereux, n'oubliez pas de mettre avant tout l'imprimante hors tension.

- (1) Réglez l'interrupteur d'alimentation sur la position hors tension OFF pour mettre l'imprimante hors tension.
- (2) Faites glisser le couvercle avant pour dégager l'unité de découpage automatique.
- (3) Enlevez le papier coincé.

Remarque: Faites attention à ne pas endommager l'imprimante pendant que vous enlevez le papier coincé.

La tête d'impression thermique étant particulièrement sensible, veillez à ne pas la toucher.

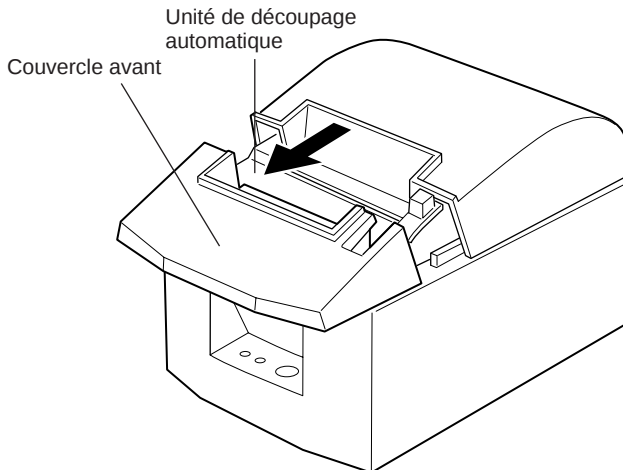


- (4) Si la lame mobile de l'unité de découpage dépasse, utilisez un tournevis cruciforme pour tourner la vis cruciforme et ramener la lame dans sa position d'origine.

Quand la fenêtre de contrôle est complètement blanche, la lame mobile est dans sa position d'origine.

Remarque 1: N'appliquez pas de pression excessive sur la lame mobile.

Remarque 2: Si la lame mobile dépasse trop, le capot de l'imprimante ne pourra pas être ouvert. Vous risquez d'endommager l'unité de découpage automatique en essayant d'ouvrir le capot de l'imprimante.

- (5) Ouvrez le capot de l'imprimante, enlevez le papier coincé, puis remettez le rouleau de papier en place.
- (6) Installez le couvercle avant, puis réglez l'interrupteur d'alimentation sur la position sous tension.

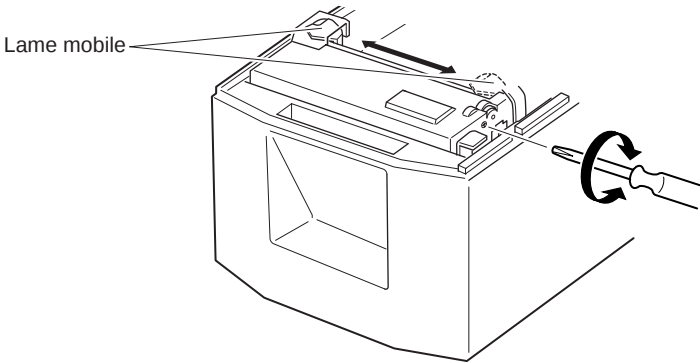

8. Nettoyage

Les caractères imprimés pourraient devenir partiellement illisibles en raison de l'accumulation de la poussière de papier et de crasse. Afin de prévenir ce genre de problème, il convient de nettoyer régulièrement la poussière qui s'accumule sur le support de papier, les passages du papier et la surface de la tête d'impression. Il est recommandé d'effectuer un tel nettoyage une fois tous les six mois ou après l'impression d'un million de lignes.

8-1. Nettoyage de la tête d'impression

Nettoyez la poussière noirâtre accumulée sur la surface de la tête d'impression thermique en l'essuyant avec de l'alcool isopropylique.

Remarque: La tête d'impression thermique est fragile, il convient donc de procéder avec précaution. Prenez soin de ne pas la griffer.

8-2. Nettoyage du support de papier

Nettoyez la poussière de papier accumulée sur le support de papier et sur les passages du papier à l'aide d'un chiffon doux.

INHALTSVERZEICHNIS

1. Beschreibung und Bezeichnung der Geräteteile	49
2. Verbrauchsteile und Netzteil	52
3. Anschlußkabel und Netzteil	54
3-1. Schnittstellenkabel	54
3-2. Anschluß an ein Peripheriegerät	56
3-3. Anschließen des optionalen Netzteils	57
3-4. Einschalten	58
4. Bedienfeld und andere Funktionen	59
4-1. Bedienfeld	59
4-2. Fehler	59
4-3. Selbstdruck	61
5. Einlegen der Papierrolle	62
6. Einstellung des Endanäherungs-Sensors	65
7. Verhindern und Beheben von Papierstau	67
7-1. Verhindern von Papierstau	67
7-2. Beheben von Papierstau	67
7-3. Freigeben eines gesperrten Schneidmessers (Nur Auto-Schneidwerkmodell)	68
8. Regelmäßige Reinigung	70
8-1. Reinigen des Thermalkopfes	70
8-2. Reinigen des Papierhalters	70
ANHANG	95




Der Anhang dieser Bedienungsanleitung ist nur in englischer Sprache.

Bitte wenden Sie sich an die folgende Internet-Address:
http://www.star-micronics.co.jp/service/frame_sp_spr_e.htm,
wenn Sie die neueste Revision dieses Handbuches lesen möchten.

1. Beschreibung und Bezeichnung der Geräteteile

Auto-Schneidwerkmodell

DEUTSCH

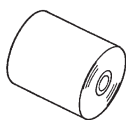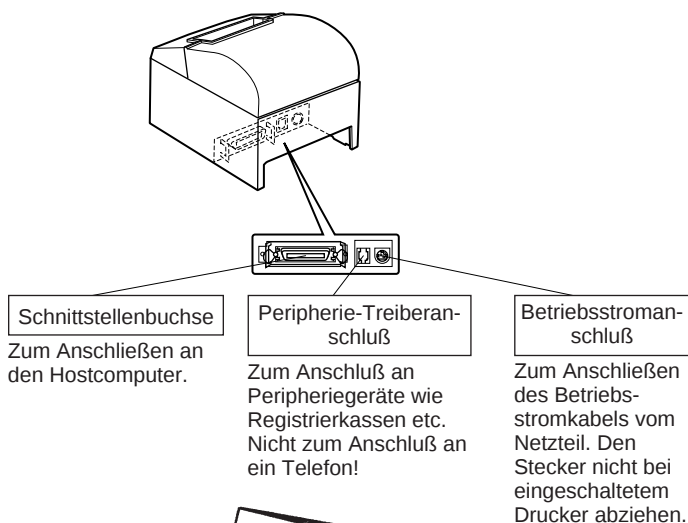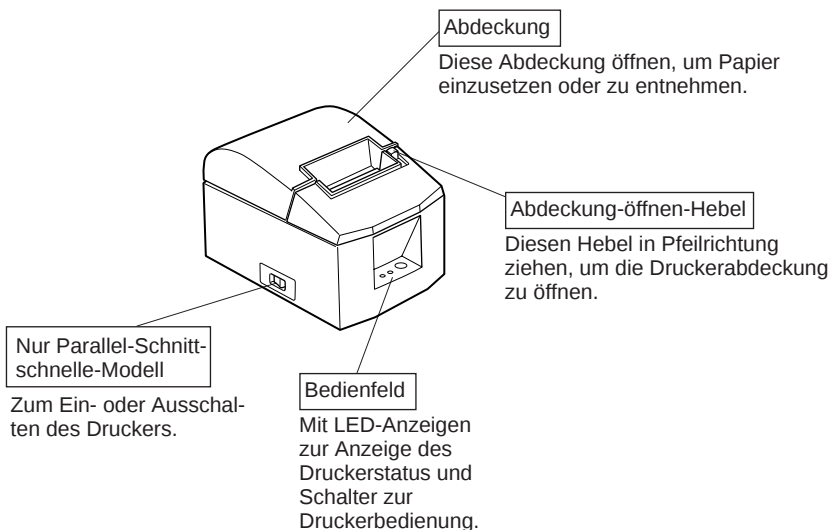

Rollenpapier



Bedienungsanleitung






Ferritkern



Befestigungsband

(Nur beim Parallel-Schnittschnelle-Modell) (Nur beim Parallel-Schnittschnelle-Modell)

Abreißkantenmodell

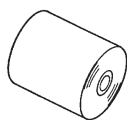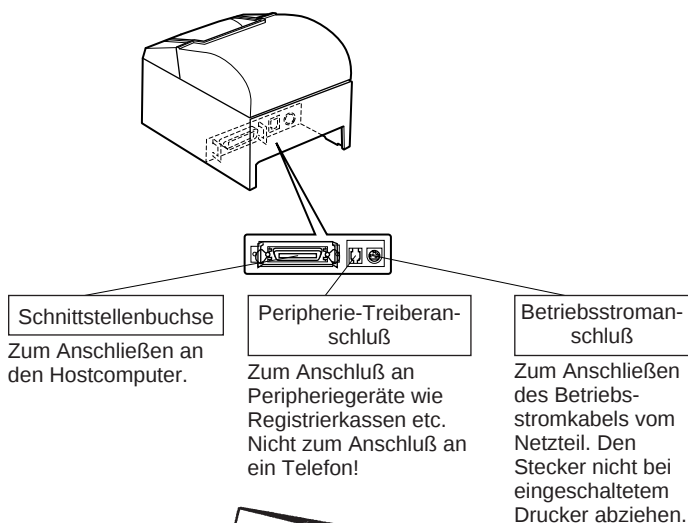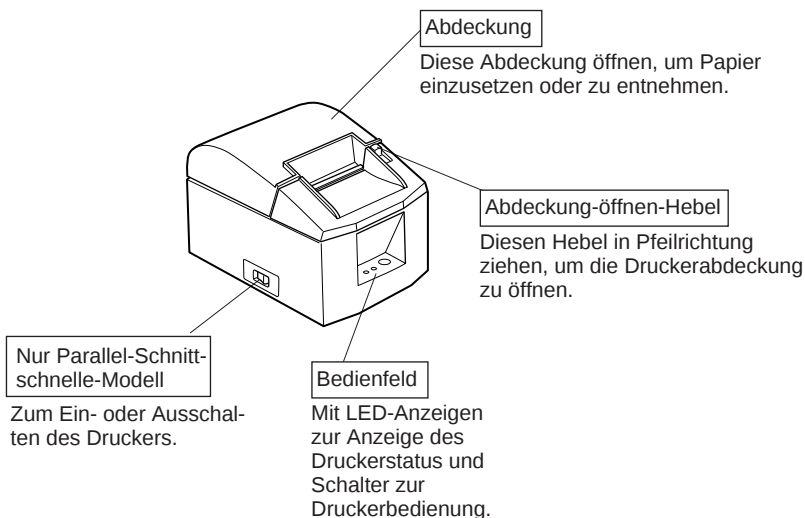

Rollenpapier



Bedienungsanleitung



Ferritkern



Befestigungsband

(Nur beim Parallel-Schnittschnelle-Modell) (Nur beim Parallel-Schnittschnelle-Modell)

Wahl eines Aufstellungsorts für den Drucker

Bevor Sie den Drucker auspacken, sollten Sie einige Minuten damit verbringen, einen geeigneten Aufstellungsort auszusuchen. Denken Sie dabei an die folgenden Punkte:

- ✓ Den Drucker auf einem flachen, aber festen Untergrund aufstellen, wo keine Vibrationen vorhanden sind.
- ✓ Die verwendete Steckdose soll in der Nähe und frei zugänglich sein.
- ✓ Sicherstellen, daß der Drucker nahe genug am Computer ist, um die Geräte mit dem Druckerkabel verbinden zu können.
- ✓ Sicherstellen, daß der Drucker vor direktem Sonnenlicht geschützt ist.
- ✓ Sicherstellen, daß der Drucker ausreichend weit von Heizkörpern entfernt steht.
- ✓ Dafür sorgen, daß die Umgebung des Druckers sauber, trocken und staubfrei ist.
- ✓ Sicherstellen, daß der Drucker an eine einwandfreie Stromzufuhr angeschlossen ist. Er sollte nicht an Steckdosen angeschlossen werden, an denen bereits Geräte mit möglichen Netzstörungen wie Kopierer, Kühlschränke u.a. angeschlossen sind.
- ✓ Den Drucker nicht an Orten mit hoher Luftfeuchtigkeit aufstellen.

2. Verbrauchsteile und Netzteil

Wenn die Verbrauchsteile verbraucht sind, besorgen Sie Ersatz entsprechend der unten gezeigten Tabelle.

Verwendung von Verbrauchsteilen oder Netzteilen, die nicht den unten aufgeführten Beschreibungen entsprechend, kann zu Schäden am Drucker, Bränden oder elektrischen Schlägen führen.

(1) Rollenpapierbeschreibung

Thermopapier

Dicke: 65~85 μm

Breite: 79,5 $\pm$ 0,5 mm (57,5 $\pm$ 0,5 mm wenn der optionale Papierrollenhalter verwendet wird)

Rollen-Außendurchmesser: $\varnothing$ 90 mm or less

Breite der Aufnehmerpapierrolle: 80 $^{+0,5}_{-1}$ m m (58 $^{+0,5}_{-1}$ mm wenn der optionale Papierrollenhalter verwendet wird)

Kern Außen/Innen-Durchmesser

Papierdicke

Kern außen

Kern innen

65~85 μm

$\varnothing$ 18 $\pm$ 1 mm

$\varnothing$ 12 $\pm$ 1 mm

Druckfläche: Äußere Papierkante

Behandlung der Papierendkante: Nicht Paste oder Kleber zum Befestigen von Papierrolle oder Kern verwenden.

Nicht die Papierendkante falten.

(2) Empfohlenes Papier

Mitsubishi Paper Mills Ltd.

P220AG (Normalpapier), 65 μm (Dicke)

HP220A (Papier für hochstabile Bilder), 65 μm (Dicke)

HP220AB-1 (Papier für hochstabile Bilder), 75 μm (Dicke)

P220AB (Normalpapier, Kartenticket), 85 μm (Dicke)

Oji Paper Co., Ltd.

PD150R (Normalpapier), 75 μm (Dicke)

PD160R (Papier für hochstabile Bilder), 65/75 μm (Dicke)

Nippon Paper Industries

TF50KS-E2C (Normalpapier), 65 μm (Dicke)

Je nach Typ und Stärke des Papiers kann es erforderlich sein, die Einstellungen für die Druckintensität zu ändern. Zum Ändern der Intensitätseinstellung den Druckintensität-Befehle <ESC><RS>‘d’n verwenden. Einzelheiten siehe Programmieranleitung.

(3) Netzteil (Option)

Modelbezeichnung: PS60-24 A

Eingang: 100 bis 240 V WS, 50/60 Hz

Ausgang: 24 V GS $\pm$ 5%, max. 2,0 A (max. 10 s bei 5,0 A Last)

Wichtig!



Empfehlungen zu den zu verwendenden Papiersorten sind im Internet bei der folgenden URL erhältlich: <http://www.star-micronics.co.jp/>

3. Anschlußkabel und Netzteil


3-1. Schnittstellenkabel

3-1-1. Anbringen des Ferritkerns (Nur beim Parallel-Schnittschnelle-Modell)

- (1) Nur beim Parallel-Schnittschnelle-Modell, Befestigen Sie den großen Ferritkern am Kabel, wie das in der folgenden Abbildung gezeigt wird.

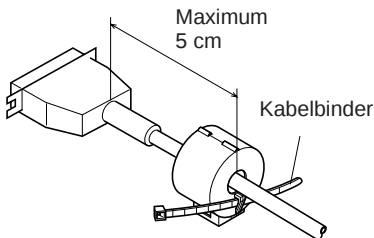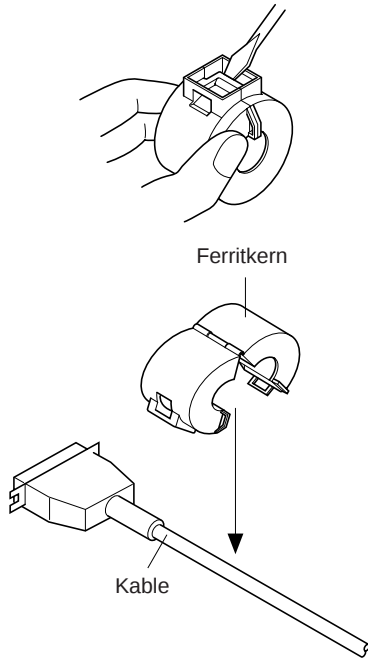

- (2) Führen Sie den Kabelbinder durch den Ferritkern.

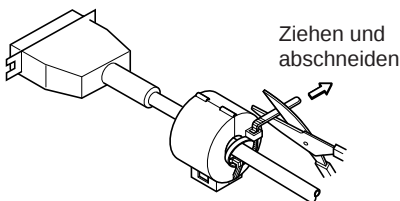



- (3) Führen Sie den Kabelbinder um das Kabel und sperren Sie ihn. Schneiden Sie überschüssiges Band mit einer Schere ab.

3-1-2. Anschließen des Schnittstellenkabels

Hinweis: Vor dem Anschließen/Abtrennen des Schnittstellenkabels stellen Sie sicher, daß der Drucker und alle angeschlossenen Gerät ausgeschaltet sind.

Außerdem sollte der Netzstecker abgezogen sein.

- (1) Schließen Sie das Schnittstellenkabel an die Buchse an der Rückseite des Druckers an.
- (2) Bei einer seriellen Schnittstelle ziehen Sie die Steckerschrauben fest. Bei einer parallelen Schnittstelle befestigen Sie die Steckerklammern.

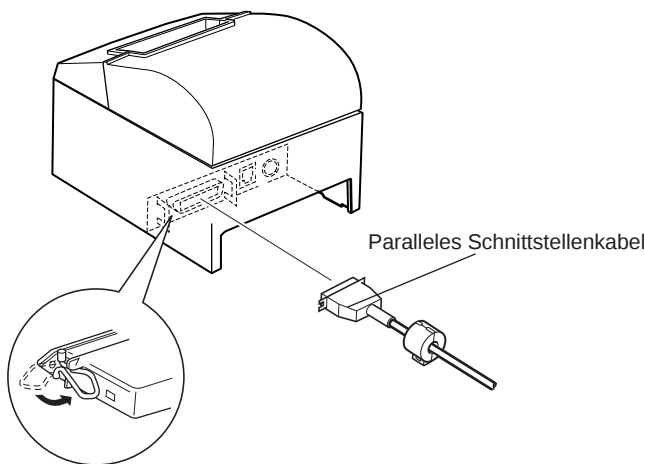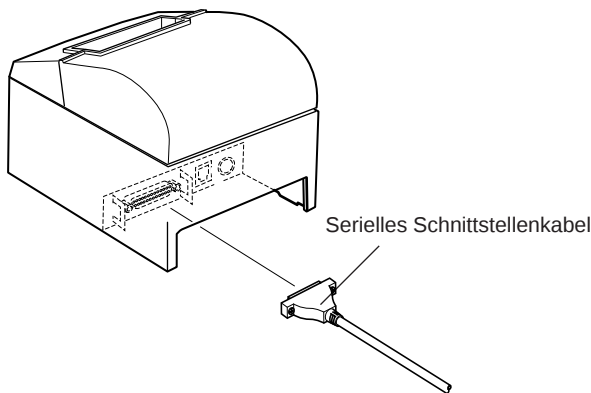

3-2. Anschluß an ein Peripheriegerät

Es kann ein Peripheriegerät an den Drucker mit einem Modularstecker angeschlossen werden. Im folgenden wird beschrieben, wie der Ferritkern angebracht und die Verbindung hergestellt wird. Siehe “Modularstecker” auf Seite 108 für den Typ von Modularstecker, der dazu erforderlich ist. Beachten Sie, daß der Drucker nicht mit einem Modularstecker oder Kabel ausgestattet ist. Diese Teile müssen vom Anwender besorgt werden.


Wichtig!

Vor dem Anschließen der Kabel sicherstellen, daß der Drucker ausgeschaltet und vom Netz getrennt ist.

- (1) Schließen Sie das Peripheriegeräte­kabel an die Buchse an der Rückseite des Druckers an.

Wichtig!

Nicht eine Telefonleitung an die Peripheriebuchse anschließen. Wenn dies geschieht, besteht die Gefahr von Schäden am Drucker. Aus Sicherheitsgründen außerdem nicht Verdrahtung an die Peripheriebuchse anschließen, wenn die Möglichkeit besteht, daß zu starke Spannung anliegt.

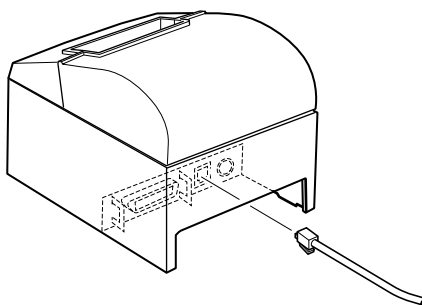

3-3. Anschließen des optionalen Netzteils


Hinweis: Vor dem Anschließen/Abtrennen des Netzteils stellen Sie sicher, daß der Drucker und alle angeschlossenen Gerät ausgeschaltet sind. Außerdem sollte der Netzstecker abgezogen sein.

(1) Schließen Sie das Netzteil an das Netzkabel an.

Hinweis: Verwenden Sie nur das vorgesehene Netzteil und Netzkabel.

(2) Das Netzteil am Stecker des Druckers anschließen.

(3) Stecken Sie den Netzstecker des Netzteils in eine Steckdose ein.

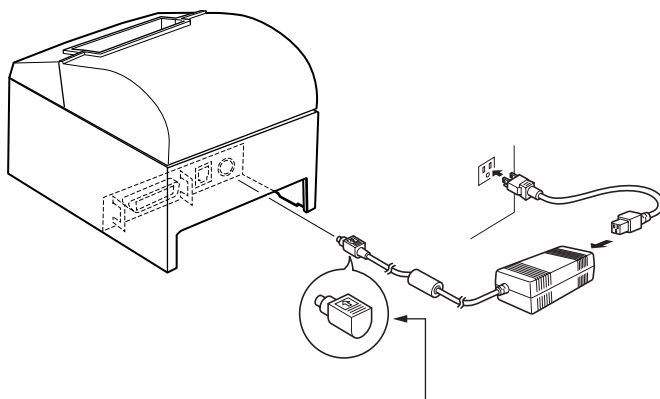

Wichtig!


Beim Abziehen des Kabels immer am Stecker ziehen und nicht am Kabel. Durch das Lösen der Verriegelung wird das Abziehen des Steckers leicht möglich.

Wenn stark am Kabel selber gezogen wird, kann der Stecker beschädigt werden.

3-4. Einschalten

Stellen Sie sicher, daß das Netzteil angeschlossen ist, wie in 3-3 beschrieben.

- (1) Den Netzschalter vorne am Gerät auf Ein (ON) stellen. Das POWER-Lämpchen am Bedienfeld leuchtet auf.


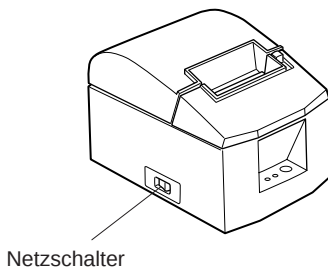


Wichtig!

Wir empfehlen, den Netzstecker aus der Steckdose zu ziehen, wenn der Drucker längere Zeit lang nicht benutzt werden soll. Der Drucker sollte vorzugsweise an einem Platz aufgestellt werden, der leichten Zugang zur Netzsteckdose gewährt.

4. Bedienfeld und andere Funktionen

4-1. Bedienfeld

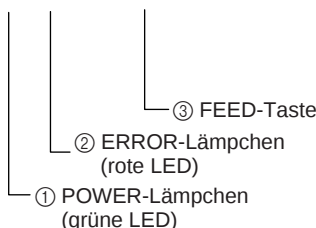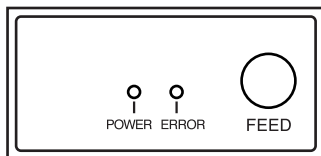

- ① POWER-Lämpchen (grüne LED)
Leuchtet in eingeschaltetem Zustand
- ② ERROR-Lämpchen (rote LED)
Zeigt in Kombination mit dem POWER-Lämpchen verschiedene Fehlerzustände an
- ③ FEED-Taste
Die FEED-Taste drücken, um das Rollenpapier vorzutransportieren.

4-2. Fehler

1) Automatisch behebbare Fehler

Fehlerbeschreibung	POWER-Lämpchen	ERROR-Lämpchen	Behebungsbedingungen
Erkennung hoher Kopftemperatur	Blinkt in Abständen von 0,5 s	Aus	Automatische Behebung nach Abkühlen des Druckkopfes.
Abdeckung-Offen-Fehler	Ein	Ein	Automatische Behebung nach Schließen der Druckerabdeckung.

2) Nicht behebbare Fehler

Fehlerbeschreibung	POWER-Lämpchen	ERROR-Lämpchen	Behebungsbedingungen
Papierschnitt-Fehler	Aus	Ein	Dies ist ein nicht behebbarer Fehler. Der Kundendienst muß bezüglich Reparatur kontaktiert werden.
Speicherschalter-Fehler	Blinkt im Abstand von 0,25 s	Blinkt im Abstand von 0,25 s	Dies ist ein nicht behebbarer Fehler. Der Kundendienst muß bezüglich Reparatur kontaktiert werden.
Thermistor-Fehler	Blinkt im Abstand von 0,5 s	Blinkt im Abstand von 0,5 s	Dies ist ein nicht behebbarer Fehler. Der Kundendienst muß bezüglich Reparatur kontaktiert werden.
Stromversorgung-Fehler	Blinkt im Abstand von 1 s	Blinkt im Abstand von 1 s	Dies ist ein nicht behebbarer Fehler. Der Kundendienst muß bezüglich Reparatur kontaktiert werden.

Hinweis

- 1) Wenn ein nicht behebbarer Fehler auftritt, das Gerät sofort ausschalten.
- 2) Wenn ein Stromversorgung-Fehler auftritt, besteht die Möglichkeit, daß die Netzversorgung nicht richtig ist.
Bei anderen nicht behebbaren Fehlern muß der Kundendienst bezüglich Reparatur kontaktiert werden.

3) Papierschnitt-Fehler

Fehlerbeschreibung	POWER-Lämpchen	ERROR-Lämpchen	Behebungsbedingungen
Papierschnitt-Fehler	Aus	Blinkt im Abstand von 0,125 s	Beheben, wenn das Schneidwerk nach dem Ein- und Ausschalten in Grundstellung zurückkehrt. Wiederherstellung ist auch mit dem Befehl <DLE><ENQ>n möglich, wenn im ESC/POS-Modus.

Hinweis

- 1) Wenn das Schneidwerk nicht in Grundstellung zurückkehrt oder nicht die Anfangsbewegung ausführt, ist Behebung nicht möglich.
- 2) Wenn Papierstau vorliegt, ausschalten, den Papierstau beheben, und dann wieder einschalten.
- 3) Handhabung von Papierschnittfehlern, die im Druckerstatus auftreten.
STAR-Modus: Nicht behebbarer Fehler
ESC/POS-Modus: Behebbarer Fehler

4) Papiererkennung-Fehler

Fehlerbeschreibung	POWER-Lämpchen	ERROR-Lämpchen	Behebungsbedingungen
Papierschnitt-Fehler	Aus	Blinkt im Abstand von 0,5 s	Automatische Behebung durch Einlegen einer neuen Papierrolle und Schließen der Druckerabdeckung.
Papierrollenende fast erreicht	Ein	Blinkt im Abstand von 2 s	Ein Fehler wird im STAR-Modus angezeigt, aber der Druckvorgang wird ohne Stoppen fortgesetzt. Vorgänge im ESC/POS-Modus werden durch den Befehl <ESC> "c4" n bestimmt. Mit anderen Worten, Fehlerbehebung wird automatisch erzielt, wenn Papier im Drucker eingesetzt ist und die Abdeckung geschlossen wird, nachdem der Druck gestoppt wurde, wenn der Parameter auf Druck-Beendung gestellt wurde. Wenn der Parameter nicht auf Druck-Beendung gestellt wurde, wird der Druckvorgang fortgesetzt.

4-3. Selbstdruck

(1) Testdruck

Das Gerät einschalten, während die FEED-Taste gedrückt gehalten wird. Der Testdruck wird entsprechend der Ver. Nr., den DIP-Schalter-Einstellungen und der Zeichenfolge ausgeführt. Wenn die FEED-Taste beim Ende des Testdrucks gedrückt wird, werden nur die Zeichen wiederholt ausgedruckt.

*** TSP600 Ver1.00

Interface : Parallel

DIP Switch 1

Sw 12345678

On *****

Off

., ' # \$ % & ' () * + ,
8 9 : ; < = > ? @ A B C D E F G
P Q R S T U V W X Y Z [\] ^ _ ` a b c
h i j k l m n o p q r s t u v w x y z { | } ~ *
! " # \$ % & ' () * + , - . / : ;
< = > ? @ A B C D E F G H I J K L M N O P Q R S T U V W X Y Z

(2) Sedezimaler Datenausdruck

Die Druckerabdeckung öffnen, und dann einschalten, während die FEED-Taste gedrückt gehalten wird. Wenn die Abdeckung geschlossen wird, wird "***HEX DUMP PRINTING***" ausgedruckt, und der Drucker schaltet auf die Betriebsart sedezipimaler Datenausdruck um.

Jedes der vom Computer zum Drucker gesandten Signale wird nun als sedezipimaler Code ausgedruckt.

Diese Funktion erlaubt es, zu prüfen, ob ein von der Sowa zum Drucker gesandter Steuercode korrekt ist oder nicht. Die letzte Zeile wird nicht ausgedruckt, wenn Daten für weniger als eine ganze Zeile vorhanden sind. Wenn die FEED-Taste gedrückt wird, wird aber auch die letzte Zeile ausgedruckt. Zum Ausschalten dieser Betriebsart ist es erforderlich, den Drucker vollständig auszuschalten.


*** HEX DUMP PRINTING ***

20 21 22 23 24 25 26 27	! " # \$ % & ' () * + , - . /
28 29 2A 2B 2C 2D 2E 2F	0 1 2 3 4 5 6 7
30 31 32 33 34 35 36 37	8 9 : ; < = > ?
38 39 3A 3B 3C 3D 3E 3F	@ A B C D E F G
40 41 42 43 44 45 46 47	H I J K L M N O
48 49 4A 4B 4C 4D 4E 4F	P Q R S T U V W
50 51 52 53 54 55 56 57	

5. Einlegen der Papierrolle


Immer Rollenpapier verwenden, das zu den technischen Daten des Druckers paßt.

Bei Verwendung einer Papierrolle mit einer Breite von 57,5 mm den optionalen Papierrollenhalter wie auf der folgenden Seite beschrieben, einlegen.

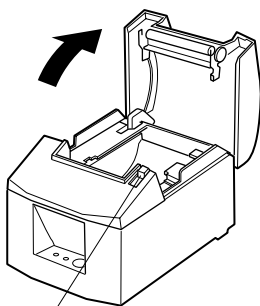




Abdeckung-Öffnen-Hebel


Rollenpapier

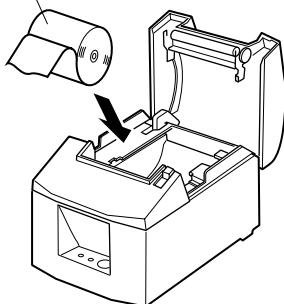


- 1) Den Abdeckung-Öffnen-Hebel drücken, und die Druckerabdeckung öffnen.

- 2) Unter Beachtung der richtigen Einsetzrichtung der Rolle die Papierrolle in die Vertiefung legen und die Vorderkante des Papiers nach vorne ziehen.

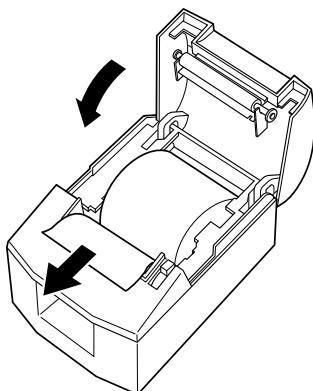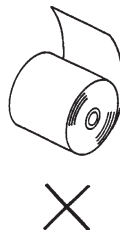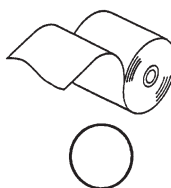

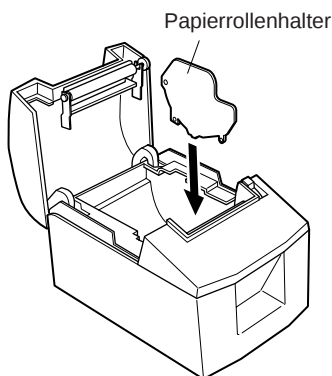


Hinweis 2: Bei Verwendung einer Papierrolle mit einer Breite von 57,5 mm den optionalen Papierrollenhalter in die Rille im Drucker setzen.

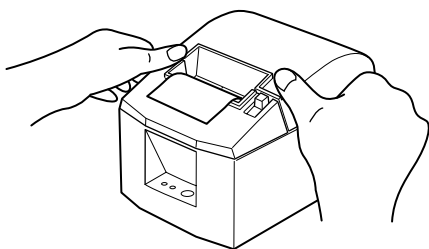

- 3) Beide Seiten der Druckerabdeckung zum Schließen nach unten drücken.

Hinweis: Sicherstellen, daß die Druckerabdeckung fest geschlossen ist.

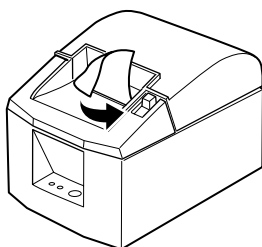

Abreißkantenmodell

- 4) **Abreißkantenmodell:**

Das Papier abreißen, wie in der Abbildung gezeigt.

Auto-Schneidwerkmodell

Wenn die Druckerabdeckung nach dem Einschalten geschlossen wird, arbeitet das Schneidwerk automatisch, und das vordere Papierende wird abgeschnitten.

Wichtig!


1. Nicht die Schneidwerkklinge berühren.
 - Im Papierauslaßschlitz befindet sich ein Schneidwerk. Niemals die Hände in den Auslaßschlitz stecken, nicht nur während des Druckbetriebs sondern auch wenn der Drucker nicht arbeitet.
 - Die Druckerabdeckung kann geöffnet werden, wenn das Papier ausgetauscht wird. Da das Schneidwerk im Inneren der Druckerabdeckung ist, darauf achten, nicht das Gesicht oder die Hände zu nahe an das Schneidwerkmesser zu bringen.
 2. Nicht den Abdeckungs-Öffnen-Hebel ziehen und die Druckerabdeckung öffnen, während der Druck abläuft oder wenn die automatische Schneideinheit arbeitet.
 3. Nicht den Lösehebel der Abdeckung betätigen, während mit der Hand auf die Druckerabdeckung gedrückt wird.
 4. Nicht das Papier bei geschlossener Druckerabdeckung herausziehen.
 5. Das Heizelement und der Treiber-Chip des Thermalkopfes werden leicht beschädigt. Diese Teile nicht mit Metallgegenständen, Sandpapier usw. berühren.
 6. Während des Druckens und kurz nach dem Drucken kann der Bereich um den Thermalkopf sehr heiß werden. Nicht das Heizelement mit der Hand berühren.
 7. Die Druckqualität kann nachlassen, wenn das Thermalkopf-Heizelement durch Berührung mit der Hand verschmutzt wird. Nicht das Thermalkopf-Heizelement berühren.
 8. Es besteht die Gefahr von Schäden am Treiber-Chip durch statische Elektrizität. Niemals den Chip direkt berühren.
 9. Die Druckqualität und die Lebensdauer des Thermalkopfes kann nicht garantiert werden, wenn anderes als Papier der vorgeschriebenen Sorte verwendet wird. Insbesondere Papier mit [Na⁺, K⁺, Cl⁻] kann die Lebensdauer des Thermalkopfes drastisch verkürzen. Bitte vorsichtig arbeiten.
 10. Nicht den Drucker betreiben, wenn Feuchtigkeit durch Beschlag usw. an der Vorderseite des Druckkopfes vorhanden ist.
-

6. Einstellung des Endanäherungs-Sensors

Den Endanäherungs-Sensor auf folgende Weise justieren, damit er der Größe der verwendeten Papierrolle entspricht.


- ① Die Druckerabdeckung öffnen.
- ② Den Durchmesser der verwendeten Papierrolle ermitteln, und in der untenstehenden Tabelle die entsprechende Einstellung aufsuchen.
- ③ Die Spitze eines Kugelschreibers o.ä. Gegenstands in das Loch des Einstellers stecken, und dann eindrücken und den Einsteller auf die gewünschte Einstellung schieben.

Beim Ändern der Einstellung sicherstellen, daß die Position des Lochs mit der durch Pfeil markierten Ausrichtmarkierung ausgerichtet ist.

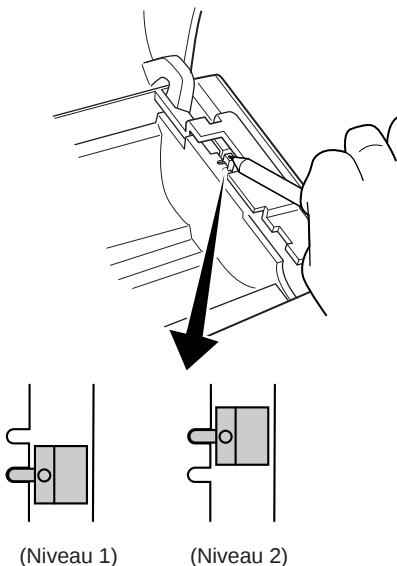

Einstellwerte entsprechend des verwendeten Papiers

Papierdicke (μm)	Bei Verwendung einer Papierrolle mit einem Kern mit Innendurchmesser (A): $\varnothing 12$ und Außendurchmesser (B): $\varnothing 18$			
	Erkannter Durchmesser (C) (Etwa mm)		Rest papier (Etwa m)	
	Niveau 1	Niveau 2	Niveau 1	Niveau 2
65	$\varnothing 23$	$\varnothing 29$	2,7	7,3
85	$\varnothing 21$		1,2	5,5

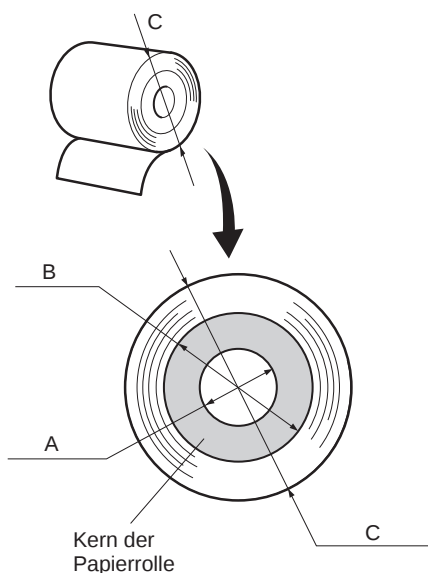

Hinweis

- 1) Das Standardmodell ist werkseitig auf Niveau 1 gestellt.
- 2) Die Abmessung C und die restliche Papierlänge sind berechnete Werte. Es können leichte Abweichungen zum tatsächlichen Wert auftreten.
- 3) Da Lockerung im Papier auftritt und zu einem Zunehmen der Diskrepanz zwischen den C-Abmessungen und der restlichen Papierlänge führt, wenn das verwendete Papier eine Druckerdicke von $85 \mu\text{m}$ hat, wird empfohlen, Niveau 2 zu verwenden.

7. Verhindern und Beheben von Papierstau

7-1. Verhindern von Papierstau

Das Papier soll beim Ausgeben und vor dem Schneiden nicht berührt werden. Wenn das Papier beim Ausgeben gedrückt oder gezogen wird, kann ein Papierstau, ein Abschneidfehler oder ein Zeilenvorschubfehler verursacht werden.

7-2. Beheben von Papierstau

Wenn ein Papierstau auftritt, beheben Sie ihn wie folgt.

(1) Stellen Sie den Netzschalter auf Aus, um den Drucker auszuschalten.

(2) Ziehen Sie den Hebel nach vorne, um die Druckerabdeckung zu öffnen.

Wenn die Druckerabdeckung sich bei Modellen mit automatischer Abschneideeinheit nicht öffnet, bedeutet dies, daß die automatische Abschneideeinheit nicht in Grundstellung ist. In diesem Fall die automatische Abschneideeinheit entsprechend den in Abschnitt 7-3 gegebenen Anweisungen auf Grundstellung zurückstellen. Dann die Druckerabdeckung öffnen, nachdem der Papierstau behoben ist.

(3) Entfernen Sie das gestaute Papier.

Hinweis: Achten Sie darauf, den Drucker beim Entfernen des gestauten Papiers nicht zu beschädigen. Insbesondere der Thermaldruckkopf läßt sich leicht beschädigen; achten Sie darauf, ihn nicht zu berühren.

(4) Stellen Sie sicher, daß das Papier gerade ausgerichtet ist, und schließen Sie die Druckerabdeckung vorsichtig.

Hinweis 1: Stellen Sie sicher, daß das Papier gerade ausgerichtet ist. Wenn die Druckerabdeckung bei schief liegendem Papier geschlossen wird, kann ein Papierstau auftreten.

Hinweis 2: Sperren Sie die Druckerabdeckung durch Drücken auf die Seiten. Nicht zum Schließen auf die Mitte drücken. Dabei kann es sein, daß die Abdeckung nicht richtig schließt.

(5) Stellen Sie den Netzschalter in Ein-Stellung, um den Drucker einzuschalten. Stellen Sie sicher, daß die ERROR-LED nicht leuchtet.

Hinweis: Während die ERROR-LED leuchtet, akzeptiert der Drucker keine Befehle wie Druckbefehl; stellen Sie deshalb sicher, daß die Abdeckung richtig geschlossen ist.

7-3. Freigeben eines gesperrten Schneidmessers Nur Auto-Schneidwerkmodell

Wenn das automatische Schneidmesser sperrt oder das Papier nicht schneidet, wie folgt verfahren.


Achtung:

Da Arbeiten am Schneidmesser gefährlich sein können, immer zuerst den Drucker ausschalten.

- (1) Den Netzschalter auf Aus (OFF) stellen, um den Drucker auszuschalten.
- (2) Die Frontabdeckung abschieben, um das Schneidmesser freizulegen.
- (3) Gestautes Papier entfernen.

Hinweis: Darauf achten, nicht den Drucker nicht beim Entfernen von gestautem Papier zu beschädigen.

Da der Thermalkopf besonders empfindlich ist, darauf achten, ihn nicht zu berühren.

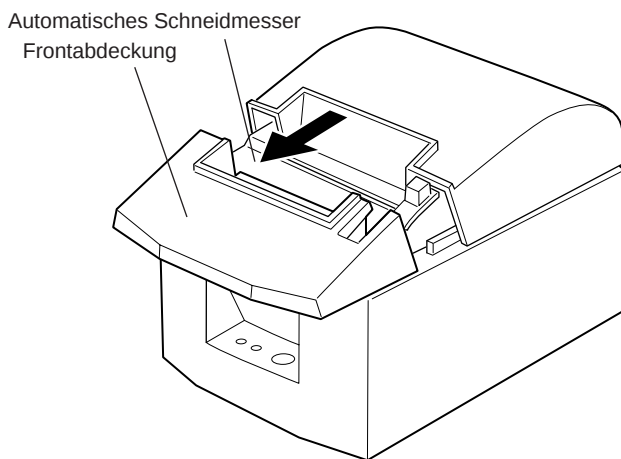


- (4) Wenn die bewegliche Klinge des Schneidmessers hervorsteht, mit einem Kreuzschlitzschraubenzieher die Kreuzschlitzschraube drehen, und die bewegliche Klinge in Grundstellung zurückstellen. Wenn das Prüffenster vollständig weiß ist, ist die bewegliche Klinge in Grundstellung.

Hinweis 1: Nicht starken Druck auf die bewegliche Klinge ausüben.

Hinweis 2: Wenn die bewegliche Klinge zu sehr hervorsteht, kann die Druckerabdeckung nicht geöffnet werden. Wenn versucht wird, die Abdeckung zu öffnen, kann das Schneidmesser beschädigt werden.

- (5) Die Druckerabdeckung öffnen, gestautes Papier entfernen, und dann die Papierrolle wieder einsetzen.
- (6) Die Frontabdeckung wieder einsetzen, und den Netzschalter auch Ein (ON) stellen.

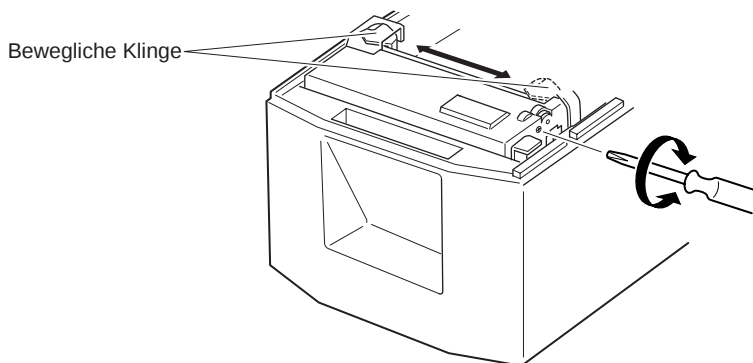

8. Regelmäßige Reinigung

Die Druckzeichen können durch Ansammlung von Papierstaub und anderem Schmutz unscharf werden. Um das zu verhindern, muß im Papierhalter und in der Papiertransportstufe angesammelter Staub von Zeit zu Zeit entfernt werden. Diese Reinigung sollte einmal alle sechs Monate oder einmal nach jeder Million Zeilen ausgeführt werden.

8-1. Reinigen des Thermalkopfes

Zum Entfernen von schwärzlichem Staub auf der Oberfläche des Thermalkopfes diesen mit Isopropylalkohol (IPA) abwischen.

Hinweis: Der Thermalkopf läßt sich leicht beschädigen. Zum Abwischen immer einen sehr weichen Lappen verwenden und sicherstellen, daß er nicht zerkratzt wird.

8-2. Reinigen des Papierhalters

Verwenden Sie einen weichen Lappen zur Entfernung von Papierstaub vom Papierhalter und aus der Papiertransportstufe.

INDICE

1. Identificazione delle parti e nomenclatura	73
2. Parti soggette a consumo e trasformatore CA	76
3. Cavi di collegamento e trasformatore CA	78
3-1. Cavo interfaccia	78
3-2. Collegamento ad un'unità periferica	80
3-3. Collegamento del trasformatore CA opzionale	81
3-4. Accensione	82
4. Pannello di controllo e altre funzioni	83
4-1. Pannello di controllo	83
4-2. Errori	83
4-3. Stampa automatica	85
5. Inserimento del rotolo di carta	86
6. Regolazione del sensore di esaurimento prossimo	89
7. Prevenzione e soluzione degli inceppamenti della carta	91
7-1. Prevenzione degli inceppamenti della carta	91
7-2. Eliminazione degli inceppamenti della carta	91
7-3. Rilascio della taglierina bloccata (solo modello con taglierina automatica)	92
8. Pulizia periodica	94
8-1. Pulizia della testina termica	94
8-2. Pulizia del comparto carta	94
APPENDICE	95

L'Appendice appare solo nella sezione in inglese di questo manuale.

 



Visitare il seguente indirizzo URL

http://www.star-micronics.co.jp/service/frame_sp_spr_e.htm

per accedere alla versione più recente del manuale.

1. Identificazione delle parti e nomenclatura

Modello con taglierina automatica

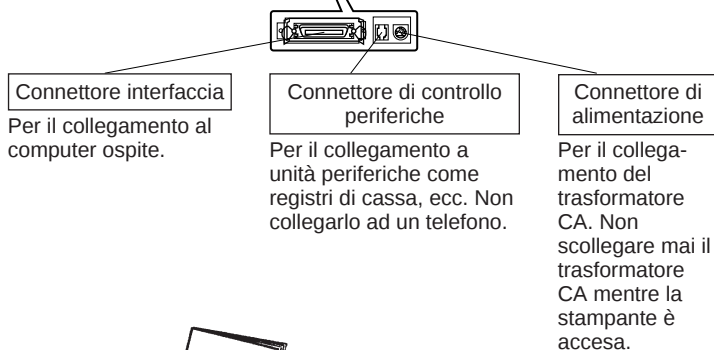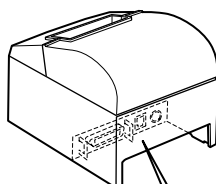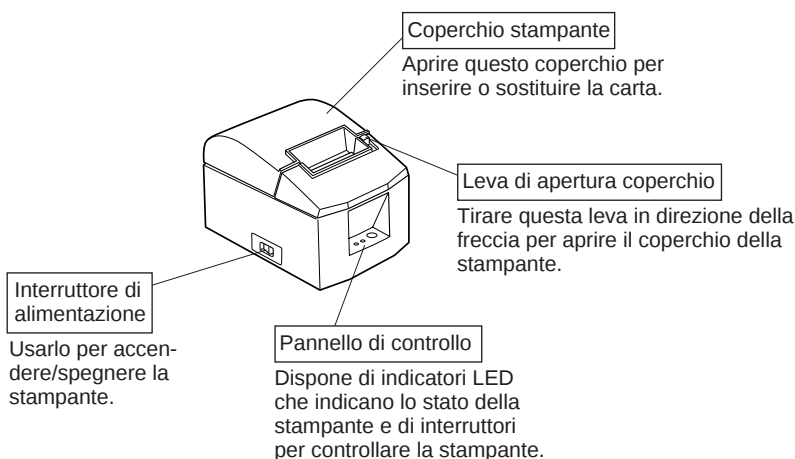

Carta in rotolo



Manuale dell'utilizzatore



Anello di ferrite

 


(Solo modello a interfaccia parallelo)



Fascetta di fissaggio

(Solo modello a interfaccia parallelo)

Modello con barra di strappo

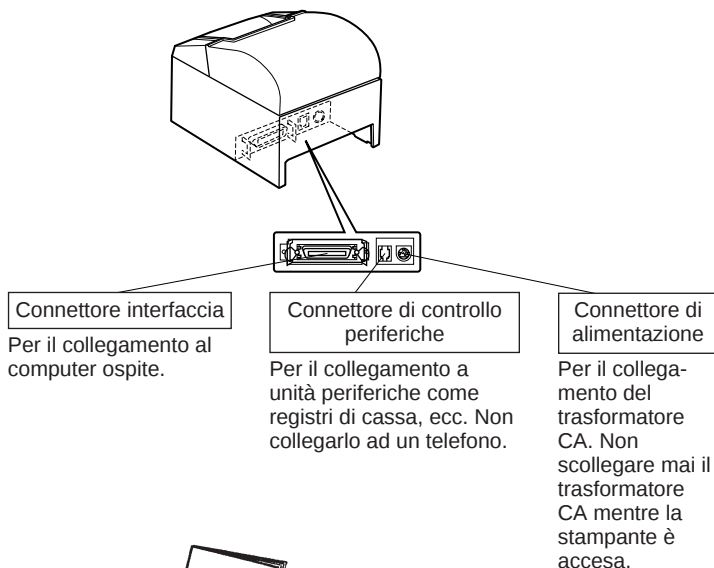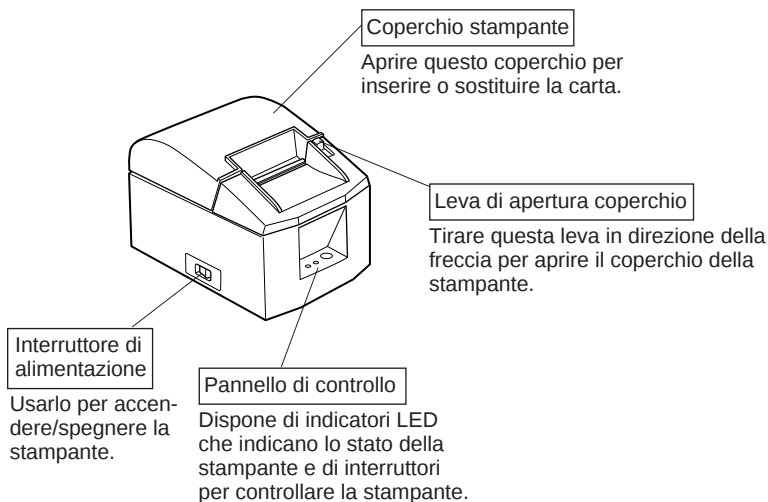

Carta in rotolo



Manuale dell'utilizzatore



Anello di ferrite
(Solo modello a interfaccia parallelo)



Fascetta di fissaggio
(Solo modello a interfaccia parallelo)

Scelta di un luogo per la stampante

Prima di disimballare la stampante, decidere dove si desidera installarla. Tenere presenti i seguenti punti.

- ✓ Scegliere una superficie stabile e in piano, dove la stampante non sia esposta a vibrazioni.
- ✓ La presa di corrente che si intende usare per la stampante deve essere vicina e libera da ostacoli.
- ✓ La stampante deve essere abbastanza vicina al computer da permettere il collegamento tra i due.
- ✓ Assicurarsi che la stampante non sia esposta alla luce solare diretta.
- ✓ Assicurarsi che la stampante sia lontana da caloriferi e altre fonti di calore elevato.
- ✓ Assicurarsi che l'area circostante sia pulita, asciutta e priva di polvere.
- ✓ Assicurarsi che la stampante sia collegata ad una presa di corrente affidabile. Non deve essere la stessa presa di corrente di copiatrici, frigoriferi e altre apparecchiature che causano picchi di corrente.
- ✓ Assicurarsi che la stanza dove si usa la stampante non sia troppo umida.

2. Parti soggette a consumo e trasformatore CA

Quando le parti soggette a consumo si sono esaurite, usare quelle specificate nella seguente tabella. Assicurarsi di usare il trasformatore CA specificato nella tabella. L'uso di parti soggette a consumo o di un trasformatore CA diversi da quanto specificato nella tabella può causare danni alla stampante, incendi o scosse elettriche.

(1) Carta in rotolo specifiche

Carta termica

Spessore: 65~85 μm

Larghezza: 79,5 $\pm$ 0,5 mm (57,5 $\pm$ 0,5 mm quando si usa il supporto per rotolo di carta opzionale)

Diametro esterno rullo: $\varnothing$ 90 mm or less

Larghezza carta del rullo di raccolta: 80 $^{+0.5}_{-1}$ mm (58 $^{+0.5}_{-1}$ mm quando si usa il supporto per rotolo di carta opzionale)

Diametro interno/esterno nucleo

Spessore carta

65~85 μm

Nucleo: esterno

$\varnothing$ 18 $\pm$ 1 mm

Nucleo: interno

$\varnothing$ 12 $\pm$ 1 mm

Superficie stampata: Bordo esterno del rotolo

Maneggio dell'estremità finale: Non usare colla o adesivi per fissare la carta del rotolo o il suo nucleo.

Non piegare l'estremità finale della carta.

(2) Carta consigliata

Mitsubishi Paper Mills Limited

P220AG (carta di tipo normale), 65 μm (spessore)

HP220A (carta a stabilità immagine alta), 65 μm (spessore)

HP220AB-1 (carta a stabilità immagine alta), 75 μm (spessore)

P220AB (carta di tipo normale, biglietti scheda), 85 μm (spessore)

Oji Paper Co., Ltd.

PD150R (carta di tipo normale), 75 μm (spessore)

PD160R (carta a stabilità immagine alta), 65/75 μm (spessore)

Nippon Paper Industries

TF50KS-E2C (carta di tipo normale), 65 μm (spessore)

A seconda del tipo e dello spessore della carta, può essere necessario cambiare le impostazioni per la densità di stampa. Per cambiare le impostazioni di densità, usare il comando di impostazione densità di stampa <ESC><RS>'d'n. Fare riferimento al manuale del programmatore separato per dettagli.

(3) Trasformatore CA (opzionale)

Nome modello: PS60-24 A

Ingresso: Da 100 a 240 V CA, 50/60 Hz

Uscita: 24±5%CC, 2,0 A (5,0 A carico 10 sec. mass.)

Importante!


Accedere alla seguente URL per informazioni sulla carta consigliata.

<http://www.star-micronics.co.jp/>


3. Cavi di collegamento e trasformatore CA

3-1. Cavo interfaccia


3-1-1. Installazione dell'anello di ferrite (solo modello a interfaccia parallelo)

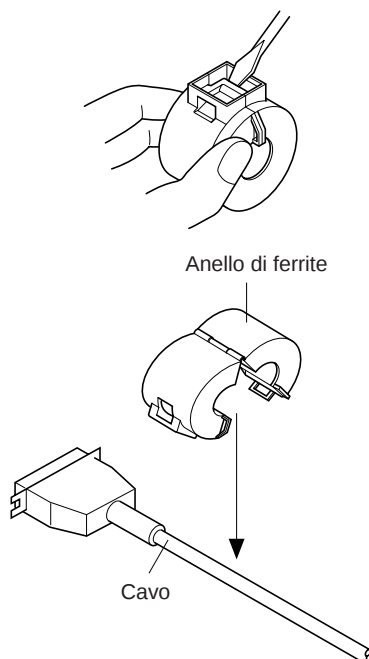

- (1) Solo per il modello a interfaccia parallelo, fissare l'anello di ferrite al cavo come mostrato nell'illustrazione qui sotto.

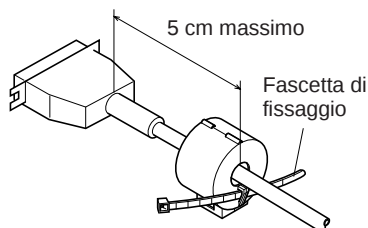

- (2) Far passare la fascetta di fissaggio attraverso l'anello di ferrite.

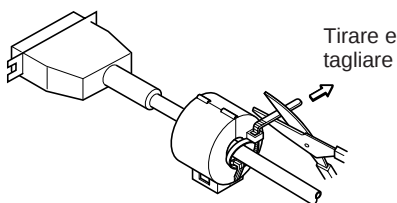



- (3) Avvolgere la fascetta intorno al cavo e fissarla. Usare delle forbici per tagliare la parte in eccesso.

3-1-2. Collegamento del cavo interfaccia

Nota: Prima di collegare/scollegare il cavo interfaccia, assicurarsi che la stampante e tutti i dispositivi collegati alla stampante siano spenti.

Inoltre assicurarsi che la spina del cavo di alimentazione sia scollegata dalla presa di corrente.

- (1) Collegare il cavo interfaccia al connettore sul pannello posteriore della stampante.
- (2) Nel caso di un interfaccia seriale, serrare le viti del connettore. Nel caso di un interfaccia parallelo, fissare i morsetti del connettore.

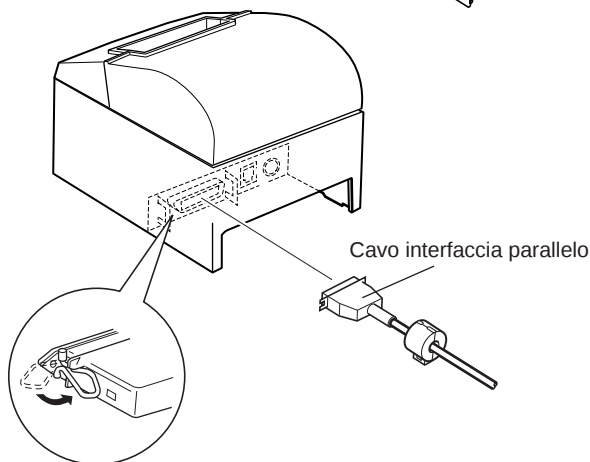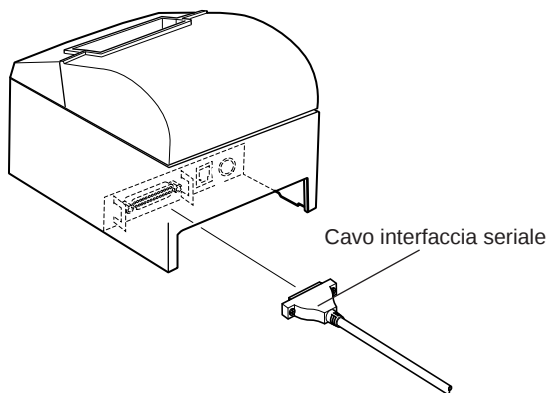

3-2. Collegamento ad un'unità periferica

Si può collegare un'unità periferica alla stampante usando una spina modulare. Di seguito descriviamo come installare l'anello di ferrite ed eseguire il collegamento. Vedere “Modulare necessario” a pagina 108 per dettagli sul tipo di spina modulare necessario. Notare che la stampante non è dotata di spina o filo modulare, che devono essere acquistati in base alle esigenze di impiego.

Importante!


Assicurarsi che la stampante sia spenta e scollegata dalla presa di corrente e che il computer sia spento prima di eseguire il collegamento.

- (1) Collegare il cavo di controllo periferiche al connettore sul pannello posteriore della stampante.

Importante!

Non collegare una linea telefonica al connettore di controllo esterno. Altrimenti si potrebbero avere danni alla stampante.

Inoltre, per ragioni di sicurezza, non collegare fili al connettore di controllo esterno, perché se ci sono cambiamenti potrebbero condurre una tensione eccessiva.

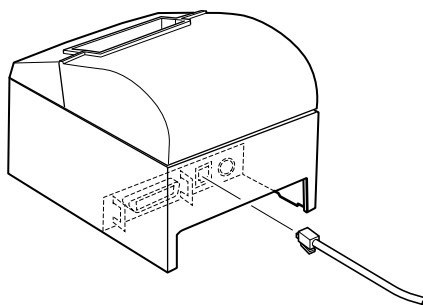

3-3. Collegamento del trasformatore CA opzionale


Nota: Prima di collegare/scollegare il trasformatore CA, assicurarsi che la stampante e tutti i dispositivi collegati alla stampante siano spenti. Inoltre assicurarsi che la spina del cavo di alimentazione sia scollegata dalla presa di corrente.

(1) Collegare il trasformatore CA al cavo di alimentazione.

Nota: Usare solo il trasformatore CA e cavo di alimentazione standard.

(2) Collegare il trasformatore CA al connettore sulla stampante.

(3) Collegare la spina del cavo di alimentazione ad una presa di corrente.

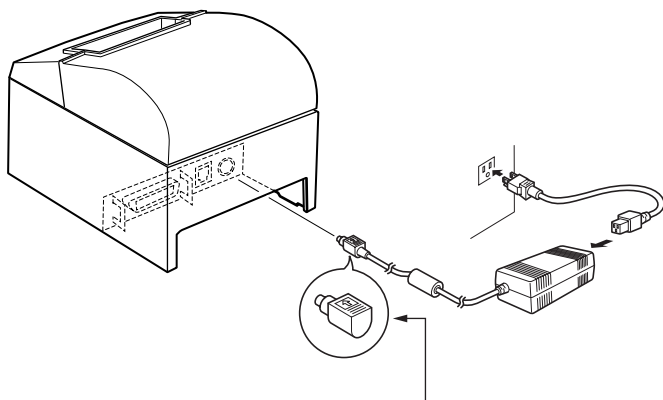

Importante!

Quando si scollega il cavo, afferrare il connettore del cavo per tirare. Sbloccando il fermo è facile scollegare il connettore.


Se si tira il cavo con forza eccessiva si possono causare danni al connettore.

3-4. Accensione

Assicurarsi che il trasformatore CA sia stato collegato come indicato nella sezione 3-3.

(1) Regolare su ON l'interruttore di alimentazione situato sul davanti della stampante.

La spia POWER sul pannello di controllo si illumina.

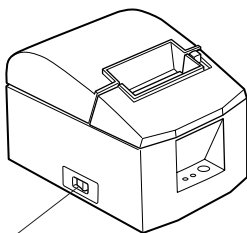


Interruttore di alimentazione

Importante!

Consigliamo di scollegare la stampante dalla presa di corrente quando si prevede di non usarla per un lungo periodo. Per questo motivo, la stampante deve essere collocata in modo che la presa di corrente sia vicina e facilmente accessibile.

4. Pannello di controllo e altre funzioni

4-1. Pannello di controllo

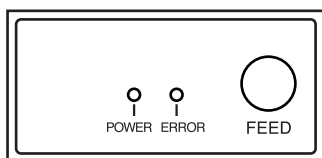

① Spia POWER (LED verde)
Si illumina quando l'unità è accesa.

② Spia ERROR (LED rosso)
Indica vari errori in combinazione con la spia POWER.

③ Tasto FEED
Premere il tasto FEED per far avanzare la carta su rotolo.

4-2. Errori

1) Errori con recupero automatico

Descrizione dell'errore	Spia POWER	Spia ERROR	Condizioni di recupero
Individuazione temperatura testina elevata	Lampeggia a intervalli di 0,5 secondi	Spenta	Recupero automatico dopo che la testina di stampa si è raffreddata.
Errore di coperchio aperto	Accesa	Accesa	Recupero automatico con la chiusura del coperchio stampante.

2) Errori senza recupero

Descrizione dell'errore	Spia POWER	Spia ERROR	Condizioni di recupero
Errore RAM	Spenta	Accesa	Questo errore è senza recupero. Consultare il rivenditore per riparazioni.
Errore interruttore memoria	Lampeggia a intervalli di 0,25 secondi	Lampeggia a intervalli di 0,25 secondi	Questo errore è senza recupero. Consultare il rivenditore per riparazioni.
Errore termistore	Lampeggia a intervalli di 0,5 secondi	Lampeggia a intervalli di 0,5 secondi	Questo errore è senza recupero. Consultare il rivenditore per riparazioni.
Errore alimentazione	Lampeggia a intervalli di 1 secondo	Lampeggia a intervalli di 1 secondo	Questo errore è senza recupero. Consultare il rivenditore per riparazioni.

Nota

- 1) Se si verifica un errore senza recupero, spegnere immediatamente l'unità.
- 2) Quando si verifica un errore alimentazione, esiste la possibilità che l'unità di alimentazione sia guasta.

Per altri errori senza recupero, consultare il rivenditore per riparazioni.

3) Errore di taglio carta

Descrizione dell'errore	Spia POWER	Spia ERROR	Condizioni di recupero
Errore di taglio carta	Accesa	Lampeggia a intervalli di 0,125 secondi	Recupero se la taglierina ritorna alla posizione di riposo dopo che si è spenta e riaccesa l'unità. Il ripristino è possibile anche con il comando <DLE><ENQ>n nel modo ESC/POS.

Nota

- 1) Se la taglierina non ritorna alla posizione di riposo, o non esegue il movimento iniziale, il recupero non è possibile.
- 2) Se la carta è inceppata spegnere l'unità, eliminare l'inceppamento e quindi riaccendere.
- 3) Gestione degli errori di taglio carta che si verificano nello stato stampante.
Modo STAR: Errore non ripristinabile
Modo ESC/POS: Errore ripristinabile

4) Errori di rilevamento carta

Descrizione dell'errore	Spia POWER	Spia ERROR	Condizioni di recupero
Errore di carta esaurita	Accesa	Lampeggia a intervalli di 0,5 secondi	Recupero automatico quando si inserisce un nuovo rullo di carta e si chiude il coperchio stampante.
Carta quasi esaurita	Accesa	Lampeggia a intervalli di 2 secondi	Un errore viene visualizzato nel modo STAR, ma la stampa continua senza interrompersi. Le operazioni nel modo ESC/POS sono determinate dal comando <ESC> "c4" n. In altre parole, il recupero viene ottenuto automaticamente quando si inserisce carta nella stampante e si chiude il coperchio dopo che la stampa si è fermata, se il parametro è stato impostato per l'arresto della stampa. Se il parametro non è stato impostato per l'arresto della stampa, l'errore viene visualizzato ma la stampa continua.

4-3. Stampa automatica

(1) Stampa di prova

Accendere l'unità tenendo premuto il tasto FEED.

La stampa di prova viene eseguita nell'ordine di numero di versione, impostazioni degli interruttori DIP e ordine dei caratteri. Se si preme il tasto FEED alla fine della stampa di prova, sono stampati ripetutamente solo i caratteri.

*** TSP600 Ver1.00

Interface : Parallel

DIP Switch 1

Sw 12345678

On *****

Off

., # \$ % & ' () * + ,
8 9 : ; < = > ? @ A B C D E F G
P Q R S T U V W X Y Z [\] ^ _ ` a b c
h i j k l m n o p q r s t u v w x y z { | } ~ *
! " # \$ % & ' () * + , - . / : ; < = > ?
@ A B C D E F G H I J K L M N O P Q R S T U V W X Y Z

(2) Modo di scaricamento esadecimale

Aprire il coperchio stampante, quindi accendere l'unità tenendo premuto il tasto FEED. Quando si chiude il coperchio viene stampato "*** HEX DUMP PRINTING***" e la stampante passa al modo di scaricamento esadecimale. Ciascuno dei segnali inviati dal computer alla stampante viene stampante come codice esadecimale.

Questa funzione permette di controllare se un codice di controllo inviato alla stampante dal programma usato è corretto oppure no. L'ultima riga non viene stampata se i suoi dati con costituiscono una riga completa. Tuttavia, se si preme il tasto FEED, viene stampata l'ultima riga. Per disattivare questo modo è necessario spegnere completamente la stampante.


*** HEX DUMP PRINTING ***

20 21 22 23 24 25 26 27	!"#\$%&'
28 29 2A 2B 2C 2D 2E 2F	()*+,-./
30 31 32 33 34 35 36 37	01234567
38 39 3A 3B 3C 3D 3E 3F	89:;<=>?
40 41 42 43 44 45 46 47	@ABCDEFGH
48 49 4A 4B 4C 4D 4E 4F	IJKLMNOP
50 51 52 53 54 55 56 57	QRSTUVWXYZ

5. Inserimento del rotolo di carta


Assicurarsi di usare carta su rotolo che corrisponde alle specifiche della stampante.

Quando si usa un rotolo di carta della larghezza di 57,5 mm, installare il supporto per rotolo di carta opzionale come descritto nella pagina seguente.

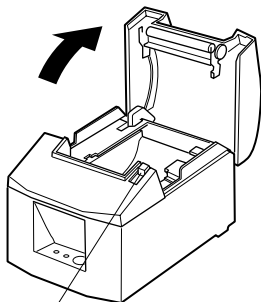



Leva di apertura coperchio


Carta su rotolo

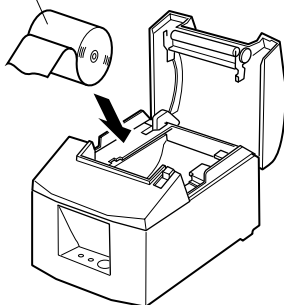


- 1) Spingere la leva di apertura coperchio e aprire il coperchio stampante.

- 2) Osservando l'orientamento del rotolo, inserire il rotolo di carta nel vano e tirare il bordo iniziale della carta verso di sé.

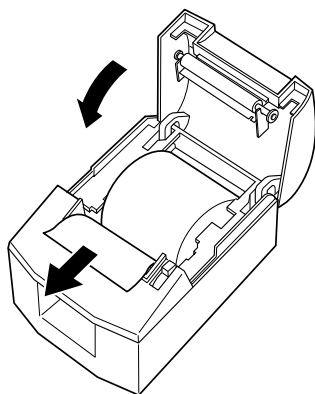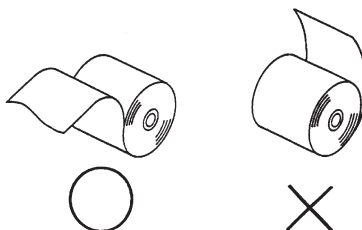

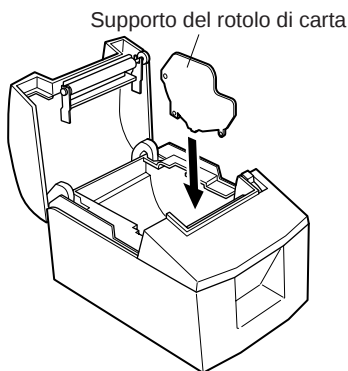


Nota 2: Quando si usa un rotolo di carta della larghezza di 57,5 mm, installare il supporto per rotolo di carta opzionale nella scanalatura sulla stampante.

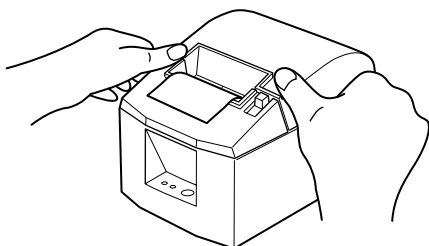

3) Premere su entrambi i lati del coperchio stampante per chiudere.

Nota: Assicurarsi che il coperchio stampante sia saldamente chiuso.

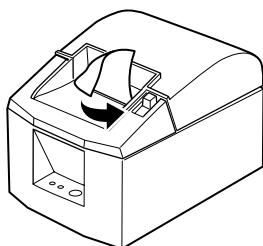

Modello con barra di strappo

4) **Modello con barra di strappo:**

Strappare la carta come illustrato.

Modello con taglierina automatica:

Se il coperchio stampante è chiuso dopo l'accensione, la taglierina agisce automaticamente e il bordo anteriore della carta viene tagliato.


Importante!

1. *Non toccare la lama della taglierina.*
 - *All'interno della fessura di uscita carta si trova una taglierina. Non mettere mai la mano nella fessura di uscita della carta durante la stampa e non mettere mai la mano nella fessura anche quando la stampa non è in corso.*
 - *Il coperchio della stampante può essere aperto quando si sostituisce la carta. Tuttavia, poiché la lama della taglierina si trova all'interno del coperchio stampante, fare attenzione a non avvicinare eccessivamente le mani o il volto alla lama della taglierina.*
 2. *Non tirare la leva di apertura del coperchio per aprire il coperchio stampante mentre la stampa è in corso o quando la taglierina automatica è in funzione.*
 3. *Non azionare la leva di apertura del coperchio mentre si preme sul coperchio stampante con la mano.*
 4. *Non estrarre la carta con il coperchio stampante chiuso.*
 5. *L'elemento riscaldante e il circuito integrato pilota sulla testina termica si danneggiano facilmente. Non toccarli con oggetti metallici, carta vetrata, ecc.*
 6. *Durante la stampante e subito dopo, l'area circostante la testina termica è molto calda. Non toccare perché si potrebbero subire ustioni.*
 7. *Se l'elemento riscaldante della testina termica si è sporcato perché è stato toccato con le mani, la qualità di stampa può risentirne. Non toccare l'elemento riscaldante della testina termica.*
 8. *Esiste il rischio di danni al circuito integrato pilota della testina di termica nel caso di elettricità statica. Non toccare mai direttamente il circuito integrato.*
 9. *La qualità di stampa e la vita utile della testina termica non possono essere garantite se si usa qualsiasi carta diversa da quella consigliata. In particolare, carta contenente [Na⁺, K⁺, Cl⁻] può ridurre drasticamente la vita utile della testina termica. Si prega di fare attenzione.*
 10. *Non usare la stampante se è presente umidità sulla parte anteriore della testina, a causa di condensa, ecc.*
-

6. Regolazione del sensore di esaurimento prossimo


Usare il seguente procedimento per regolare il sensore di esaurimento prossimo in modo che sia compatibile con le dimensioni del rotolo di carta usato.

- ① Aprire il coperchio stampante.
- ② Misurare il diametro del rotolo di carta usato e trovare l'impostazione necessaria nella tabella sotto.
- ③ Inserire la punta di una penna a sfera o un oggetto simile nel foro sul regolatore e quindi premere e spostare il regolatore sull'impostazione desiderata. Quando si cambia l'impostazione, assicurarsi che la posizione del foro sia allineata con il segno di allineamento indicato dalla freccia.

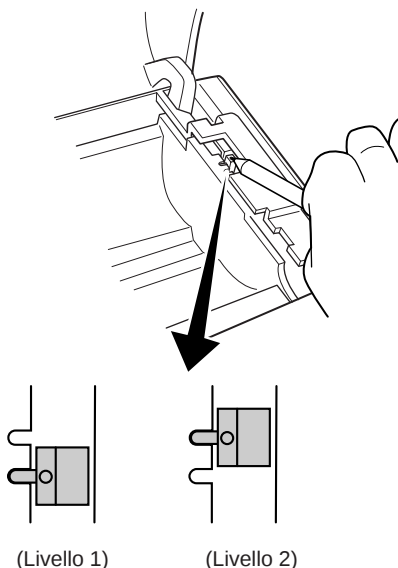

Valore di regolazione secondo la carta usata

Spessore carta (μm)	Quando si usa un rotolo di carta con nucleo di diametro interno (A):ø12, diametro esterno (B):ø18			
	Diametro individuato (C) (mm circa)		Lunghezza carta rimanente (m circa)	
	Livello 1	Livello 2	Livello 1	Livello 2
65	ø23	ø29	2,7	7,5
85	ø21		1,2	5,5

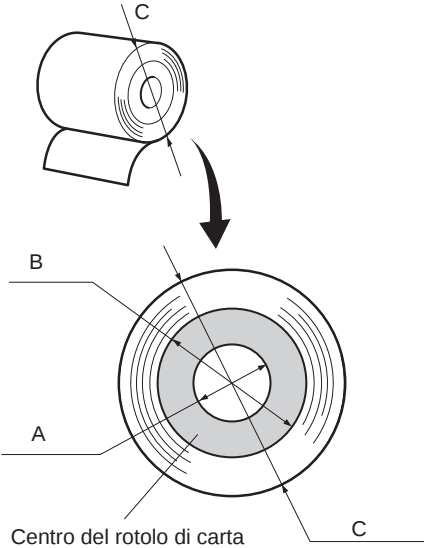

Nota

- 1) Il modello standard è impostato sul livello 1 prima di uscire dalla fabbrica.
- 2) La dimensione C e la lunghezza di carta rimanente sono valori calcolati. Si possono avere leggere variazioni nell'uso effettivo.
- 3) Poiché si verificano allentamenti della carta, che causano un aumentare delle discrepanze tra le dimensioni C e la lunghezza carta rimanente, quando si usa carta con uno spessore stampante di 85 μm, si consiglia di usare il Livello 2.

7. Prevenzione e soluzione degli inceppamenti della carta

7-1. Prevenzione degli inceppamenti della carta

La carta non deve essere toccata durante l'espulsione e prima che sia tagliata. Se si preme o si tira la carta durante l'espulsione si può verificare un inceppamento della carta, un mancato taglio della carta o un avanzamento di riga mancato.

7-2. Eliminazione degli inceppamenti della carta

Se si verifica un inceppamento della carta, eliminarlo come descritto di seguito.

(1) Regolare l'interruttore di alimentazione su OFF per spegnere la stampante.

(2) Tirare la leva verso di sé per aprire il coperchio stampante.

Se il coperchio stampante non si apre sui modelli dotati di taglierina automatica, vuol dire che la taglierina automatica non è nella posizione di riposo. In questo caso, riportare la taglierina automatica alla posizione di riposo seguendo le istruzioni fornite nella sezione 7-3. Poi aprire il coperchio stampante dopo aver eliminato l'inceppamento carta.

(3) Rimuovere la carta inceppata.

Nota: Fare attenzione a non danneggiare la stampante quando si rimuove la carta inceppata. Poiché la testina di stampa in particolare viene danneggiata facilmente, fare attenzione a non toccarla.

(4) Collocare diritto il rotolo di carta e chiudere delicatamente il coperchio stampante.

Nota 1: Assicurarsi che la carta sia ben dritta. Se si chiude il coperchio stampante con la carta storta, si può verificare un inceppamento della carta.

Nota 2: Bloccare il coperchio stampante premendo in basso sui lati. Non tentare di chiuderlo premendo sul centro. Il coperchio potrebbe non bloccarsi correttamente.

(5) Regolare su ON l'interruttore di alimentazione per accendere la stampante. Assicurarsi che la spia ERROR non sia illuminata.

Nota: Mentre la spia ERROR è illuminata, la stampante non accetta alcun comando come il comando di stampa, per cui assicurarsi che il coperchio della stampante sia bloccato correttamente.

7-3. Rilascio della taglierina bloccata (solo modello con taglierina automatica)

Se la taglierina automatica si blocca o non taglia la carta, procedere come segue.


Cautela:

Poiché lavorare con la taglierina può essere pericoloso, non dimenticare di spegnere prima la stampante.

- (1) Regolare l'interruttore di alimentazione su OFF per spegnere la stampante.
- (2) Spostare il coperchio anteriore per scoprire la taglierina automatica.
- (3) Rimuovere eventuale carta inceppata.

Nota: Fare attenzione a non danneggiare la stampante durante la rimozione della carta inceppata.

Poiché la testina di stampa termica è particolarmente sensibile, fare attenzione a non toccarla.

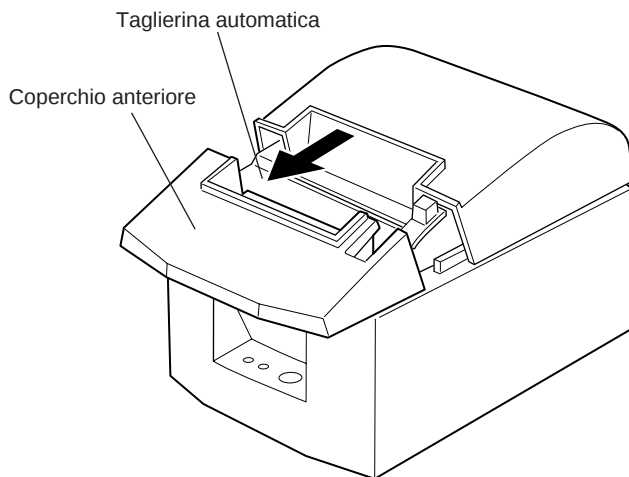


- (4) Se la lama mobile della taglierina sporge, usare un cacciavite Philips per girare la vite a testa Philips e riportare la lama mobile alla sua posizione di partenza. Quando la finestrella di controllo appare completamente bianca, la lama mobile è nella sua posizione di partenza.

Nota 1: Non applicare estrema pressione alla lama mobile.

Nota 2: Se la lama mobile sporge eccessivamente, non è possibile aprire il coperchio stampante. Se si tenta di aprire il coperchio stampante si può danneggiare la taglierina.

- (5) Aprire il coperchio stampante, rimuovere eventuale carta inceppata e quindi reinstallare il rotolo di carta.
- (6) Installare il coperchio anteriore e quindi regolare l'interruttore di alimentazione su ON.

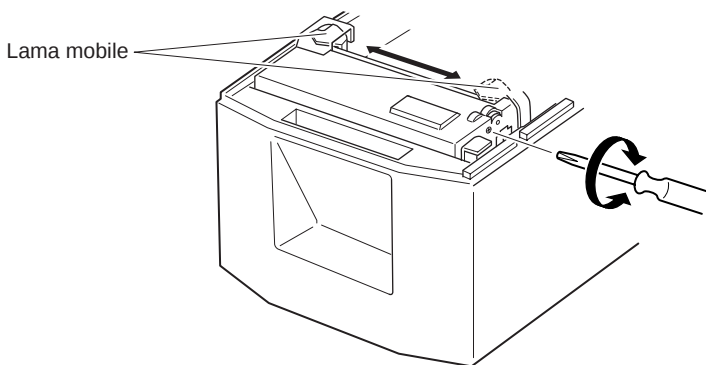

8. Pulizia periodica

I caratteri stampati possono diventare parzialmente poco chiari a causa dell'accumulo di polvere di carta e sporcizia. Per evitare tale problema, è necessario rimuovere periodicamente la polvere di carta accumulata nel comparto carta, nella sezione di trasporto carta e sulla superficie della testina termica. Si consiglia di eseguire questa pulizia una volta ogni sei mesi oppure ogni milione di righe stampate.

8-1. Pulizia della testina termica

Per rimuovere la polvere nerastra accumulata sulla superficie della testina di stampa, passarla con alcool (IPA)

Nota: La testina termica si danneggia facilmente, per cui pulirla delicatamente con un panno morbido. Fare attenzione a non graffiarla durante la pulizia.


8-2. Pulizia del comparto carta

Usare un panno morbido per eliminare la polvere di carta dal comparto carta e dalla sezione di trasporto della carta.

Appendix A: Specifications

A-1. General Specifications

- | | |
|-----------------------------|---|
| (1) Printing method | Direct line thermal printing |
| (2) Print speed | Max. 800 dots/sec. (100 mm/sec.) |
| (3) Dot density | 203 dpi: 8 dots/mm (0.125 mm/dot) |
| (4) Printing width | Max. 72 mm |
| (5) Number of print columns | Max.48 (12 × 24 dots)
Max.64 (9 × 24 dots: ESC/POS mode) |
| (6) Roll paper | Refer to chapter 2 for details on the recommended roll paper.
Paper width:79.5±0.5 mm or 57.5±0.5 mm (option)
Roll diameter: ø90 mm or less |
| (7) Overall dimension | 142 (W) × 199 (D) × 132 (H) mm |
| (8) Weight | Approx. 1.4 kg |
| (9) Noise Approx. | 53 dB (Auto cutter model)/49 dB (Tear bar model) |

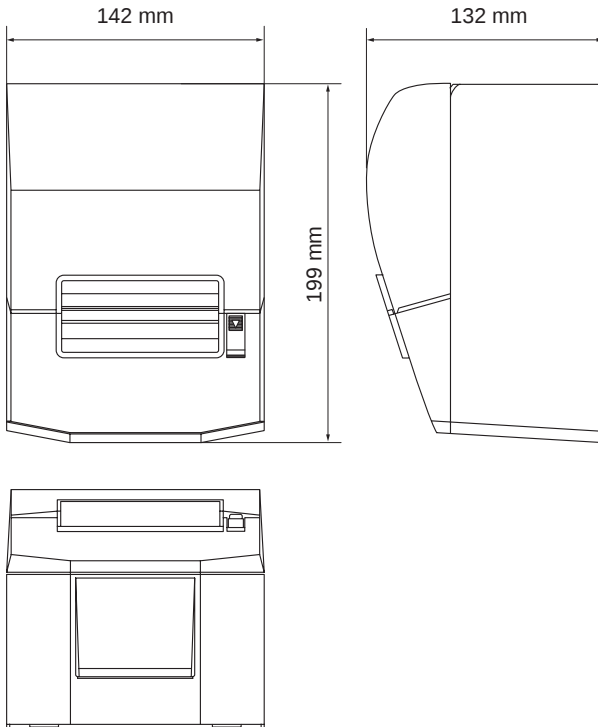

A-2. Auto Cutter Specifications

- (1)Cutting frequency Max. 20 cuts per minute
- (2)Thickness of paper 65~85 μm


A-3. Interface

RS232C serial interface or Two-way parallel interface (IEEE1284)

A-4. Electrical Characteristics

- (1)Input Voltage DC 24V $\pm$ 10%
- (2)Current Consumption Operating: Approx. 1.3 A (at ASCII printing)
- Peak: Approx. 8 A (at print duty 100%,
 for 10 seconds or less)
- Stand-by: Approx. 0.05 A
- (3)Power Connector

Pin No.	Function
1	DC24V
2	Signal GND
3	N.C.
Shell	Frame ground

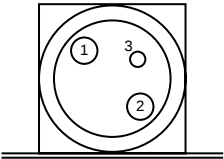

<Viewed from Connector Surface>

Important!


- When using a printer power supply other than the optional AC adaptor (PS60-24A), be sure that the following cautions are observed.
- Use a power supply of DC 24 V $\pm$ 10% and more than 2.0 A (5.0 A Load 10 sec. Min) with SELV output approved by IEC60950.
- Be careful about installing the printer in an area where there is noise. Take the appropriate measures to protect against electrostatic AC line noise, etc.

A-5. Option

- (1)Wall Mount Set (WB-T600)
- (2)Vertical Stand Set (VS-T600)
- (3) USB Interface Board Unit (IFBD-HU04)
- (4) Parallel Interface Board Unit (IFBD-HC04)
- (5) 25 Pin RS-232C Interface Board Unit (IFBD-HD04)
- (6) 9 Pin RS-232C Interface Board Unit (IFBD-HN04)

A-6. Environmental Requirements

- (1) Operating
Temperature 5°C to 45°C
Humidity 10% to 90% RH (without condensation)

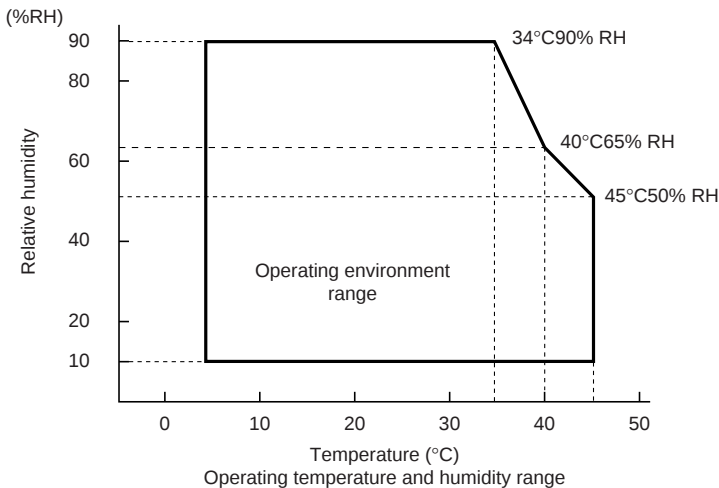

- (2) Transport/storage (except for paper)
Temperature -20°C to 60°C
Humidity 10% to 90% RH (without condensation)

A-7. Reliability


- (1) MCBF 60 million lines (based on an average printing rate of 12.5% with paper thickness in the 65 μm)
- (2) Cutter life 0.5 million cuttings (if the paper thickness is between 65 and 85 μm)

Appendix B: Dip Switch Setting

Two DIP switches are provided at the bottom of the printer, and can be set as given in the table below. Be sure to set the power switch to off before changing the settings. It is recommended to use a pointed item like a pen or flat-blade driver screw to change the settings. The settings will become effective when the power switch is set to on again.


The following is the procedure for changing the settings on DIP switches.

1. Make sure the printer is turned off.
2. Remove the screw from the DIP switch cover. Then take off the DIP switch cover, as shown in the illustration below.

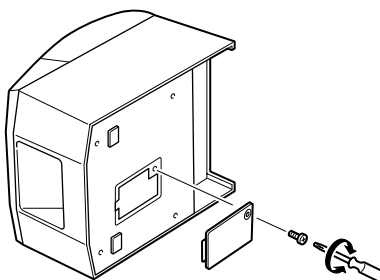

3. Set the switches using a pointed tool, such as a pen or flat-blade screwdriver.
4. Replace the DIP switch cover. Then secure it with the screw. The new settings take effect when you turn on the printer.

B-1. Parallel Interface Type

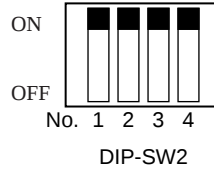

DIP-SW 1

Switch 1-1	Command emulation
ON	Star Mode
OFF	ESC/POS Mode

All factory settings for dipswitch 1 on the auto cutter model are set at [ON]. Switch 1-3 on the tear bar model is set at [OFF], and the others are set at [ON].

The functions of switches 1-2 through 1-8 will change according to the command emulation that has been set using switch 1-1.

(1) Star mode

Switch	Function	ON	OFF
1-1	Command emulation	Always ON	
1-2	Should not be changed (Should be set to on)		
1-3	Auto cutter	Valid	Invalid
1-4	Sensor adjustment	Invalid	Valid
1-5	Pin #31 (INIT) reset signal	Valid	Invalid
1-6	Handshaking conditions (conditions for BUSY)	Offline or receive buffer full	Receive buffer full
1-7	Automatic status back function	Invalid	Valid
1-8	Should not be changed (Should be set to on)		

(2) ESC/POS mode


Switch	Function	ON	OFF
1-1	Command emulation	Always OFF	
1-2	Graphic adjustment	203 DPI	180 DPI
1-3	Auto cutter	Valid	Invalid
1-4	Sensor adjustment	Invalid	Valid
1-5	Pin #31 (INIT) reset signal	Valid	Invalid
1-6	Handshaking conditions (conditions for BUSY)	Offline or receive buffer full	Receive buffer full
1-7	Automatic status back function	Invalid	Valid
1-8	Should not be changed (Should be set to on)		

DIP-SW 2

Switch	Function	ON	OFF
2-1	Always ON	Should be set to on	
2-2			
2-3			
2-4			

The factory settings of DIP switch 2 are all on.

B-2. Serial Interface Type

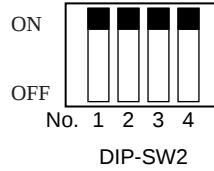

DIP-SW 1

Switch 1-1	Command emulation
ON	Star Mode
OFF	ESC/POS Mode

All factory settings for dipswitch 1 on the auto cutter model are set at [ON]. Switch 1-3 on the tear bar model is set at [OFF], and the others are set at [ON].

The functions of switches 1-2 through 1-8 will change according to the command emulation that has been set using switch 1-1.

(1) Star mode

Switch	Function	ON	OFF
1-1	Command emulation	Always ON	
1-2	Should not be changed (Should be set to on)		
1-3	Auto cutter	Valid	Invalid
1-4	Sensor adjustment	Invalid	Valid
1-5	Should not be changed (Should be set to on)		
1-6	Handshaking conditions (conditions for BUSY)	Offline or receive buffer full	Receive buffer full
1-7	Automatic status back function	Invalid	Valid
1-8	Should not be changed (Should be set to on)		

(2) ESC/POS mode

Switch	Function	ON	OFF
1-1	Command emulation	Always OFF	
1-2	Graphic Adjustment	203 DPI	180 DPI
1-3	Auto cutter	Valid	Invalid
1-4	Sensor adjustment	Invalid	Valid
1-5	Should not be changed (Should be set to on)		
1-6	Handshaking conditions (conditions for BUSY)	Offline or receive buffer full	Receive buffer full
1-7	Automatic status back function	Invalid	Valid
1-8	Should not be changed (Should be set to on)		


DIP-SW 2

Switch	Function	ON	OFF
2-1	Always ON	Should be set to on	
2-2			
2-3			
2-4			

The factory settings of DIP switch 2 are all on.

The following is the procedure for changing the settings on DIP switch No. 3.

1. Turn off the printer and all components connected to it.
2. Remove the 2 screws.
3. Remove the serial interface board unit.
4. Change the setting of the DIP switches.
5. Replace the serial interface board unit.
Then secure it with the screws.
6. Turn on the printer and all components connected to it.

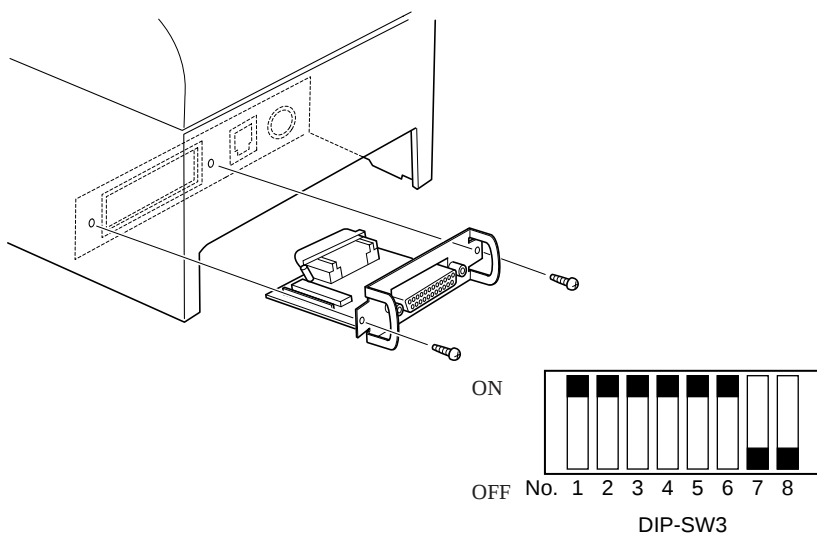

The factory settings of DIP switch are all on, except for switches 7 and 8.

DIP-SW 3

Switch	Function	ON	OFF
3-1	Baud Rate	See table below	
3-2			
3-3	Data Length	8 bits	7 bits
3-4	Parity Check	Disabled	Enabled
3-5	Parity	Odd	Even
3-6	Handshake	DTR/DSR	XON/XOFF
3-7	Pin #6 (DSR) reset signal	Valid	Invalid
3-8	Pin #25 (INIT) reset signal	Valid	Invalid


Baud Rate	Switch 3-1	Switch 3-2
4800BPS	OFF	ON
9600BPS	ON	ON
19200BPS	ON	OFF

Appendix C: Parallel Interface

The two-way parallel interface is compatible with the IEEE1284 compatibility mode, nibble mode and byte mode. Refer to the separate programmer's manual for details.

Table of Connection Signals for Each Mode

Pin No.	Direction	Compatibility Mode Signal Name	Nibble Mode Signal Name	Byte Mode Signal Name
1	In	nStrobe	Host Clock	Host Clock
2	In/Out	Data0	Data0	Data0
3	In/Out	Data1	Data1	Data1
4	In/Out	Data2	Data2	Data2
5	In/Out	Data3	Data3	Data3
6	In/Out	Data4	Data4	Data4
7	In/Out	Data5	Data5	Data5
8	In/Out	Data6	Data6	Data6
9	In/Out	Data7	Data7	Data7
10	Out	nAck	PtrClk	PtrClk
11	Out	Busy	PtrBusy/Data3,7	PtrBusy
12	Out	PError	AckDataReq/Data2,6	AckDataReq
13	Out	Select	Xflag/Data1,5	Xflag
14	In	—	HostBusy	HostBusy
15		—	—	—
16		Signal GND	Signal GND	Signal GND
17		Frame GND	Frame GND	Frame GND
18	OUT	+5V	+5V	+5V
19~30		Twisted Pair Return	Twisted Pair Return	Twisted Pair Return
31	In	nInit	nInit	nInit
32	Out	nFault	nDataAvail/Data0,4	nDataAvail
33		External GND	—	—
34	Out	Compulsion Status	—	—
35		—	—	—
36	In	nSelectIn	1284Active	1284Active

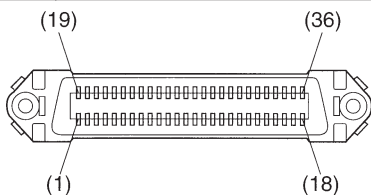

This connector mates with an Amphenol 57-30360 connector


Parallel interface connector (printer side)

Appendix D: Serial Interface


D-1. RS-232C Connector

Pin No.		Signal name	Direction	Function
25 Pin	9 Pin			
1		F-GND	—	Frame ground
2	3	TXD	OUT	Transmission data
3	2	RXD	IN	Receive data
4	7	RTS	OUT	Same as DTR signal.
5		N/C		Not used
	8	CTS	IN	Status of this signal is not checked.
6	6	DSR	IN	• DIP Switch 3-7=OFF STAR Mode Status of this signal is not checked. ESC/POS Mode In DTR/DSR communication mode, indicates whether data receive from host is enabled or disabled. Space: Receive enabled Mark: Receive disabled (except when transmitting data by DLE EOT, and GS a) This signal is not checked in the X-ON/X-OFF communication mode. • DIP Switch 3-7=ON This signal used for external reset. Priter is reset whenever signal is in mark state with pulse width of 1mS or more.
7	5	S-GND	—	Signal ground
8~19	1,9	N/C		Not used
20	4	DTR	OUT	Indicates whether data receive from host is enabled or disabled. 1) DTR/DSR Communication Mode This signal indicates whether the printer is busy. SPACE indicates that the printer is ready to receive data, and MARK indicates that the printer is busy. The busy condition can be changed by using DIP SW 1-6 as follows:

Pin No.		Signal name	Direction	Function																										
25 Pin	9 Pin																													
				<table><tr><th rowspan="2">Printer status</th><th colspan="2">DIP SW 1-6</th></tr><tr><th>OFF</th><th>ON</th></tr><tr><td>1. During the period from when the power is turned on (including resetting using the interface) to when the printer is ready to receive data.</td><td>BUSY</td><td>BUSY</td></tr><tr><td>2. During the self printing.</td><td>BUSY</td><td>BUSY</td></tr><tr><td>3. When the cover is open.</td><td>-</td><td>BUSY</td></tr><tr><td>4. When the printer stops printing due to a paper-end.</td><td>-</td><td>BUSY</td></tr><tr><td>5. During macro executing standby status.</td><td>-</td><td>BUSY</td></tr><tr><td>6. When an error has occurred.</td><td>-</td><td>BUSY</td></tr><tr><td>7. When the receive buffer becomes full.</td><td>BUSY</td><td>BUSY</td></tr></table>	Printer status	DIP SW 1-6		OFF	ON	1. During the period from when the power is turned on (including resetting using the interface) to when the printer is ready to receive data.	BUSY	BUSY	2. During the self printing.	BUSY	BUSY	3. When the cover is open.	-	BUSY	4. When the printer stops printing due to a paper-end.	-	BUSY	5. During macro executing standby status.	-	BUSY	6. When an error has occurred.	-	BUSY	7. When the receive buffer becomes full.	BUSY	BUSY
Printer status	DIP SW 1-6																													
	OFF	ON																												
1. During the period from when the power is turned on (including resetting using the interface) to when the printer is ready to receive data.	BUSY	BUSY																												
2. During the self printing.	BUSY	BUSY																												
3. When the cover is open.	-	BUSY																												
4. When the printer stops printing due to a paper-end.	-	BUSY																												
5. During macro executing standby status.	-	BUSY																												
6. When an error has occurred.	-	BUSY																												
7. When the receive buffer becomes full.	BUSY	BUSY																												
2) X-On/X-Off Communication Mode																														
Always space, except during following conditions:																														
• Period between reset and communication enabled • During self printing																														
21~24		N/C		Not used																										
25		INIT	IN	• DIP Switch 3-8=OFF Status of this signal is not checked.																										
				• DIP Switch 3-8=ON This signal used for external reset. Printer is reset whenever signal is in space state with pulse width of 1mS or more.																										

 


D-sub 25 Pin

 


D-sub 9 Pin (option)

D-2. Cable Connections

The followings are a recommended interface cable connections.

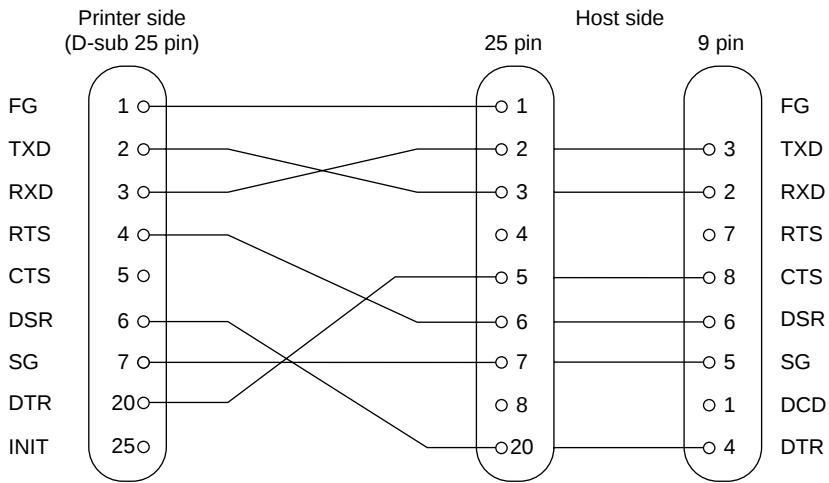

Note: Use shielded wire less than 3m in length.

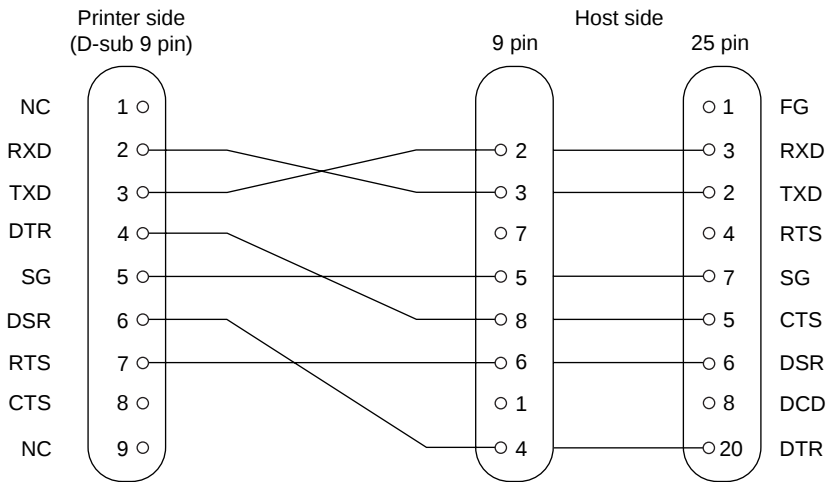

Note: Use shielded wire less than 3m in length.

D-3. Electrical Characteristics

Voltage	Data signal	Control signal	Binary status
-3V to -15V	Mark	OFF	1
+3V to +15V	Space	ON	0

Appendix E: Periheral Unit Drive Circuit


Peripheral unit drive circuit connector only connects to peripheral units such as cash drawers, etc.

Do not connect it to a telephone.

Use cables which meet the following specifications.

Peripheral Drive Connector


Pin No.	Signal name	Function	I/O direction
1	FG	Frame ground	—
2	DRD1	Drive signal 1	OUT
3	+24V	Drive power	OUT
4	+24V	Drive power	OUT
5	DRD2	Drive signal 2	OUT
6	DRSNS	Sense signal	IN

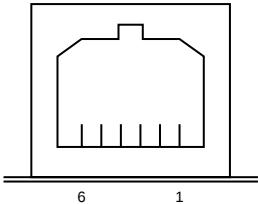

<Viewed from Connector Surface>

Modular plug

Modular plug: MOLEX 90075-0007,
AMP641337, or BURNDY B-66-4

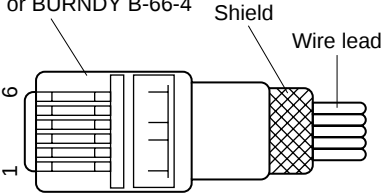

- Notes:**
1. Pin 1 must be shield drain wire connected to peripheral device frame ground.
 2. It is not possible to drive two drives simultaneously.
 3. The peripheral drive duty must satisfy the following:
ON time / (ON time + OFF time) ≤ 0.2
 4. The resistance of the peripheral drive solenoid must be 24 Ω or higher.
If it is lower than 24 Ω, over-current may flow into the solenoid, causing the solenoid to burn.

Appendix F: Memory Switch Settings

Each memory switch is stored in flash memory. For details on the functions and settings of memory switches, see the separate Programmer's Manual. The table below shows the factory settings for the memory switches.

Memory Switch	Hexadecimal Code
0	0000
1	0000
2	0000
3	0000
4	0000

Warning!

Changing the memory switch settings can cause the printer to fail to operate correctly.



**ELECTRONIC PRODUCTS DIVISION
STAR MICRONICS CO., LTD.**

536 Nanatsushinnya, Shimizu, Shizuoka,
424-0066 Japan
Tel: 0543-47-0112, Fax: 0543-48-5013

Please access the following URL
[http://www.star-micronics.co.jp/service/
frame_sp_spr_e.htm](http://www.star-micronics.co.jp/service/frame_sp_spr_e.htm)
for the latest revision of the manual.

**OVERSEAS SUBSIDIARY COMPANIES
STAR MICRONICS AMERICA, INC.**

1150 King Georges Post Road, Edison, NJ 08837-3729 U.S.A.
Tel: 732-623-5555, Fax: 732-623-5590

STAR MICRONICS U.K. LTD.


Star House, Peregrine Business Park, Gomm Road,
High Wycombe, Bucks, HP13 7DL, U.K.
Tel: 01494-471111, Fax: 01494-473333

THERMAL PRINTER

QUICK START GUIDE

Models XPR-TSP613

CONTROL PANEL

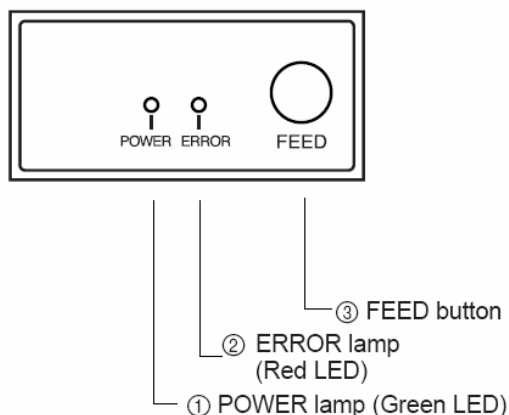




KEYPAD

Key	Name	Function
 FEED	Feed	Press the FEED button to feed roll paper.

CURSORS (LED)

Lamps	Description
Power	The POWER lamp (Green LED) lights when the power is ON.
Error	The ERROR lamp (Red LED) indicates various errors in combination with POWER lamp.

LOAD PAPER

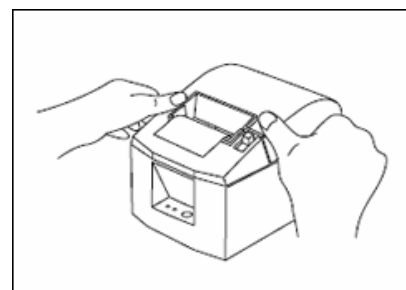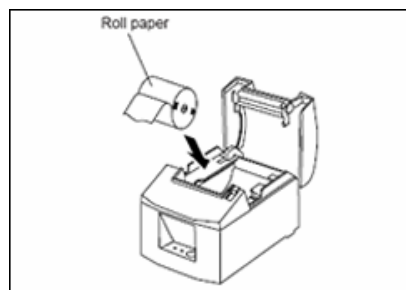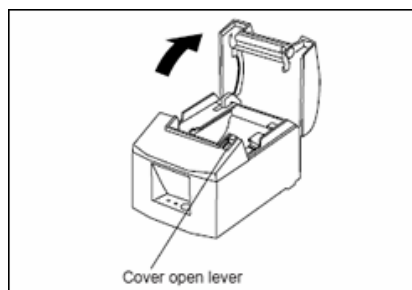

1. Push the cover open lever, and open the printer cover
2. While observing the direction (see diagram) of the roll, set the paper roll into the hollow. Pull the leading edge of the paper toward you.
3. Push down both sides of the printer cover to close. Note: Make sure that the printer cover is securely closed.



 ERRORS

Automatically recoverable error

Error Description	POWER lamp	ERROR lamp	Recovery Conditions
Head high temperature detection	Flashes at 0.5 second intervals	Off	Automatically recovered after the print head has cooled.
Cover open error	On	On	Automatically recovered by closing the printer cover.

Paper detection error

Error Description	POWER lamp	ERROR lamp	Recovery Conditions
Paper out error	On	Flashes at 0.5 second intervals	Automatically recovered by loading a new paper roll, then closing the printer cover.
Paper near end	On	Flashes at 2 second intervals	An error is displayed in the STAR mode, but printing continues without stopping. Operations in the ESC/POS mode are determined by the <ESC> “c4” n command. In other words, recovery will be attained automatically when paper is set in the printer and the cover closed after printing has stopped if the parameter has been set to cease printing. If the parameter has not been set to cease printing, the error will be displayed but printing will continue.

Please consult the Operation Manual that was shipped with your printer for more error resolution procedures.

THERMAL PRINTER

INSTALLATION INSTRUCTIONS

Models XPR-TSP613

UNPACKING

Thank you for purchasing a **METTLER TOLEDO Xpress** product. Please inspect the package immediately upon receipt. If the box is damaged, check for internal damage and file a freight claim with the carrier if necessary. If the container is undamaged, open the box, remove the printer and place it on a solid, flat surface.

Please keep the packing material and shipping insert in case you need to return the product to a **METTLER TOLEDO Xpress** representative. Package contents for this product include:


Product

- XPR-TSP613 High Speed Thermal Printer
- Paper Roll


Documents

- Operation Manual


ASSEMBLY

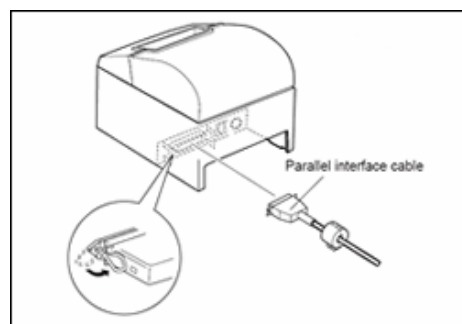


1. Attach the interface cable to the connector on the rear panel of the printer. Fasten the connector clasps.

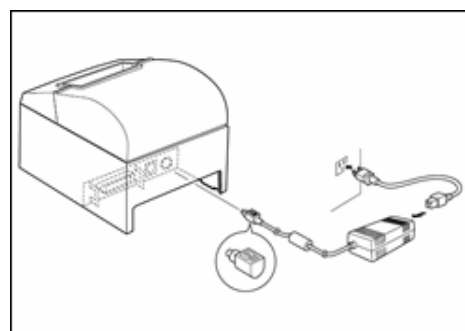


2. Connect the AC adapter to the printer and to the AC outlet.

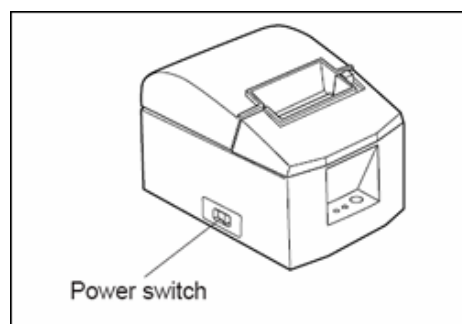


3. Set the power switch, located on the front of the printer, to on. The POWER lamp on the control panel will light up.

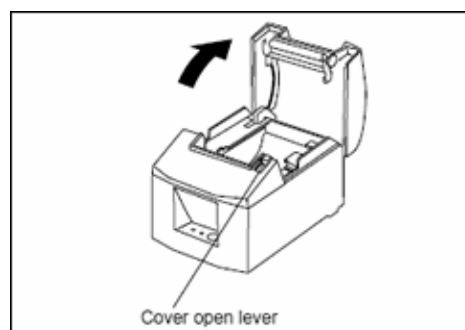

4. Load paper: Push the cover open lever, and open the printer cover.

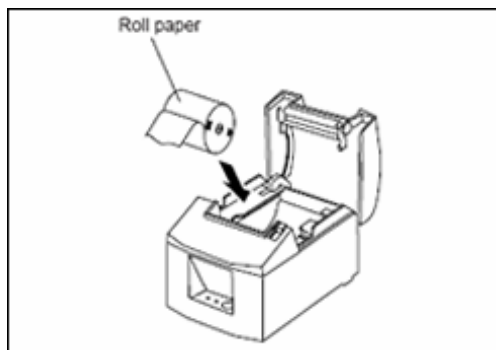

5. While observing the direction of the roll (see diagram), set the paper roll into the hollow. Pull the leading edge of the paper toward you.

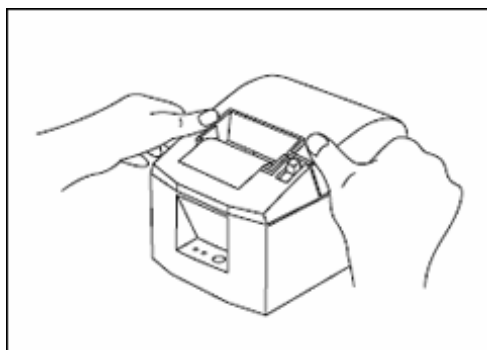

6. Push down both sides of the printer cover to close. Note: Make sure that the printer cover is securely closed.

For detailed product information, please consult the **Operation Manual provided with the printer.**

CUSTOMER SERVICE

We at **METTLER TOLEDO Xpress** want to make sure you received the product you expected. It is important to us that you are satisfied with your purchase. If there is anything we can help you with, or if you are not satisfied with either your product or the services received from the **Xpress** representative, let us know:

24/7 Information and Support:

www.mt.com/xpress

xpress@mt.com

8 AM to 8 PM EST

Toll Free: 1-866-MTXPRESS

Xpress

Mettler-Toledo, Inc.

60 Collegeview

Westerville, OH 43081