

2026

2126

2027

2127

Parts Catalog

INTRODUCTION

This publication is provided solely as a guide for individuals who have received METTLER TOLEDO Technical Training in servicing the METTLER TOLEDO product.


Information regarding METTLER TOLEDO Technical Training may be obtained by writing to:

METTLER TOLEDO
Training Center
P.O. Box 1705
Columbus, Ohio 43216
(614) 438-4400

METTLER TOLEDO RESERVES THE RIGHT TO MAKE
REFINEMENTS OR CHANGES WITHOUT NOTICE.


PRECAUTIONS

- **READ** this manual before operating or servicing this equipment.
- **ALWAYS REMOVE POWER** and wait at least 30 seconds **BEFORE** connecting or disconnecting any internal harnesses. Failure to observe these precautions may result in damage to, or destruction of the equipment.

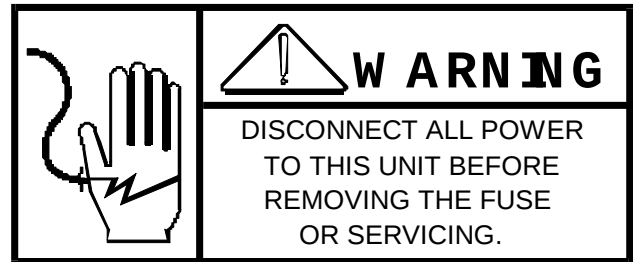

- **ALWAYS** take proper precautions when handling static sensitive devices.

- **DO NOT** connect or disconnect a load cell scale base to the equipment with power connected or damage will result.

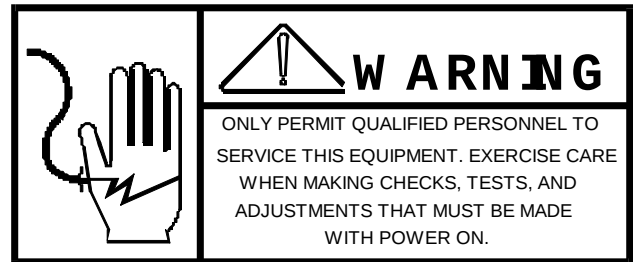

- **SAVE** this manual for future reference.

- **DO NOT** allow untrained personnel to operate, clean, inspect, maintain, service, or tamper with this equipment.

- **ALWAYS DISCONNECT** this equipment from the power source before servicing.

- **CALL** METTLER TOLEDO for parts, information, and service.




CONTENTS

IX. PARTS CATALOG.....	11
A. FRONT COVER (PLASTIC ENCLOSURE).....	11
B. MISCELLANEOUS HARDWARE	12
C. PCB AND MOUNTING HARDWARE.....	13
D. TRANSFORMER AND HARNESS ASSEMBLY	14
E. TOP COVER AND PLATFORM - 2026	15
F. TOP COVER AND PLATFORM - 2126	16
G. LOAD CELL AND STEELYARD.....	17
H. PLATFORM SUPPORT SPIDER - 2026.....	18
I. BASE AND LEVERS - 2026.....	19
J. SPIDER ASSEMBLY - 2126	20
K. MAIN LEVERS, WHEELS - 2126.....	21
L. NOSE IRON - 2026 / 2126.....	22


IX. PARTS CATALOG

A. FRONT COVER (PLASTIC ENCLOSURE)

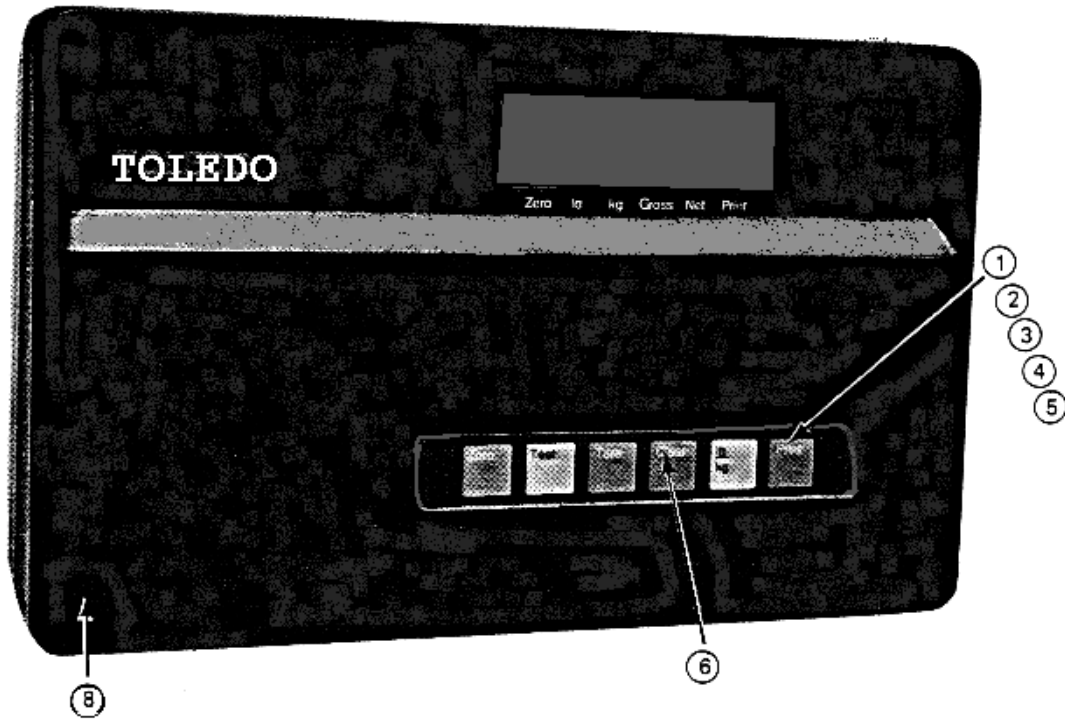


REF	PART NO.	DESCRIPTION	QTY
1	B114648 00A	Keyboard	1
2	117593 00A	Insulator Assembly	1
3	116258 00A	Keyboard Clamp	1
4	R01771 050	No. 6 Lockwasher	4
5	R01948 050	Screw 6-32 x 3/16	4
6	A114659 00A	Keyboard Overlay	1
8	A114661 00A	* Front Cover Assembly, (Ram 1)	1

**B. MISCELLANEOUS HARDWARE
(PLASTIC ENCLOSURE)**

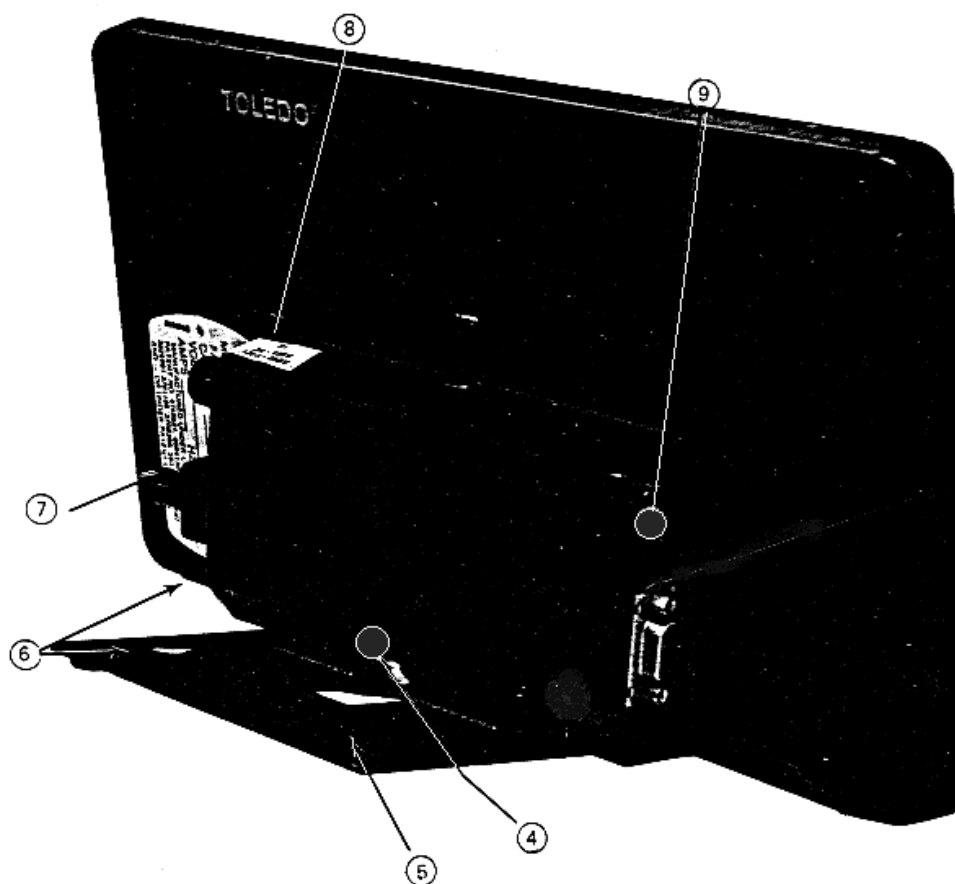


REF	PART NO.	DESCRIPTION	QTY
4	R02617 00A	Screw, No. 10 3/8 Plastite	1
5	116277 00A	Mounting Bracket	1
6	108397 00A	Rubber Foot	4
7	103967 00A	Line Cord	1
8	116251 00A	Fuse Decal	1
9	114662 00A	Hold Plug	1

C. PCB AND MOUNTING HARDWARE
(PLASTIC ENCLOSURE)

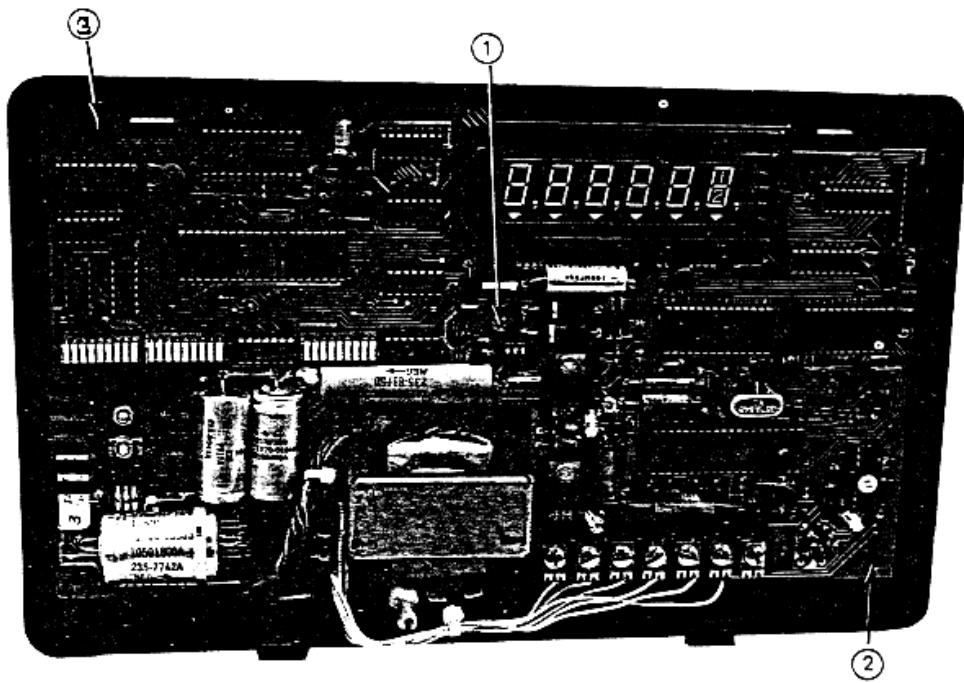


REF	PART NO.	DESCRIPTION	QTY
1	R02858 00A	Screw, No.6 x 5/16	1
2	117591 00A	Flanged Bushing	4
3	U114629 00A	Main PCB	1

**D. TRANSFORMER AND HARNESS ASSEMBLY
(PLASTIC ENCLOSURE)**

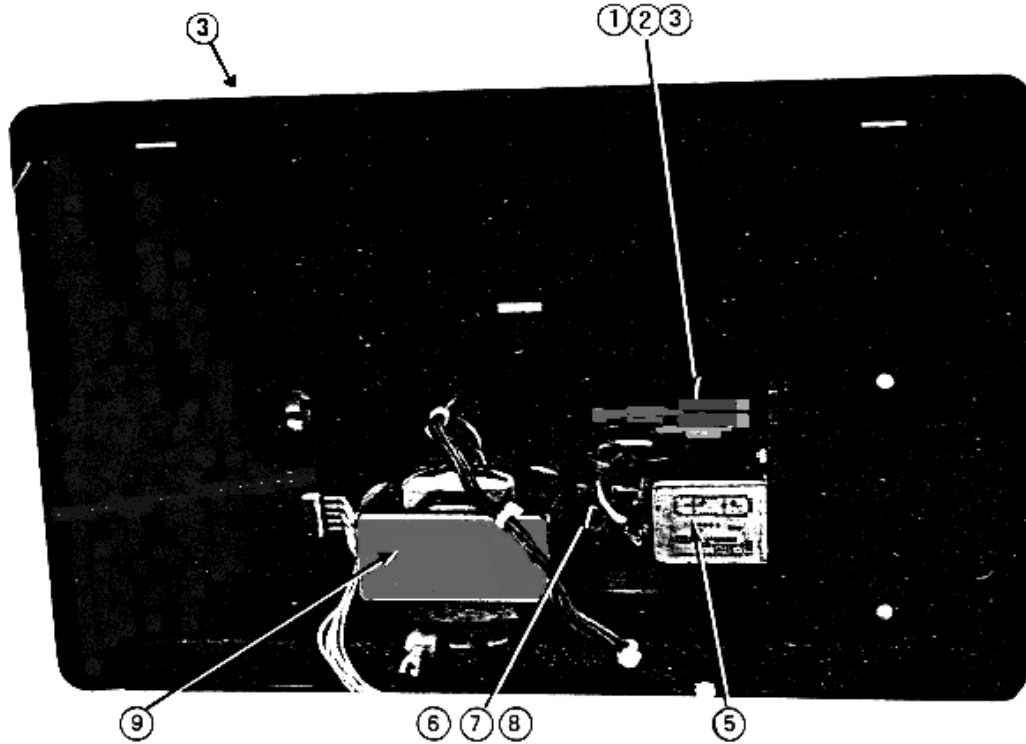


REF	PART NO.	DESCRIPTION	QTY
1	P00604 020	Fuseholder (3AG)	1
2	R01671 050	1/2" Lockwasher	1
3	P00685 020	.2A Slo-Blo Fuse	1
5	102276 00A	Line Filter (Part of 114660 00A)	1
6	R00844 130	Screw, 8-32 x 3/8	2
7	R00589 130	No.8 Lockwasher	2
8	R01611 050	Nut, 8-32	2
9	114660 00A	Transformer Harness Assembly	1
11	A114646 00A	Rear Cover	1

E. TOP COVER AND PLATFORM - 2026

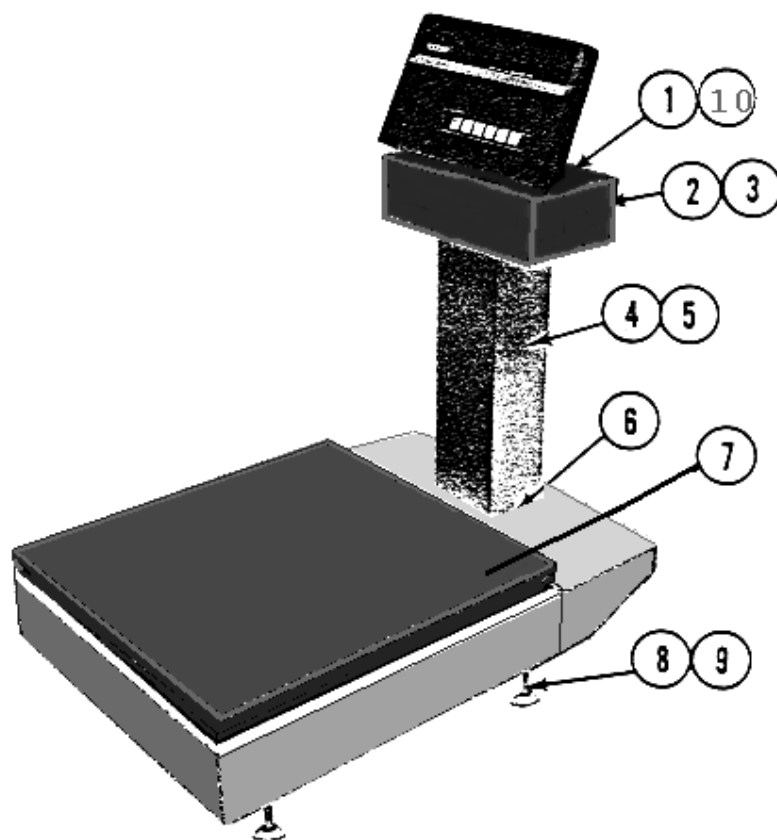


REF	PART NO.	DESCRIPTION	QTY
1	R02254 00A	Screw, 8-32 x 3/8	2
2	A119083 00A	Cover, Top	1
3	R00844 130	Screw 8-32 x 3/8	4
4	119090 00A	Column, Short	1
5	080288 00A	Plate, Column	2
6	R01899 140	Button, Plug	1
7	116375 00A	Platform	1
8	R00921 050	Screw, 1/2-13 x 2-1/2	4
9	R01459 050	Nut, 1/2 - 13	4
10	R00589 130	Washer, Lock #8	2

F. TOP COVER AND PLATFORM - 2126

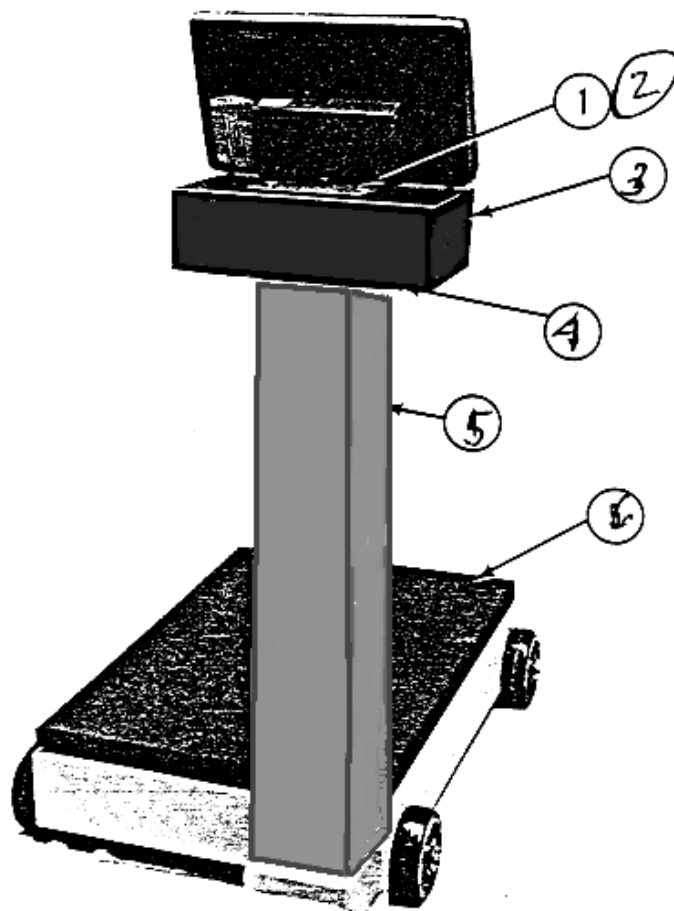


REF	PART NO.	DESCRIPTION	QTY
1	R00589 130	Washer, Lock #8	2
2	R02254 00A	Screw, 8-32 x 3/8	2
3	A119083 00A	Cover, Top	1
4	R00844 130	Screw 8-32 x 3/8	4
5	119081 00A	Column, Tall	1
6	080287 00A	Platform	1

G. LOAD CELL AND STEELYARD

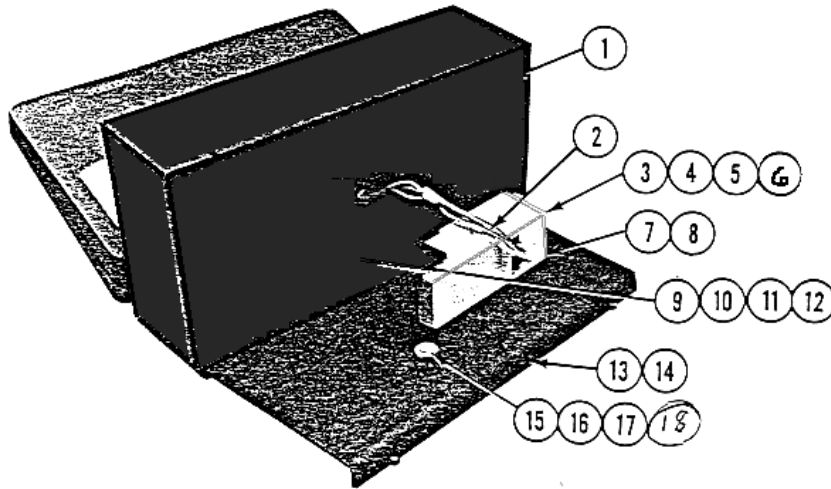


REF	PART NO.	DESCRIPTION	QTY
1	124626 00A	Grommet	1
2	119088 00A	Harness, Load Cell	1
3	123741 00A	Load Cell Assembly, 25lb	1
4	123742 00A	Load Cell Assembly, 50lb	1
5	123743 00A	Load Cell Assembly, 100 lb	1
6	123744 00A	Load Cell Assembly, 200 lb	1
7	R01258 050	Screw, 10-32 x 3/8	2
8	R01155 13A	Screw, 10-32 x 1/2	2
9	A119086 00A	Hook Assembly	1
10	R00433 050	Nut, 5/16 - 18	1
11	119085 00A	Rod, Steelyard (2126)	1
12	080284 00A	Nose Iron, Hook	1
13	A119082 00A	Column, Top Channel	1
14	R02281 00A	Fastener	2
15	119084 00A	Rod Column (2126)	2
16	R00440 00A	Washer, 3/8	4
17	000043 050	Nut, 3/8 - 16	4
18	119091 00A	Rod, Column (2026)	2
19	119092 00A	Rod, Steelyard (2026)	1

H. PLATFORM SUPPORT SPIDER - 2026

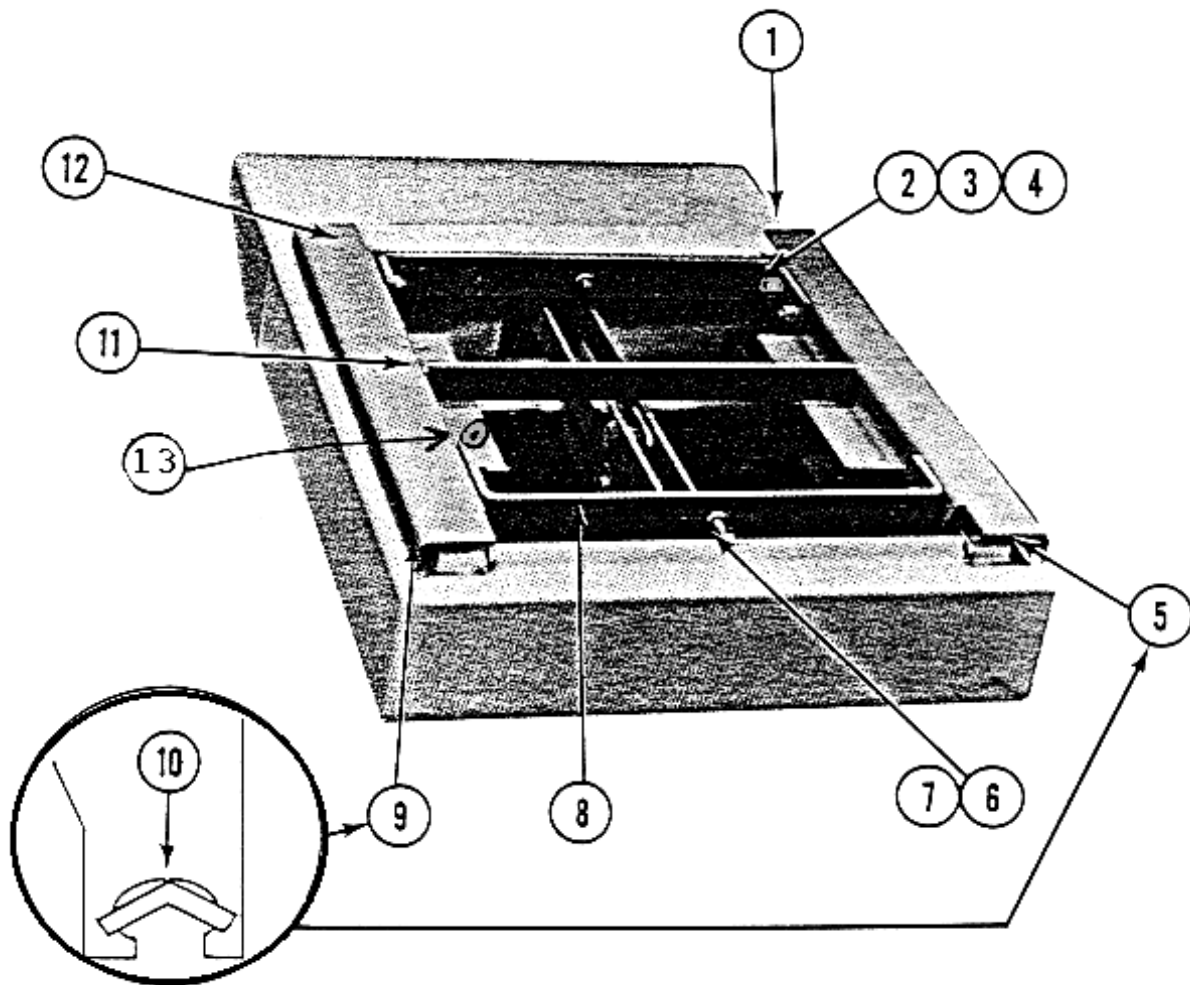


REF	PART NO.	DESCRIPTION	QTY
1	116381 00A	Spider Assembly	1
2	R00799 050	* Bolt, No. 3/8-16 x 1	6
3	R01539 050	* Hex Nut, No. 3/8 - 16	6
4	R00440 00A	* Lockwasher No. 3/8	6
5	116373 00A	* Spider, Right Hand	1
6	R00433 050	* Nut, No. 5/16 - 18	4
7	029871 00A	* Screw, No. 5/16-18 x 2	2
8	080275 00A	* Brace, Bent	1
9	116374 00A	* Spider, Left Hand	1
10	004440 020	* Bearing	4
11	080276 00A	* Brace, Straight	1
12	080292 00A	* Brace Assembly, Bent	1
13	102689 00A	Bubble, Level	

I. BASE AND LEVERS - 2026

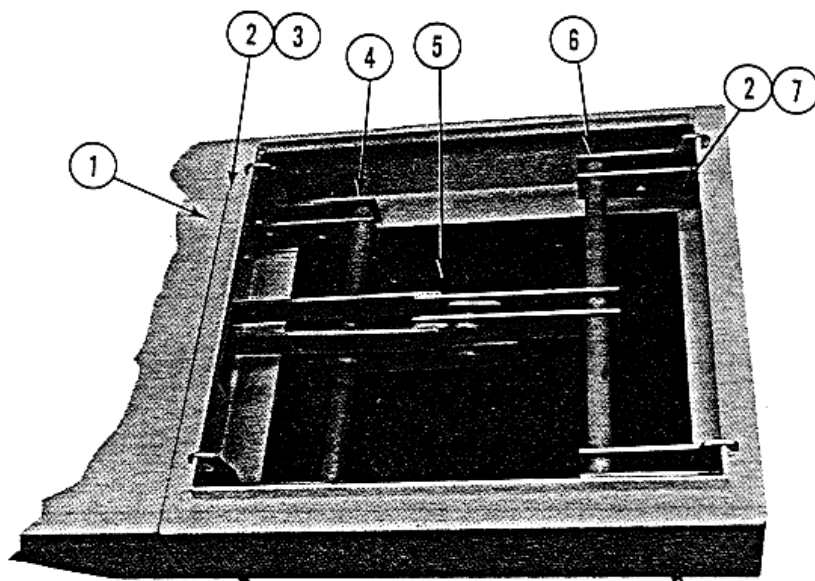

REF	PART NO.	DESCRIPTION	QTY
1	119621 00A	Base Assembly	1
2	080285 00A	Support Fulcrum Hook	4
3	080278 00A	Hook Assembly, Long	2
4	116379 00A	Lever Assembly, Short	1
5	080282 00A	Loop Assembly, Center	1
6	A116385 00A	Lever Assembly, Long	1
7	080280 00A	Hook Assembly, Short	2


J. SPIDER ASSEMBLY - 2126

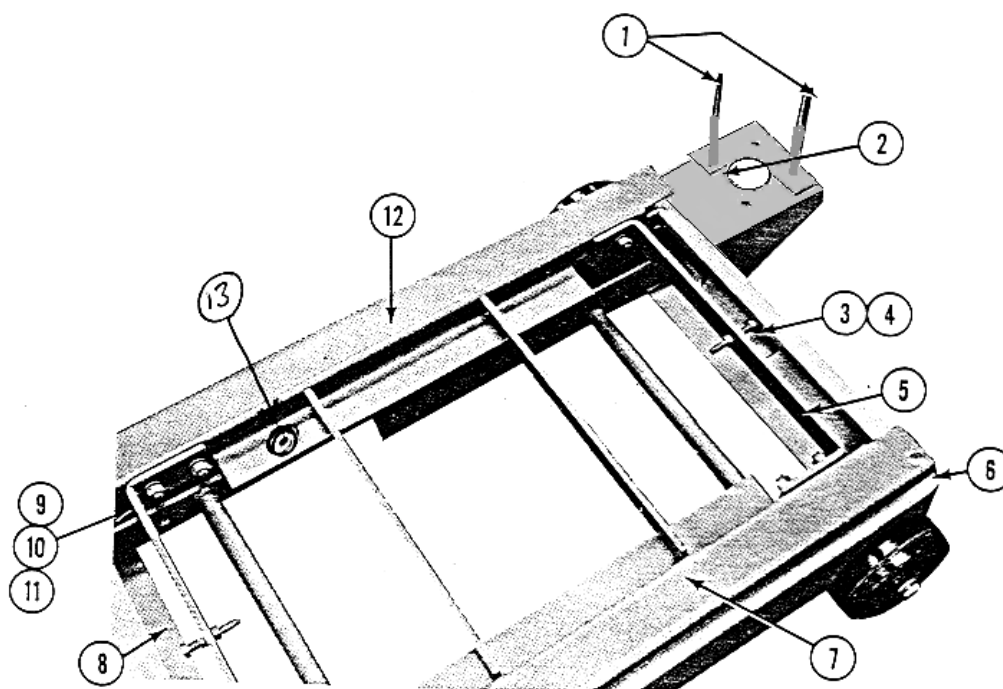

REF	PART NO.	DESCRIPTION	QTY
1	119084 00A	Rod, Column	2
2	080288 00A	Plate, Column	2
3	029871 00A	Screw, 5/16 - 18	2
4	R00433 050	Nut, 5/16	4
5	080292 00A	Brace Assembly, Bent	1
6	080274 00A	Spider, R.H.	1
7	080276 00A	Brace - Straight	2
8	080275 00A	Brace - Bent	1
9	R00440 00A	Lockwasher, 3/8	6
10	R00799 050	Screw, 3/8 - 16	6
11	R01539 050	Nut, 3/8 - 16	6
12	080273 00A	Spider, L.H.	4
N.S. *	004440 00A	Bearing	4
13	102689 00A	Bubble, Level	1


* NOT SHOWN

K. MAIN LEVERS, WHEELS - 2126

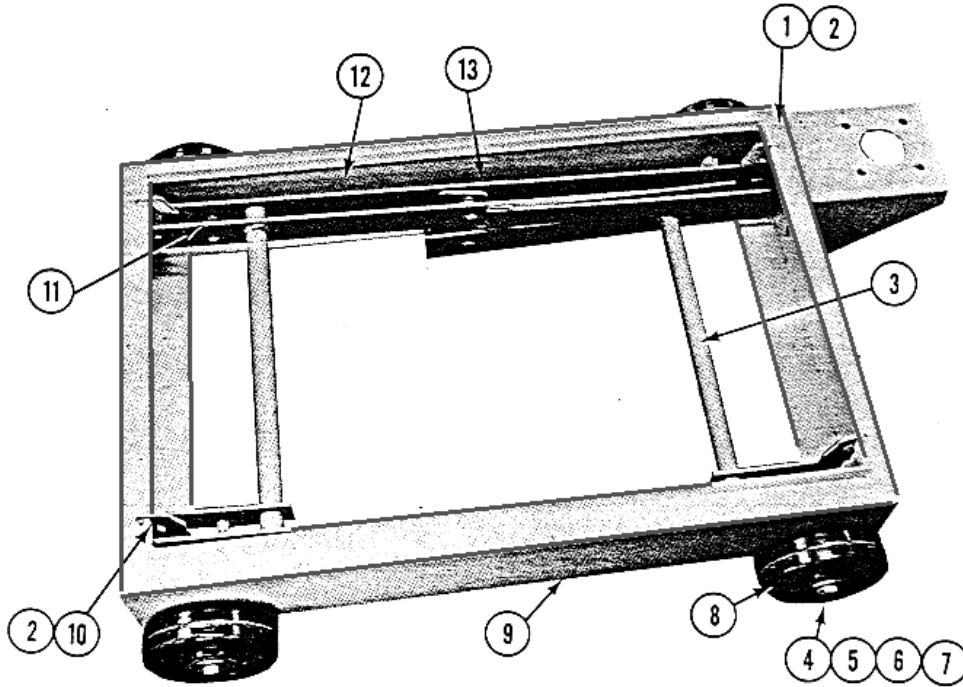

REF	PART NO.	DESCRIPTION	QTY
1	080278 00A	Hook Assembly - Long	2
2	080285 00A	Support, Fulcrum Hook	4
3	080271 00A	Lever Assembly - Short	1
4	R00989 050	Screw, 1/2-13 x 3-1/4	4
5	R01459 050	Nut 1/2-13	4
6	R01556 050	Washer - 1/2	8
7	000588 00A	Lockwasher 1/2	4
8	116568 00A	Wheel	4
9	080251 00A	Base Assembly	1
10	080280 00A	Hook Assembly - Short	2
11	080261 00A	Pivot	10
12	B080258 00A	Lever Assembly - Long	1
13	080282 00A	Loop Assembly - Center	1

L. NOSE IRON - 2026 / 2126

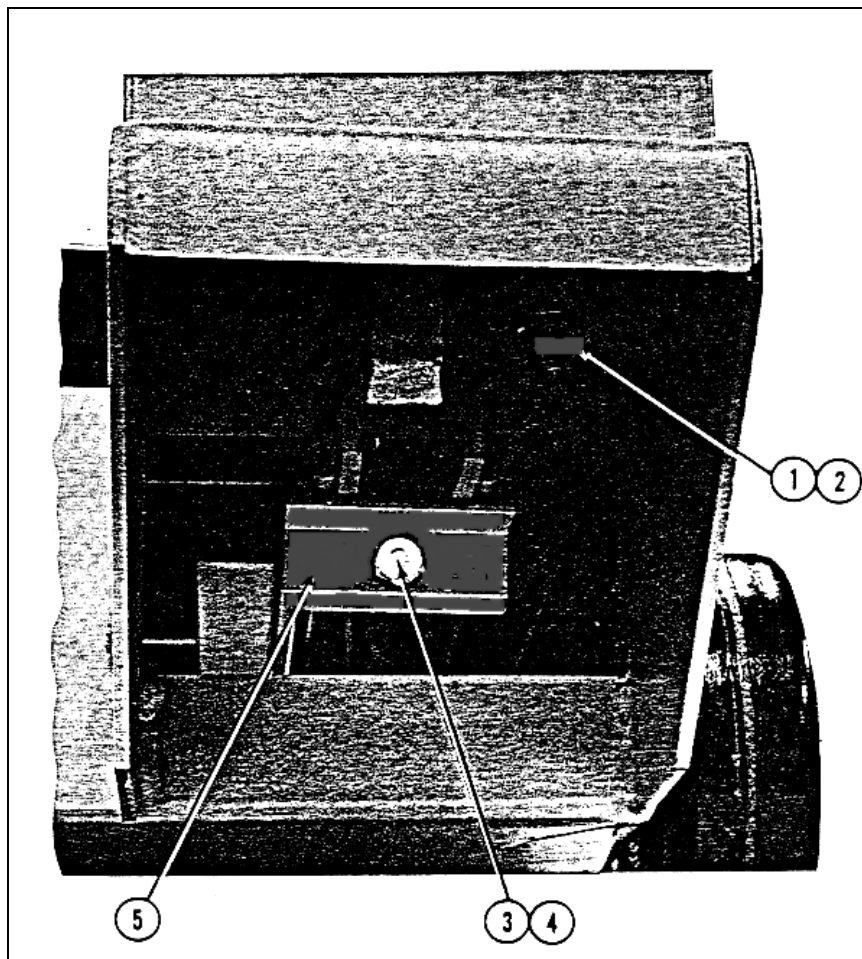

REF	PART NO.	DESCRIPTION	QTY
1	000043 00A	Nut, 3/8	2
2	R00440 00A	Lockwasher, 3/8	2
3	R02813 00A	Nut, 1/4-20	2
4	R03009 00A	Screw, 1/4-20	1
5	B080267 00A	Nose Iron Assembly	1