

CONTENTS

	PAGE
1. GENERAL DESCRIPTION	1
1.1 OVERVIEW	1
1.2 FEATURES	1
2. SYSTEM DESCRIPTION	1
2.1 MAJOR BLOCKS	1
2.2 INTERNAL FUNCTIONS	1
3. SPECIFICATIONS	2
3.1 ELECTRICAL	2
3.2 ENVIRONMENT	2
3.3 PHYSICAL	3
3.4 CONFIGURATION	3
4. INSTALLATION INSTRUCTIONS	3
4.1 ASSEMBLY	3
4.2 ACCESSING SETUP MODE	3
4.3 SOFTSWITCH FUNCTIONS	5
4.4 VERIFY LOAD CELL COUNT OUTPUT	6
4.5 SHIFT ADJUSTMENT	7
4.6 SET SHIFT CONSTANTS TO "1"	7
4.7 CALIBRATION	8
5. OPERATING INSTRUCTIONS	8
5.1 INITIAL POWER-UP SEQUENCE	8
5.2 NET WEIGHING SEQUENCE	9
6. RS232 SERIAL INPUT/OUTPUT	9
6.1 DATA OUTPUT	9
6.2 PIN CONNECTIONS FOR RS232 PORT	9
7. CARE AND MAINTENANCE	10