

8.	TROUBLESHOOTING	10
8.1	PROCEDURE	10
8.2	ERROR CODES	10
8.3	VOLTAGE CHECKS	11
9.	PARTS REPLACEMENT & ADJUSTMENTS	11
9.1	KEYBOARD REPLACEMENT	11
9.2	DISPLAY PCB REPLACEMENT	12
10.	REPLACEMENT PARTS	13
10.1	DISPLAY HOUSING	13
11.	INDEX	14

Information regarding technical training on this product
may be obtained by writing to Toledo Scale at:

**TOLEDO SCALE CORPORATION
INDUSTRIAL TRAINING
1150 DEARBORN DRIVE
WORTHINGTON, OHIO 43085**