


Supervisor Access to Viper PL/SL


Supervisor Setup Mode After a timeout of about 3 minutes with no keystroke the setup will be left automatically

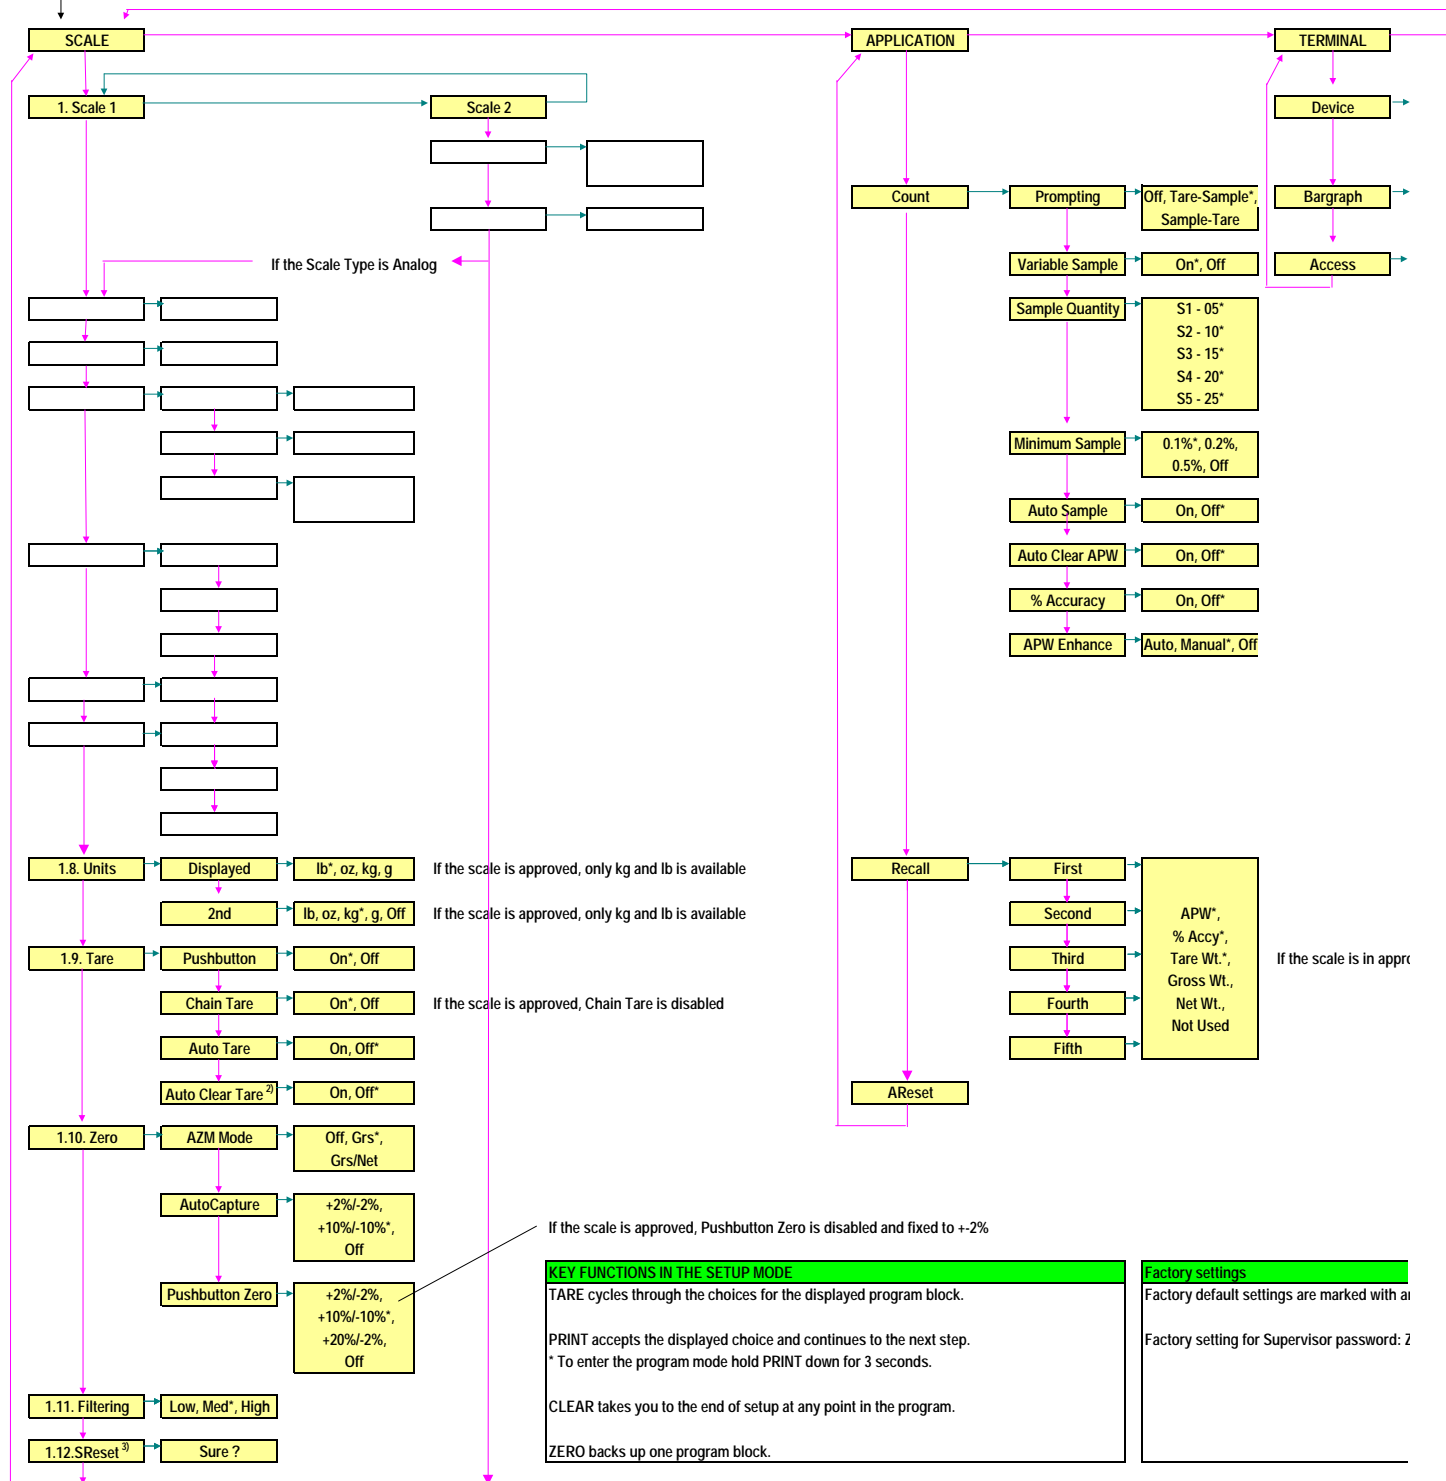

1) Not accessible in an approved scale -> Metrology - NTEP

2) Not accessible if Auto Tare is on

3) Does not reset the blocks 1.1 to 1.6

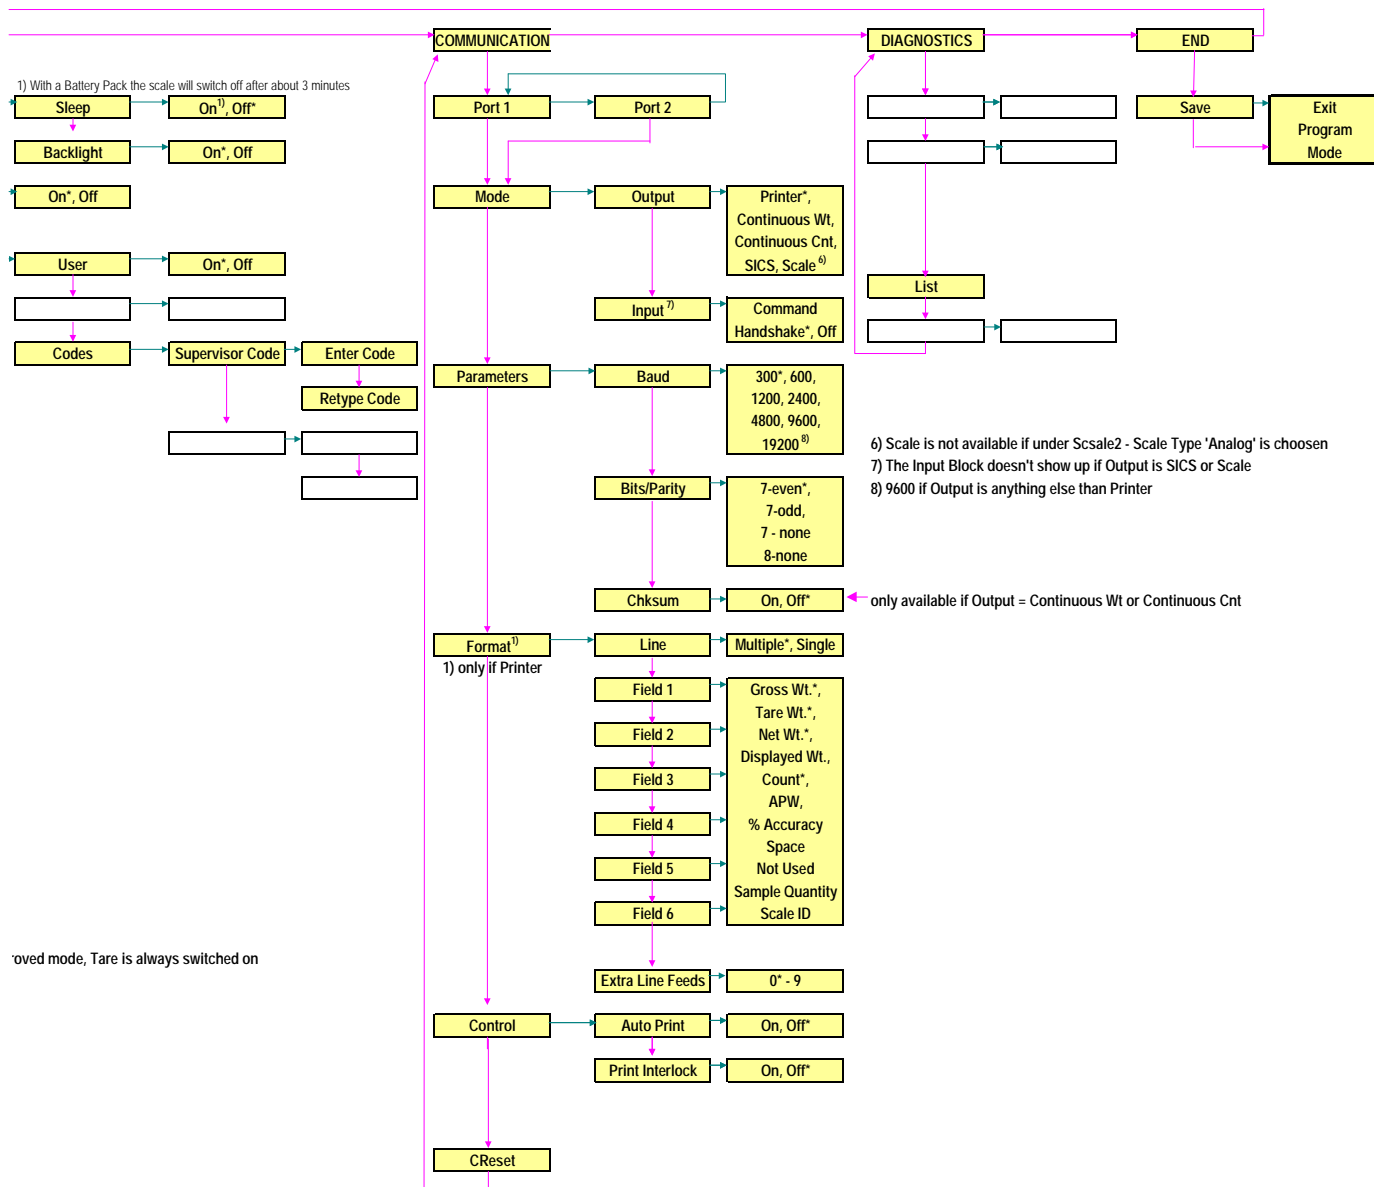

in asterisk (*)

Zero, Zero, Zero

Error Code List

OpErr = The sample weight is more than 4% of the scale capacity