


Installation Instructions


for the Integra™ N500 5-lb. Scale

1 Do not connect power until Step 11.

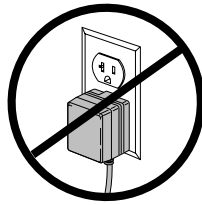


2 Make sure you have:

- ✓ Scale
- ✓ Rate Card
- ✓ User Guide
- ✓ Power Cord (in its own box)
- ✓ Scale-Meter Interface Cable (if ordered, packed separately)

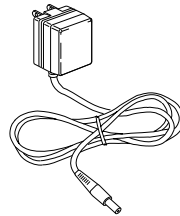


Power Cord

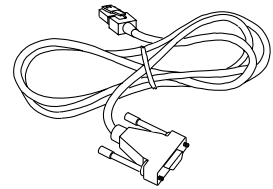

Scale-Meter Interface Cable
(if ordered, packed separately)




Scale

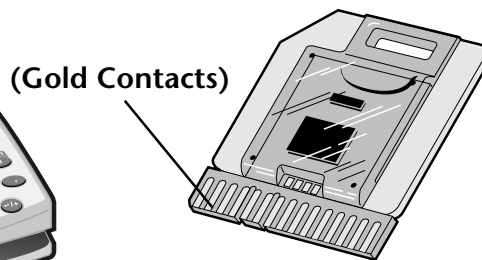

(Gold Contacts)


Rate Card

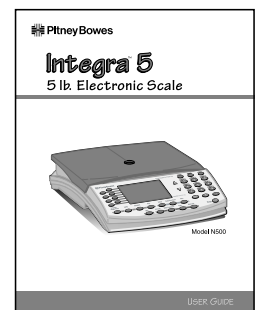

User Guide

3 Remove packing.

Lift the platter, remove the packing material, and set the platter aside.

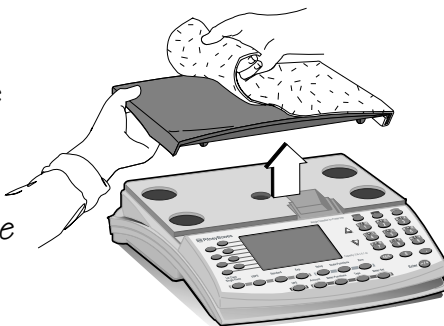


4 Install the rate card.

With the unlabeled side of the rate card facing you, slide the gold contacts downward into the slot until you feel resistance. Then **firmly** push further down past this resistance until you hear and feel the rate card **lock solidly** into place. Replace the platter.




5 Place your scale on a level surface.

Place the scale near a wall outlet and within cable reach of your postage meter (if you have one). **IMPORTANT:** Ensure the scale location is free of drafts and the scale is not touching objects that may affect the weight reading.

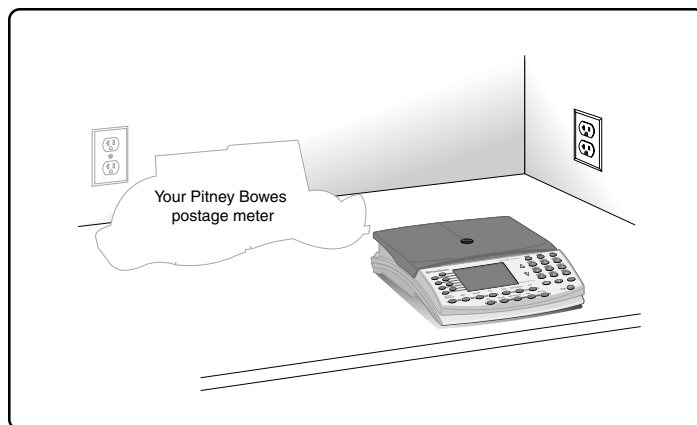


6 Level the scale.

Level the scale by turning the scale feet until the leveling bubble is centered and the scale does not wobble.

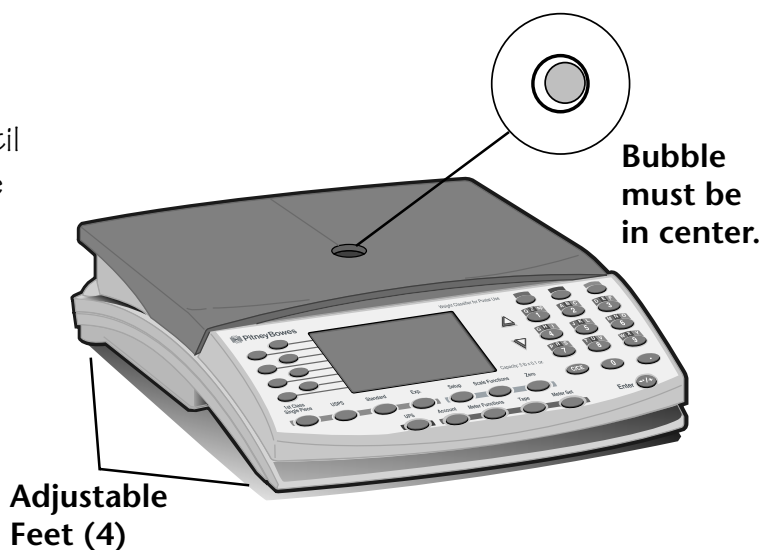


7 Locate the plug ports.

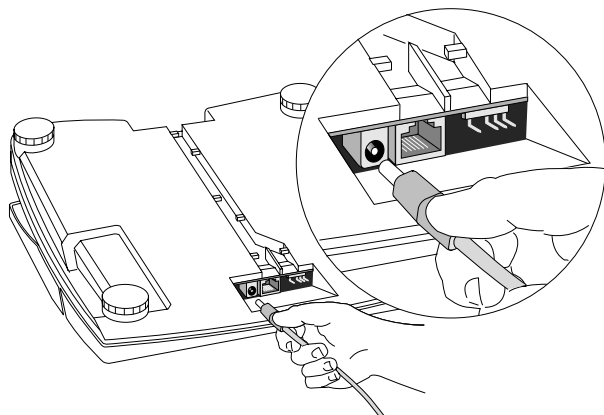

Locate the plug ports under the front of the scale and plug in the small end of the power cord.


8 Connect scale-meter interface cable to scale.

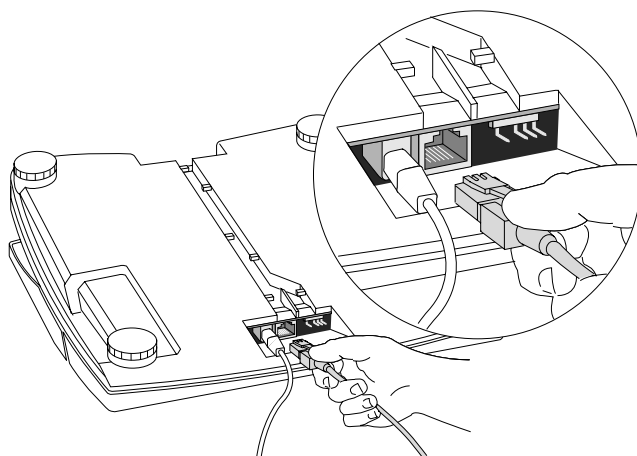


If you're using a Pitney Bowes meter, plug the small end of the scale-meter interface cable into the scale port.

9 Tuck the cord(s) under the guides.

Tuck the cord(s) under the guides on the bottom of the scale.

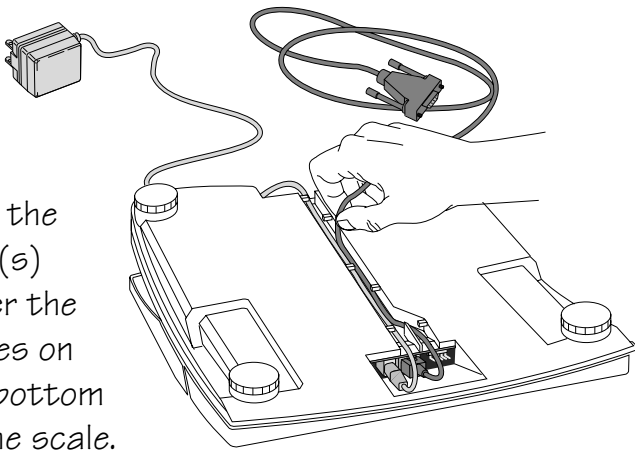

10 Connect scale-meter interface cable to meter.

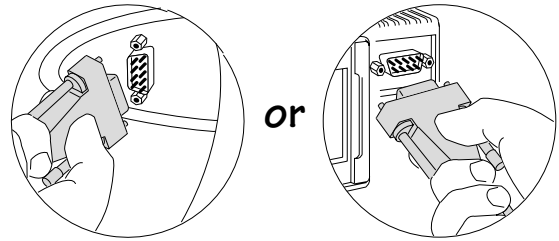


If you're using a Pitney Bowes meter, connect the large end of the scale-meter interface cable to your meter's communications port. Tighten the thumbscrews securely. See the meter's operating guide for the location of the communications port.

11 Plug power cord into outlet.

If the scale does not power-up, check that:

 - the power cord is secure;
- the rate card is firmly seated;
- the wall outlet you are using has power by plugging in another device.



12 Enter ZIP Code.

Then press **Enter**.

Enter Origin ZIP Code of Scale Location:

13 Enter location code.

Note: Your scale will not work unless you perform the following.

- Find the number corresponding to your state in the chart on page 4.
- Type the code on the numeric keys.
- Ensure that the code on the display matches your state's code.
- Press **Enter**. The scale starts and then displays the ready screen shown below. The scale is now ready.


0lb 0.0oz
Select Rate

Location Codes*					
State	Code	State	Code	State	Code
Alabama		Kansas		North Dakota	78
Birmingham & north	59	North of Wichita	64	Ohio	
South of Birmingham	53	Wichita & south	61	Akron & north	72
Alaska	See map on page 5.	Kentucky	61	South of Akron	64
Arizona		Louisiana	53	Oaklahoma	
Phoenix & north	53	Maine	78	North of Oklahoma City	61
South of Phoenix	50	Maryland	64	Oklahoma City & south	59
Arkansas	59	Massachusetts	75	Oregon	
California	See map on page 5.	Michigan		Salem & north	78
Colorado		Northwest of Lake Michigan	78	South of Salem	75
Denver & north	59	Southeast of Lake Michigan	75	Pennsylvania	72
South of Denver	53	Minnesota	78	Rhode Island	72
Connecticut	72	Mississippi		South Carolina	59
Delaware	64	Kosciusko & north	59	South Dakota	75
Florida		South of Kosciusko	53	Tennessee	59
West Palm Beach & north	50	Missouri		Texas	
South of West Palm Beach	46	North of Springfield	64	Northeast of Colorado River	53
Georgia	53	Springfield & south	61	Southwest of Colorado River	50
Hawaii	46	Montana		Utah	59
Idaho		Helena & north	78	Vermont	75
North of Salmon River Mtns.	75	South of Helena	75	Virginia	
South of Salmon River Mtns.	72	Nebraska	72	North of Roanoke	64
Illinois		Nevada	59	Roanoke & south	61
North of Springfield	72	New Hampshire	75	Washington, DC	64
Springfield & south	64	New Jersey	72	Washington State	78
Indiana		New Mexico	50	West Virginia	64
North of Indianapolis	72	New York		Wisconsin	
Indianapolis & south	64	Kingston & north	75	Green Bay & north	78
Iowa		South of Kingston	72	South of Green Bay	75
North of Des Moines	75	North Carolina		Wyoming	64
Des Moines & south	72	Raleigh & north	61		
		South of Raleigh	59		


*For locations near a boundary you may enter either code.

Alaska

Maps provided for residents
of Alaska and California only.

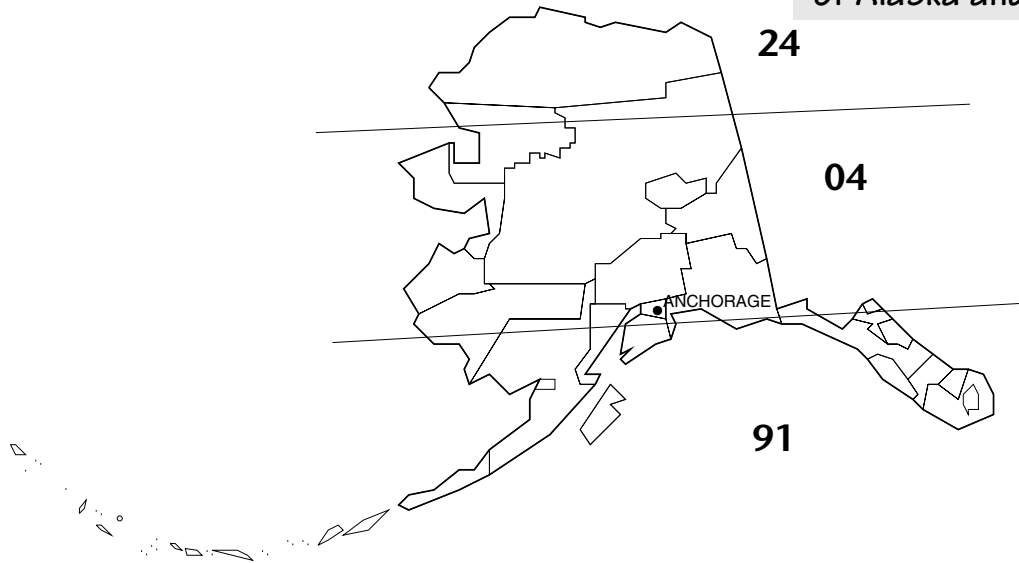

California

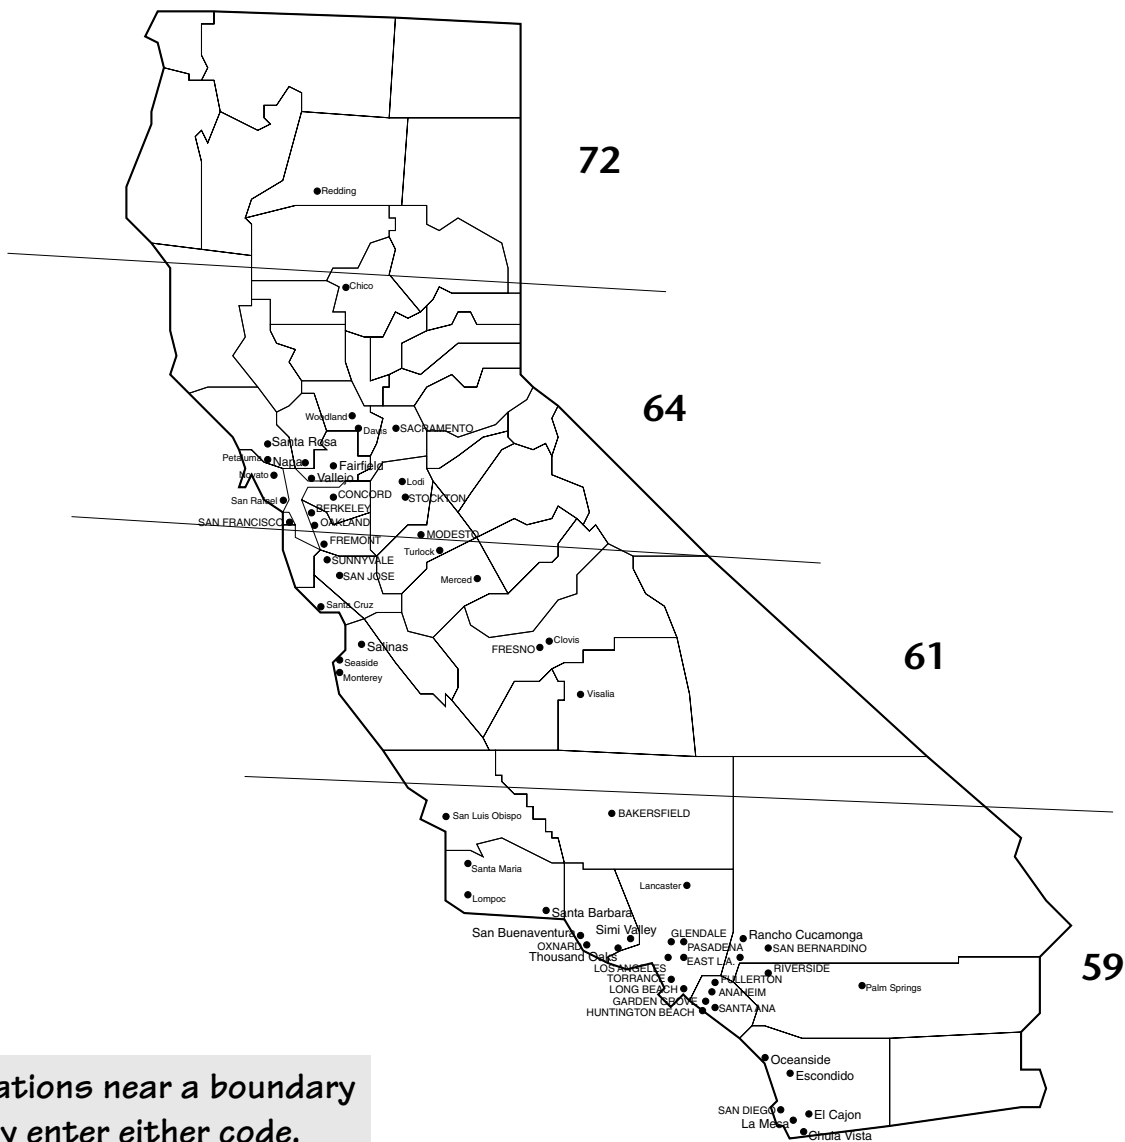

For locations near a boundary
you may enter either code.

Congratulations!

You have successfully installed your Pitney Bowes electronic scale.

If you have any questions about the initial setup,

BE NEAR YOUR SCALE

and call 1-800-537-2488 (menu option 1).

Or visit our website at www.pitneybowes.com/ms_service/support/integra

For information on using the scale, refer to the User Guide.

