

8142

Parts Catalog

INTRODUCTION

This publication is provided solely as a guide for individuals who have received METTLER TOLEDO Technical Training in servicing the METTLER TOLEDO product.


Information regarding METTLER TOLEDO Technical Training may be obtained by writing to:

METTLER TOLEDO
Training Center
P.O. Box 1705
Columbus, Ohio 43216
(614) 438-4400


METTLER TOLEDO RESERVES THE RIGHT TO MAKE
REFINEMENTS OR CHANGES WITHOUT NOTICE.

PRECAUTIONS

- **READ** this manual before operating or servicing this equipment.
- **ALWAYS REMOVE POWER** and wait at least 30 seconds **BEFORE** connecting or disconnecting any internal harnesses. Failure to observe these precautions may result in damage to, or destruction of the equipment.

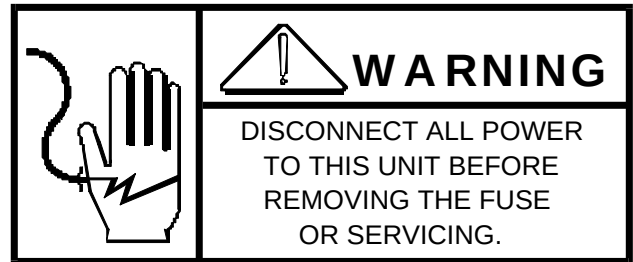

- **ALWAYS** take proper precautions when handling static sensitive devices.

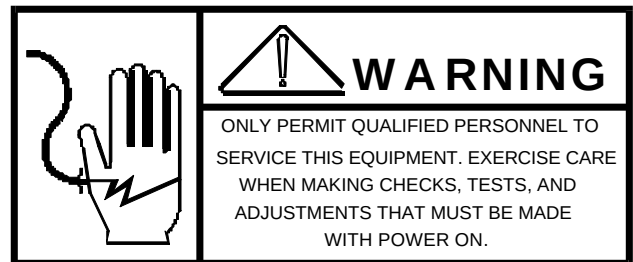

- **SAVE** this manual for future reference.
- **DO NOT** allow untrained personnel to operate, clean, inspect, maintain, service, or tamper with this equipment.
- **ALWAYS DISCONNECT** this equipment from the power source before servicing.
- **CALL** METTLER TOLEDO for parts, information, and service.




CONTENTS

11. PARTS CATALOG	114
11.1 DESK UNIT FORM COVER AND KEYBAORD	114
11.2 DESK UNIT REAR COVER.....	115
11.3 DESK UNIT INSIDE FRONT COVER	116
11.4 DESK UNIT PCB'S & MISCELLANEOUS HARDWARE	117
11.5 DESK UNIT POWER SUPPLY	118
11.6 WALL UNIT ENCLOSURE DOOR & KEYBOARD	119
11.7 WALL UNIT INSIDE ENCLOSURE DOOR.....	120
11.8 WALL UNIT SINGLE DISPLAY PCB'S & MISCELLANEOUS HARDWARE	121
11.9 WALL UNIT DUAL & DUAL ADVANCED PCB'S & MISC. HARDWARE.....	122
11.10 WALL UNIT POWER SUPPLY	123
11.11 RACK UNIT COVER & FRONT PANEL	124
11.12 RACK UNIT CHASSIS & TOP COVER	125
11.13 RACK UNIT SINGLE DISPLAY PCB'S & MISC. HARDWARE.....	126
11.14 RACK UNIT DUAL & DUAL ADVANCED PCB'S & MISC. HARDWARE	127
11.15 RACK UNIT DUAL & DUAL ADVANCED PCB'S & MISC. HARDWARE.....	128
11.16 RACK UNIT POWER SUPPLY	129
 12. INTERCONNECTING CABLES	 130
 13. MATING CONNECTORS	 131
 14. KITS OF PARTS	 132

11. PARTS CATALOG


11.1 DESK UNIT FORM COVER AND KEYBAORD

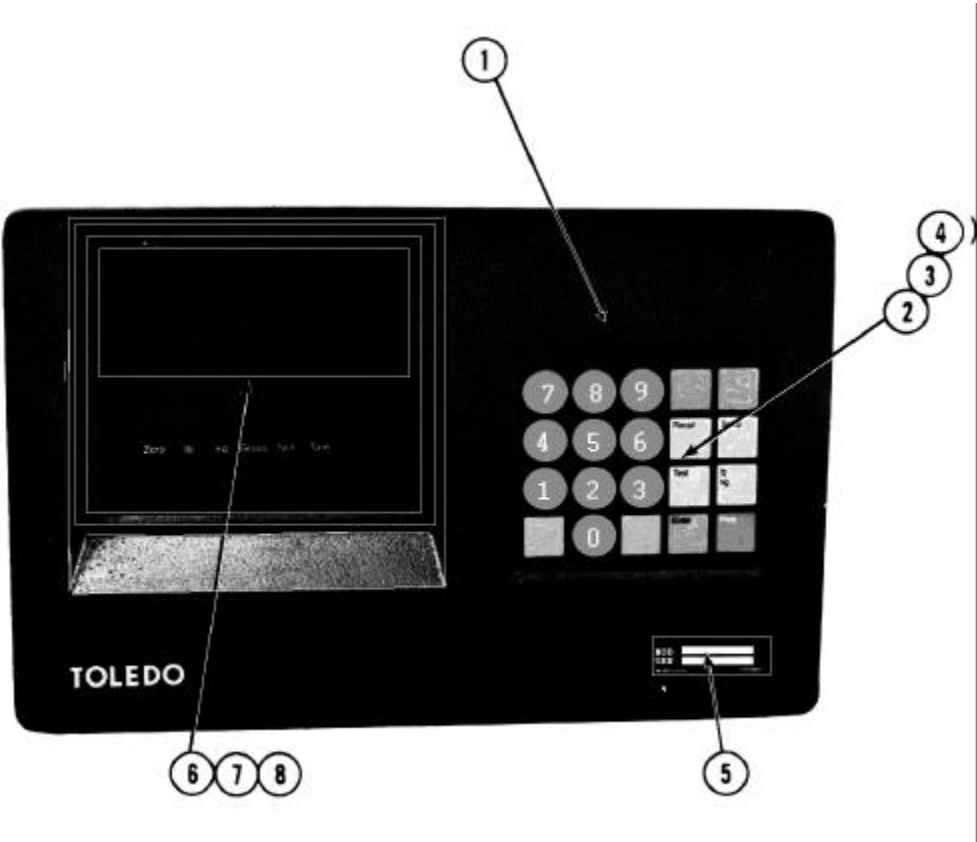

REF.	PART NUMBER	DESCRIPTION	QTY.
1	A117485 00A	Front Cover	1
2	125821 00A	Keyboard Assembly (SD)	AR
3	125822 00A	Keyboard Assembly (DD)	AR
4	125823 00A	Keyboard Assembly (DDA)	AR
5	119914 00A	Data Label	1
6	B117491 00A	Display Lens (SD)	AR
7	B117492 00A	Display Lens (DD)	AR
8	B119925 00A	Display Lens (DDA)	AR

11.2

DESK UNIT REAR COVER

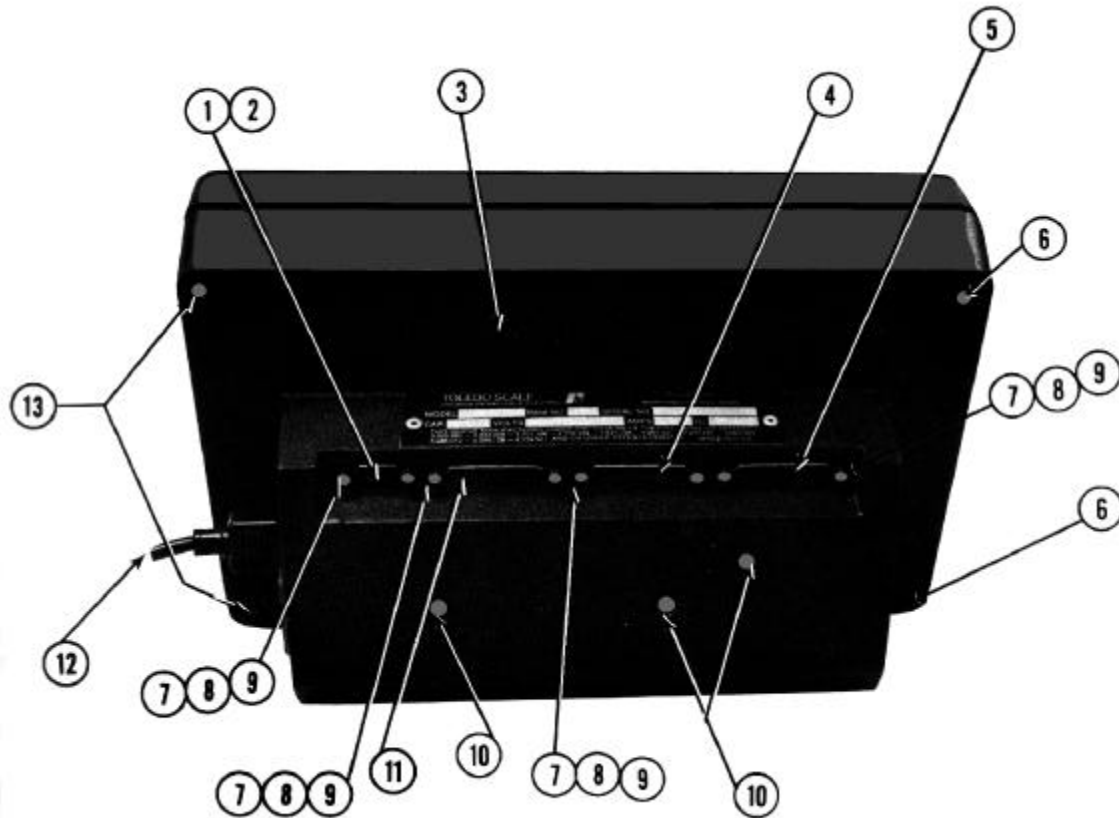


REF.	PART NUMBER	DESCRIPTION	QTY.
1	B121648 00A	Load Cell Harness	1
	133125 00A	with key (Rams 0XX8, 9, 2XX8, 9)	AR
2	125851 00A	Load Cell Harness (RFI Filtered)	1
3	B117486 00A	Rear Cover	1
4	A121651 00A	Harness, Printer	1
5	A121659 00A	Setpoint Harness (DDA)	1
6	A124136 00A	Sealing Screw	2
7	125365 00A	Standoff	8
8	R02547 00A	Lockwasher #4	8
9	R03305 00A	Nut 4-40	8
10	R03621 00A	Screw #6-32 x 3/4	3
11	112388 00C	Cover Plate (NS)	2
12	109445 00A	Power Cord	1
13	R03557 00A	Screw 8-32 x 2-1/2"	2

DDA - Dual Display Advanced
 AR - As Required
 NS - Not Shown

11.3

DESK UNIT INSIDE FRONT COVER

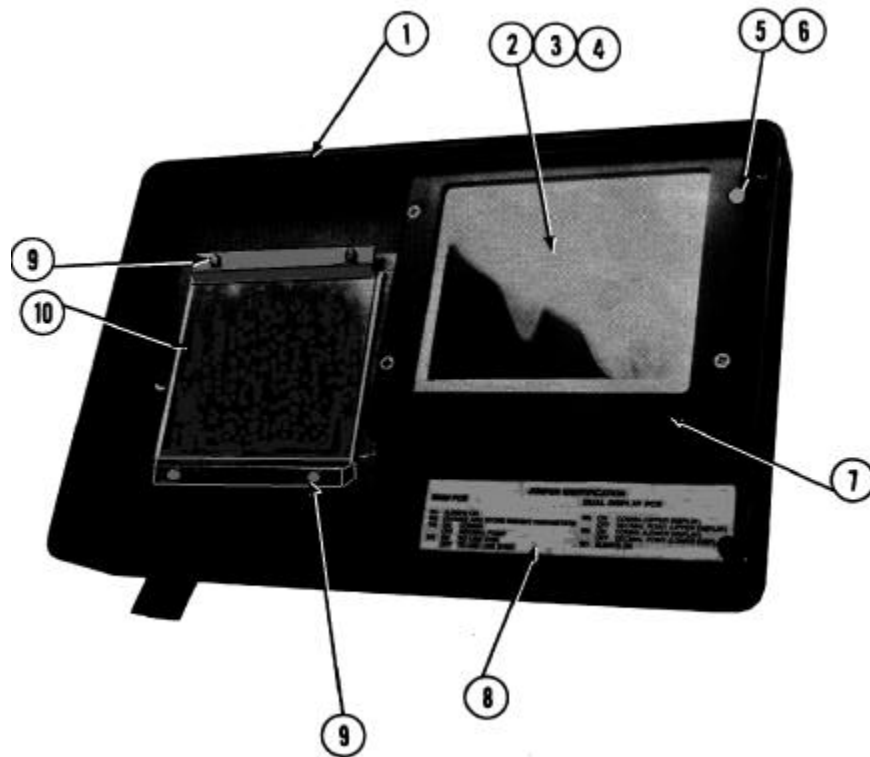


REF.	PART NUMBER	DESCRIPTION	QTY.
1	116033 00A	Static Caution Label	1
2	*125870 00A	Conductive window	1
3	*A125869 00A	Conductive Seal	1
4	*B121661 00A	Clear Protective Lens	1
5	R01771 050	Lock Washer #6	4
6	R02236 00A	Screw, #6-32 x 3/8"	4
7	125809 00A	Display Window Clamp	1
8	123466 00A	Jumper Description Decal	1
9	R03689 00A	Screw #6-32 x 1/4"	4
10	A118792 00A	Warning Decal	1

* The Conductive Seal MUST be replaced when replacing either the Display Lens or the Conductive Lens.

11.4

DESK UNIT PCB'S & MISCELLANEOUS HARDWARE

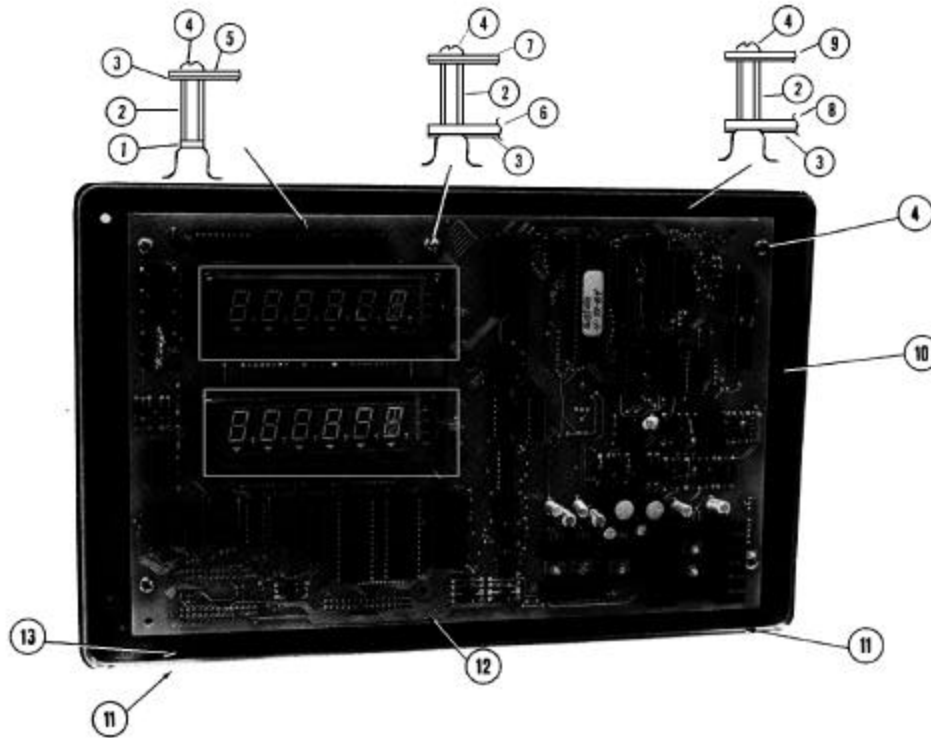

REF.	PART NUMBER	DESCRIPTION	QTY.
1	015383 050	Washer	6
2	A123501 00A	Standoff 1.25"	6
3	A123463 00A	PCB Insulator	1
4	R01183 050	Screw 8-32 x 1/4"	6
5	*117022 00A	Main PCB (SD)	AR
5A	*126464 00A	Main PCB (SD)	AR
5B	*128894 00A	Main PCB (SD), Ram XXX7	AR
5C	*125378 00A	Main PCB (SD)**	AR
5D	*126488 00A	Main PCB (SD)**	AR
5E	*132000 00A	Main PCB (SD), Ram XXX7**	AR
6	*125847 00A	Main PCB (DD)	AR
6A	*126466 00A	Main PCB (DD)	AR
6B	*125381 00A	Main PCB (DD)	AR
6C	*128897 00A	Main PCB (DD), Ram XXX8	AR
6D	*126490 00A	Main PCB (DD)**	AR
6E	*132001 00A	Main PCB (DD), Ram XXX8*	AR
7	*125845 00A	Main PCB (DD)	AR
8	*125845 00A	Main PCB (DDA)	AR
8A	*126467 00A	Main PCB (DDA)	AR
8B	*128900 00A	Main PCB (DDA), Ram XXX9	AR
8C	*125380 00A	Main PCB (DDA)**	AR
8D	*126491 00A	Main PCB (DDA)**	AR
8E	*132002 00A	Main PCB (DDA), Ram XXX9**	AR
9	*125854 00A	Dual-Advanced PCB (DDA)	AR
10	125383 00A	Set-up Ext. Harness (DD & DDA)	AR
11	108397 00A	Foot	4
12	121654 00A	Data Harness (DD & DDA)	1
13	A121659 00A	Setpoint - Remote Gross - Tare Harness (DDA)	1

*PCB may have revision level.


** These PCB's are for HAP (Hazardous Area Protection) areas only.

SS - Single Display

DD - Dual Display

DDA - Dual Display Advanced


AR - As Required

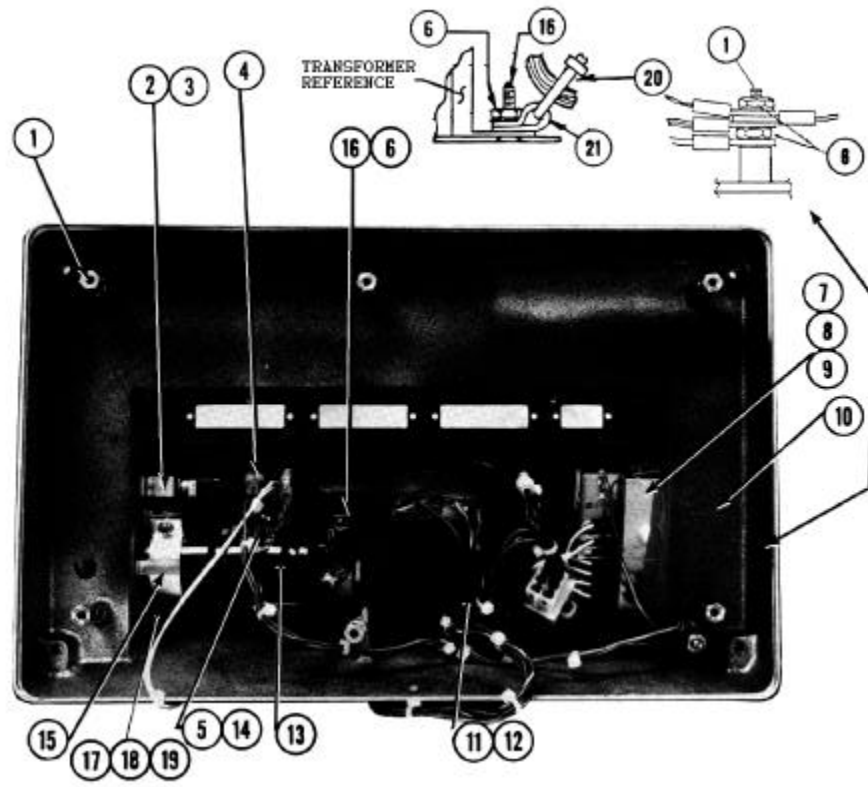

REF.	PART NUMBER	DESCRIPTION	QTY.
1	R03688 00A	Set Screw (NS)	6
2	A121650 00A	Zero Switch Harness	1
3	R03625 00A	Screw 4-40 x 1/4"	2
4	093943 00A	Bridge Rectifier 25A*	1
5	R03621 00A	Screw 6-32 x 3/4"	1
6	R03298 00A	Nut 8-32	4
7	124105 00A	Line Filter Assembly	1
8	095920 00A	Fuse .25 Amp S.B., Rams 0X1X, 0X2X	AR
9	112145 00A	Fuse .5 Amp S.B., Rams 0X0X	AR
10	119113 00A	Chassis Ground Decal	1
11	121646 00A	Trfrm. & Harness Assembly (SD)	AR
12	121647 00A	Trfrm. & Harness Assembly (DD & DDA)	AR
13	121643 00A	Capacitor 30,000 μ fd.	1
14	R03283 00A	Nut 6-32	1
15	124835 00A	Capacitor Clamp	1
16	R00861 050	Screw, #8-32 x 3/4" PH FH	2
17	R03710 050	Screw, #6-32 x 3/8" PH RD HD	2
18	R01771 050	Washer, #6 I.T. Lock	2
19	R00813 00A	Nut, #6-32 Hex	2
20	098271 00A	Band Clamp, 7.7"	1
21	124764 00A	Cable Clamp, 1/4"	1

11.6

WALL UNIT ENCLOSURE DOOR & KEYBOARD

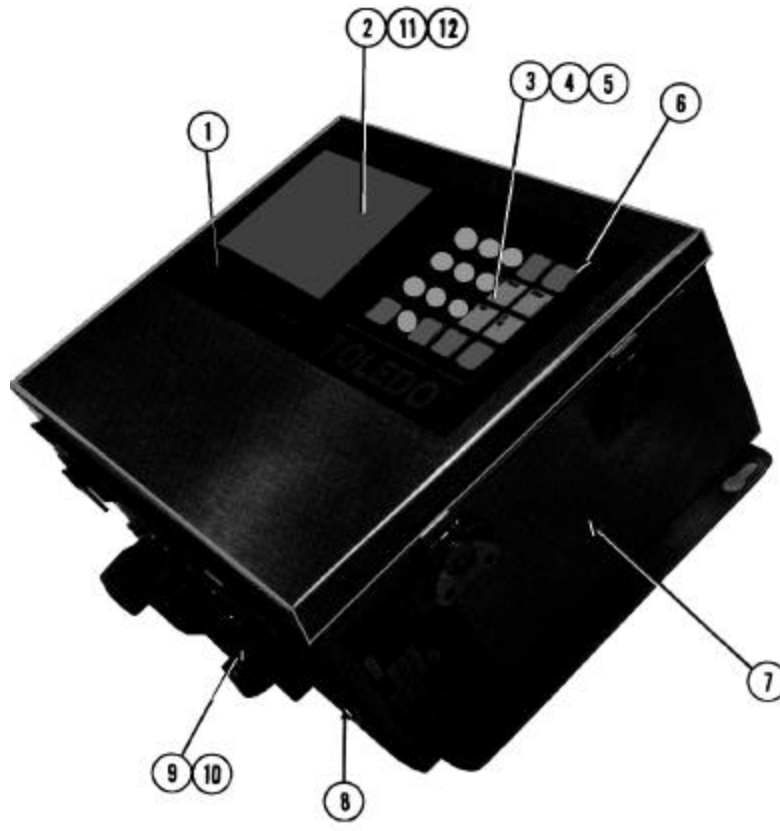


REF.	PART NUMBER	DESCRIPTION	QTY.
1	B121666 00A	Decorative Bezel	1
2	*B121661 00A	Clear Display Lens	1
3	125824 00A	Keyboard Assembly (SD)	AR
4	125825 00A	Keyboard Assembly (DD)	AR
5	125826 00A	Keyboard Assembly (DDA)	AR
6	A121664 00A	Keyboard Gasket	1
7	E121670 00A	Enclosure	1
8	R03562 00A	Screw 1/4-20 x 3/8"	3
9	A121656 00A	Load Cell Harness	1
10	125861 00A	Load Cell Harness (RFI Filtered)	AR
11	*125871 00A	Conductive Window	1
12	*125873 00A	Conductive Seal	1

SD - Single Display
DD - Dual Display
DDA - Dual Display Advanced
AR - As Required

* The Conductive Seal MUST be replaced when replacing either the Display Lens or the Conductive Lens.

11.7


WALL UNIT INSIDE ENCLOSURE DOOR

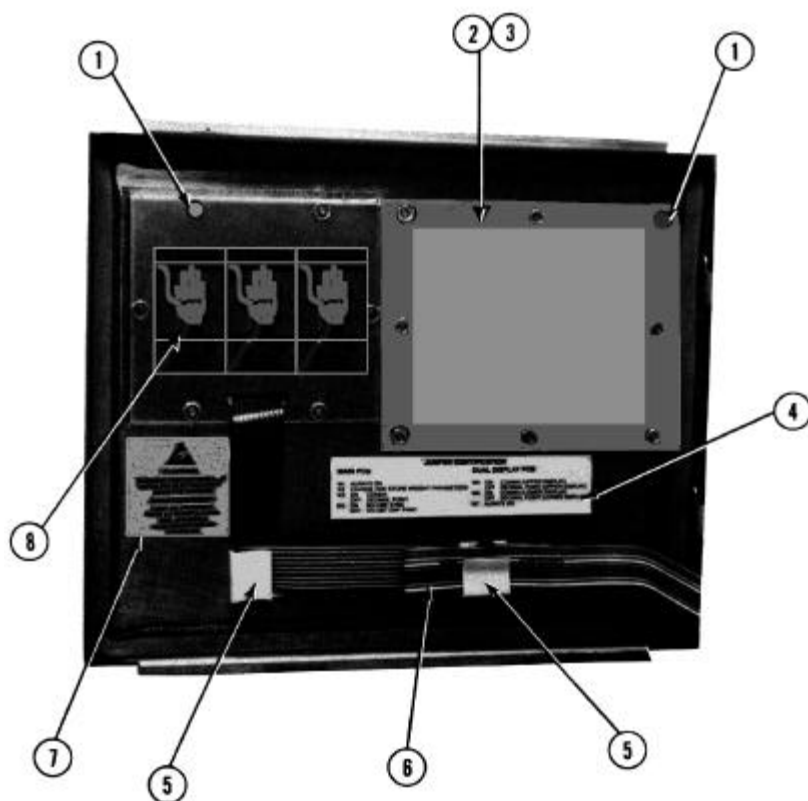

REF.	PART NUMBER	DESCRIPTION	QTY.
1	R03298 00A	Nut 8-12	14
2	A121662 00A	Display Gasket	1
3	122539 00A	Display Bracket	1
4	123466 00A	Jumper Description Decal	1
5	112855 00A	Cable Clamp	2
6	123473 00A	Keyboard Extension Harness	1
7	116033 00A	Static Caution Label	1
8	A118792 00A	Warning Decal	1

11.8

WALL UNIT SINGLE DISPLAY PCB'S & MISCELLANEOUS HARDWARE

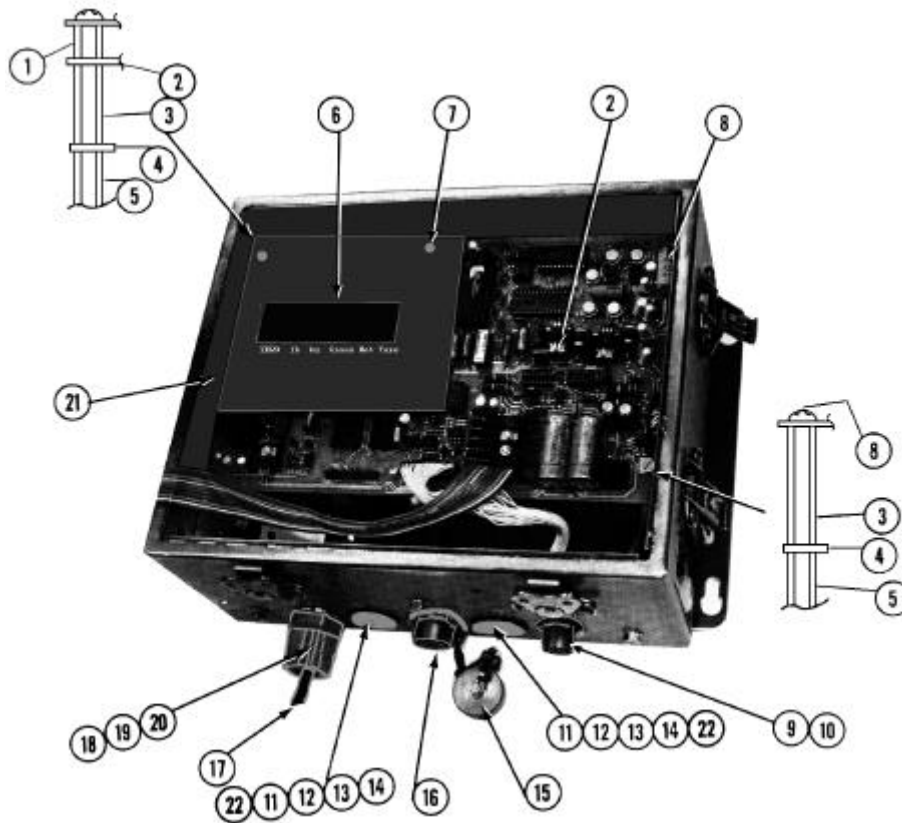

REF.	PART NUMBER	DESCRIPTION	QTY.
1	122566 00A	Standoff - .0438"	2
2	*117022 00A	Main PCB (SD)	1
2A	*126464 00A	Main PCB (SD)	1
2B	*128894 00A	Main PCB (SD), Ram XXX7	1
2C	*125378 00A	Main PCB (SD)**	1
2D	*126488 00A	Main PCB (SD)**	1
2E	*132000 00A	Main PCB (SD), Ram XXX7**	1
3	122567 00A	Standoff - 1.125"	6
4	R02517 00A	Spacer	6
5	122568 00A	Standoff - 2.75"	6
6	B121667 00A	Display Lens (SD)	1
7	R02502 00A	Screw 8-32 x 1/4"	2
8	R01183 050	Screw 8-32 x 1/4"	4
9	A121656 00A	Load Cell Harness	1
10	125861 00A	Load Cell Harness (RFI Filtered)	AR
11	124086 00A	Curved Disc	2
12	A124089 00A	Disc Assembly	2
13	124089 00AH	Grommet	2
14	R03298 00A	Nut 8-32	4
15	123484 00A	Connector Cap	1
16	C121652 00A	Serial I/O Harness, Printer	1
17	107164 00A	Power Cord **	1
18	117417 00A	Connector	1
19	116240 00A	Sealing Lock Nut (NS)	1
20	104699 00A	Grommet	1
21	122569 00A	Standoff (NS)	2
22	124266 00A	Ground Strap (NS)	1


SD - Single Display
AR - As Required
NS - Not Shown

*PCB may have revision level.
**These PCB's are for HAP (Hazardous Area Protection) areas

***This assembly does not include the 3pin White Connector (PN 124688 00A) that terminates the Power Cord to the 8142 Line Filter. Order this connector separately if needed.

11.9


WALL UNIT DUAL & DUAL ADVANCED PCB'S & MISC. HARDWARE

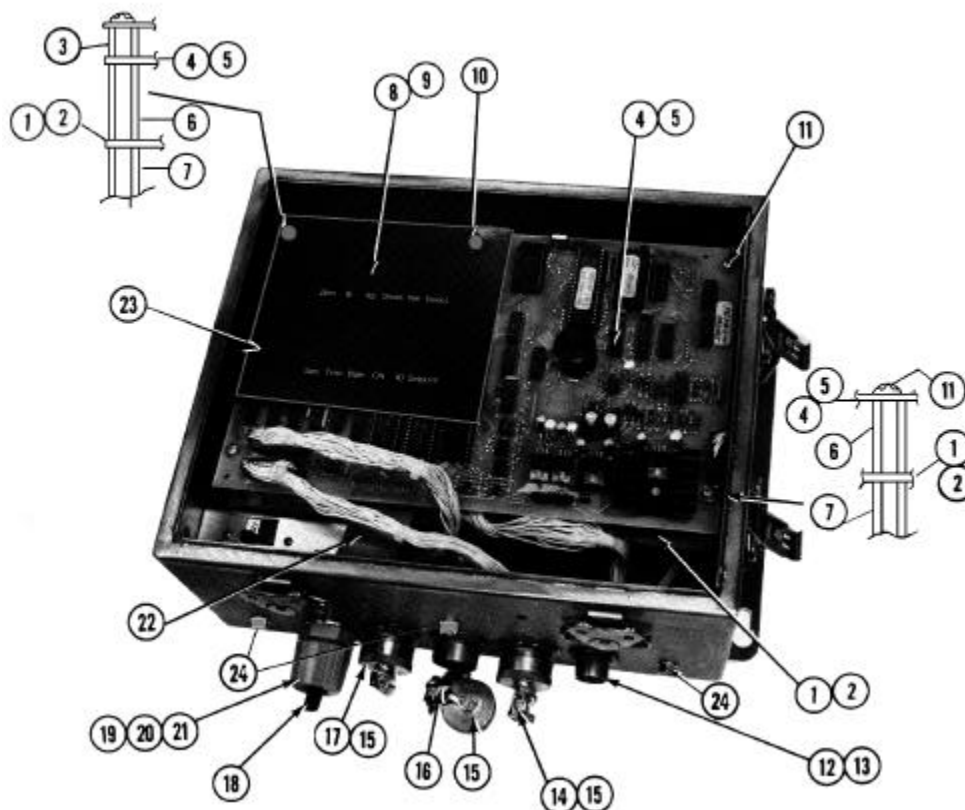

REF.	PART NUMBER	DESCRIPTION	QTY.
1	*125847 00A	Main PCB (	AR
1	*126466 00A	Main PCB (	AR
1	*128897 00A	Main PCB (	AR
1	*125381 00A	Main PCB (	AR
1	*126490 00A	Main PCB (	AR
1	*132001 00A	Main PCB (	AR
2	*125856 00A	Main PCB (	AR
2A	*126467 00A	Main PCB (	AR
2B	*128900 00A	Main PCB (	AR
2C	*125380 00A	Main PCB (	AR
2D	*126491 00A	Main PCB (	AR
2E	*132002 00A	Main PCB (	AR
3	122566 00A	Standoff 0.438"	2
4	*125845 00A	Dual PCB (DD)	AR
5	*125854 00A	Dual-Advanced PCB (DDA)	AR
6	122567 00A	Standoff 1.125"	6
7	122568 00A	Standoff 2.75"	6
8	B121665 00A	Display Lens (DD)	AR
9	B123468 00A	Display Lens (DDA)	AR
10	R02502 00A	Screw, #8-32 x 1/4"	2
11	R01183 050	Screw, #8-32 x 1/4"	4
12	A121656 00A	Load Cell Harness	1
13	125861 00A#	Load Cell Harness (RFI Filtered)	AR
14	B121657 00A	Setpoint-Gross-Tare Harness (DDA)	1
15	123484 00A	Connector Cap	2
16	C121652 00A	Harness, Printer	1
17	C121653 00A	Communication Harness (Opt.)	AR
18	107164 00A	Power Cord	1
19	117417 00A	Connector	1
20	116240 00A	Sealing Lock Nut (NS)	1
21	104699 00A	Grommet (NS)	1
22	121654 00A	Data Harness	1
23	122569 00A	Standoff (NS)	2
24	R03562 00A	Screw, 1/4-20" x 3/8"	3

DD - Dual Display
DDA - Dual Display Advanced
AR - As Required
NS - Not Shown

*PCB may have revision level
**These PCB's are for HAP (Hazardous Area Protection) areas.
*** This assembly does not include the 3Pin White Connector (PN 124688 00A) that terminates the Power Cord to the 8142 Line Filter. Order this connector separately if needed.
Rams 1x2x

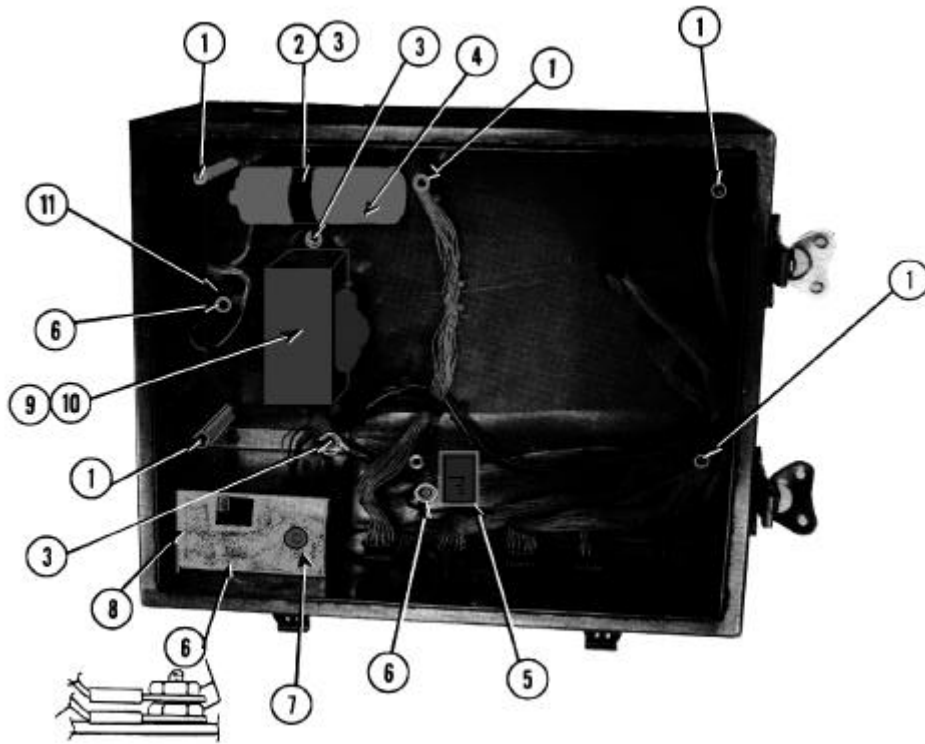


REF.	PART NUMBER	DESCRIPTION	QTY.
1	122568 00A	Standoff 2.75"	6
2	A116139 00A	Capacitor Clamp	1
3	R03283 00A	Nut, 6-32	6
4	121643 00A	Capacitor - 30,000 μ f	1
5	119113 00A	Chassis Ground Decal	1
6	R03298 00A	Nut, 8-32	4
7	122582 00A	Circuit Breaker 0.5 Amp	1
8	C122583 00A	Line Filter and Switch Assembly	1
9	121646 00A	Transformer & Harness Assembly (SD)	AR
10	121647 00A	Transformer & Harness Assembly (DD & DDA)	AR
11	093943 00A	Bridge Rectifier - 25 Amp	1

SD - Single Display
DD - Dual Display
DDA - Dual Display Advanced
AR - As Required

11.11

RACK UNIT COVER & FRONT PANEL

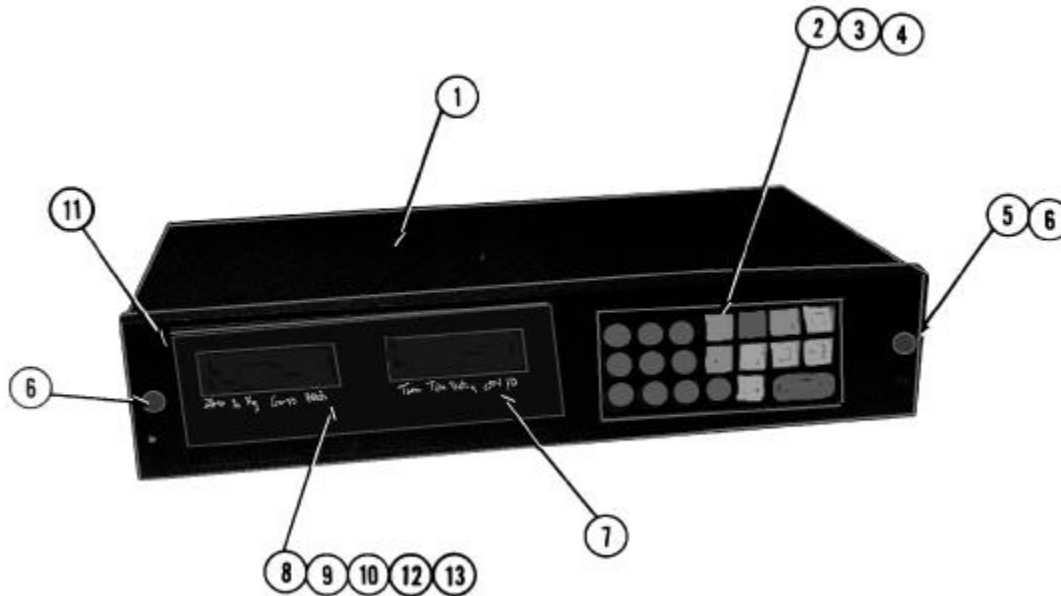

REF.	PART NUMBER	DESCRIPTION	QTY.
1	125837 00A	Cover	1
2	125827 00A	Keyboard Assembly (SD)	AR
3	125828 00A	Keyboard Assembly (DD)	AR
4	125829 00A	Keyboard Assembly (DDA)	AR
5	A108572 00A	Front Panel Screw	2
6	R01279 020	Retaining Ring	2
7	A124097 00A	Display Gasket	1
8	*A121626 00A	Display Lens (SD)	AR
9	*A121628 00A	Display Lens (DD)	AR
10	*A121627 00A	Display Lens (DDA)	AR
11	C119918 00B	Front Panel	1
12	*128879 00A	Conductive Lens	1
13	*128880 00A	Conductive Seal	1


SD - Single Display

DD - Dual Display

DDA - Dual Display Advanced

AR - As Required

*The Conductive Seal MUST be replaced when replacing either the Display Lens or the Conductive Lens.

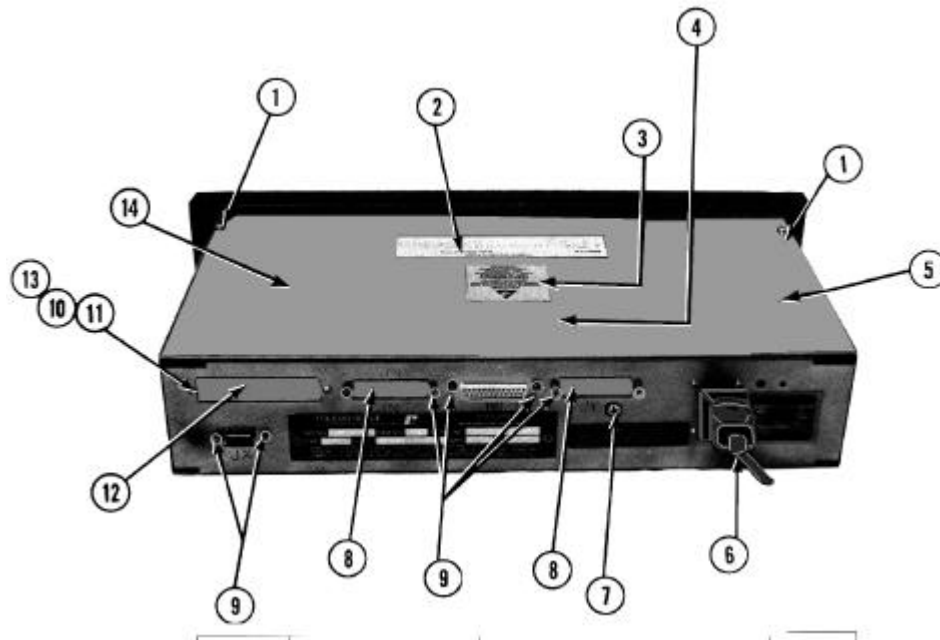

REF.	PART NUMBER	DESCRIPTION	QTY.
1	R03689 00A	Screw 6-32 x 1/4"	3
2	123466 00A	Jumper Description Label	1
3	116033 00A	Static Caution Label	1
4	A118792 00A	Service Warning Decal	1
5	108578 00A	Chassis Cover	1
6	103867 00A	Power Cord	1
7	R01183 050	Ground Screw 8-32 x 1/4"	1
8	112388 00A	Cover Plate	AR
9	126861 00A	Screw Lock Assembly	8
10	R03305 00A	Nut 4-40	2
11	R02547 00A	Lockwasher #4	2
12	106403 00A	Cover Plate	1
13	R02101 050	Screw 4-40 x 3/8"	2
14	126273 00A	Fishpaper (DDA, NS)	1


AR - As Required

DDA - Dual Display Advanced

NS - Not Shown

11.13

RACK UNIT SINGLE DISPLAY PCB'S & MISC. HARDWARE

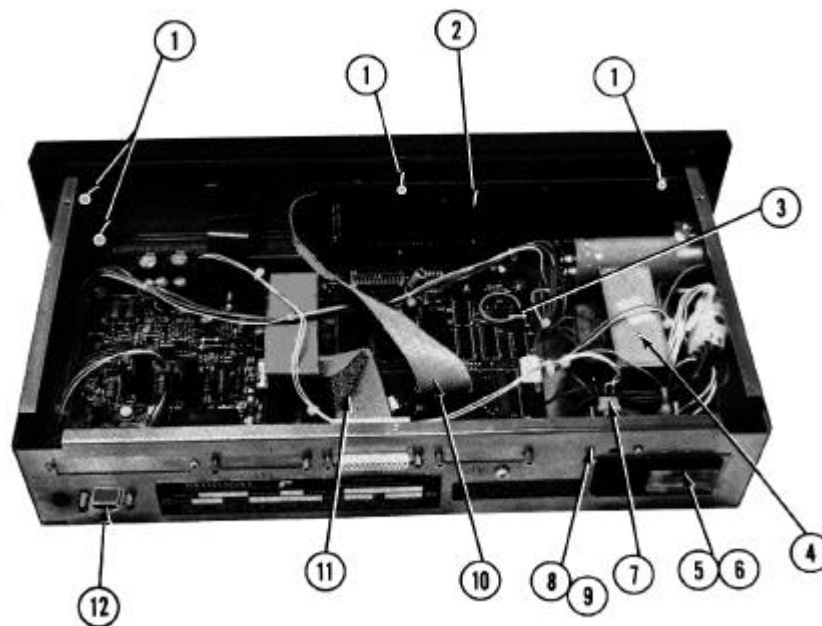


REF.	PART NUMBER	DESCRIPTION	QTY.
1	R03689 00A	Screw 6-32 x 1/4"	8
2	*121641 00A	Display PCB (SD)	1
3	*121630 00A	Main PCB (SD)	1
3A	*126465 00A	Main PCB (SD)	1
3B	*128903 00A	Main PCB (SD), Ram XXX7	1
3C	*125379 00A	Main PCB (SD)**	1
3D	*126489 00A	Main PCB (SD)**	1
3E	*132003 00A	Main PCB (SD), Ram XXX7**	1
4	124092 00A	Transformer Assembly (SD)	1
5	112145 00A	Fuse .5A Slo-Blo (Rams 2X0X)	AR
6	095920 00A	Fuse .25A Slo-Blo (Rams 201X, 202X)	AR
7	A121650 00A	Zero Switch & Harness	1
8	R02101 050	Screw 4-40 x 3/8"	2
9	R02547 00A	Lockwasher #4	2
10	121660 00A	Display Harness	1
11	A121651 00A	Harness, Printer	1
12	B121648 00A	Load Cell Harness	1
	133125 00A	with key (Rams 0XX8, 9, 2XX8, 9)	
13	125851 00A	Load Cell Harness (RFI Filtered)	AR

*PCB may have revision levels.

**These PCB's are for HAP (Hazardous Area Protection) areas.

SD - Single Display

AR - As Required

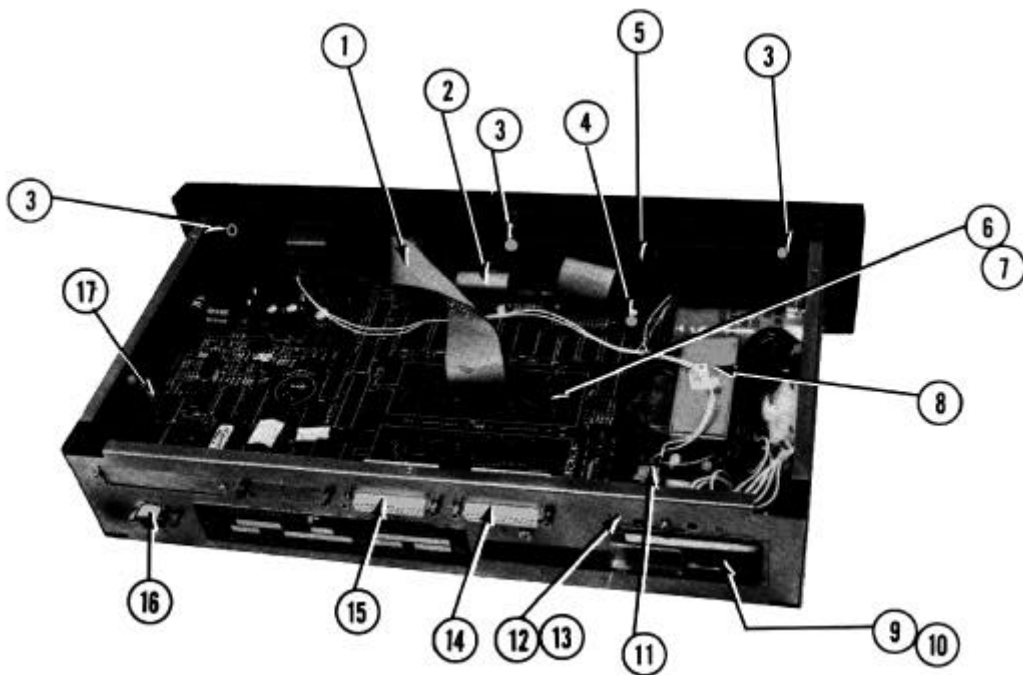


REF.	PART NUMBER	DESCRIPTION	QTY.
1	121660 00A	Display Harness	1
2	121654 00A	Data Harness	1
3	R03689 00A	Screw, #6-32 x 1/4"	8
4	R01183 050	Screw, #8-32 x 1/4"	6
5	*121642 00A	Display PCB (DD & DDA)	1
6	*125846 00A	Dual PCB (DD)	1
7	*125855 00A	Dual-Advanced PCB (DDA)	1
8	A124093 00A	Transformer Assembly (DD & DDA)	1
9	112145 00A	Fuse .5A Slo-Blo	AR
10	095920 00A	Fuse .25A Slo-Blo	AR
11	A121650 00A	Zero Switch & Harness	1
12	R02101 050	Screw 4-40 x 3/8"	2
13	R02547 00A	Lockwasher #4	2
14	A121659 00A	Setpoint Harness	1
15	A121651 00A	Serial I/O Harness	1
16	B121648 00A	Load Cell Harness	1
17	125383 00A	Setup Extension Harness	1

*May have a revision level.

DD - Dual Display

DDA - Dual Display Advanced

AR - As Required

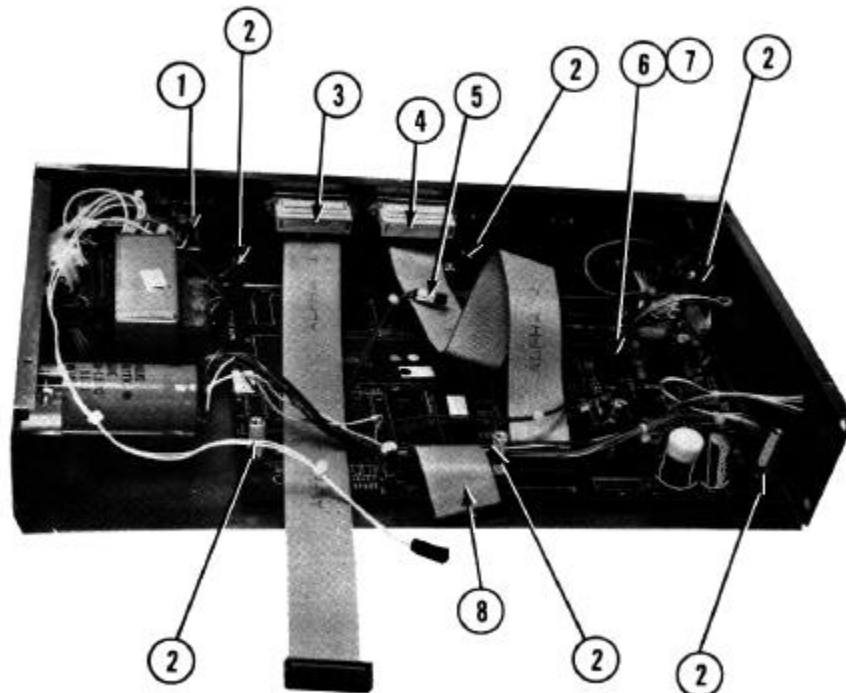

REF.	PART NUMBER	DESCRIPTION	QTY.
1	A121650 00A	Zero Switch & Harness	1
2	A123501 00A	Standoff	6
3	A121659 00A	Setpoint Harness	1
4	A121651 00A	Serial I/O Harness	1
5	125383 00A	Setup Extension Harness	1
6	*125383 00A	Main PCB (DD)	AR
6A	*126466 00A	Main PCB (DD)	AR
6B	*128897 00A	Main PCB (DD), Rams XXX8	AR
6C	*125381 00A	Main PCB (DD)**	AR
6D	*126490 00A	Main PCB (DD)**	AR
6E	*132001 00A	Main PCB (DD), Ram XXX8**	AR
7	*125856 00A	Main PCB (DDA)	AR
7A	*126467 00A	Main PCB (DDA)	AR
7B	*128900 00A	Main PCB (DDA), Ram XXX9	AR
7C	*125380 00A	Main PCB (DDA)**	AR
7D	*126491 00A	Main PCB (DDA)**	AR
7E	*132002 00A	Main PCB (DDA), Ram XXX9**	AR
8	121654 00A	Data Harness	1

*PCB may have revision level.

**These PCB's are for HAP (Hazardous Area Protection) areas.


DD - Dual Display

DDA - Dual Display Advanced

AR - As Required

11.16

RACK UNIT POWER SUPPLY

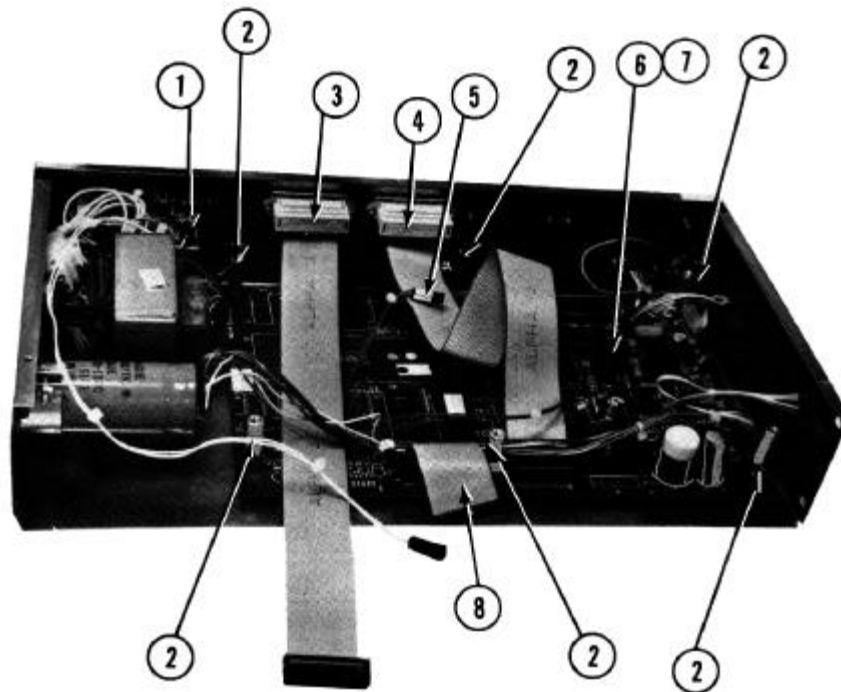

REF.	PART NUMBER	DESCRIPTION	QTY.
1	093943 00A	Bridge Rectifier (NS) *25 Amp	1
2	R03298 00A	Nut 8-32"	10
3	124105 00A	Line Filter Assembly	1
4	111189 00A	Spacer (NS)	1
5	A121650 00A	Zero Switch & Harness	1
6	C123458 00A	Chassis	1
7	A121651 00A	Harness, Printer	1
8	B121648 00A	Load Cell Harness	1
9	125851 00A	Load Cell Harness (RFI Filtered)	AR
10	A123463 00A	PCB Insulator / Shield	1
11	117113 00A	Chassis Ground Decal (NS)	1
12	121643 00A	Capacitor 30,000 μ f*	1
13	124835 00A	Capacitor Clamp	1
14	124092 00A	Transf. & Harness Assembly (SD)	AR
15	A124093 00A	Transf. & Harness Assembly (DD & DDA)	12
16	R00813 050	Nut, #6-32	2
17	R01771 050	Lockwasher, #6	2
18	R03710 050	Screw, #6-32 x .375 PH RD HD	2
19	126861 00A	Screw Lock Assembly, #4-40	2

* - Included with Assembly 124092 00A and A124093 00A

NS - Not Shown

AR - As Required

SD - Single Display

DD - Dual Display

DDA - Dual Display Advanced

12. INTERCONNECTING CABLES

PRINTER	8142	LENGTH	PART NO.	SALES NO.
301 / 307	DESK	6 '	A119714 00A	0900-0191-000
	& RACK	20 '	A119715 00A	0900-0199-000
	WALL	6 '	A122570 00A	0900-0180-000
		20 '	A122571 00A	0900-0181-000
8805	DESK	6 '	A119716 00A	0900-0200-000
	& RACK	20 '	A119717 00A	0900-0182-000
	WALL	6 '	A122572 00A	0900-0182-000
		20 '	A122573 00A	0900-0183-000
8804	DESK	6 '	A115544 00A	0900-0136-000
	& RACK	20 '	A115545 00A	0900-0137-000
8806	WALL	6 '	A122574 00A	0900-0188-000
8860		20 '	A122575 00A	0900-0189-000
8810	DESK	6 '	B119720 00A	0900-0195-000
	& RACK	20 '	B119723 00A	0900-0196-000
8820	WALL	6 '	A122576 00A	0900-0184-000
8830		20 '	A122577 00A	0900-0185-000
8855	DESK	6 '	B119722 00A	0900-0197-000
	& RACK	20 '	B119723 00A	0900-0198-000
	WALL	6 '	A122578 00A	0900-0186-000
		20 '	A122579 00A	0900-0187-000
8840	DESK	6 '	B128220 00A	0900-0214-000
	& RACK	20 '		
	WALL	6 '	128221 00A	0900-0215-000
		20 '		

13.

MATING CONNECTORS

DESK ENCLOSURE

8142 CONNECTOR	MATING PART NUMBERS	DESCRIPTION
Load Cell *	125819 00A	Male Plug and Cable Clamp
Serial I/O (All)	107187 00A 107188 00A 107189 00A	Male Plug Cable Clamp Contact Pins

*An adapter cable part number B117611 00A may be used to adapt the older seven pin load cell connector to the newer nine pin D-type. The maximum cable gauge that can be soldered to the nine pin connector (125819 00A) is #20 gauge. If #16 gauge cable is used, the B117611 00A adapter cable is required.

WALL ENCLOSURE

8142 CONNECTOR	MATING PART NUMBERS	DESCRIPTION
Load Cell *	125820 00A **	Male Plug
Serial I/O (J/N) (J/W) (J/Y)	126232 00A ** 123480 00A ** Included in Host ** Communication KOP	Connector KOP Connector KOP - -
BDC / Analog Output	126274 00A ** 126242 00A	Connector KOP Connector end 20 ' Cable

** Use Potting KOP 125839 00A

* An adapter cable part number 124130 00A may be used to adapt the older seven pin load cell connector to the newer 10 pin type. The maximum cable gauge that can be soldered to the 10 pin connector (125820 00A) is #20 gauge. If #16 gauge cable is used, the 124130 00A adapter cable is required.

RACK ENCLOSURE

8142 CONNECTOR	MATING PART NUMBERS	DESCRIPTION
Load Cell *	125819 00A	Male Plug and Cable Clamp
Serial I/O (All)	107187 00A 107188 00A 107189 00A	Male Plug Cable Clamp Contact Pins
BDC / Analog Output	P00719 020	Male Assembly

*An adapter cable part number B117611 00A may be used to adapt the older seven pin load cell connector to the newer nine pin D-type. The maximum cable gauge that can be soldered to the nine pin connector is #20 gauge. If #16 gauge cable is used, the B117611 00A adapter cable is required.

14. KITS OF PARTS

DESK ENCLOSURE

DESCRIPTION	PART NUMBER
Base Plate KOP	124159 00A
RFI KOP	125347 00A
Remote Gross - Tare KOP	125802 00A
Host Communications KOP	125803 00A

WALL ENCLOSURE

DESCRIPTION	PART NUMBER
BDC / Analog Output KOP	123503 00A
RFI KOP	125348 00A
Remote Gross - Tare KOP	A125804 00A
Host Communications KOP	125805 00A

RACK ENCLOSURE

DESCRIPTION	PART NUMBER
BDC / Analog Output KOP	A123504 00A
RFI KOP	125349 00A
Remote Gross - Tare KOP	125802 00A
Host Communications KOP	125803 00A
Rack Mount KOP	095410 00A
Panel Mount KOP	106299 00A

MISCELLANEOUS

DESCRIPTION	PART NUMBER
Potting KOP	125839 00A
Potting Refill KOP	125874 00A
Universal Cleaning KOP	125875 00A