

IND310_{drive}

Terminal

User's Guide

© METTLER TOLEDO 2004

No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose without the express written permission of METTLER TOLEDO.

U.S. Government Restricted Rights: This documentation is furnished with Restricted Rights.

Copyright 2004 METTLER TOLEDO. This documentation contains proprietary information of METTLER TOLEDO. It may not be copied in whole or in part without the express written consent of METTLER TOLEDO.

METTLER TOLEDO reserves the right to make refinements or changes to the product or manual without notice.

COPYRIGHT

METTLER TOLEDO® is a registered trademark of METTLER TOLEDO. All other brand or product names are trademarks or registered trademarks of their respective companies.

**METTLER TOLEDO RESERVES THE RIGHT TO MAKE
REFINEMENTS OR CHANGES WITHOUT NOTICE.**

FCC Notice

This device complies with Part 15 of the FCC Rules and the Radio Interference Requirements of the Canadian Department of Communications. Operation is subject to the following conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his or her own expense.


Declaration of conformity is located on the documentation CD.

PRECAUTIONS

- READ this manual BEFORE operating or servicing this equipment and FOLLOW these instructions carefully.
- SAVE this manual for future reference.

	<div data-bbox="873 436 1138 493"> WARNING!</div> <div data-bbox="678 520 1365 609">FOR CONTINUED PROTECTION AGAINST SHOCK HAZARD CONNECT TO PROPERLY GROUNDED OUTLET ONLY. DO NOT REMOVE THE GROUND PRONG.</div>
---	--

 WARNING!
TO AVOID DAMAGE TO THE PCB OR LOAD CELL, REMOVE POWER FROM THE IND310drive TERMINAL AND WAIT AT LEAST 30 SECONDS BEFORE CONNECTING OR DISCONNECTING ANY HARNESS.

 CAUTION
BEFORE CONNECTING/DISCONNECTING ANY INTERNAL ELECTRONIC COMPONENTS OR INTERCONNECTING WIRING BETWEEN ELECTRONIC EQUIPMENT ALWAYS REMOVE POWER AND WAIT AT LEAST THIRTY (30) SECONDS BEFORE ANY CONNECTIONS OR DISCONNECTIONS ARE MADE. FAILURE TO OBSERVE THESE PRECAUTIONS COULD RESULT IN DAMAGE TO OR DESTRUCTION OF THE EQUIPMENT AND/OR BODILY HARM.

 CAUTION
OBSERVE PRECAUTIONS FOR HANDLING ELECTROSTATIC SENSITIVE DEVICES.

	<div data-bbox="906 1346 1174 1402"> WARNING!</div> <div data-bbox="686 1444 1382 1528">THE IND310drive TERMINAL IS NOT INTRINSICALLY SAFE! DO NOT USE WITHIN AREAS CLASSIFIED AS HAZARDOUS DIVISION 1 OR ZONE 0/1 BECAUSE OF COMBUSTIBLE OR EXPLOSIVE ATMOSPHERES.</div>
---	--

	<div data-bbox="906 1577 1174 1633"> WARNING!</div> <div data-bbox="686 1675 1382 1843">WHEN THIS EQUIPMENT IS INCLUDED AS A COMPONENT PART OF A SYSTEM, THE RESULTING DESIGN MUST BE REVIEWED BY QUALIFIED PERSONNEL WHO ARE FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF ALL COMPONENTS IN THE SYSTEM AND THE POTENTIAL HAZARDS INVOLVED. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN BODILY HARM AND/OR PROPERTY DAMAGE.</div>
---	--

Contents

Chapter 1.0	Introduction	1-1
Operating Overview		1-1
Gross State		1-1
Net State		1-2
Operating Modes		1-2
Weighing Processes		1-2
Installation and Programming		1-3
Chapter 2.0	Operating Instructions	2-1
Security		2-1
Metrology Switch		2-1
Display Operation		2-2
General Navigation		2-3
Keystroke Functions		2-7
Default Screen		2-10
Application Operation		2-10
Direct Entry Option		2-10
Vehicle ID Weighing		2-11
Temporary ID Weighing		2-12
Index Weighing		2-14
Transient Vehicle Weighing		2-15
Outbound Process		2-16
Inbound Process		2-19
Table Searches		2-19
Table Reports		2-20
Chapter 3.0	Service and Maintenance	3-1
Service		3-1
Cleaning and Maintenance		3-1
Appendix A	Basic Weighing Concepts	A-1
Zero		A-1
Tare		A-1
Autotare		A-1
Keyboard Tare		A-2
Additive Tare		A-2
Tare Interlocks		A-2
Sections		A-2
Setpoints		A-2
Inbound/Outbound Weighing		A-3

Net Sign Correction..... A-3

One-Pass Weighing..... A-3

Appendix B Application Operation FlowchartsB-1

Vehicle ID Weighing B-3

Temporary ID Weighing B-4

Index Weighing..... B-4

Index Weighing..... B-5

Transient Vehicle Weighing..... B-5

Transient Vehicle Weighing..... B-6

Chapter 1.0

Introduction

This chapter covers

- Operating Overview
- Installation and Programming

Click on any of the above topics to link to the sections where they are located.

The IND310drive Industrial Scale Terminal incorporates the latest design innovations in vehicle weighing applications. The terminal contains functionality not available in previous generations of terminals; it employs a simple setup logic tree that will be carried across future generations of METTLER TOLEDO terminals.

The simplicity of setup and operation coupled with specific configurations for multiple applications reduces training costs and operation setup time. The enhanced software capabilities enable database storage of key information, which reduces operator error and time-consuming entries.

Information on installing, programming, and servicing the IND310drive terminal is located in the IND310drive Installation Manual and the IND310drive Technical Manual. Review all instructions and safety precautions carefully. Only authorized personnel should perform installation and service procedures. Please contact an authorized METTLER TOLEDO representative to resolve any questions not covered in this manual or associated manuals.

Operating Overview

See [Appendix A, Basic Weighing Concepts](#) for more information about basic weighing terminology.

To successfully use the IND310drive terminal's various functions, one must understand

- Basic weighing terminology
- Differences between gross and net states
- The terminal's various operating modes and weighing processes

Gross State

The IND310drive terminal is in the gross state when a tare (the weight of a container holding the product to be weighed) has not been taken. The full weight of the items on the scale displays on the terminal.

Net State

The IND310drive terminal is in the net state after a tare has been taken. Only the weight of the items on the scale after the tare is deducted displays, and the net cursor is lit.

Operating Modes

Routine operations with all vehicle features enabled in setup include four modes of terminal operation:

- **Vehicle ID Weighing**—Uses a permanent stored Vehicle ID table to identify the tare value of the vehicle, and then follows the steps defined by the outbound process to complete the procedure, which is also called a transaction. Vehicle ID Weighing enables the accumulation of totals based on vehicle ID.
- **Temporary ID Weighing**—Coordinates the inbound and outbound processes for vehicles that are not permanently stored in the Vehicle ID table through the use of a Temporary ID table. Temporary ID Weighing stores the vehicle information in the Temporary ID table and follows the inbound process. It also removes this temporary entry when the vehicle returns and follows the outbound process. Because the entry is temporary, no accumulation of totals occurs.
- **Index Weighing**—Enables the Vehicle ID Weighing mode and Outbound process to be condensed through the use of a special Index table that provides a single ID reference for quick multiple ID look-ups.
- **Transient Weighing**—This mode enables weighing of vehicles that are not part of normal operation in a manner similar to the Vehicle ID Weighing mode. Transient Weighing does not use the Vehicle ID table, so the operator must enter vehicle data. Transient Weighing transactions are not included in any totals.

Weighing Processes

There are two weighing processes:

- **Outbound**—Completes the vehicle transaction. The gross, tare, and net weight values are now known. Other transaction information may be collected (A1–A4 table data, Variable 1, and/or Variable 2 data). The completed transaction information is stored and can be printed.
- **Inbound**—Enables the vehicle identification information and a stored weight value to be collected. Other transaction information may be collected (A1–A4 table data). The inbound transaction information is stored and can be printed.

Installation and Programming

The IND310drive Installation Manual provides detailed information about installation. This manual is included in printed format and on a CD with the initial delivery of the terminal. Installation information for the IND310drive is also available in the IND310drive Technical Manual, Appendix A.

The IND310drive Technical Manual contains advanced information for IND310drive setup and programming.



For your notes

Chapter 2.0

Operating Instructions

This chapter covers

- Security
- Display Operation
- General Navigation
- Default Screen
- Application Operation

Click on any of the above topics to link to the sections where they are located.

The IND310drive Terminal is a simple to use, yet sophisticated terminal with flexibility of configuration to meet a variety operating requirements. The setup menu system provides the power of configuration in a user-friendly operational environment.

While reading this manual and operating the terminal, keep in mind that various functions may or may not be available and that the screens shown in this manual may vary from terminal-to-terminal based on the setup configuration.

This User Manual provides instructions for performing typical vehicle weighing operations on the IND310drive terminal. Detailed information about terminal configuration and setup is provided in the IND310drive Technical Manual.

Security

The IND310drive supports a single user/password for setup security. The terminal is pre-configured at the factory with a user name of “ADMIN”. The factory default password is null (no password). The unit as configured at the factory requires no login or password entry to enter the setup mode. All functions of the terminal are available to all users until a password is set up.

The pre-configured user (ADMIN) cannot be changed; the password can only be added or modified. Be sure to remember the password. If the password is changed or forgotten, access to the setup menu will not be available. Be sure to protect the password from access by unauthorized personnel. The password provides access to the entire setup menu, unless the metrology switch is placed in the approved position.

Metrology Switch

If the metrology switch is placed in the approved position, access to the scale and other metrologically significant areas is not permitted. Access to the metrology switch may be sealed in conformity with local regulations.

Display Operation

Application operation and setup display screens include the following basic sections:

- Status bar
- Application area
- Softkeys

Figure 2-1 shows the location of each of these sections.

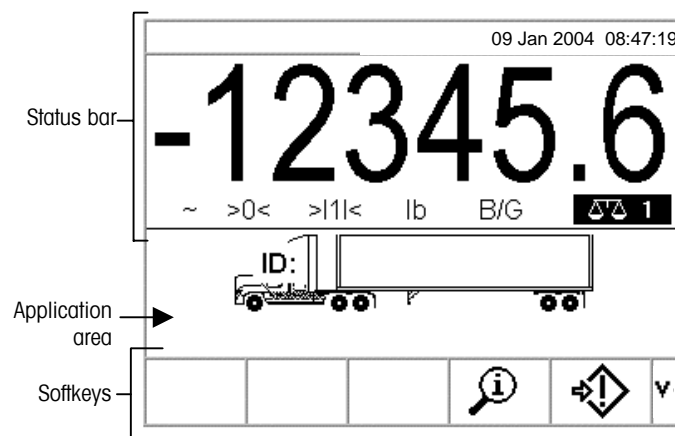


Figure 2-1: Default Weighing Operation Screen

Status Bar

The status bar shows the terminal's status, including the active scale, weight, weighing units, date, and time.

Application Area

The application area displays the current application. For example, the application area shown in Figure 2-1 indicates that a current vehicle ID needs to be entered.

Softkeys

Softkeys are used to select application operation modes. The positioning of softkeys can be changed and functions enabled or disabled through the softkey setup page.

General Navigation

Navigate in the applications and configure the IND310drive using

- Softkeys
- Application keys
- Scale function keys
- Navigation keys
- Numeric keys
- External Keyboard
- Alpha keys


The locations of the above listed keys and the default weighing operation screen are shown in Figure 2-2.

Softkeys

The softkey setup page is used to

- Change softkey positions
- Enable softkey functions
- Disable softkey functions

For example, a contrast softkey can be enabled for making quick adjustments to the terminal screen's contrast setting.

Five softkeys are located along the bottom of the display screen (see Figure 2-2). Some screens might have up to three pages of softkeys for a total of 15 possible functions. A DOWN ARROW icon  displayed on the lower-right corner of the screen (to the far right of the softkey icons) indicates that more softkey selections are available. Press the DOWN arrow navigation key to display additional softkey screens. Press the UP arrow navigation key to display the previous softkey screen.

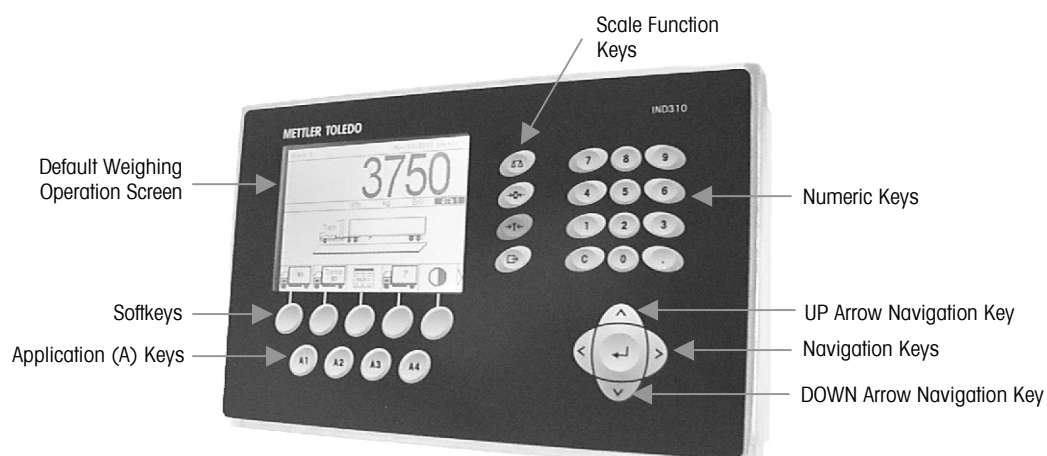


Figure 2-2: Key Locations and Default Weighing Operation Screen

Application Keys


Application keys (A keys) are located below the softkeys (see Figure 2-2) and are labeled


- A1
- A2
- A3
- A4


The application key setup screen is used to assign specific functions to the application keys. For example, application keys could be configured to magnify the display ten times, adjust contrast, or select user-defined table information.

Scale Function Keys


Scale function keys (see Figure 2-2) are:

 **Select Scale**—Enables the operator to select a specific scale. Press the SELECT SCALE key to switch between available scales.

 **Zero**—Zero is the weight of the scale platform or weighbridge when it is empty. The gross zero reference is recorded during calibration. Press the ZERO scale function key to capture a new gross zero reference point if pushbutton zero is enabled in configuration and the weight is within the zero range.






 **Tare**—Tare is the weight of a vehicle when it is empty. Tare is normally used to determine the net weight of the contents of a vehicle. Press the TARE scale function key when an empty vehicle is on the scale. The terminal then displays a zero weight. The vehicle is loaded and driven back onto the scale. The terminal then displays the net weight of the contents. Pushbutton tare must be enabled to use this key in this manner.

When the empty weight of the vehicle is a known value, enter the tare weight using the numeric keys and then press the TARE scale function key. The terminal will display the net weight of the contents of the vehicle. Keyboard tare must be enabled in order to use this key in this manner.

 **Print**—Press the PRINT scale function key to generate a hard-copy printout of a report or of information displayed on the screen or to initiate a demand print of an assigned print template. A printer must be connected to a serial port and the terminal must be configured to match its serial port settings to the printer's. Communication connection and configuration is necessary to connect a template or report to the selected serial port, and to define the selected template or report in configuration.

Navigation Keys

Navigation keys (see Figure 2-2) enable navigation within the setup menu tree, setup screens, and application screens. Navigation keys include:

-  **Up and**  **down arrows**—move the focus up or down to different setup options within the menu tree or to different fields within setup pages. Focus is indicated by highlighted text. These keys are also used to switch to another page of softkeys.
-  **Left and**  **right arrows**—expand (right arrow) or collapse (left arrow) the setup options in the menu tree. These arrows also move the cursor position to a specific character in text areas, and enable left and right scrolling to view all information available on a screen.
-  **Enter**—opens the setup page for viewing and editing setup parameters. The Enter key moves the focus from a field label to a setup value for that field. After entering a value, the enter key is used to accept new values and the focus moves to the next field label.

Numeric Keys

Use the terminal's 12-key numeric keypad (see Figure 2-2) to enter data and commands.

To use numeric keys, position the cursor in the field (see Navigation Keys) and press the numeric keys to enter the appropriate data. Press the DECIMAL key (. key) to enter decimal points where necessary.

The CLEAR key (C key) functions like a backspace key. Position the cursor at the end of data to be deleted and press the C key. Press the C key once for each character to be deleted.

Alpha Keys

On some setup pages, softkeys and application keys function as alpha keys (see Figure 2-3) that are used to enter alphabetic characters for setup parameters such as passwords.

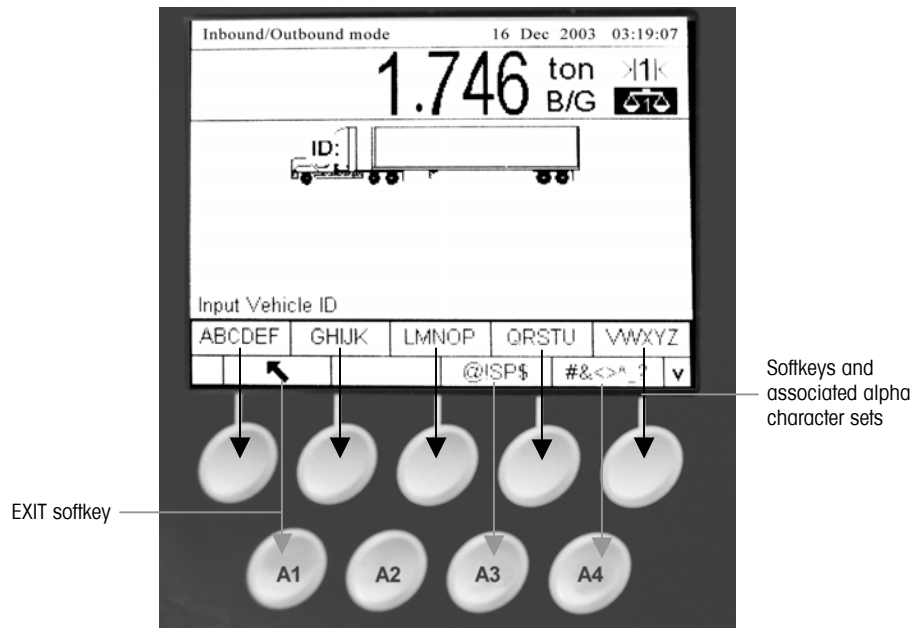



Figure 2-3: Alpha Keys

To use alpha keys, position the cursor in the data entry location (see Navigation Keys), press the soffkey or application key associated with the desired set of alpha characters as shown in Figure 2-3. The soffkeys change to display each alpha character included in the selected set of alpha characters. Use the UP and DOWN arrow navigation keys (see Figure 2-2) to switch between upper-case and lower-case characters. Press the key associated with the specific alpha character

desired for data entry. Use the EXIT soffkey  to return to the main alpha key menu. Repeat this process until all alpha characters have been entered.

From the main alpha key menu, press the EXIT soffkey to escape from alpha entry without saving data. Use the CLEAR (C) key (see Numeric Keys, Figure 2-2) to delete unwanted alpha characters.

External Keyboard

See the IND310drive Installation Manual for more information on connecting an external keyboard.

An external keyboard can be connected to the IND310drive at the PS/2 port. The keys on an external keyboard perform the following functions

- **F1 through F5**—Perform the same functions as the soffkeys, with F1 being the soffkey on the left and F5 being the soffkey on the right.
- **Alt F1 through Alt F4**—Perform the same functions as the A1 through A4 application keys.
- **F6 through F9**—Perform the same functions as the SELECT (F6), ZERO (F7), TARE (F8), and PRINT (F9) scale function keys.

- **Keyboard numeric and alphabetic keys**—Function independently of the softkeys and can be used to enter alphabetic letters and numerals. The Enter key on the keyboard functions the same as the ENTER navigation key. The Backspace key functions the same as the CLEAR (C) key. The arrow keys function the same as the navigation keys.
- **Number keys**—Function the same as the keys on the terminal’s numeric keypad when the number lock function is engaged.






 



Keystroke Functions


 
 













Key names and commands are identified in this manual by upper- and lower-case letters. Key names, such as ENTER, are in all upper-case letters, and commands, such as “select,” are in lower-case (unless they begin a sentence, in which case the first initial is upper-case). For example:





 




 





- “Press INDEX...” means to press the INDEX softkey.
- “Select an option...” means to use the UP or DOWN arrow navigation keys to select a setting, then press ENTER.

Softkeys and application displays use graphic images for identification. Table 2-1 shows graphic images and their functions.

Table 2-1: Graphic Images and Functions

Graphic Image	Function
	Capture Span
	Capture Zero
	Clear
	Contrast
	Current “Var1” Value
	Current “Var2” Value
	Current A1 Value
	Current A2 Value
	Current A3 Value

Graphic Image	Function
	Current A4 Value
	Current Vehicle ID
	Current Vehicle Description
	Custom Report
	Darker
	Database Files
	Database Query (search)
	Delete
	Edit
ESC	Escape (exit without storing)
	Exit (return to previous screen)
x10	Expanded Weight
	Vehicle ID Weighing
	Index Weighing
i	Information
	Information/Recall
	Lighter
	More Softkey Selections
	New/Insert

Graphic Image	Function
	Report
	Reset
	Reset Counter
	Return to A1-A4 File Entry
	Return to Var1-2 Entry
	Setup Menu
	Start
	Start Search
	Stop
	Temporary ID Weighing
	Time & Date
	Transient Vehicle Weighing
	Unit Switching
	Validate Entry/Transaction
	Metrology (Weight) Information

Default Screen

The default weighing operation screen displays when the application is idle (see Figure 2-4).

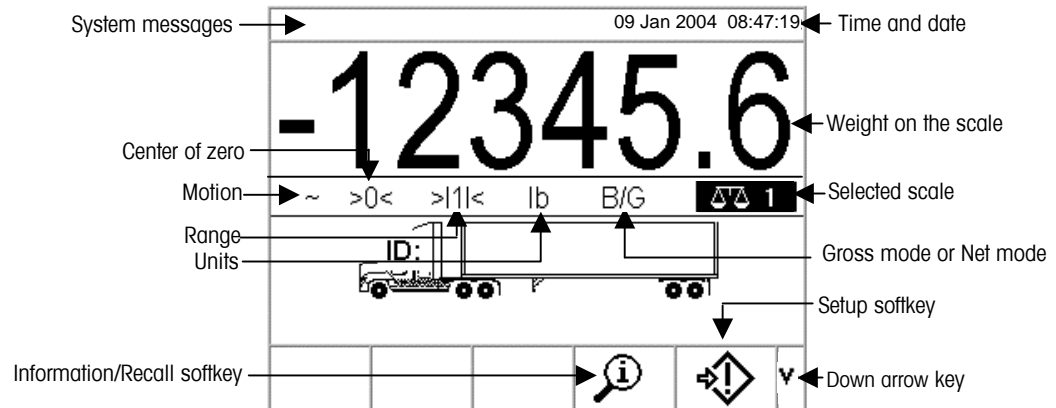


Figure 2-4: Default Weighing Operation Screen

Application Operation

See the IND310drive Technical Manual, Chapter 3.0, Configuration for details about terminal setup.

Routine operations (with all vehicle features enabled in setup) include four modes of operation:

- Vehicle ID Weighing
- Temporary ID Weighing
- Index Weighing
- Transient Vehicle Weighing

Direct Entry Option

See the IND310drive Technical Manual, Appendix C, Database Structure and Use for more information about how to use Quick IDs and Short A/N IDs.

An alternative method to initiate a transaction is direct entry of known data. To use this option, enter any type of known data, such as a Quick ID or a tare weight, on the main weighing screen to initiate a transaction. Press a softkey or scale function key to select how the terminal uses the information.

Examples include:

- Enter a Quick ID and press the VEHICLE ID or TEMPORARY ID softkey. The data entered becomes the Quick ID reference (look-up key) for the table that corresponds with the selected softkey.
- Enter a tare weight and press the TARE scale function key. The data entered becomes a manually-entered tare.

See [Appendix B, Application Operation Flowcharts](#) for a quick reference flowchart that illustrates Vehicle ID Weighing.

Vehicle ID Weighing

Vehicle ID Weighing uses the Vehicle ID Table, where vehicle IDs, descriptions, and permanent stored weights are entered prior to operation.

To use Vehicle ID Weighing:

1. From the default weight screen (Figure 2-4), press the DOWN arrow key to display all available soffkeys (see Figure 2-5).

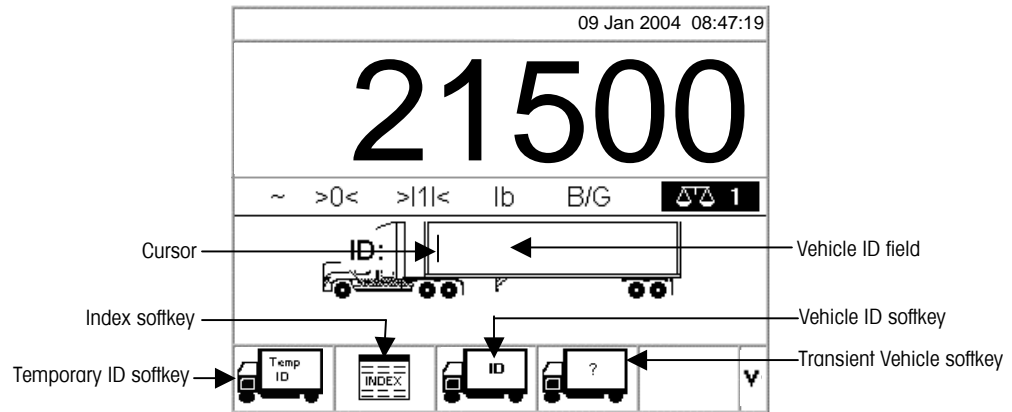


Figure 2-5: Default Weight Screen

- ▶ This screen may appear differently depending on setup configuration. If the VEHICLE ID soffkey does not display, see the IND310drive Technical Manual, Appendix E, Soffkey and Application Key Mapping.

 2. Once the vehicle is on the scale, press the VEHICLE ID soffkey. A vehicle ID prompt displays with a cursor in the Vehicle ID field. The soffkeys and application keys become alpha keys (see Figure 2-3).
 3. Use the alpha keys and the numeric keypad to enter the vehicle ID. Press the ENTER key to complete the entry. The ID value entered is the look-up key for the vehicle in the Vehicle ID table and then in the Temporary ID table.

 - ▶ Operators can use an external keyboard to enter information if one is connected to the terminal. See the IND310drive Installation Manual for information about connecting an external keyboard.

 4. If the vehicle's ID is located in the Vehicle ID or Temporary ID table, the terminal uses the stored data (including tare weight) and continues with the outbound process. See Outbound Process to continue.

If the vehicle's ID is not located, the display reads ID NOT FOUND (see Figure 2-6).

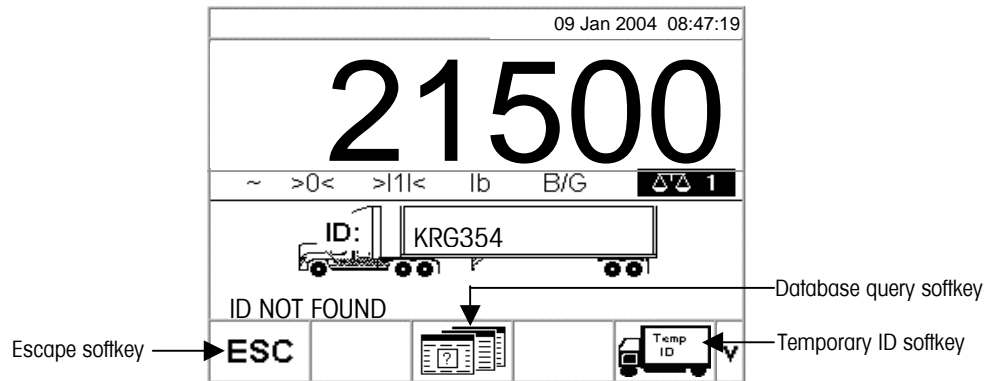


Figure 2-6: Default Weight Screen

When the terminal does not locate a vehicle ID, the user has three options:

- **Escape**—Press the ESCAPE softkey (see Figure 2-6) to return to the main Default Weight Screen.
- **Search for the vehicle ID**—Press the DATABASE QUERY softkey (see Figure 2-6) to search for the vehicle ID in the Vehicle ID table. Once the correct ID is located, continue with the outbound process (see Outbound Process).
- **Create a temporary ID**—Press the TEMPORARY ID softkey (see Figure 2-6) to store the ID in the Temporary ID table (see Temporary ID Weighing, which follows).

See [Appendix B, Application Operation Flowcharts](#) for a quick reference flowchart that illustrates Temporary ID Weighing.

Temporary ID Weighing


Temporary ID Weighing involves the use of the Temporary ID Table to record tare weights for inbound transactions and to recall these weights on outbound transactions. Operators can also use manually-entered tare weights for Temporary ID Weighing.

Following an outbound transaction, the terminal removes the vehicle ID from the Temporary ID Table.

To use Temporary ID Weighing:

1. Once the vehicle is on the scale, press the TEMPORARY ID softkey (see Figure 2-5). A vehicle ID prompt displays with a cursor in the ID field. The softkeys and application keys become alpha keys (see Figure 2-3).
2. Use the alpha keys and the numeric keypad to enter the vehicle ID. Press the ENTER key to complete the entry.
3. If the vehicle's ID is located in the Temporary ID Table, the terminal uses the stored data and continues with the outbound process. See Outbound Process to continue.

When the terminal does not locate a vehicle ID, the user has three options:

- **Escape**—Press the ESCAPE softkey (see Figure 2-6) to return to the main Default Weight Screen.
- **Search for the vehicle ID**—Press the DATABASE QUERY softkey (see Figure 2-6) to search for the vehicle ID in the Temporary ID table. Once the correct ID is located, continue with the outbound process (see Outbound Process).
- **Insert an ID in the Temporary ID Table**—Press the INSERT softkey  to insert the vehicle ID into the Temporary ID Table. See Inbound Process to continue.

Using Manually-Entered Tare Weights

Operators can also use manually-entered tare weights rather than stored tare weights in the Temporary ID Weighing mode (if enabled in setup).

To manually enter a tare weight:

1. From the default weight screen (Figure 2-7), use the numeric keypad to enter the tare value in the tare field **BEFORE** pressing the TEMPORARY ID softkey.

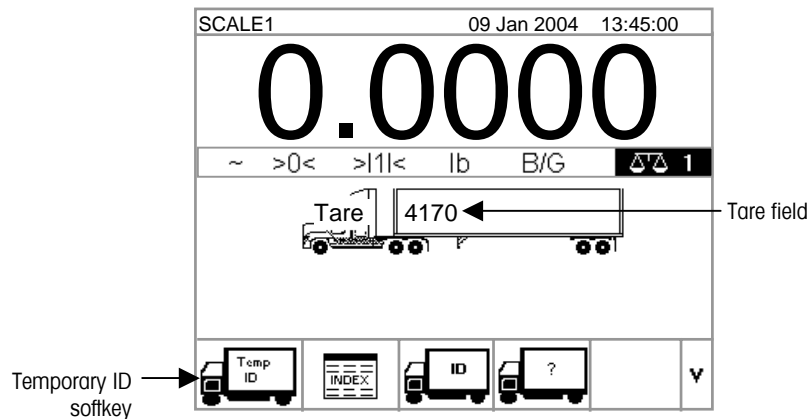


Figure 2-7: Default Weight Screen

2. Press the TEMPORARY ID softkey and then enter the Vehicle Description using the alpha keys. See Outbound Process to continue.

See [Appendix B, Application Operation Flowcharts](#) for a quick reference flowchart that illustrates Index Weighing.

Index Weighing

Index Weighing uses the Index Table, which uses a relational ID for quickly locating values from information stored in tables (Vehicle ID and A-1–A-3 tables, which are defined and configured in setup).

To use index Weighing

1. Once the vehicle is on the scale, press the INDEX softkey (Figure 2-8).

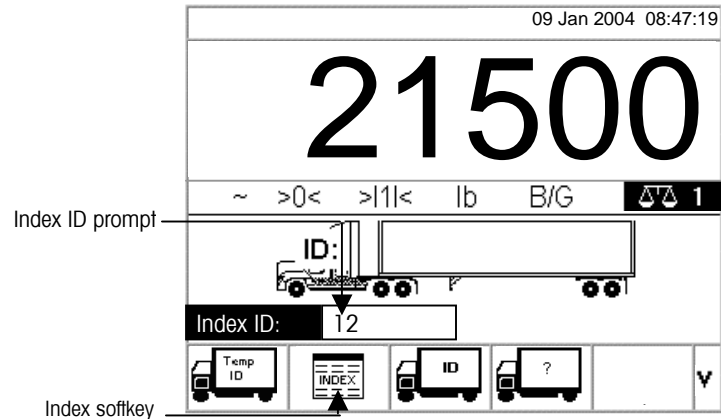



Figure 2-8: Weight Screen With Index ID Prompt

2. An Index ID prompt displays with a cursor in the ID field (see Figure 2-8).
3. Use the numeric keypad to enter the Index ID. Press the ENTER key to complete the entry.
4. If the ID is found in the Index Table, the terminal uses the relational ID data to locate corresponding data in the vehicle ID and A1–A3 tables. See Outbound Process to continue.

When the terminal does not locate an Index ID, the user has two options:

- **Escape**—Press the ESCAPE softkey **ESC** to return to the main Default Weight Screen.
- **Search for the Index ID**—Press the DATABASE QUERY softkey  to search for the index ID. Once the correct ID is located, continue with the outbound process (see Outbound Process).

See [Appendix B, Application Operation Flowcharts](#) for a quick reference flowchart that illustrates Transient Vehicle Weighing.

Transient Vehicle Weighing

Use Transient Vehicle Weighing for vehicles that should not be included in the terminal's memory.

To use Transient Vehicle Weighing:

1. Once the vehicle is on the scale, press the TRANSIENT VEHICLE WEIGHING softkey (see Figure 2-9).

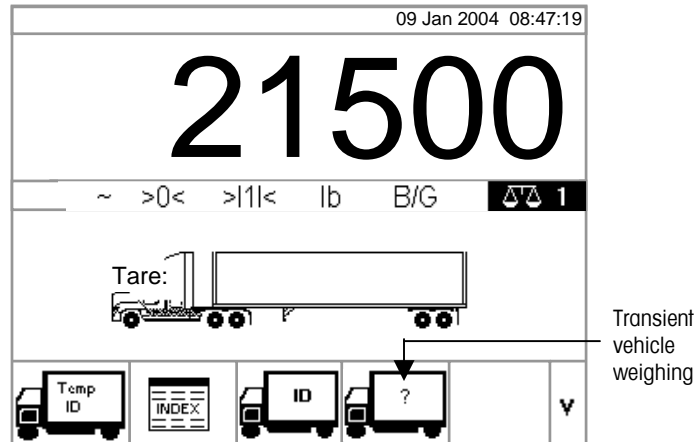


Figure 2-9: Default Weight Screen

2. A prompt displays with a cursor in the description field. The softkeys and application keys become alpha keys (see Figure 2-10).

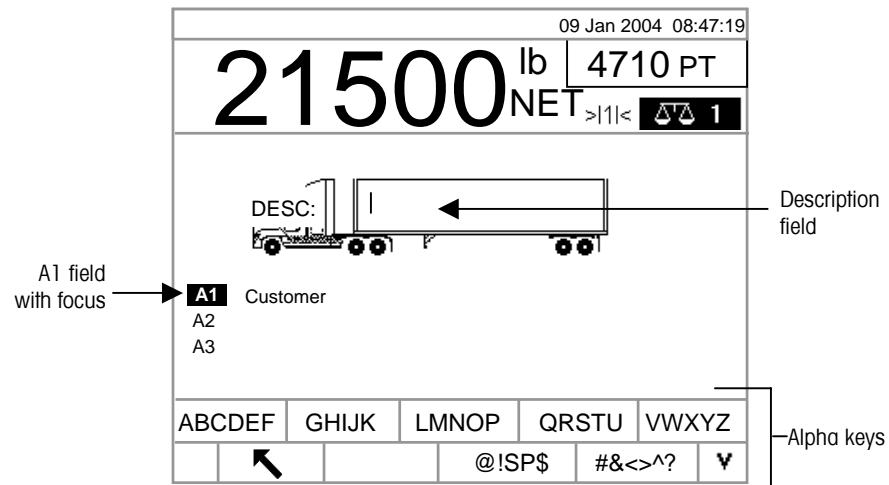


Figure 2-10: Transient Weighing ID Prompt

3. Use the alpha keys and the numeric keypad to enter the description. Press the ENTER key to complete the entry. See Outbound Process to continue.


Outbound Process

Completing the Outbound Process involves:

- Entering Database Information
- Validating the Transaction
- Printing and Storing

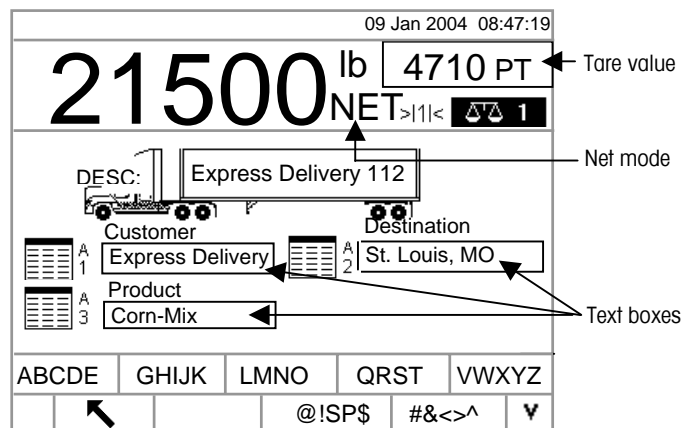
Entering Database Information

Database information is stored in A1, A2, A3, and A4 (if enabled) tables. Each table includes a Quick ID and Short A/N (alpha/numeric) ID for each database entry. Database files must be enabled in the setup menu for the different types of weighing operations in order to enable the collection of database information during transactions.

- If the A4 Table is not enabled as the index table, it can be a user-defined entry field that functions like the A1–A3 Tables.
- Entry of database information is not obligatory. Press the OK softkey  to continue a transaction without entering data.


To enter database information:

1. The A1 field has focus (is highlighted) when the screen displays. Press the ENTER key to access the A1 field. The softkeys and the application keys become alpha keys (See Figure 2-10.)
2. Use the alpha keys and the numeric keypad to enter the Quick ID or Short A/N ID of the desired database information in the text boxes that correspond to the A1, A2, A3, and A4 (if enabled) tables (see Figure 2-11).



09 Jan 2004 08:47:19

21500 lb 4710 PT ← Tare value

NET >|1|<  1

DESC: Express Delivery 112 ← Net mode

Customer Express Delivery Destination St. Louis, MO

Product Corn-Mix ← Text boxes

A1 A2 A3

ABCDE GHIJK LMNO QRST VWXYZ


← @!SP\$ #&<>^ V


Figure 2-11: A1–A3 Tables Data Entry Screen

3. Press the ENTER key. The description that corresponds to the Quick ID or Short A/N ID displays in the text box.

See [Table Searches](#) for more information about how to search database tables.

4. If the Quick ID or Short A/N ID is not found in the database, the message “A1 ID NOT FOUND” displays. Search the database by pressing the

DATABASE QUERY softkey .

5. Once all table entries are complete, press the OK softkey  to accept the entries.

- For Index Weighing, the A1, A2, and A3 table fields (if enabled) display the database values automatically as referenced from the Index Table. If necessary, change the values by following steps 1–3. Any A1, A2, and A3 table values that are changed during Index Weighing are not changed in the Index Table.
- 6. If variable data entry is enabled in setup, variable data fields display. For example, in Figure 2-12 Humidity is enabled as Variable 1 and Quality Rating as Variable 2. Use the alpha keys and the numeric keypad to enter variable data.

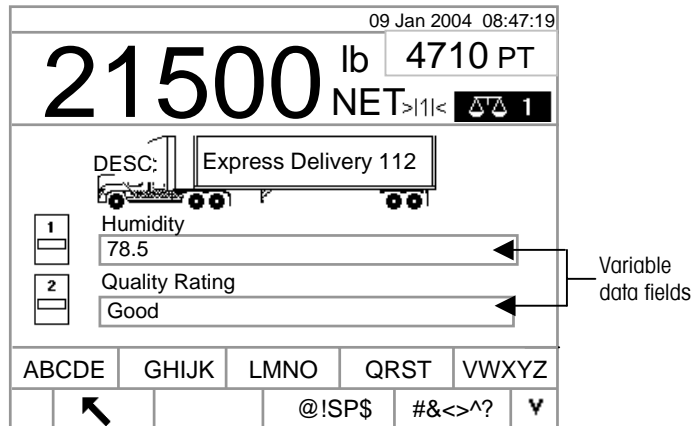



Figure 2-12: Variable Data Entry Screen

7. Once all table entries are complete, press the OK softkey  to accept the entries.
- Entry of data here is not obligatory. Variable data is not stored. Press the OK softkey to continue without entering data.

Validating the Transaction

After entering all data for the database and variable fields, the validation screen displays (Figure 2-13). This screen shows all database table and variable entries.

09 Jan 2004 08:47:19

21500 lb 4710 PT

DESC: Express Delivery 112

A1	Customer	Express Delivery
A2	Destination	St. Louis, MO
A3	Product	Corn-Mix

Database entries

Var1	Humidity	78.5
Var2	Quality Rating	Good

Variable data entries

Return to A1-A3 entry

ESC A1-A4 1&2 OK

Return to variable entry

Figure 2-13: Validation Screen

To validate the transaction:

1. Verify that the information displayed for the database entries (A1–A3) and the variable data entries (Var1–Var2) is correct.
 2. If any information is not correct, press the RETURN TO A1–A3 ENTRY softkey or the RETURN TO VARIABLE ENTRY softkey to go back to the appropriate entry screen to correct the information. Press the ESCAPE softkey to clear all data and re-start the transaction.
 3. When all information is correct as displayed, press the OK softkey to validate the transaction.
- If the A4 Table is not enabled as the index table, it can also be a user-defined entry field that functions like the A1–A3 Tables, and information will display and should be validated for this database entry as well.

Printing and Storing

1. Once the transaction is validated, the information related to the transaction is stored in the terminal's database and the outbound transaction prints (if printing is enabled in setup).
2. After storing and/or printing, the display returns to Gross mode and the terminal is ready for the next transaction.


Inbound Process

Completing the Inbound Process involves:

- **Entering Database Information**—The same procedures as listed under Entering Database Information for the Outbound Process, except for variable data entry, which does not occur during the Inbound Process.
- **Validating the Transaction**—The same procedures as listed under Validating the Transaction for the Outbound Process, except variable data fields are not present.
- **Printing and Storing**—The same procedures as listed under Printing and Storing for the Outbound Process, except ID, description, and inbound weight information related to the transaction are also stored in terminal's database.

Table Searches

To search database tables:

- A. Press the DATABASE QUERY softkey  to search the database table associated with the current operating mode or active table. For example, if the current operating mode is Vehicle ID Weighing, the Database Query screen for the Vehicle ID Table displays when the DATABASE QUERY softkey is pressed (see Figure 2-14).



SCALE 1		09 Jan 2004 08:47:19	
Database Query: Vehicle ID			
Vehicle ID	<input type="text" value="256389"/>		
Description	<input type="text"/>		
Tare	<input type="text"/>		
1 st sort	<input type="text" value="Vehicle ID"/>	▼	
2 nd sort	<input type="text" value="None"/>	▼	
3 rd sort	<input type="text" value="None"/>	▼	
ESC			

Figure 2-14: Database Query Screen—Vehicle ID Table


- ◀ If the search is done with the search fields left blank, the entire table in the database file displays. Use the UP and DOWN arrows to scroll through the table to locate the desired entry. Proceed to Step G.

- B. Use the UP and DOWN arrow keys to scroll among the data field labels.

- C. Press the ENTER key to select a data field. The softkeys and application keys become alpha keys.
- D. Use the alpha keys and the numeric keypad to enter information in the field to search on.
- E. Press the ENTER key to accept the entry.

- F. Press the START SEARCH softkey . If the information entered is found in the database, it will display with focus (highlighted). If the information is not found, the result screen will list no entries. Press the

DATABASE QUERY softkey  to return to the main search page and try again.

- G. To select an entry from the database search results, press the OK softkey .


- The search results for an Index Table search will show data for the A2 and A3 values (if enabled) even though these values cannot be used as part of the query's sort.

Table Reports

See the IND310drive Technical Manual, Appendix C, Database Structure and Use for more information about database tables and report generation.

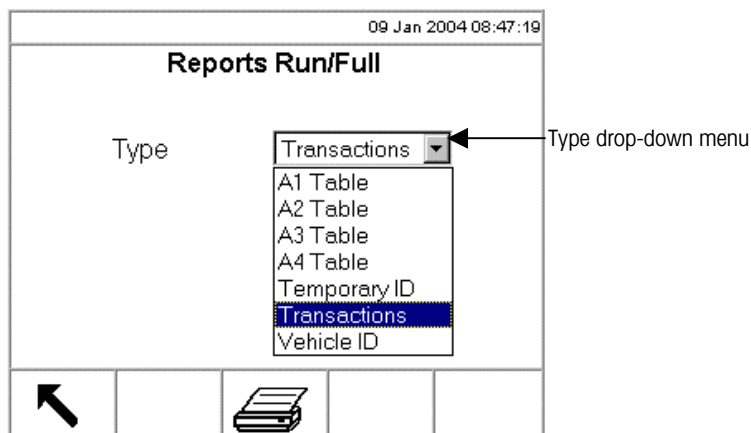
Reports are generated from database tables including:

- **Transaction Table**—Stores weighing transaction information
- **Vehicle ID Table**—Stores specific vehicle information, including vehicle IDs, descriptions, and tare weights
- **Temporary ID Table**—Temporarily stores vehicle descriptions and tare weights for inbound vehicles to enable the recall of these weights for outbound transactions
- **A1, A2, A3, and A4 Tables**—Store descriptions of vehicle information defined in the application setup to meet specific operational requirements. The A4 Table can be configured as an Index Table, which is comprised of ID keys that reference data located in other tables.

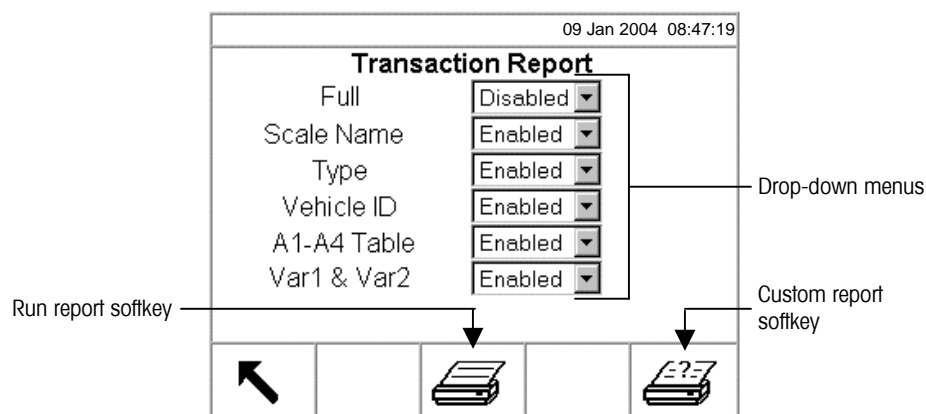
The RUN REPORT softkey  must display on the operational screens to generate table reports. Otherwise, table reports can only be generated from setup screens.

To generate a table report:

1. Press the RUN REPORT softkey . The Reports Run/Full screen displays (see Figure 2-15).

**Figure 2-15:** Reports Run/Full Screen

2. Use the Type drop-down menu to select the desired type of database table report. Press the ENTER key to accept the selection.
3. Press the RUN REPORT softkey. The Report Setup Screen for the selected report type displays (see **Figure 2-16**).

**Figure 2-16:** Report Setup Screen (Transaction Report)

4. Use the drop-down menus on the Report Setup Screen to enable or disable the defined table fields within the structure of the table report.
 - If Full is enabled for the transaction table report, other selections do not display.
 - If the A4 table is configured as the Index Table, the fields that display change to enable set up of the Index Table report structure.
5. Press the RUN REPORT softkey to run a standard table report that includes data from all enabled fields.

To configure and run a custom report:

1. Press the CUSTOM REPORT softkey to limit the records included within the report fields and run a custom report. See Figure 2-17 for an example of a custom report setup screen.

09 Jan 2004 08:47:19

Reports Run/Custom

Type	Transaction
Field 1	Date
Start	Stop
2003-07-21	2003-11-21
Field 2	Transaction Count
Start	Stop
	00000000548

START softkey

Figure 2-17: Example Custom Report Setup Screen

2. Use the Field 1 and Field 2 drop-down menus to select fields to be used to limit records that are included in a report.
3. Specify the range of reported field values by entering start and stop values for the selected fields. The example in Figure 2-17 shows Date for Field 1, with a start value of 2003-07-21 and a stop value of 2003-11-21. Therefore, only records with dates between July 21, 2003 and November 21, 2003 will be included in the report.

If the stop value is left blank, then any records with values that fall after the start value are included in the report. If the start is left blank, then any records with values that fall before the stop value are included in the report. The example in Figure 2-17 shows Transaction Count for Field 2 with a blank start value and a stop value of 548. All records with transaction counts between 1 and 548 and dates between July 21, 2003 and November 21, 2003 will be included in the report.

- The date format is fixed at YYYY-MM-DD for these fields. (This date format might not match the terminal's date configuration.)

4. Press the START softkey to run the custom report.

Chapter 3.0

Service and Maintenance

This chapter covers


- Service
- Cleaning and Maintenance

Click on any of the above topics to link to the sections where they are located.

Service

Information on installing, programming, and servicing the IND310drive terminal is available in the IND310drive Terminal Installation and Technical Manuals. Only qualified personnel should perform installation, programming, and service. Please contact a local METTLER TOLEDO representative for assistance.

In general, once the IND310drive is installed, programmed, and calibrated for a given application, no other routine service is required.

	<p>WARNING!</p> <p>ONLY PERMIT QUALIFIED PERSONNEL TO SERVICE THE TERMINAL. EXERCISE CARE WHEN MAKING CHECKS, TESTS AND ADJUSTMENTS THAT MUST BE MADE WITH POWER ON. FAILING TO OBSERVE THESE PRECAUTIONS CAN RESULT IN BODILY HARM AND/OR PROPERTY DAMAGE.</p>
--	---

Cleaning and Maintenance

Clean the IND310drive terminal's keypad and cover with a clean, soft cloth dampened with a mild glass cleaner. Do not use any type of industrial solvent such as toluene or isopropanol (IPA) that could damage the terminal's finish. Do not spray cleaner directly on the terminal.

Regular maintenance inspections and calibration by a qualified service technician are recommended. The IND310drive is a rugged stainless steel-enclosed instrument; however, the front panel is a vinyl covering over sensitive electronic switches and a lighted LCD display. Take care to avoid any punctures to this surface or any vibrations or shocks to the instrument. Should the front panel become punctured, ensure that steps are taken to prevent dust and moisture from entering the unit.



For your notes

Appendix A

Basic Weighing Concepts

This appendix explains some of the specialized terminology and concepts that are commonly used in the weighing industry, as well as the features of the IND310drive that can be used to make the weighing process more efficient.

Zero

Zero is the empty weight of the scale platform or weighbridge. The gross zero reference is recorded during calibration.

Pushbutton Zero is a way for the operator to capture a new gross zero reference point. The weight on the scale must be stable and be within the pushbutton zero capture range, typically $\pm 20\%$ of full scale capacity. The zero of the scale can change because material builds up on the scale or because the temperature changes.

Auto Zero Maintenance (AZM) is a way for the terminal to gradually rezero itself in order to compensate for small changes in zero. Class IIIIL legal-for-trade vehicle scales use an AZM range of ± 3 displayed increments above/below gross zero. AZM is active any time the weight on the scale is stable and is within the AZM range.

Tare

Tare is the empty weight of a vehicle. Tare is normally used to determine the net weight of the contents of a vehicle. There are several different ways tare is used: autotare, keyboard tare, and additive tare.

Autotare

An autotare is taken by pressing the TARE key when an empty vehicle is on the scale. The terminal then displays a zero weight with the net cursor lit. The vehicle is loaded and driven back onto the scale. The terminal then displays the net weight of the contents. If the TARE key is pressed while the terminal is in the net mode, the current weight on the scale becomes the new tare value. Tare interlocks inhibit replacement autotare.

Keyboard Tare

Keyboard entered tare is used when the empty weight of the vehicle is a known value. The known tare weight is entered using the numeric keys, and the TARE scale function key is pressed. The terminal will then display the net weight of the contents of the vehicle.

Additive Tare

Additive tare is a rarely used mode of keyboard entered tare. If a tare is entered using the numeric keypad while the terminal is in the net weight mode, the tare value entered is added to the existing tare weight value. Tare interlocks inhibit this mode.

Tare Interlocks

Tare interlocks are a set of restrictions on how tare can be used. They are required by some local weights and measures regulations. If tare interlocks are enabled, the terminal must be at gross zero to clear a tare weight or to enter a keyboard tare. Tare interlocks also prevent the terminal from replacing an existing tare with a new tare.

Sections

Vehicle scale weighbridges are normally divided into what are called “sectional pairs” or sections. A section is a pair of load cells that are side by side in the weighbridge (see Figure A-1). Sections are important when dealing with shift errors.

Section 1	Section 2	Section 3	Section 4	Section 5
1	3	5	7	9
2	4	6	8	10

Figure A-1: Load Cells and Sections in a Typical Vehicle Scale

Setpoints

Setpoints are on/off outputs that indicate whether the weight displayed on the scale is greater than or less than a preprogrammed weight value. Setpoints are typically used in material filling applications in order to fill a vehicle to a preset weight.

Inbound/Outbound Weighing

Vehicle scales are often used in an inbound/outbound mode of operation where the vehicle is loaded or unloaded at the user's site. In the inbound/outbound mode the vehicle empty (tare) weight is not known, so the vehicle must be weighed twice (once empty and once loaded). In the past this was normally done by printing the inbound weight, printing the outbound weight, and then calculating the difference (net weight) by hand.

A IND310drive terminal simplifies inbound/outbound weighing by permitting the operator to store the inbound vehicle weight in memory and then recalling that weight at a later time. Once the inbound weight is recalled, the terminal calculates the net weight and prints an outbound ticket.

Net Sign Correction

Net sign correction is a feature that permits the IND310drive terminal to be used for both shipping (inbound empty) and receiving (inbound loaded) operations. If net sign correction is enabled, the terminal will swap the gross and tare weight fields on the printed ticket, if necessary, so that the larger weight is the gross weight, the smaller weight is the tare weight, and the difference is always a positive net weight.

One-Pass Weighing

One-pass weighing is a mode where the user has a fleet of vehicles with known empty (tare) weight. The tare weight is recalled by ID when the loaded vehicle is on the scale.



For your notes

Appendix B

Application Operation Flowcharts


The following pages contain quick reference flowcharts that illustrate the IND310drive terminal's four modes of operation.

Vehicle ID Weighing

Use the Vehicle ID Weighing mode when both:

- It has been enabled in setup
- The ID of the vehicle and its associated tare weight have been pre-entered in the Vehicle ID Table in setup mode

Do not attempt to use the Vehicle ID Weighing mode if any of the following are true:

 
- Vehicle ID is unknown
- Tare weight of the vehicle has changed
- The VEHICLE ID soffkey  does not display on any available weighing operations soffkey screens

Temporary ID Weighing

Use the Temporary ID Weighing mode when both:

- It has been enabled in setup
- The ID of the vehicle and its associated tare weight do not need to be recalled after the outbound transaction is complete

Do not attempt to use the Temporary ID Weighing mode if either of the following are true:

- Vehicle ID and tare weight need to be recalled on a recurring basis
- The TEMPORARY ID soffkey  does not display on any available weighing operations soffkey screens


Index Weighing

Use the Index Weighing mode when both:

- It has been enabled in setup
- The ID of the vehicle and associated database value IDs have been pre-entered in the Index table in setup mode

Do not attempt to use the Index Weighing mode if any of the following are true:

- Vehicle ID is unknown
- Tare weight of the vehicle has changed


- The INDEX softkey  does not display on any available weighing operations softkey screens

Transient Vehicle Weighing

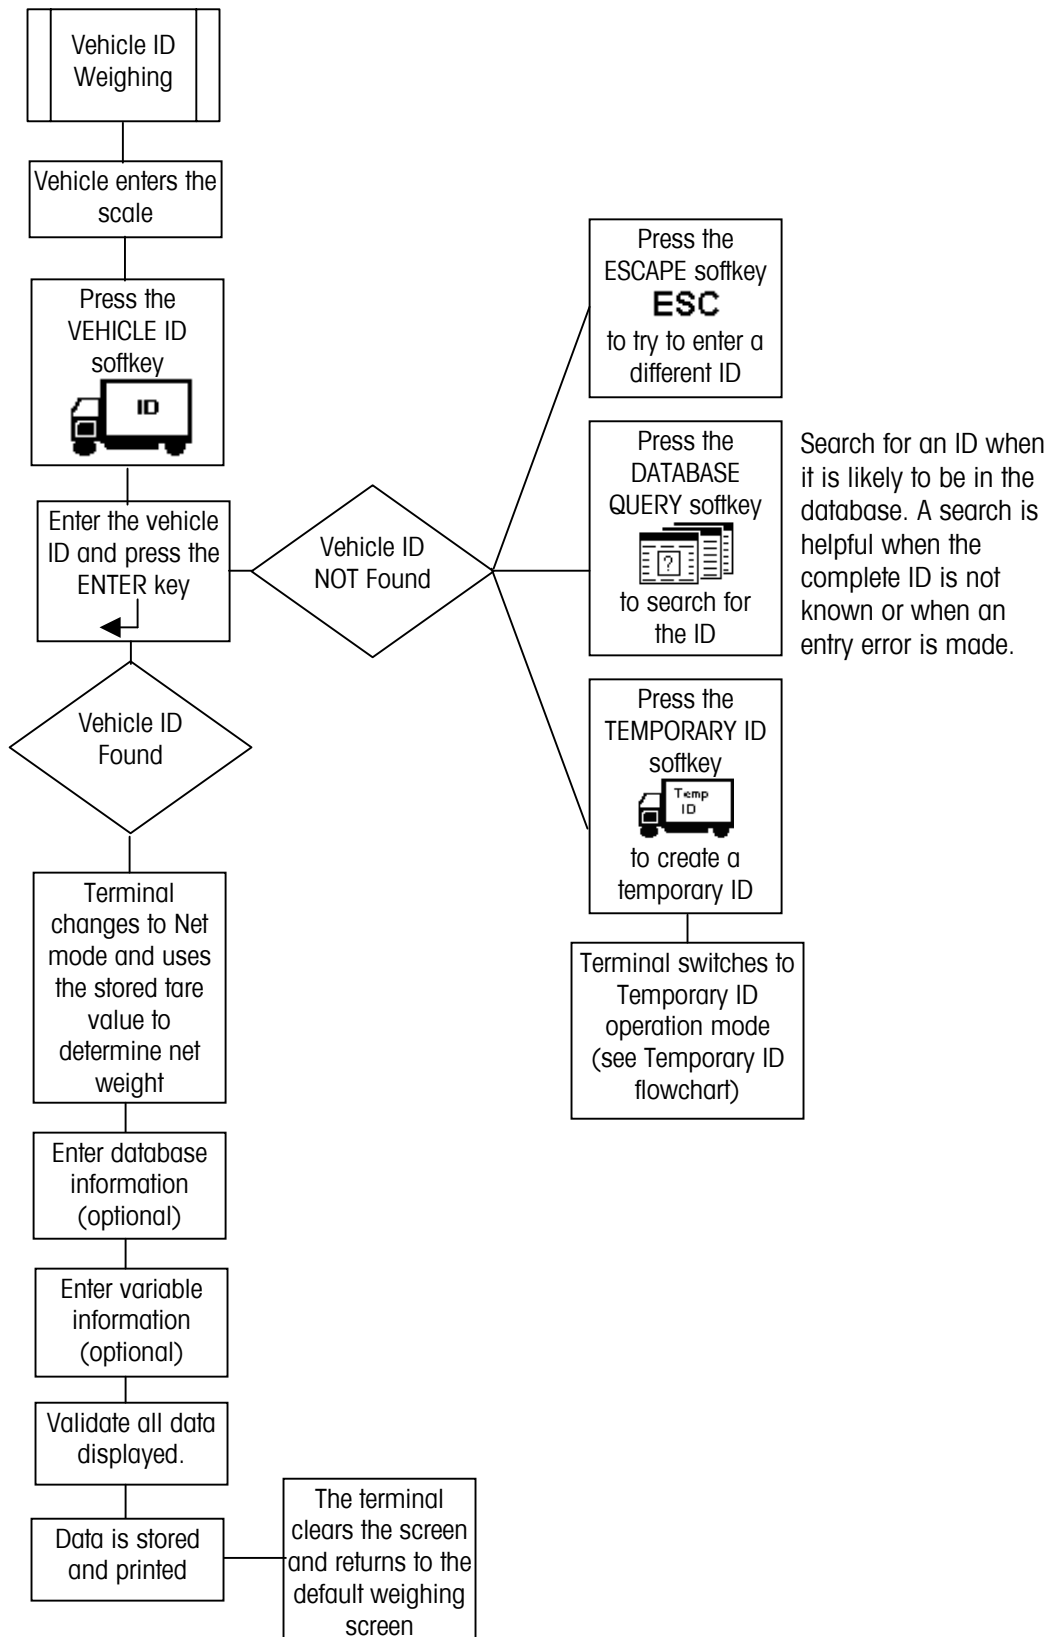
Use the Transient Vehicle Weighing mode when both:

- It has been enabled in setup
- The vehicle is not part of normal operation and does not need to be included in transaction totals

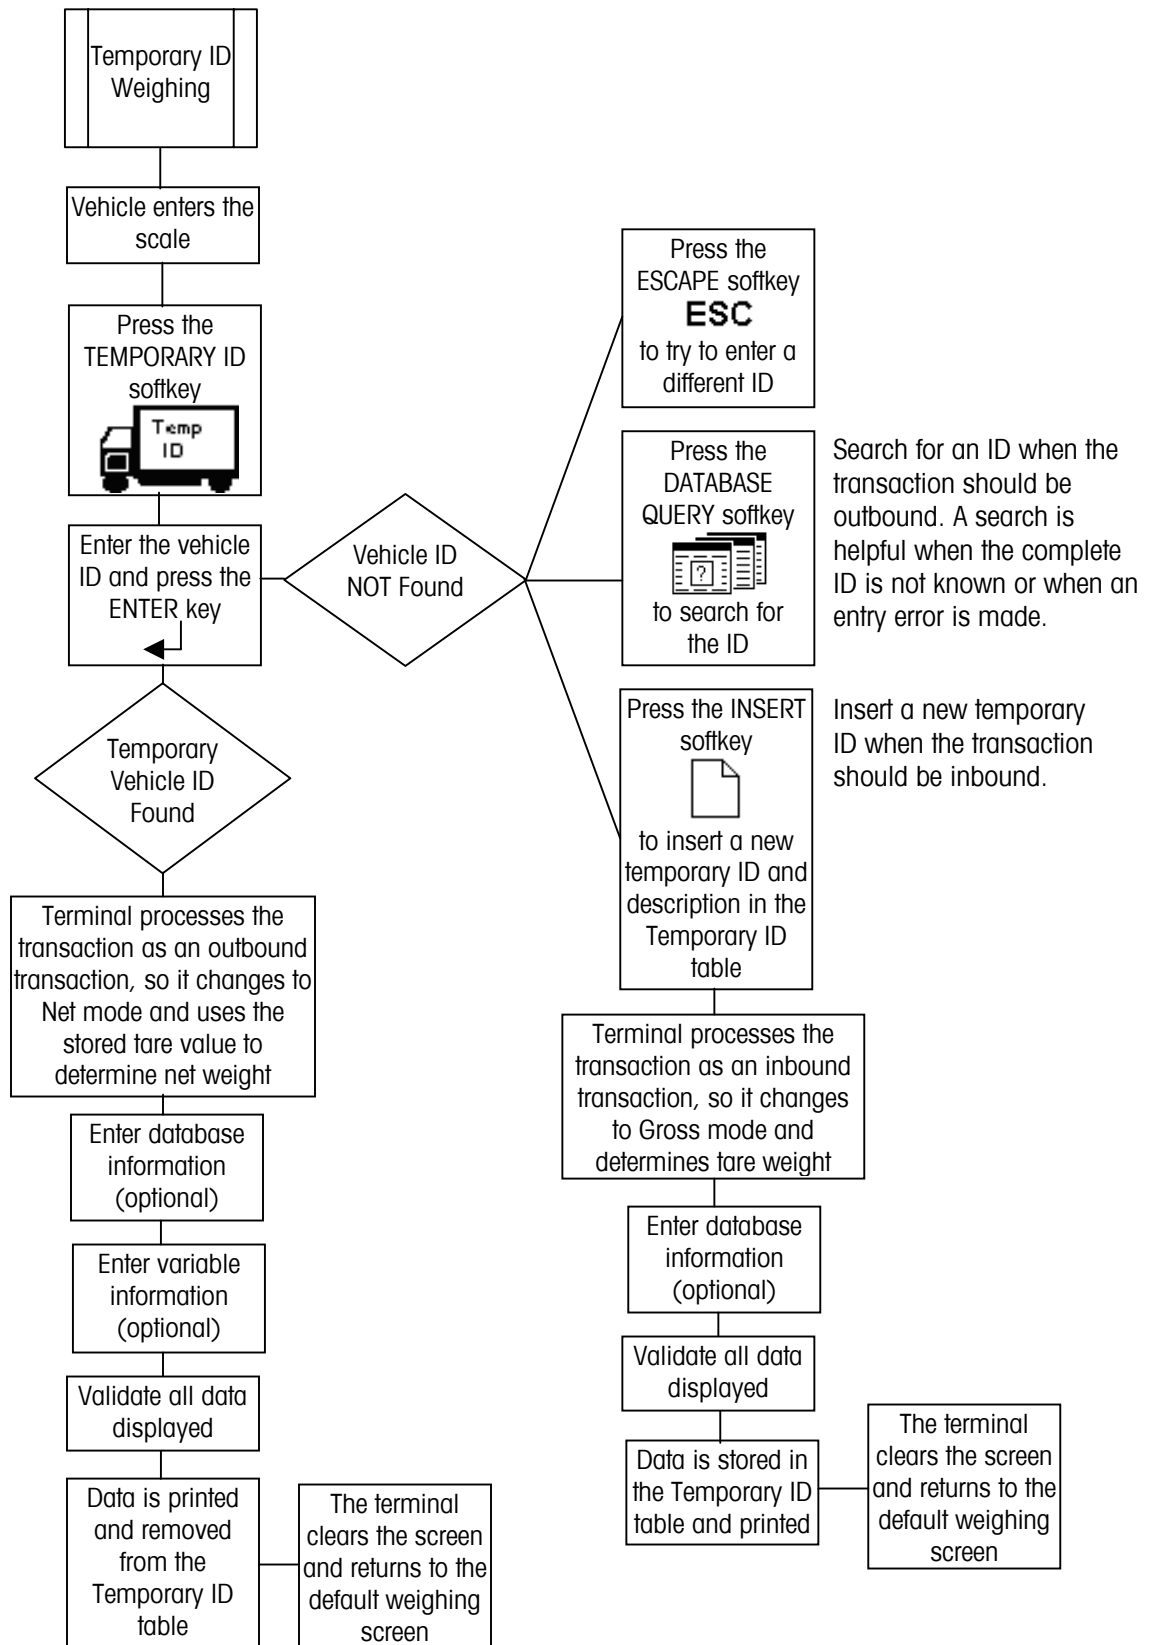
Do not attempt to use the Transient Vehicle Weighing mode if either of the following are true:

- Vehicle ID and tare weight need to be recalled on a recurring basis
- The TRANSIENT VEHICLE WEIGHING softkey  does not display on any available weighing operations softkey screens

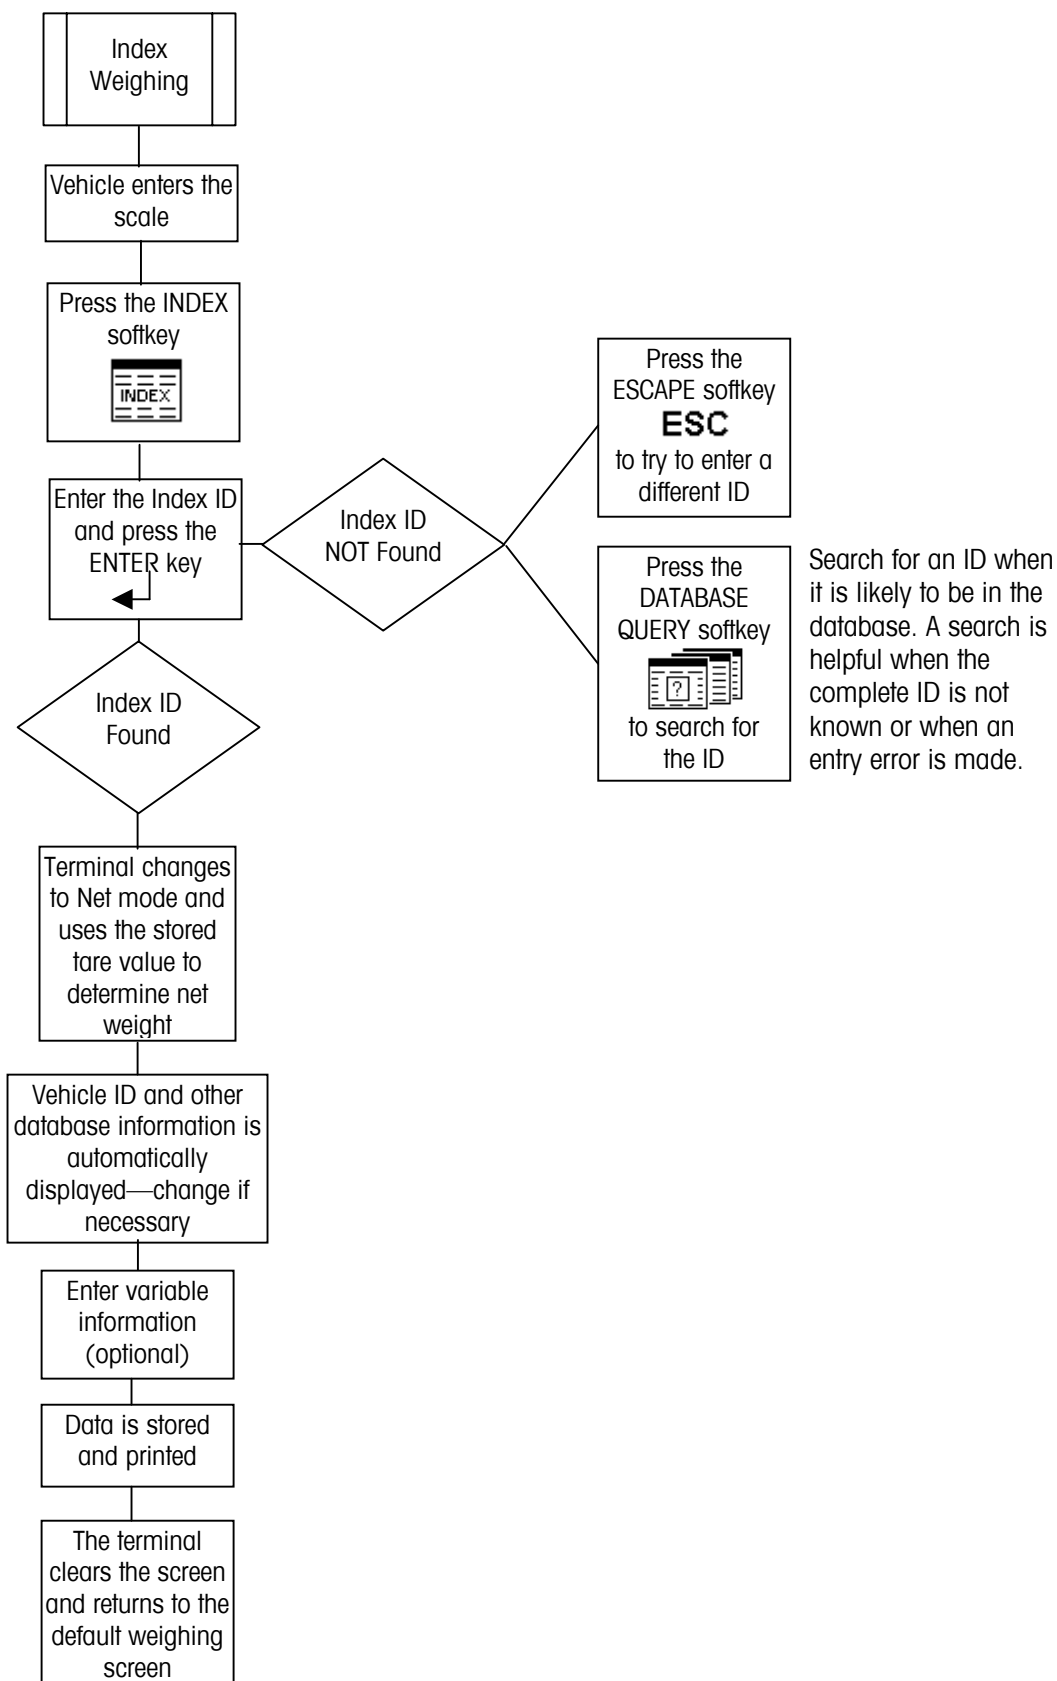
Vehicle ID Weighing



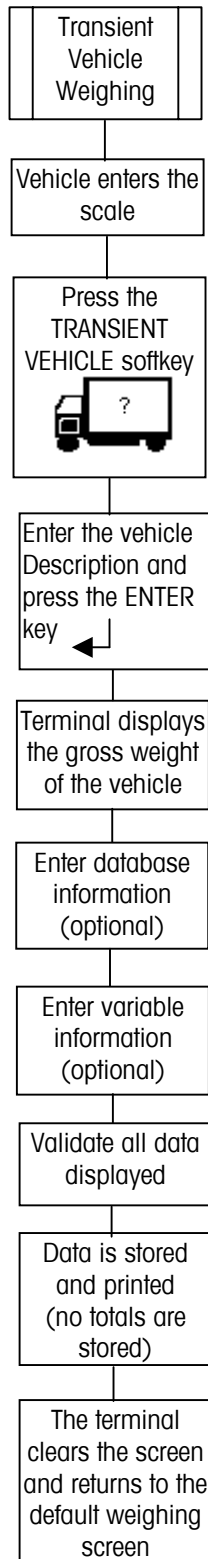
Temporary ID Weighing



Index Weighing



Transient Vehicle Weighing



METTLER TOLEDO

1900 Polaris Parkway
Columbus, Ohio 43240

www.mt.com

P/N: 71207921

METTLER TOLEDO® is a registered trademark of Mettler-Toledo, Inc.

©2004 Mettler-Toledo, Inc.

Printed in USA



71207921