


Delivery

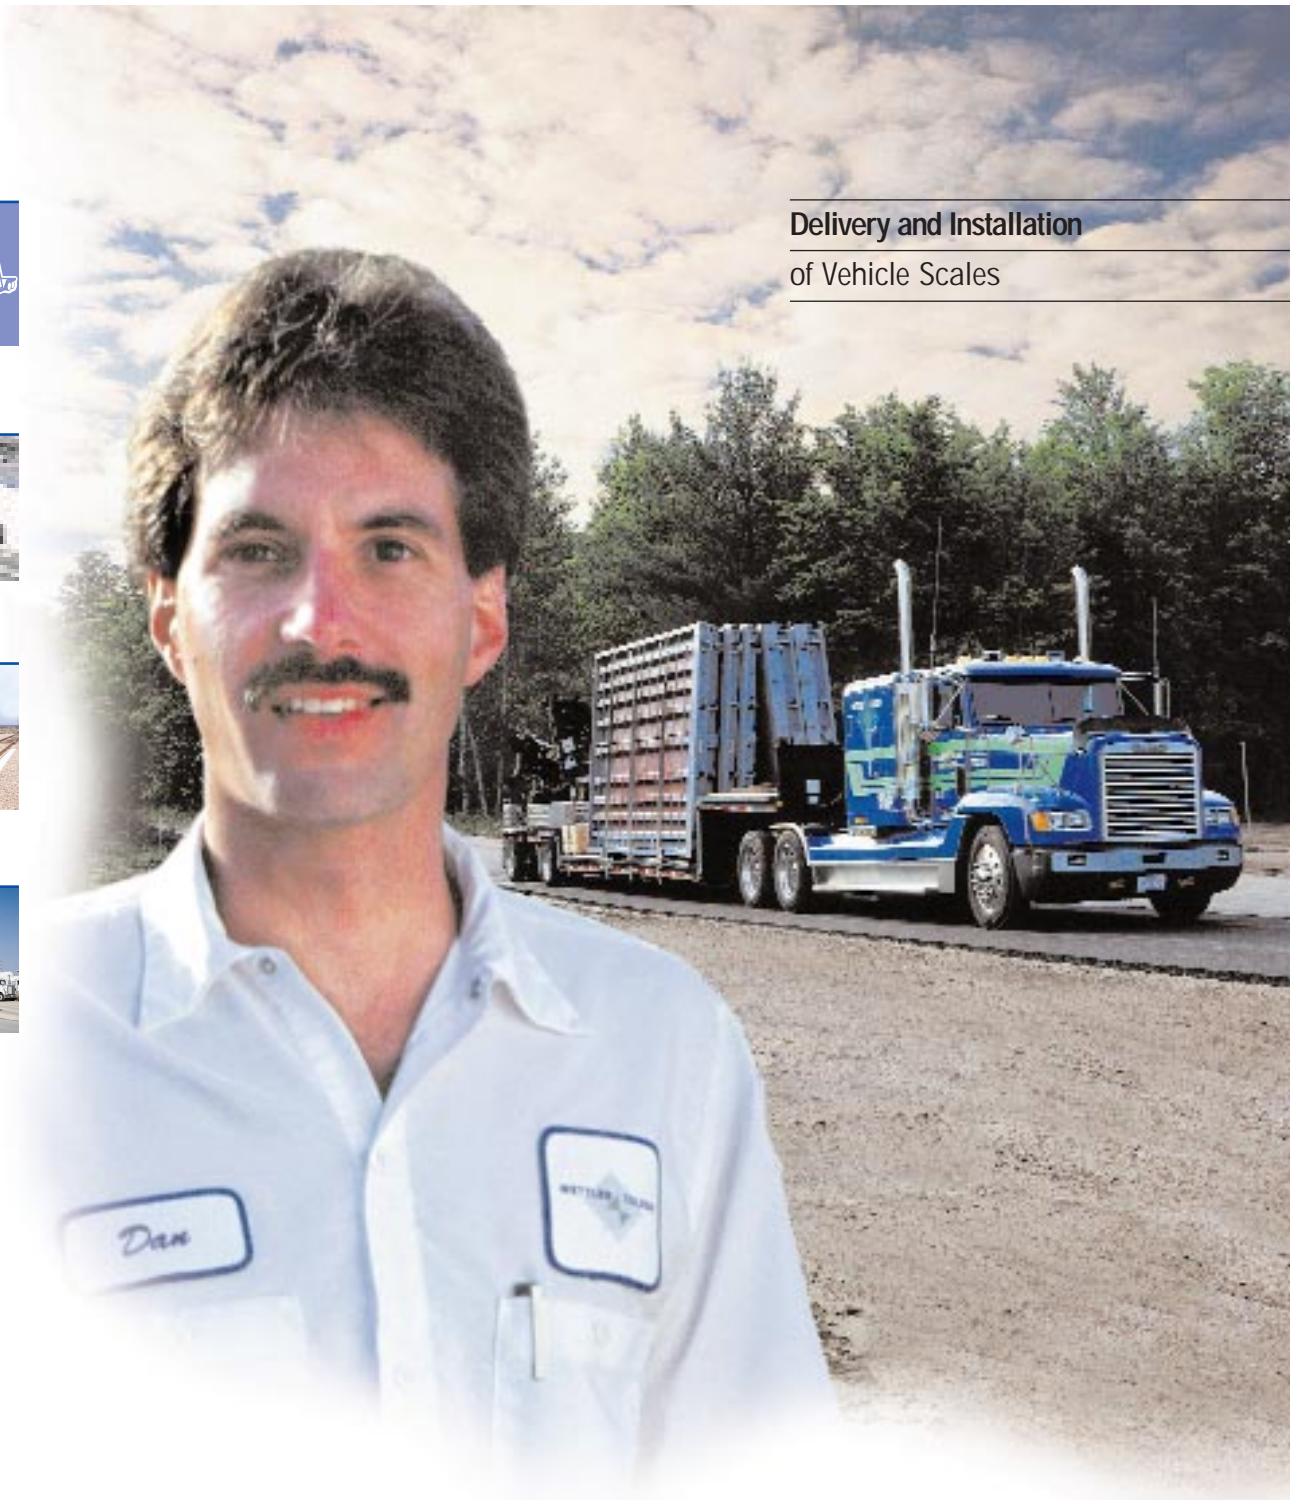

Delivery and Installation
of Vehicle Scales



The Most Experienced
Vehicle Scale Installers in the World

METTLER TOLEDO



Certified Driver/Scale Technicians Install METTLER TOLEDO Vehicle Scales



One-Stop Installation

METTLER TOLEDO's unique truck scale delivery vehicles can save you time and money while making your truck scale installation go smoothly. Our drivers are factory-trained technicians, fully qualified and equipped to install your scale. They have done it hundreds of times, and you benefit by their experience. The trucks are equipped with a specially designed crane that sets the scale quickly. There is no need for you to rent and schedule a crane from a third party.

Typically installation can be done in one day from the time the truck pulls up to the foundation. Base plates are set, modules anchored in place and electrical connections are made, and all with the efficiency that only experience brings. Thousands of vehicle



scales have been delivered and installed using this exclusive METTLER TOLEDO service.

Installation Procedure

1. Delivery truck pulls up next to the foundation.
2. Unload and place the base plates.
3. Unload each module with the built-in crane.
4. Anchor modules in place.
5. Load cells are installed.
6. Scale is electrically connected and calibrated.

After your installation is complete, your METTLER TOLEDO certified technician can test, calibrate and certify your scale. Through our nationwide network of certified service offices, we have a fleet of test trucks available to service truck, rail, hopper/tank, floor and other heavy capacity scales, normally within 24 hours.

Contact your nearest METTLER TOLEDO office or authorized distributor for all the details.

1



2



3



4



5



6



METTLER TOLEDO

USA & Canada

1900 Polaris Parkway
Columbus, Ohio 43240

TEL. (800) 786-0038
(614) 438-4511
FAX (614) 438-4900

Headquarters

8606 Greifensee
Switzerland

TEL. (41-1) 944 22 11
FAX (41-1) 944 30 60

	TEL	FAX
Australia	(61) 3 9644 5700	(61) 3 9645 3935
Austria	(43-1) 604 1980	(43-1) 604 2880
Belgium	(32-2) 334 0211	(32-2) 378 1665
Brazil	(55-11) 421 5737	(55-11) 7295-1692
China (Industrial)	(86-519) 6642040	(86-519) 6641991
China (Systems)	(86-21) 6485-0435	(86-21) 6485-3351
Croatia	(385-1) 660 3009	(385-1) 660 2189*
Czech Republic	(420-2) 254962	(420-2) 24247583
Denmark	(45-43) 27 08 00	(45-43) 27 08 28
France	(33-1) 30 97 17 17	(33-1) 30 97 16 16
Germany	(49-641) 50 70	(49-641) 52951
Hungary	(36) 1257 7030	(36) 1256 2175
India	(91-22) 857-0808	(91-22) 857-5071
Italy	(39-2) 333321	(39-2) 356-2973
Japan	(81-6) 949-5901	(81-6) 949-5944
Kazakhstan	(7-3272) 50 63 69	(7-3272) 60 88 35

	TEL	FAX
Korea	(82-2) 518-2004	(82-2) 518-0813
Malaysia	(60-3) 703 2773	(60-3) 703 8773
Mexico	(52-5) 547 5700	(52-5) 541 2228
Netherlands	(31-344) 638363	(31-344) 638390
Norway	(47-22) 30 44 90	(47-22) 32 70 02
Poland	(48-22) 651 9232	(48-22) 42 20 01
Russia	(7-095) 921 9211	(7-095) 921 6353
Singapore	(65) 778 6779	(65) 778 6639
Slovak Republic	(421-7) 525 2170	(421-7) 525 2173
Slovenia	(38-6) 6123-57 64	(38-6) 6127-4575*
Spain	(34-3) 223 2222	(34-3) 223 0271
Sweden	(46-8) 702 50 00	(46-8) 642 45 62
Switzerland	(41-1) 944 45 45	(41-1) 944 45 10
Taiwan	(886-2) 579-5955	(886-2) 579-5977
Thailand	(66-2) 719 6480	(66-2) 719 6479
United Kingdom	(44-116) 235 7070	(44-116) 236 6399

*Ask for FAX.

Internet
www.mt.com

Specifications subject to change without notice.
© 1999 Mettler-Toledo, Inc.
METTLER TOLEDO® is a registered trademark of Mettler-Toledo, Inc.
Printed on recycled paper and is recyclable.
Printed in USA.

15M0699
TRUCK SCALES
199-TR03192.0E