

## 1280 Enterprise Series

# Analog Output Card Installation

The Dual (PN 164686) and Single (PN 165366) Analog Output Cards provides either a 0 - 10VDC or 0 - 20mA (4 - 20mA) output, proportional to the displayed gross or net weight.



Manuals can be viewed and downloaded from the Rice Lake Weighing Systems website at [www.ricelake.com](http://www.ricelake.com)

Warranty information can be found on the website at [www.ricelake.com/warranties](http://www.ricelake.com/warranties)

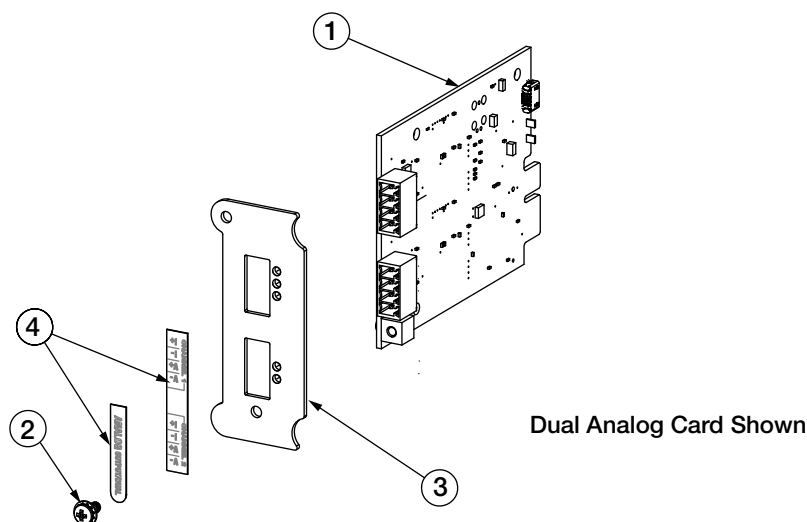


Figure 1. Analog Output Card Kit

Item No.	Part No.	Description	Qty
1	162931	Board Assembly, 1280 Dual Com	1
	164704	Board Assembly, 1280 Single Com	
2	14822	Screw, Mach 4-40 NCx1/4	1
3	164679	Face Plate, Dual Option Card	1
	167201	Face Plate, Single Option Card	
4	167197	Label, Serial Opt 1280	1

Table 1. Analog Output Card Kit Parts List

The included parts kit contains items used for installation of the card. Items listed for stud grounding of the shields pertain to the panel mount enclosure. See the 1280 technical manual for more information on shield grounding.

Part No.	Description	Qty
14621	Nut, Kep 6-32NC HEX (used for stud grounding)	2/1
14822	Screw, Mach 4-40 NCx1/4 (secures card to controller assembly)	1
15130	Washer, Lock NO 6 Type A (used for stud grounding)	2/1
153878	Conn, 4 Pos Screw Terminal (interface connector)	2/1
15631	Cable Tie, 3 inch Nylon (secures cable in panel mount installation)	4
53075	Clamp, Ground Cable Shield (used for stud grounding)	2/1

Table 2. Parts Kit (Dual PN 164693/Single PN 168816)



Use the following instructions to install and configure the analog output option card.



**WARNING** Always disconnect power before opening the indicator. Option card is not hot swappable.



**CAUTION** Use a wrist strap to ground yourself and protect components from electrostatic discharge (ESD) when working inside the indicator enclosure.

1. Open the indicator as instructed in the 1280 technical manual.
2. Remove a slot cover plate from the controller assembly to open a slot for the card.
3. Align the card to the slot; the screw hole in the faceplate of the card should align with the screw hole on the controller assembly.
4. Slide the card into the top and bottom grooves of the slot. Push the card until it is securely seated in the back plane.
5. Secure with screw 4-40 NC x 1/4 (provided).
6. Make connections to the option card. See Figure 3.

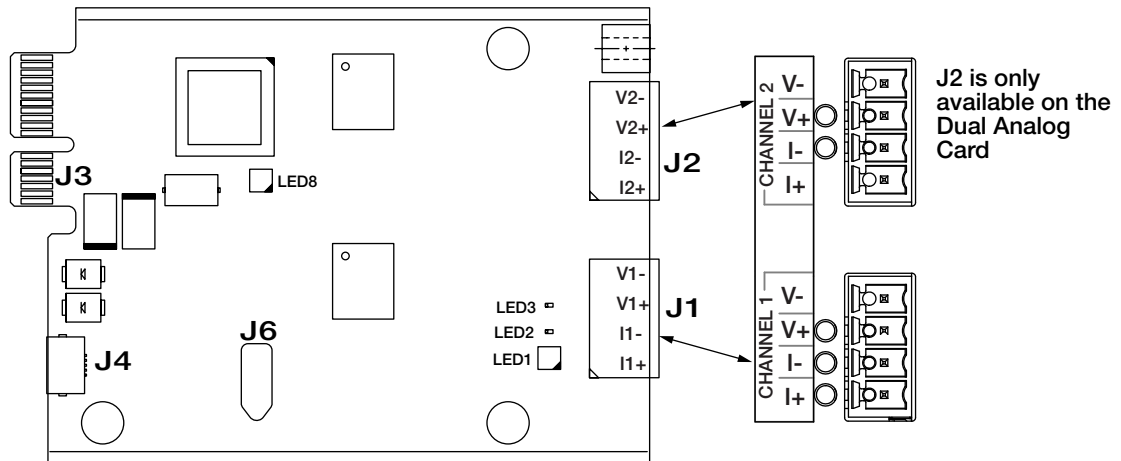


Figure 3. Analog Output Cards (Dual Shown)

J1/J2	Channel 1/2
Pin 1	I+
Pin 2	I-
Pin 3	V+
Pin 4	V-

Table 4. Pin Assignments



**Note** The slot of the controller assembly that is selected for the installation of the card will determine the analog channels available.

Slot 1 = Output 1 or 2

Slot 2 = Output 3 or 4

Slot 3 = Output 5 or 6

Slot 4 = Output 7 or 8


Slot 5 = Output 9 or 10


Slot 6 = Output 11 or 12

7. Use cable ties from the parts kit to secure loose cables inside the enclosure as needed. Ensure no excess or loose cable is left inside the enclosure.
8. Ground the shield cable using the ground washer in the metal cord grip, or use the grounding stud on the enclosure with cable clamp included in the parts kit. See the 1280 technical manual for more information.
9. Tighten cord grips. Ensure cord grip nut is also tight.
10. Reassemble and power the indicator.




**Note** The analog output must be calibrated after the indicator itself has been configured and calibrated.

11. Press  on the weigh mode screen. The **Main Menu** will display.

12. Press  **Configuration** for access to the Configuration menu.



**Note** Access to the Configuration menu may be restricted. Refer to the 1280 technical manual for more information.

13. To configure the analog output card, select  to enter the Analog Output menu.

- Set **Output Mode** to 0-10 V, 4-20 mA or 0-20 mA
- Set **Source** for the scale used as the source for the analog output
- Set **Scale Mode** to track either gross or net weight from that scale
- Set **Error Action** to specify how the analog output will respond to system error conditions
- Set **Minimum Value Tracked** to lowest weight value to be tracked by the analog output (a negative value can be entered)
- Set **Maximum Value Tracked** to highest weight value to be tracked by the analog output (a negative value can be entered)


14. Connect a multimeter to connector J1 on the analog output card:

- For voltage output, connect voltmeter leads to pins 3 and 4
- For current output, connect ammeter leads to pins 1 and 2

15. Press **Calibrate** to enter the calibration wizard.

16. Adjust **Minimum** calibration; check voltage or current reading on multimeter. Use the numeric keypad to adjust the zero value up or down. The minimum calibration occurs at 0.5 V for a 0-10 V output and at 1 mA for a 0-20 mA output.

17. Adjust **Maximum** calibration; check voltage or current reading on multimeter. Use the numeric keypad to adjust the span value up or down.

18. Press  to return to weigh mode. The analog output function will track gross or net weight.

19. For dual-channel cards, repeat calibration steps for the second (J2) connector.



**Important**

**Connection to PLC Analog Input Module**

*If the PLC analog input uses a common ground (negative input of the analog card) and both PLC channels are connected to the same option card, there is cross talk and the values of the two inputs will be merged.*

*Example: If one is inputting 6 mA and the other is inputting 12 mA they will merge and each looks like it is inputting 9 mA.*

$$6 + 12 / 2 = 9 \text{ mA}$$

*To prevent this cross talk, the PLC must have isolated grounds on the input channels.*

## LED Status Indicators

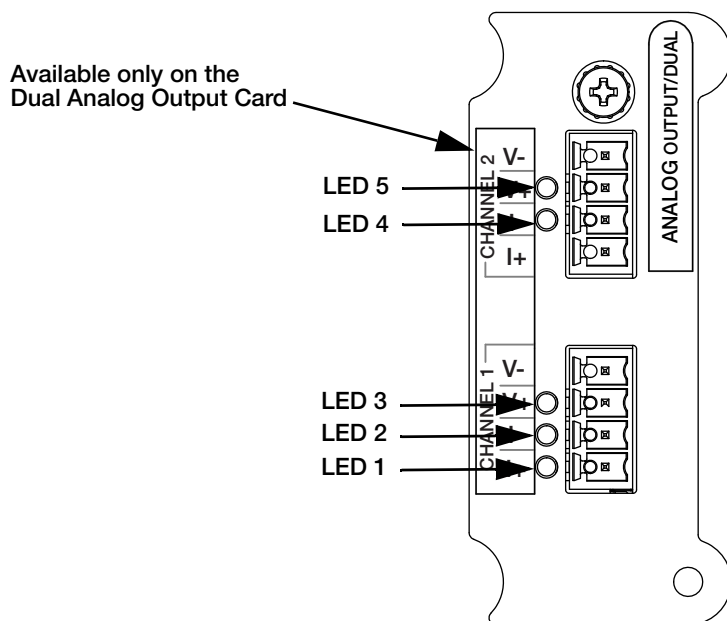


Figure 5. Analog Output Card Faceplate (Dual Shown)

LED	Status
1	LED Card Status
2	Green – LED Channel 1 is good
3	Red – LED Channel 1 is faulty
4	Green – LED Channel 2 is good
5	Red – LED Channel 2 is faulty

Table 6. LED Status Lights

## Specifications

Resolution	16-bit, monotonicity over temperature	Power Consumption	3.9W (max. load @ 10 VDC)
Linearity	$\pm 0.03\%$ of full scale input	Input Protection	Short circuit protection, 300W transient voltage suppression
Current Output	0–20 mA or 4–20 mA (20% offset)		Protection for ESD, EFT (electrical fast transients), tertiary lightning, and system-generated transients per IEC 60001-4-2, 60001-4-4, and 60001-4-5; European Standards EN50082 and EN61000-4
Maximum Load Resistance	840 $\Omega$		
Power Consumption	3.9W (max. load @ 20 mA)		
Voltage Output	0–10 VDC		
Minimum Load Resistance	1.1 K $\Omega$		



© Rice Lake Weighing Systems Specifications subject to change without notice.  
Rice Lake Weighing Systems is an ISO 9001 registered company.

230 W. Coleman St. • Rice Lake, WI 54868 • USA  
U.S. 800-472-6703 • Canada/Mexico 800-321-6703 • International 715-234-9171 • Europe +31 (0)26 472 1319

[www.ricelake.com](http://www.ricelake.com) [www.ricelake.mx](http://www.ricelake.mx) [www.ricelake.eu](http://www.ricelake.eu) [www.ricelake.co.in](http://www.ricelake.co.in)