

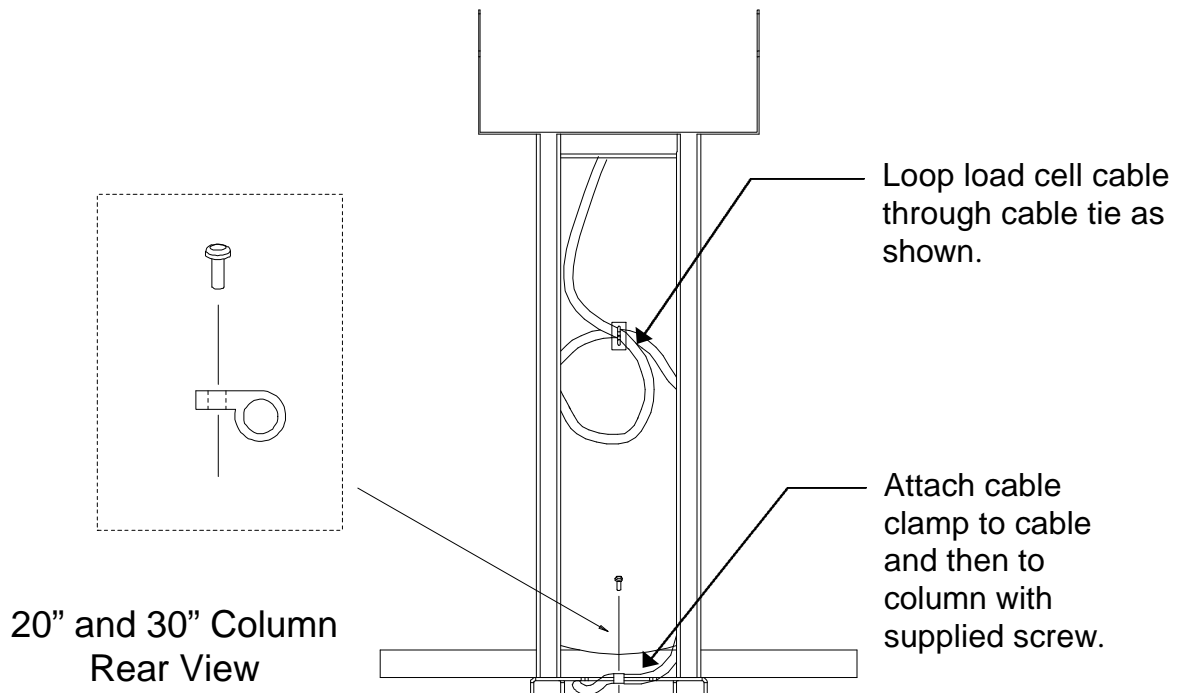



Atlas Column Installation

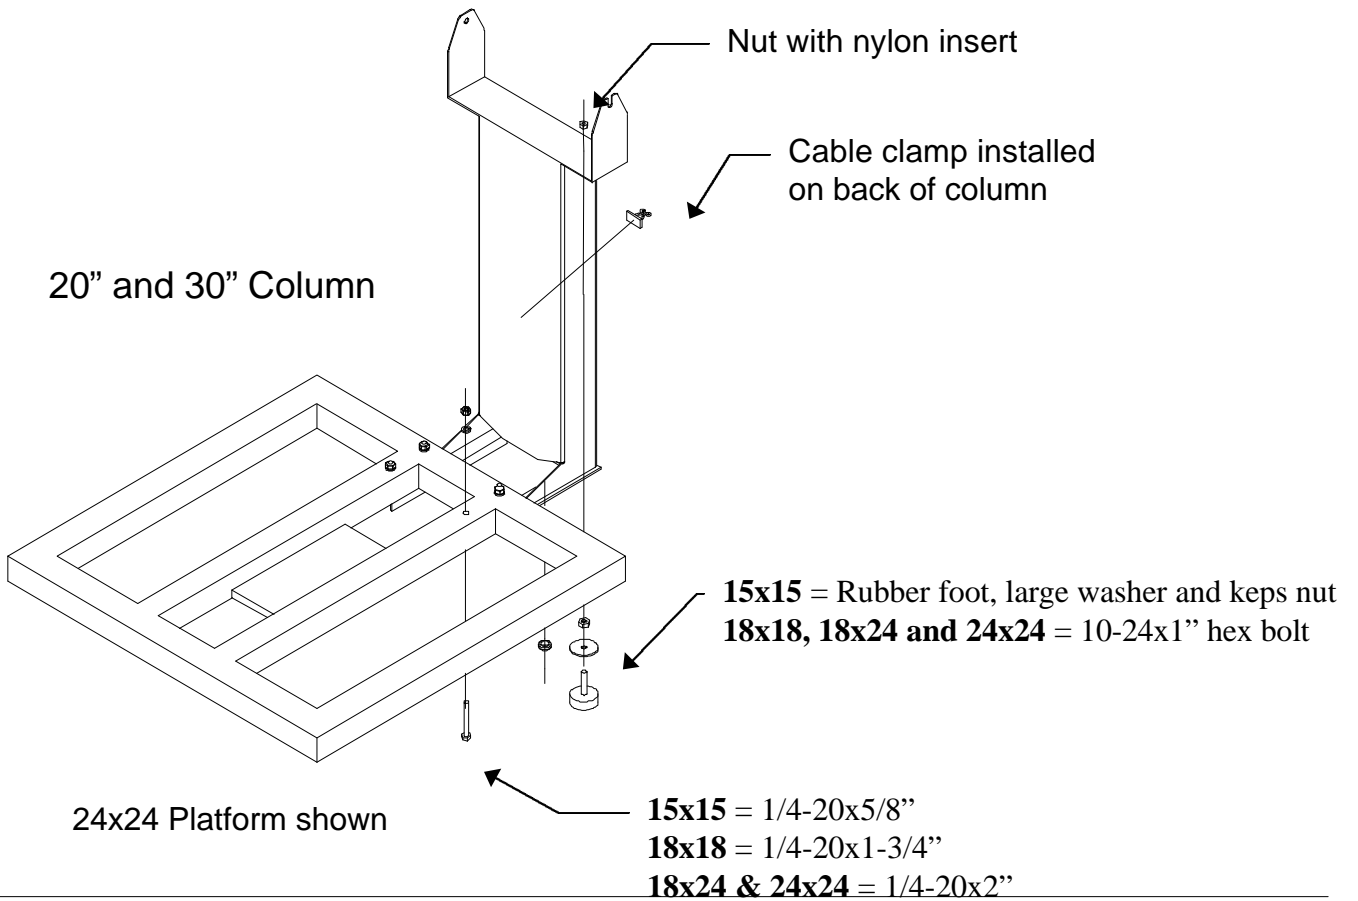

Atlas Column Installation

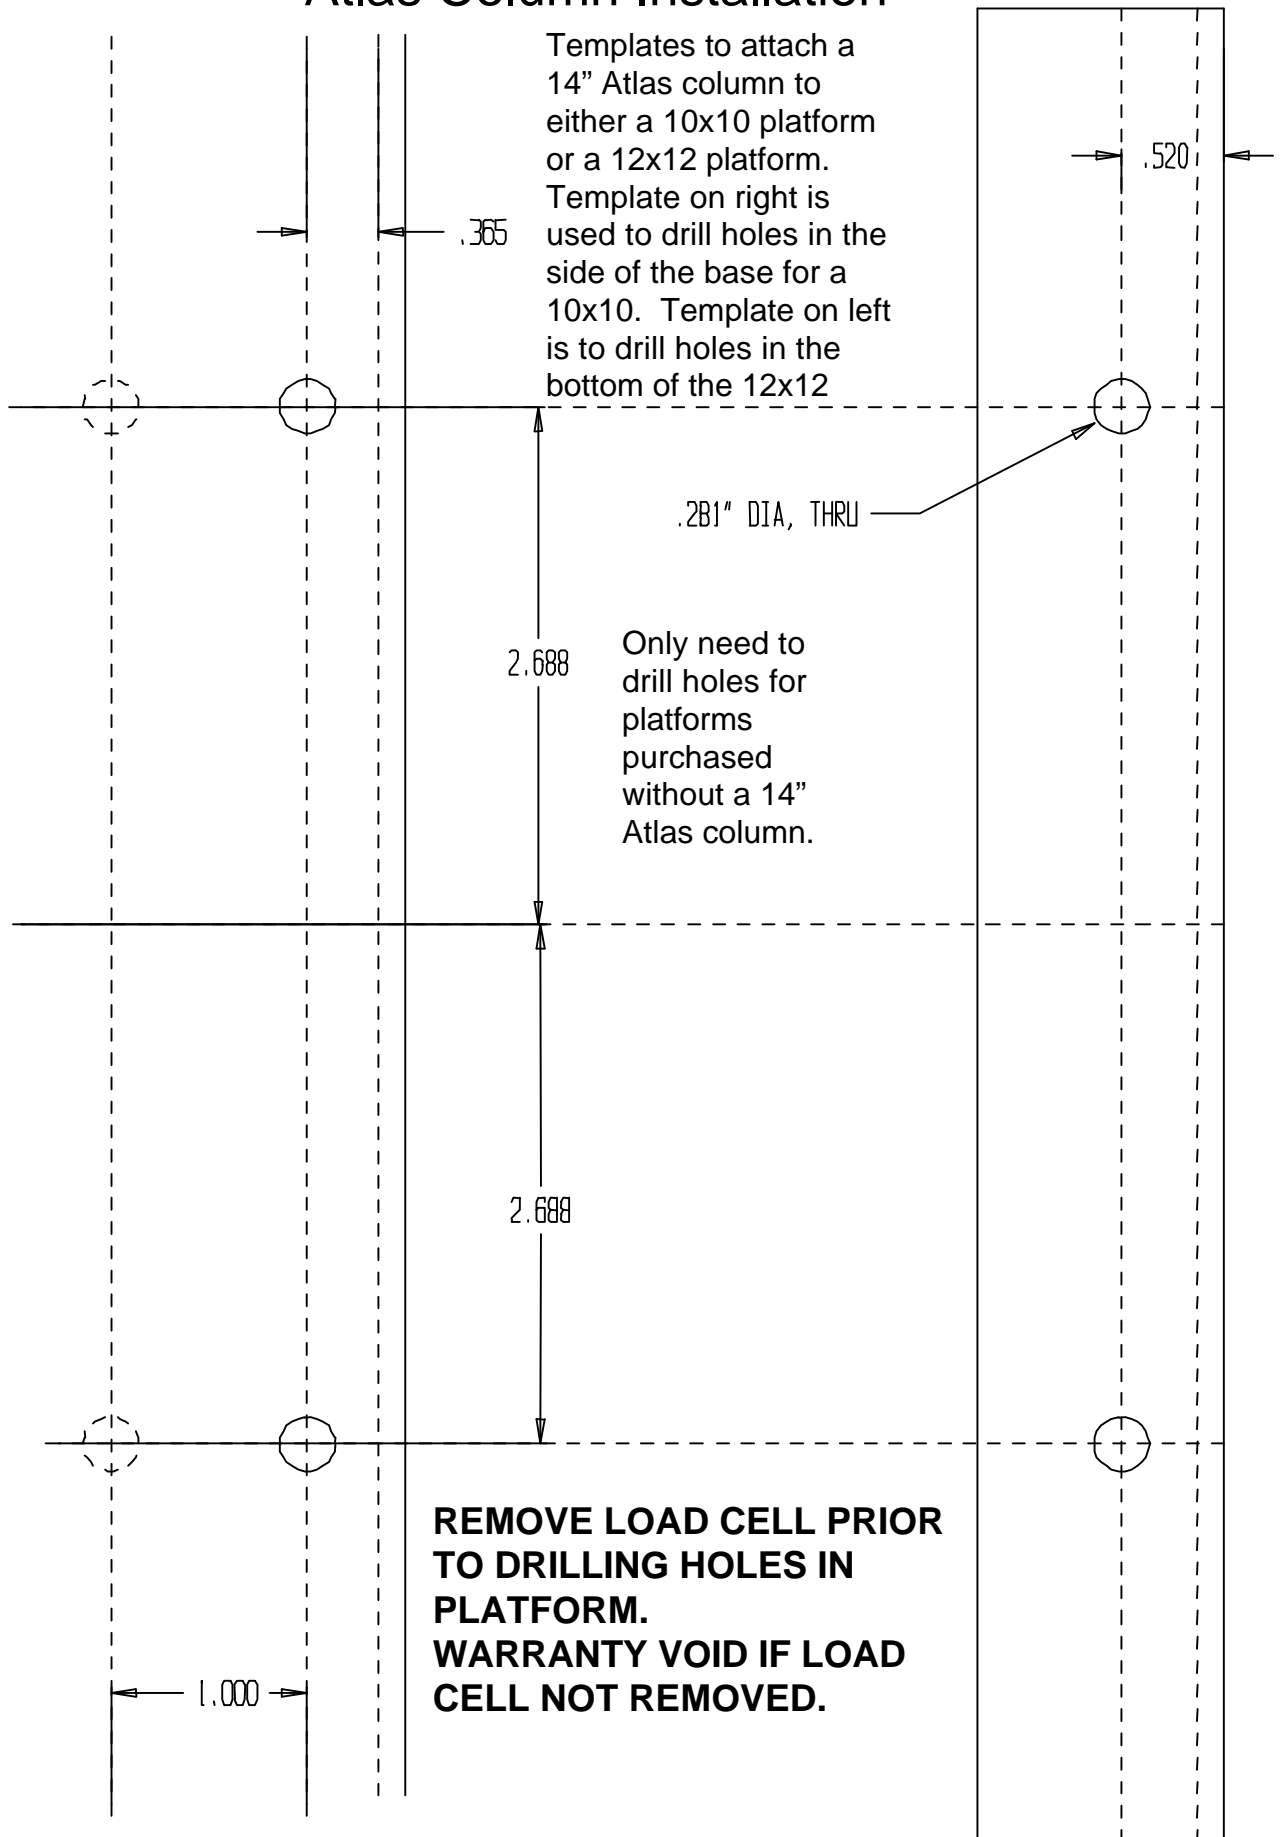

Atlas Column Installation

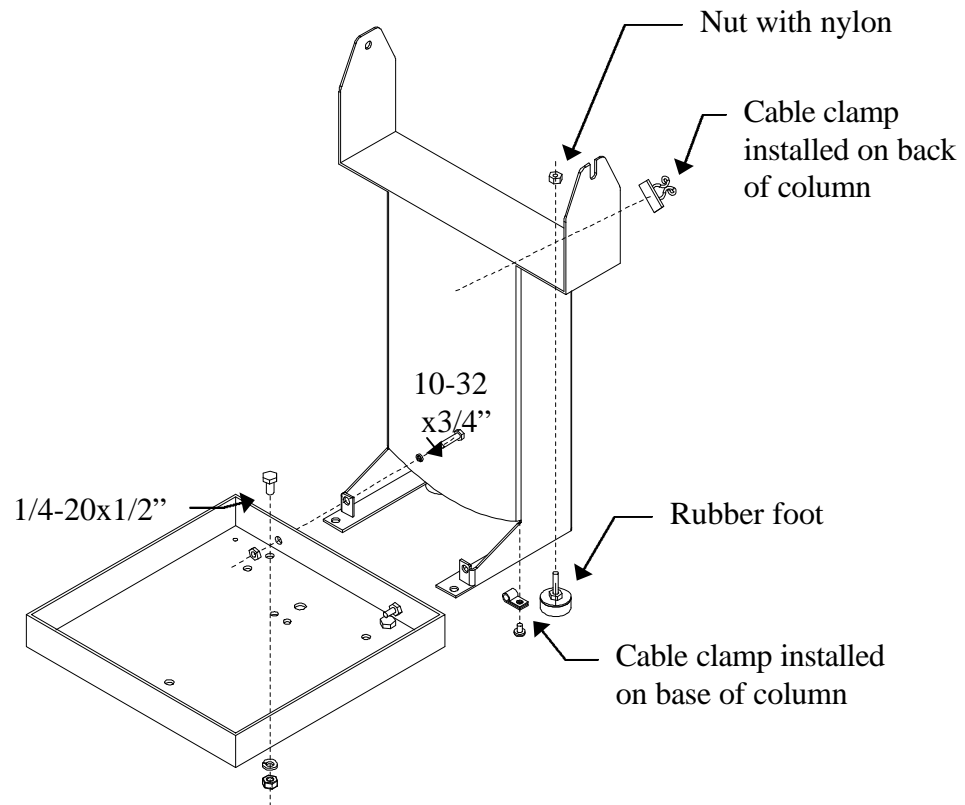

14" Atlas Column

INSTRUCTIONS:

1. Carefully loosen and move the spider out of the way making note of the positions of the shims. On 5lb capacity bases, do NOT disassemble the UP-OVERLOAD stop.
2. Install the 1/4-20 bolts first in the direction shown and then the 10-32 bolts.
3. Reinstall the spider, being sure to replace the shims in exactly the same position as they were in before disassembly. Center the spider on the base and the overload shim in the window of the spider. Hold the spider (especially on the 5lb bases) as you snug up both load cell screws and then finish tightening them.
4. Install the rubber feet and cable clamps.