

## **RAM Mount Installation Instructions**

Use these instructions to securely install your CV60 Vehicle Mount Computer in an overhead or upright position.

There are four different mounting kits available:

- the Desktop Mounting Kit (P/N 203-785-002)
- the Standard Vehicle Mounting Kit (P/N 203-784-002)
- the Stubby Vehicle Mounting Kit (P/N 203-783-002)
- the Stubby Extra Duty Vehicle Mounting Kit (P/N 203-857-001)

Use the Standard Vehicle Mounting Kit if you are attaching the keyboard tray or installing your CV60 overhead. Use any of the other mounting kits if you are not attaching a keyboard tray.



**Note:** For the vehicle mounting kits, you may be required to drill and tap 1/4-20 holes and use your own hardware to secure the mounting base to the surface.

# **Installing the Mounting Kits**


The instructions on the next page shows you how to install the mounting kits for the CV60.

## **Mounting Kit Parts List**


Description	Quantity
Pivot arm	1
Mounting bases	2
CV60 mounting plate	1
Desktop mounting plate (for Desktop Mounting Kit only)	1
Rubber feet (for Desktop Mounting Kit only)	4
Installation instructions	1
Screw, 1/4-20 x 5/8" FH, BLK STL	8
Nut, 1/4-20 locking	4
Screw, 1/4-20 x 3/4" BLK STL	4
Nut, 5/16-18 STL nylon	4
Cap screw, 5/16-18 x 1" FH, HEX DRIVE	4

#### To install the mounting kit


**1** Fasten a mounting base to the CV60 mounting plate using the four 5/16-18 x 1" cap screws and locking nuts.

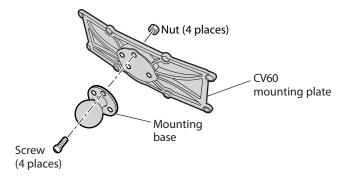

2 Now secure the assembly created in Step 1 to the back of the CV60 using the eight 1/4-20 x 5/8" screws provided.

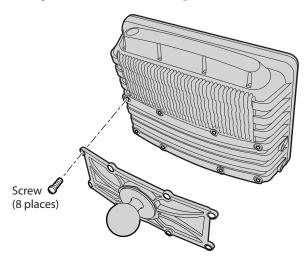


- 3 If you are using the Desktop Mounting Kit:
  - **a** Fasten the second mounting base to the desktop mounting plate using the four 1/4-20 x 3/4 screws and locking nuts.

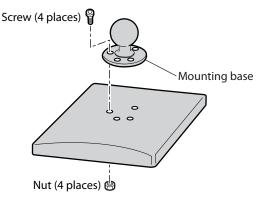

**b** Attach the four rubber feet to the bottom of the desktop mounting kir.

If you are using any other kit:

- Fasten the second mounting base where the CV60 is to be located using your own mounting hardware.
- **4** Attach the CV60 to the mounting base you secured in Step 1 by placing the pivot arm over the two mounting bases and then tightening the adjustment knob as shown on the next page.

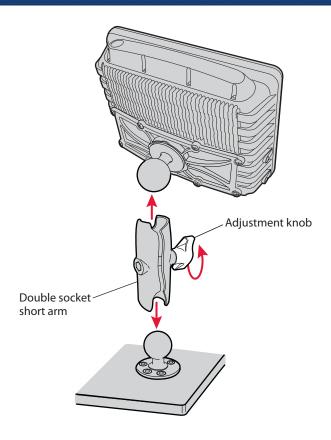

# Intermed

# Worldwide Headquarters

6001 36th Avenue West Everett, Washington 98203 U.S.A.

tel 425.348.2600

fax 425.355.9551

www.intermec.com

© 2008 Intermec Technologies Corporation. All rights reserved.

CV60 RAM Mount Installation Instructions



P/N 932-002-003