

Battery Installation Instructions

Use the following to install battery.

1. Turn off and unplug scale.
2. Remove platter and spiders.

! Warning *Do not turn scale upside down at any time.*

3. Remove four chrome case screws from bottom of scale located near the scale feet. See Figure 1.
4. Set scale on its feet and remove top case. Be sure to place on clean surface to avoid any damage.
5. Stand the base on either of its long sides so that you can see the bottom of the scale. See Figure 2.
6. Remove the pre-cut tab located on the bottom of the base near the nameplate. See Figure 1.

7. Snap battery switch into the opening from underside of the platform. Install the switch so that the “—” sign is near the foot.
8. Place the BATTERY SWITCH label near the switch.
9. Set scale on its feet.
10. Plug battery switch cable into CN3 on the power board. See Figure 3 on page 2.
11. Plug battery cable into CN4 on the power board. See Figure 4 on page 2.
12. Mount cable tie on the side of the scale and secure the battery cable as shown in Figure 4 on page 2.
13. Replace top cover and install four chrome case screws removed in step 3.
14. Install spiders and platter.

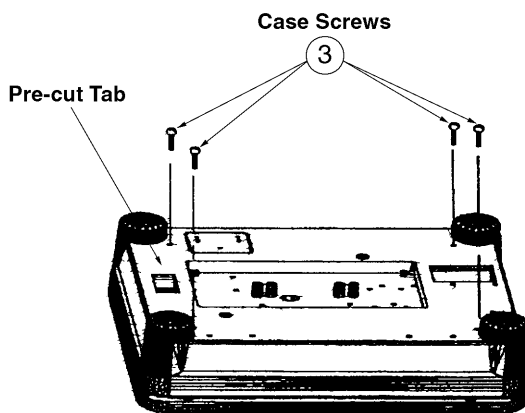


Figure 1. Bottom View

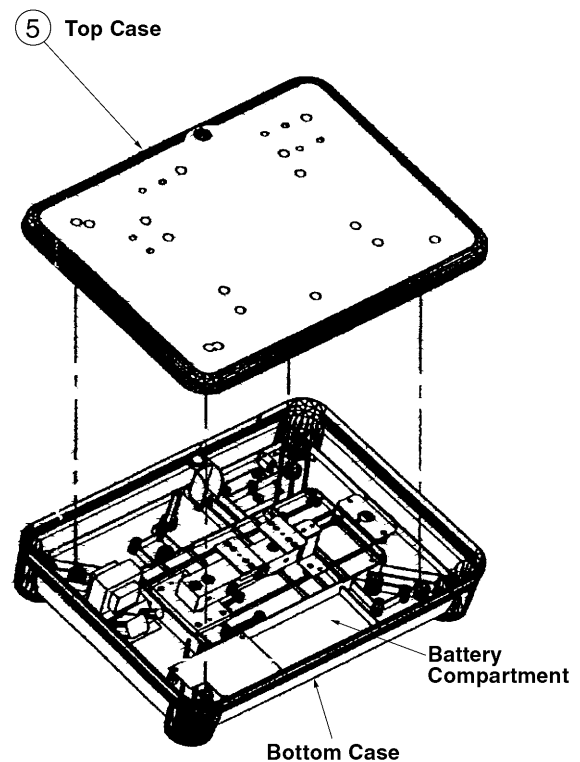


Figure 2. Top View

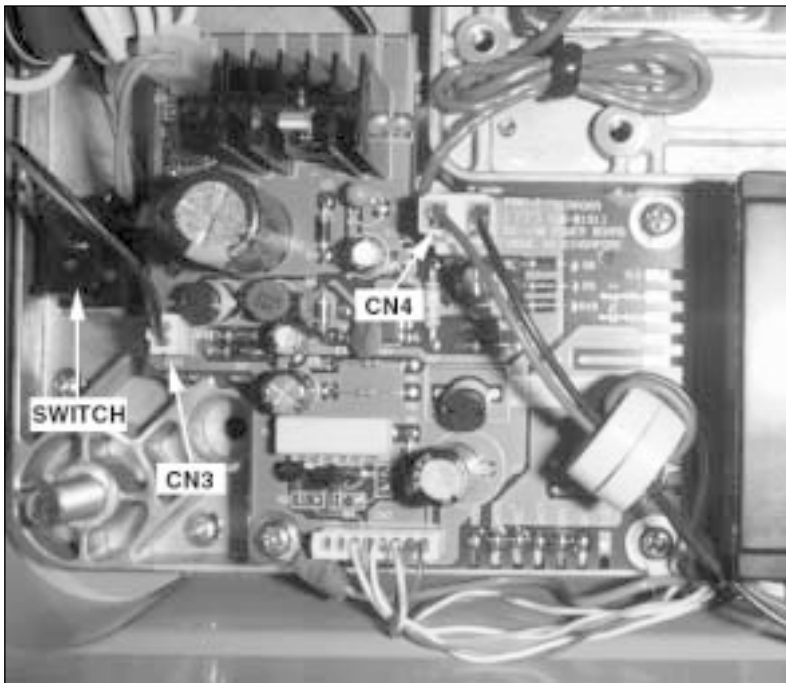


Figure 3. Installation of battery switch cable into CN3 on the power board.

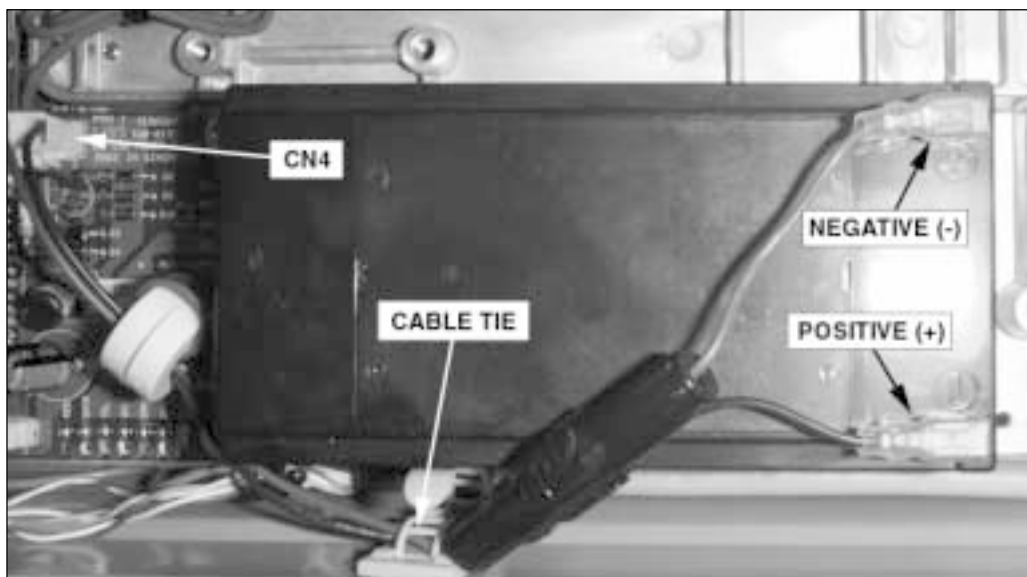


Figure 4. Mounting of cable tie and securing of battery cable.