



# IND560 Setup Menutree

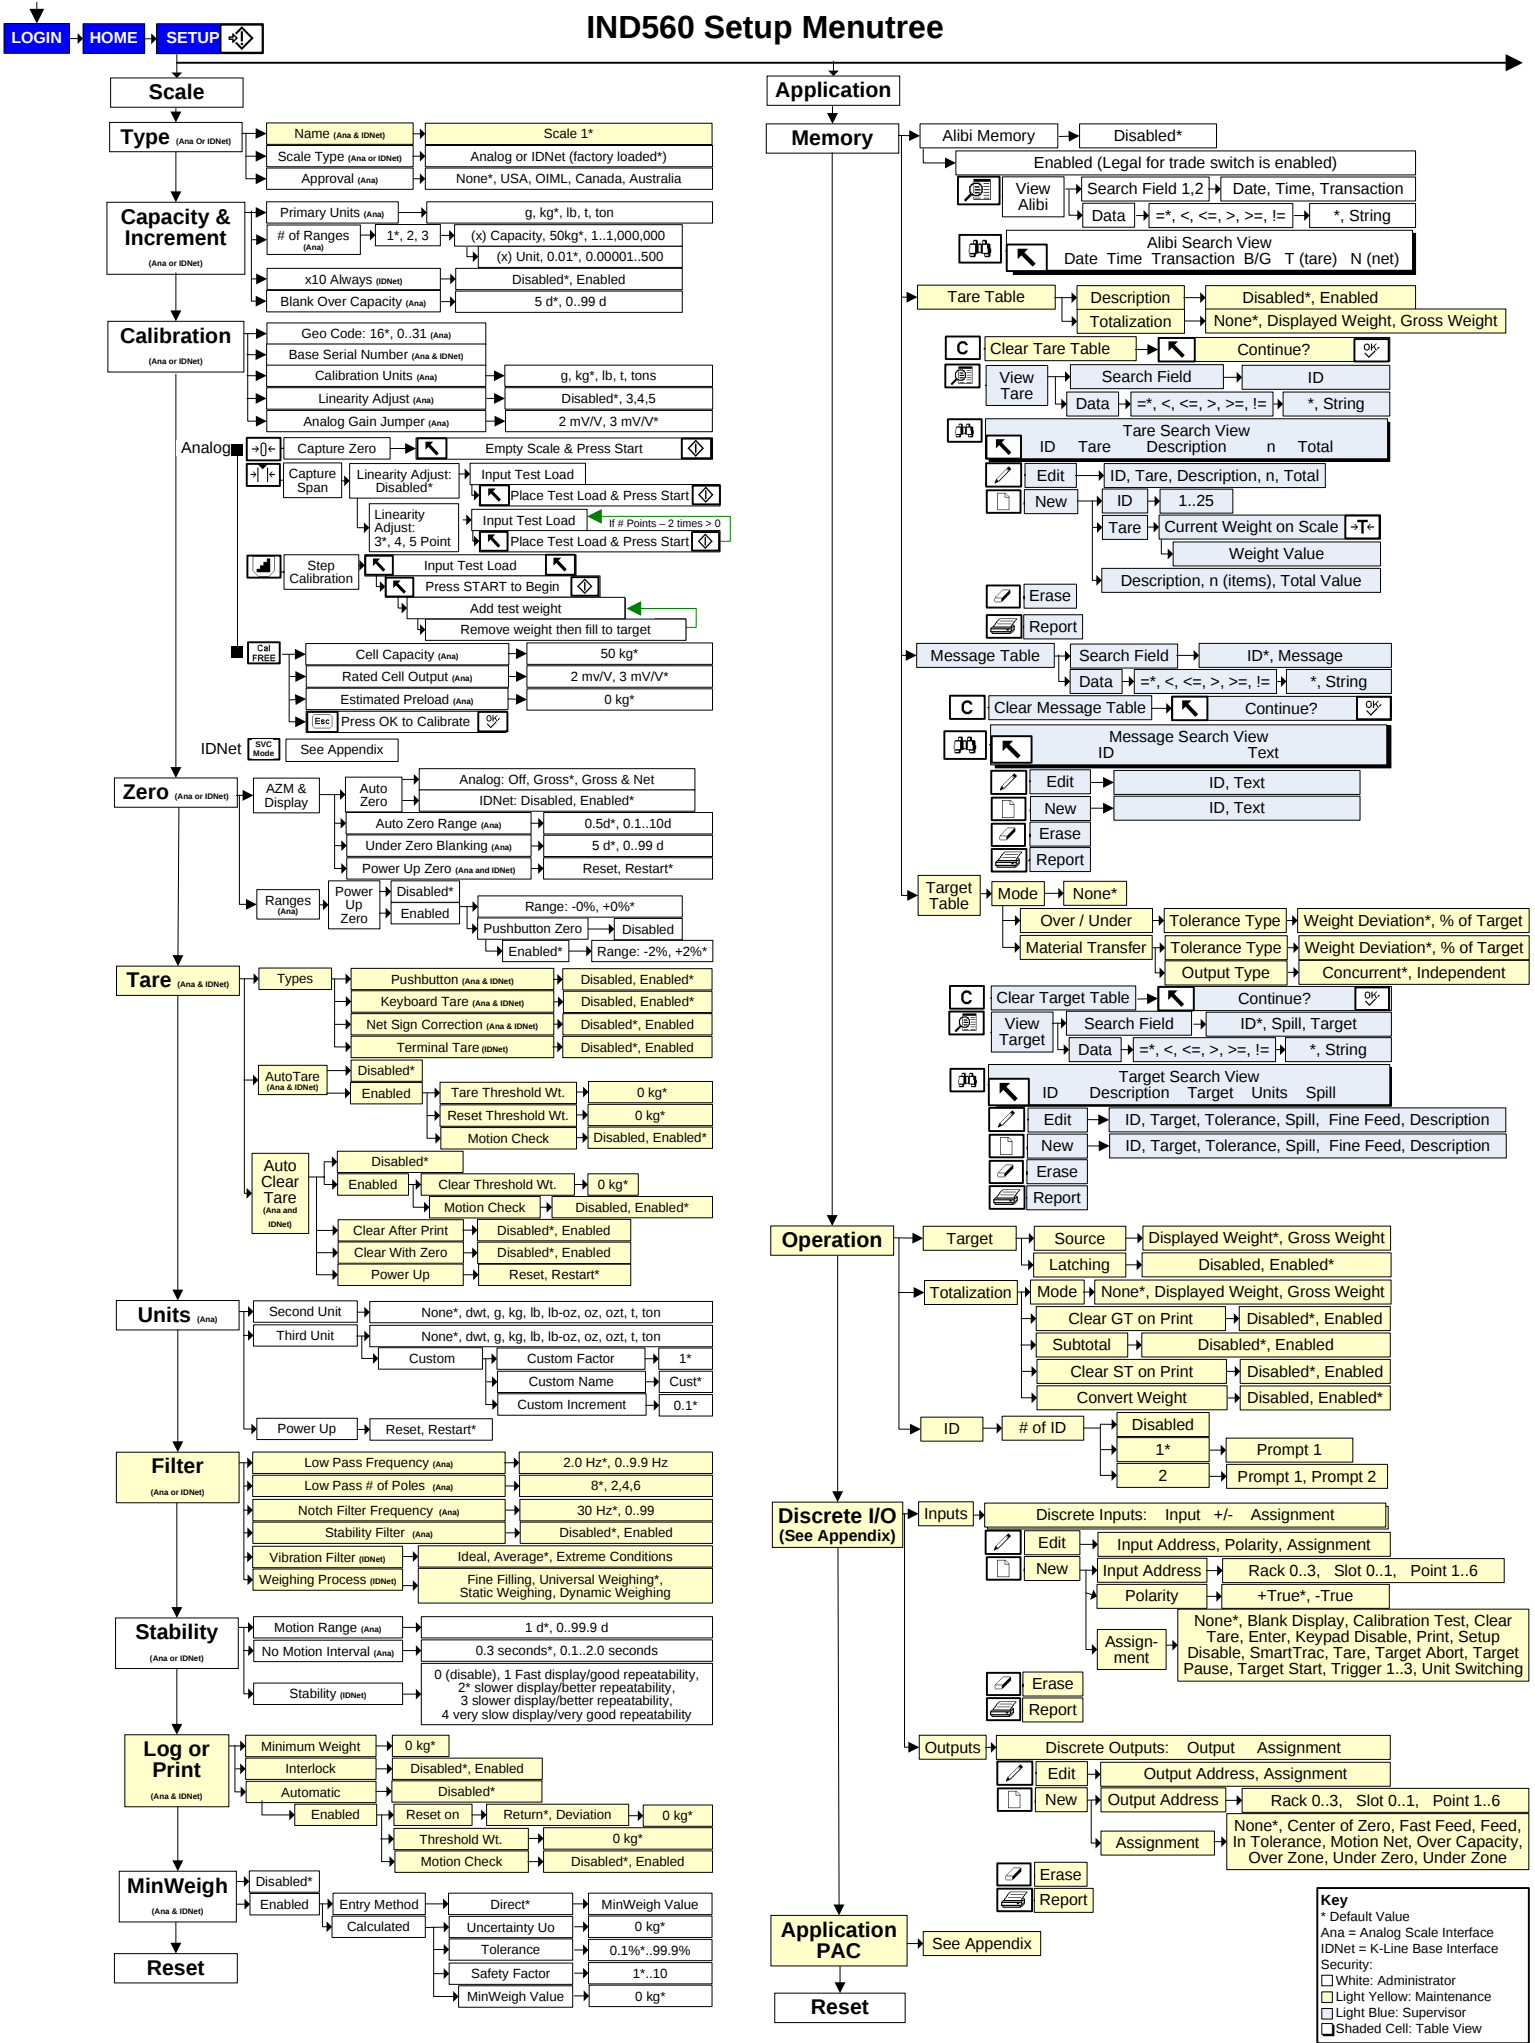

# IND560 Setup Menutree

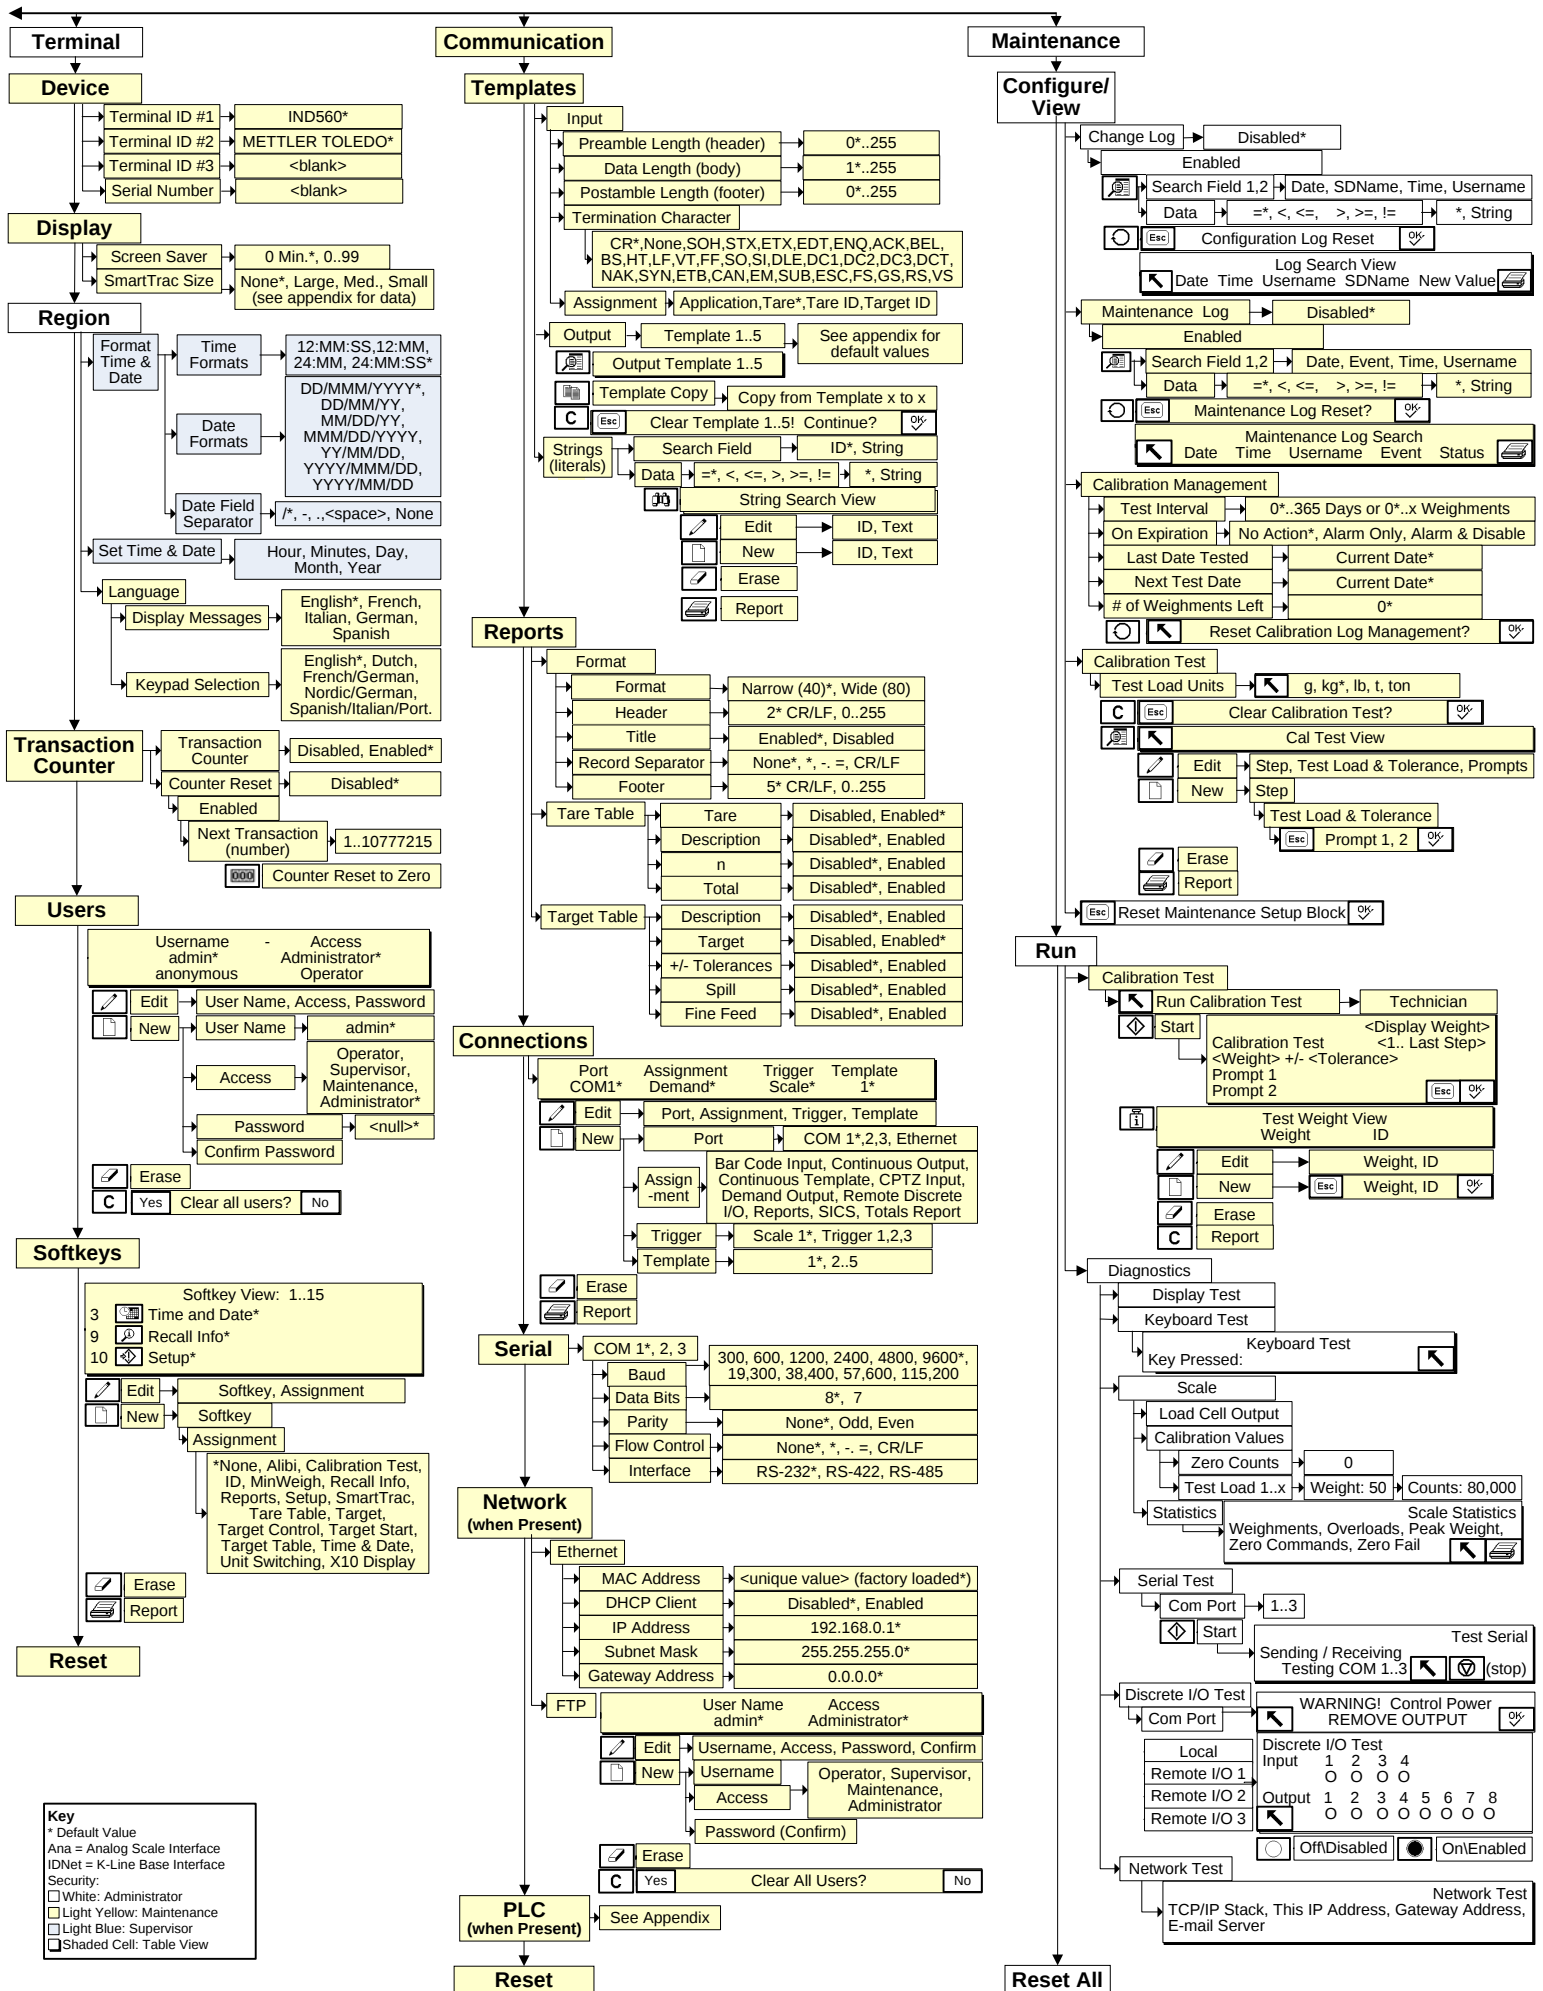

# IND560 Setup Menutree - Appendix

## Discrete I/O Addressing (from Application Branch)

**Digit 1:** I/O is local (0) or remote (1-3) with ARM100  
**Digit 2:** 0  
**Digit 3:** Position of the discrete input option (1-4) or discrete output option (1-6)

Valid address numbers are:

- Local — 0.1.1, 0.1.2, 0.1.3, 0.1.4 (Outputs only: 0.1.5, 0.1.6)
- Remote #1 — 1.0.1, 1.0.2, 1.0.3, 1.0.4 (Outputs only: 1.0.5, 1.0.6)
- Remote #2 — 2.0.1, 2.0.2, 2.0.3, 2.0.4 (Outputs only: 2.0.5, 2.0.6)
- Remote #3 — 3.0.1, 3.0.2, 3.0.3, 3.0.4 (Outputs only: 3.0.5, 3.0.6)

Examples:


- Address 0.1.1 = Local discrete board , position 1.
- Address 1.0.3 = Remote address #1, position 3.

## Default Printer Templates (from Communication Branch)


|            |            |            |            |                  |
|------------|------------|------------|------------|------------------|
| Template 1 | Template 2 | Template 3 | Template 4 | Template 5       |
| 1. wt0101  | 1. cs0103  | <end>      | <end>      | 1. Totals Report |
| 2. <sp>    | 2. CR      |            |            | 2. CR            |
| 3. wt0103  | 3. LF      |            |            | 3. LF            |
| 4. CR      | 4. xd0104  |            |            | 4. xd0104        |
| 5. LF      | 5. CR      |            |            | 5. xd0103        |
| 6. wt0102  | 6. LF      |            |            | 6. CR            |
| 7. <sp>    | 7. xd0103  |            |            | 7. LF            |
| 8. wt0103  | 8. CR      |            |            | 8. Subtotal:     |
| 9. wt0109  | 9. LF      |            |            | 9. CR            |
| 10. CR     | 10. wt0101 |            |            | 10. LF           |
| 11. LF     | 11. <sp>   |            |            | 11. n =          |
| 12. wt0102 | 12. wt0103 |            |            | 12. tz0104       |
| 13. <sp>   | 13. CR     |            |            | 13. tz0103       |
| 14. wt0103 | 14. LF     |            |            | 14. ce0103       |
| 15. N      | 15. ws0102 |            |            | 15. CR           |
| 16. CR     | 16. <sp>   |            |            | 16. LF           |
| 17. LF     | 17. wt0103 |            |            | 17. Grand Total: |
| 18. CR     | 18. wt0109 |            |            | 18. CR           |
| 19. LF     | 19. CR     |            |            | 19. LF           |
| 20. <end>  | 20. LF     |            |            | 20. n =          |
|            | 21. wt0102 |            |            | 21. tz0102       |
|            | 22. <sp>   |            |            | 22. tz0101       |
|            | 23. wt0103 |            |            | 23. ce0103       |
|            | 24. N      |            |            | 24. CR           |
|            | 25. CR     |            |            | 25. LF           |
|            | 26. LF     |            |            | 26. <end>        |
|            | 27. CR     |            |            |                  |
|            | 28. LF     |            |            |                  |
|            | 29. <end>  |            |            |                  |

## PLC Menu (from Communication Branch)


### Allen-Bradley Remote I/O

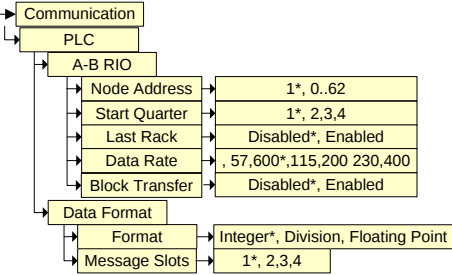


### Analog Output

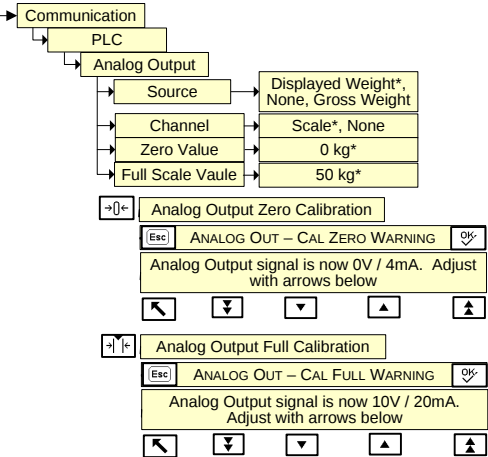

### Profibus L2 DP

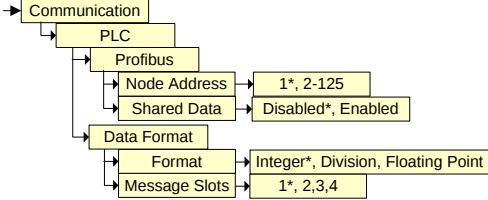

## SmartTrac Sizes (from Terminal Branch)

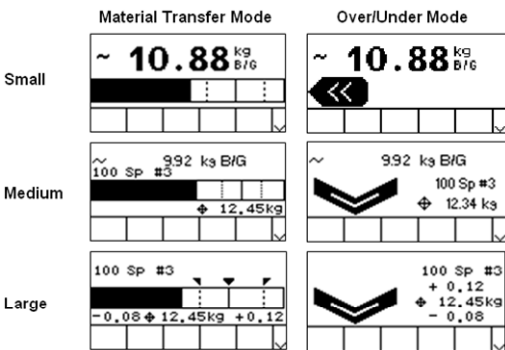

|                               |
|-------------------------------|
| <b>Key</b>                    |
| * Default Value               |
| Ana = Analog Scale Interface  |
| IDNet = K-Line Base Interface |
| Security:                     |
| White: Administrator          |
| Light Yellow: Maintenance     |
| Light Blue: Supervisor        |
| Shaded Cell: Table View       |