


Technician Access to Viper PL/SL


SW-Version L-1.00

Tech Setup Mode

After a timeout of about 3 minutes with no keystroke the setup will be left automatically

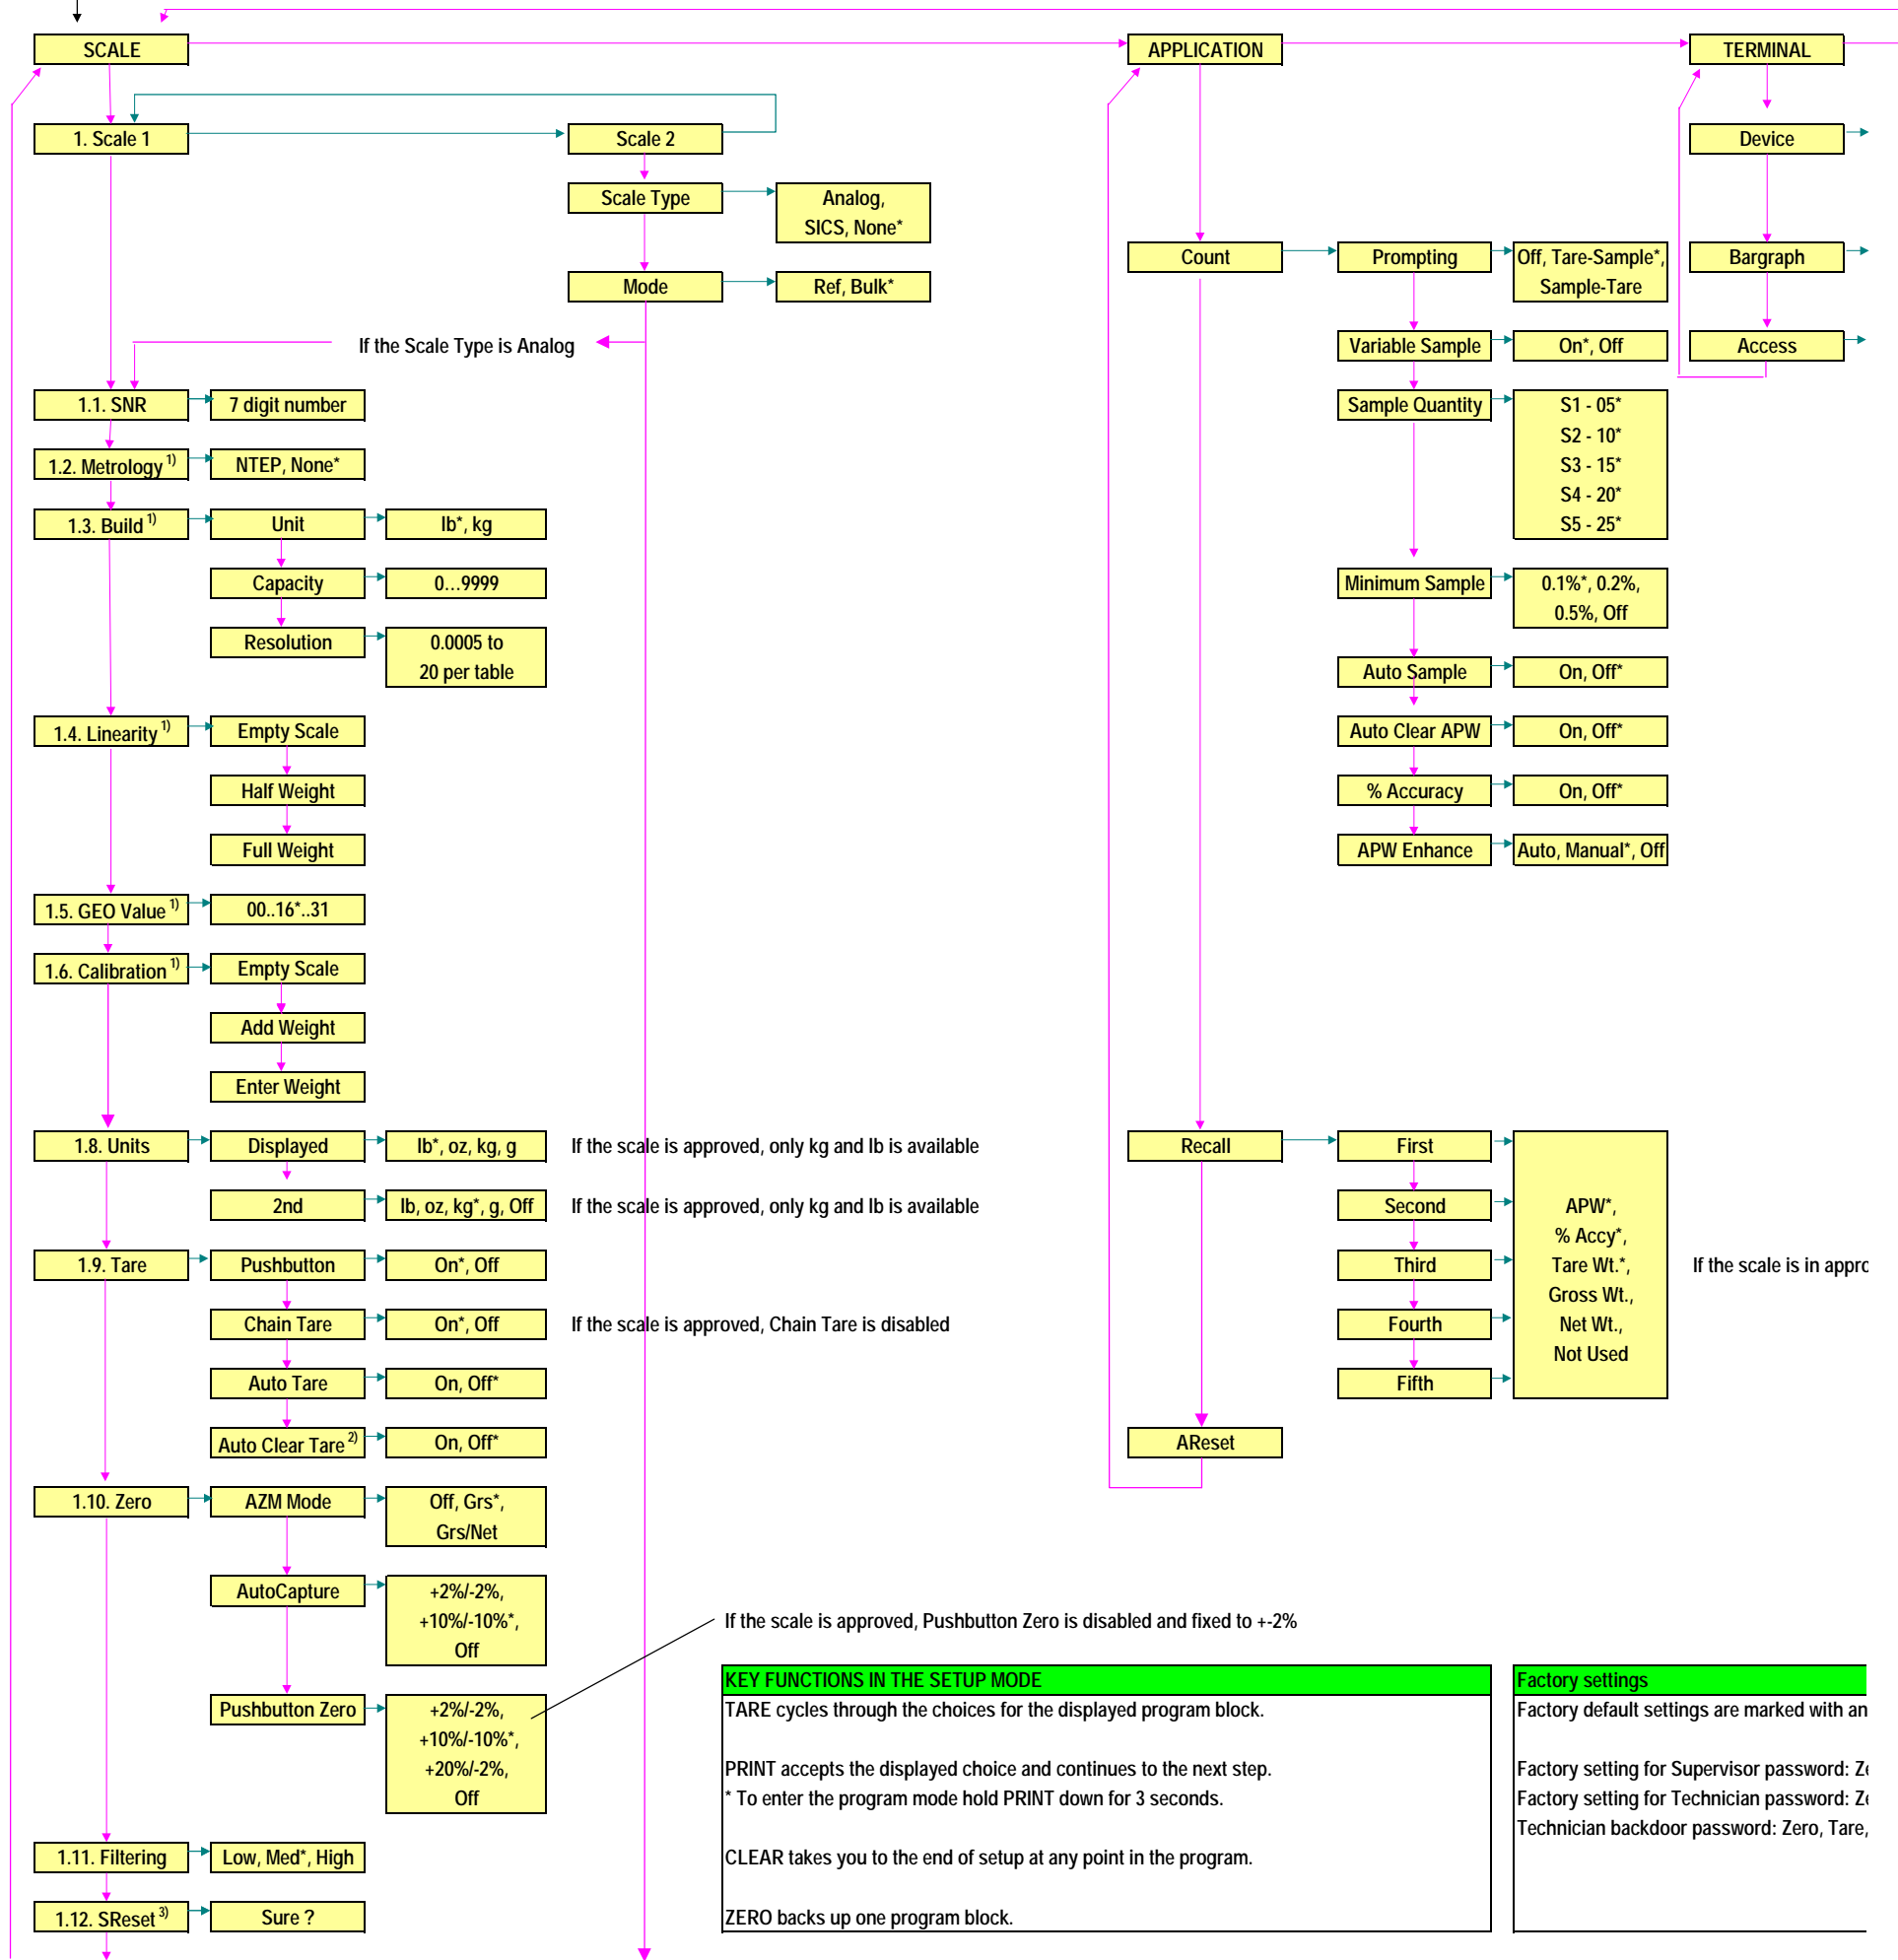

- 1) Not accessible in an approved scale -> Metrology - NTEP
- 2) Not accessible if Auto Tare is on
- 3) Does not reset the blocks 1.1 to 1.6

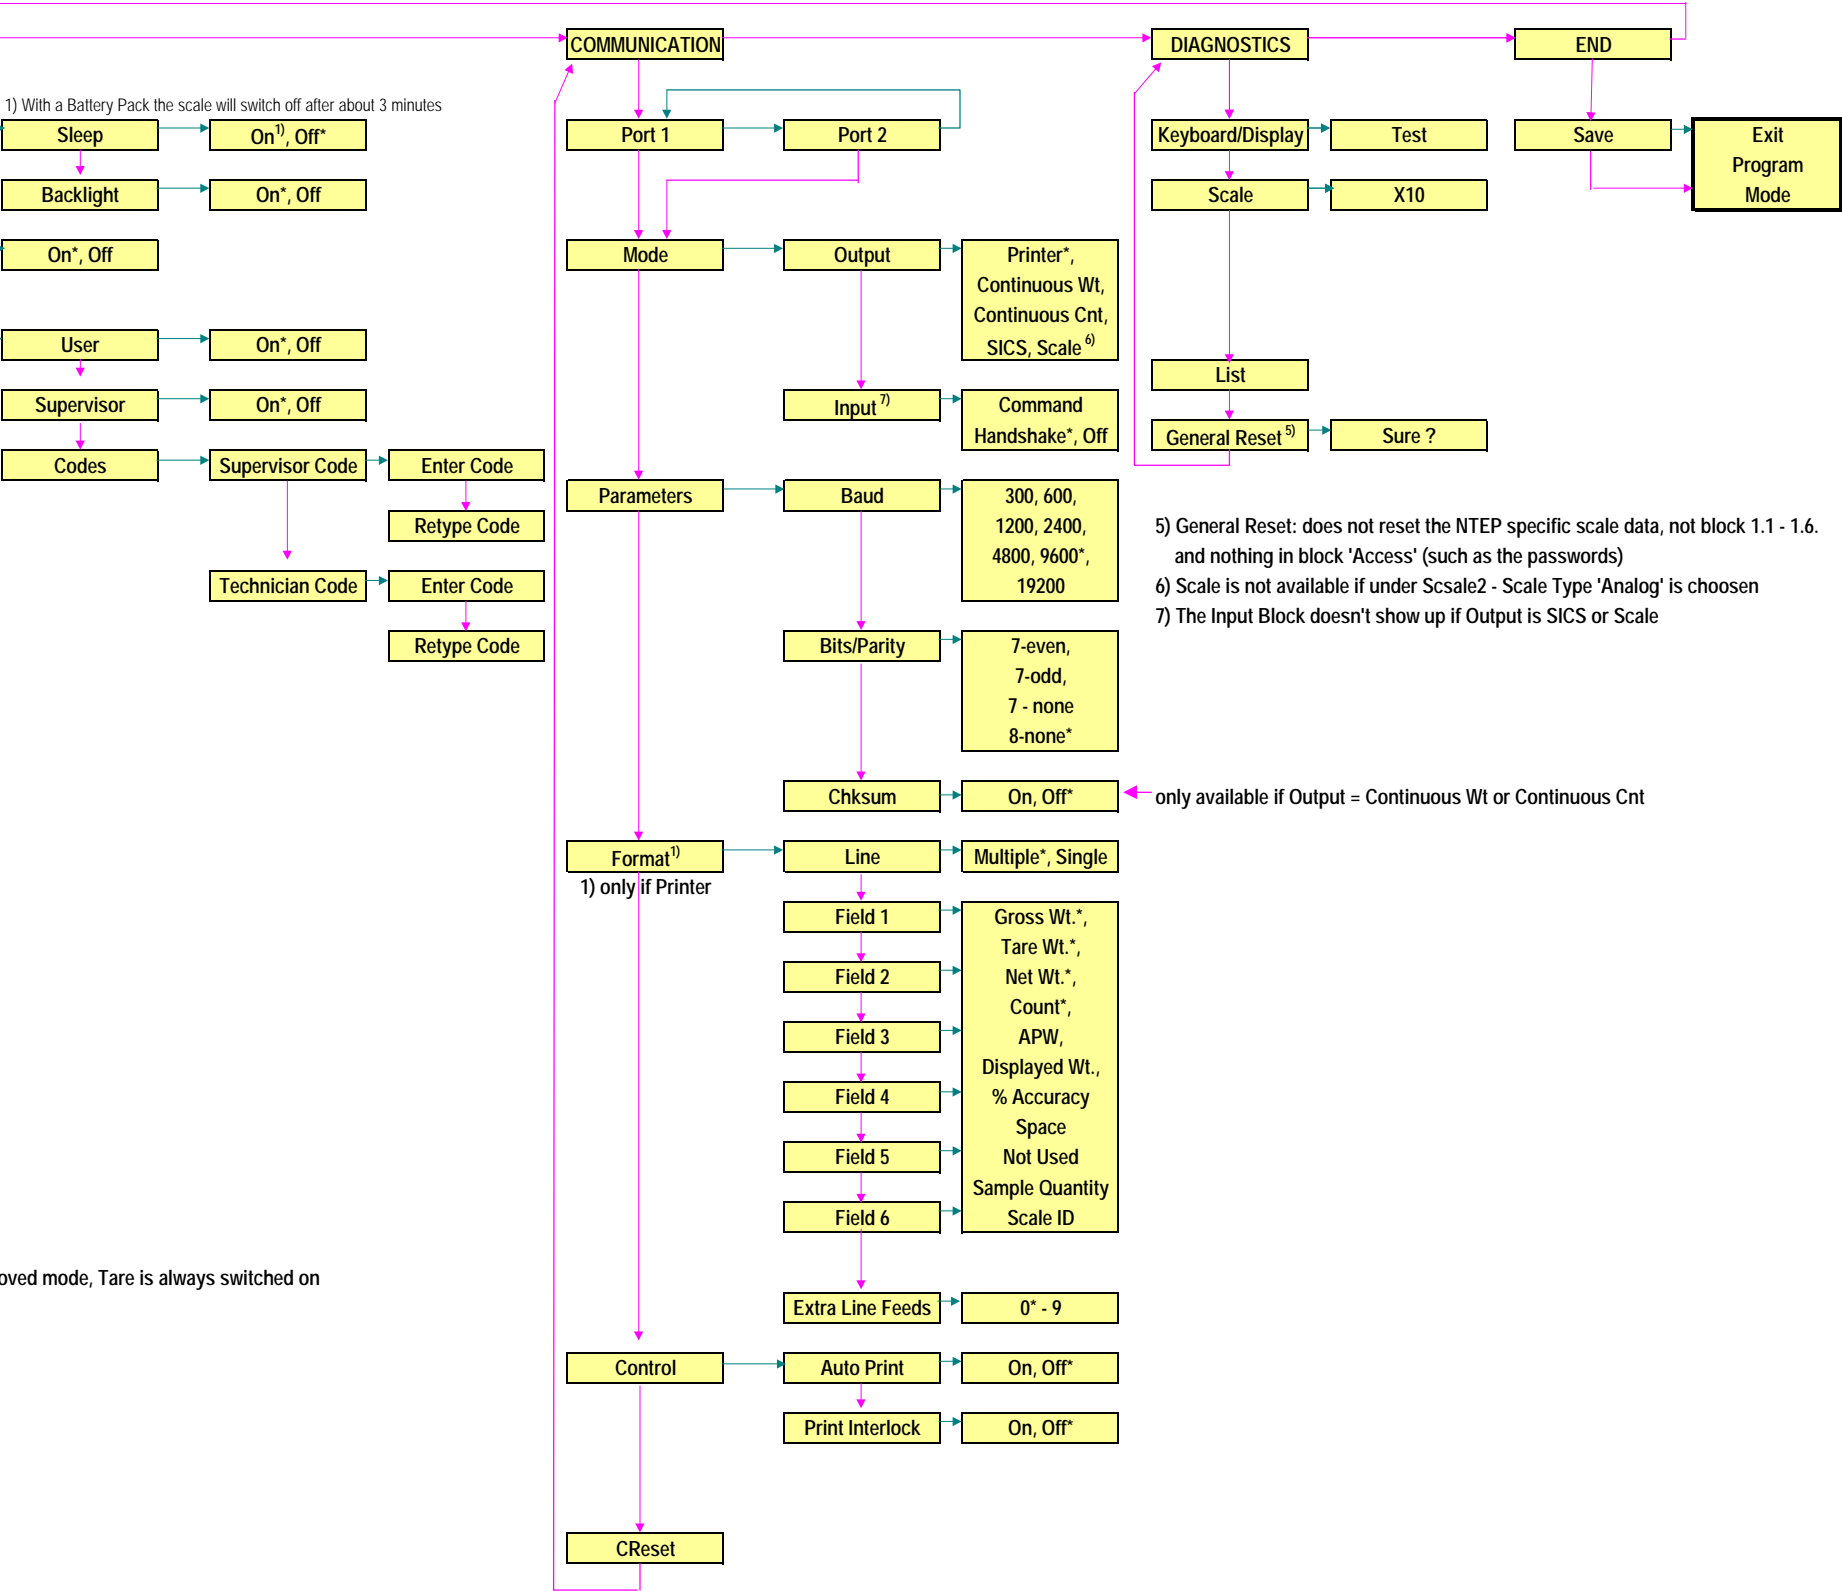

Asterisk (*)

Zero, Zero

Zero, Tare, Zero, Tare

Zero, Tare, Zero

Error Code List

OpErr = The sample weight is more than 4% of the scale capacity