



Model 1938

1938 Display Housing

Ref.	Part Number	Description	Qty
1	*13250800A	KEYBOARD OVERLAY	1
2	A13250900A	KEYBOARD SWITCH MEMBRANE, 1 X 6 (N.S.)	1
3	*13298400A	SPACER, SWITCH MEMBRANE LAYER (N.S.)	1
	*13488600A	KEYBOARD KIT (INCLUDES ALL THE ABOVE - REF #1,2, &3)	1
4	*13250700A	LENS, DISPLAY	1
5	*13250000A	HOUSING, DISPLAY	1
6	*13249000A	PCB ASSEMBLY, DISPLAY	1
7	*13368100A	INSULATOR, PCB	1
8	B13297600A	HARNESS ASSEMBLY, INTERCONNECT	1
9	R0387200A	SCREW, 8-32 X 3/8" TRUSS	4
10	*13250400A	END CAP	2

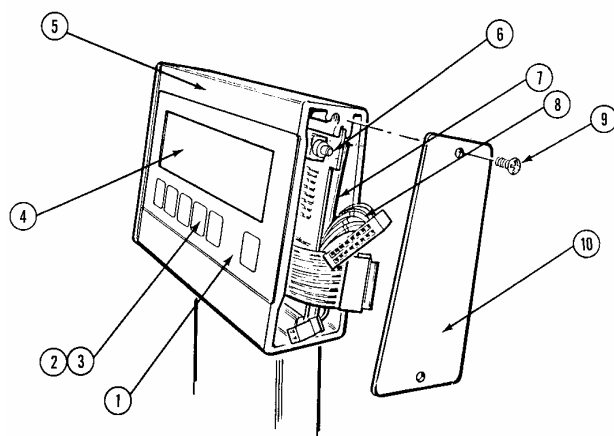

1938 Display Housing

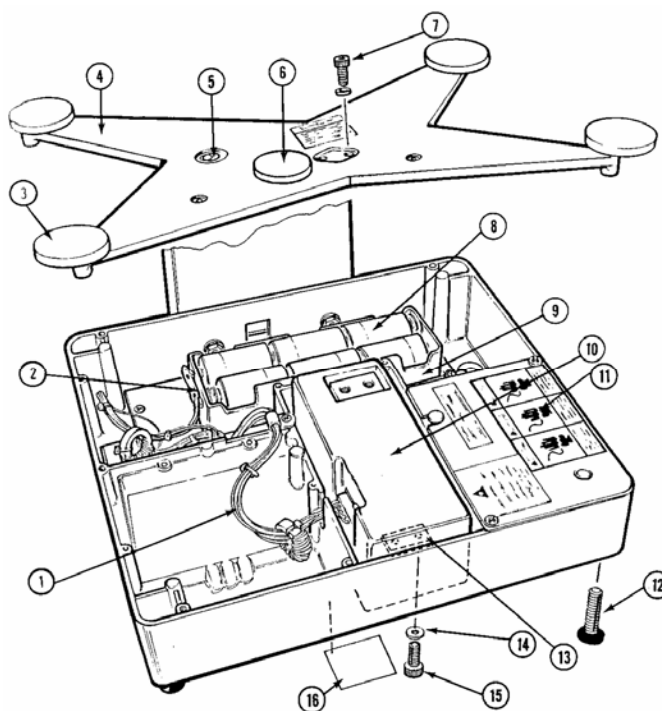

1938 Base Interior


1938 Base Interior

Ref.	Part Number	Description	Qty
1	B13297600A	INTERCONNECT HARNESS ASSEMBLY	1
2	A13327500A	CONNECTOR, BATTERY SNAP	1
3	A13253600A	FOOT, PLATTER PAD	4
4	D12051400C	SPIDER, 1938-0001	1
	C12051400D	SPIDER, 1938-0002 & 1938-0003	1
5	*10268900A	LEVEL INDICATOR	1
6	*13333200A	PAD, CENTER	1
7	R0350800A	SCREW, CAP 1/4-28 X 1" 1938-0001	2
	R0350700A	SCREW, CAP 1/4-28 X 1.5" 1938-0002	2
	R0319700A	SCREW, CAP 1938-0003	2
*8	*13293700A	BATTERY, ALKALINE D-CELL 1.5 VDC	6
9	*13257500A	HOLDER ASSEMBLY, BATTERY	1
10	*13258300A	DIGITAL LOAD CELL, 30 kg 1938-0001	1
	*13258500A	DIGITAL LOAD CELL, 60 kg 1938-0002	1
	*13258900A	DIGITAL LOAD CELL, 140 kg 1938-0003	1
11	*13334800A	LABEL, WARNING	1
12	*13315500A	FOOT ASSEMBLY	4
13	A12233900A	SPACER, LOAD CELL LOWER 1938-0001	1
	*12259100A	SPACER, LOAD CELL LOWER 1938-0002	1
	*13304200A	SPACER, LOAD CELL LOWER 1938-0003	1
14	R0256600A	WASHER, 1/4" FLAT 1928-0002 ONLY	4
15	R0350700A	SCREW, CAP 1/4-28 X 1" -0001/-0002	2
	R0301800A	SCREW, CAP 5/16-18 X 7/8" 1938-0003	2
16	*11985900A	LABEL, ASSEMBLY SPEC'S, -0001/-0002	1
	*13342800A	LABEL, ASSEMBLY SPEC'S 1938-0003	1


* Part number may have alpha prefix

1938 Base Exterior

Ref.	Part Number	Description	Qty
1	*13315500A	FOOT ASSEMBLY	4
2	*13250300A	SUPPORT, COLUMN MOUNTING	1
3	*13271700A	CONNECTOR JACK, WALL TRANSFORMER	1
4	*11867000A	CONNECTOR, 9 POSITION Dsub FEMALE	1
5	R0350700A	SCREW, CAP 1/4-28 X 1" -0001/-0002	1
	R0301800A	SCREW, CAP 5/16-18 X 7/8" 1938-0003	1
6	*11985900A	LABEL, ASSEMBLY SPEC'S, -0001/-0002	1
	*13342800A	LABEL, ASSEMBLY SPEC'S, 1938-0003	1

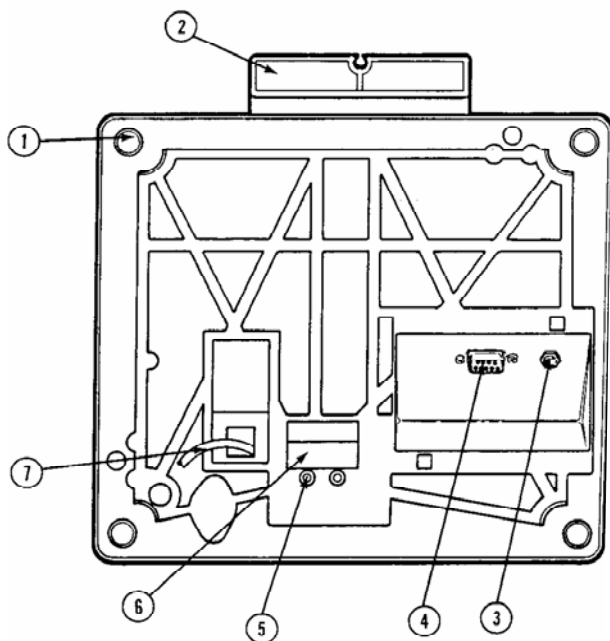

1938 Base Exterior

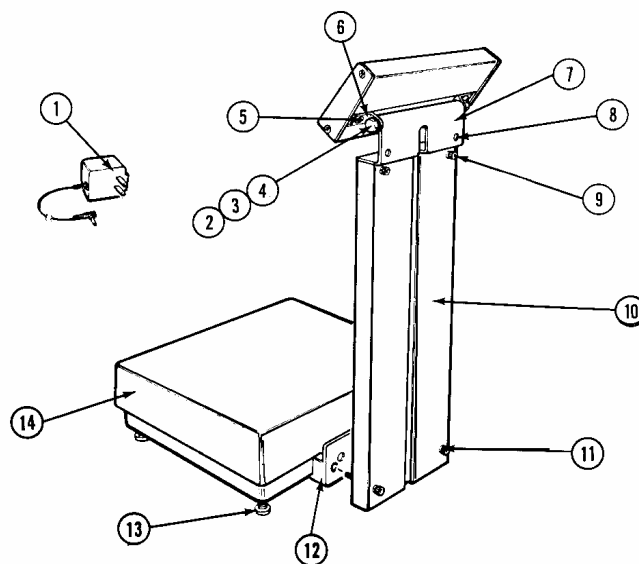

1938 Exterior

1938 Exterior

Ref.	Part Number	Description	Qty
1	*13082700A	WALL TRANSFORMER, 120VAC/12VDC	1
2	*13250500A	SHOULDER SCREW 10-32	2
3	R0387300A	SPRING WASHER, .265 I.D.	2
4	*13249900A	PIVOT WASHER, NEOPRENE	2
5	R0387200A	SCREW, 8-32 X 3/8" TRUSS	2
6	*13250600A	BRACKET, PIVOT ANGLE	2
7	*13250100A	INDICATOR SUPPORT	1
8	R0391100A	HOLE PLUG, BLACK 5/16"	2
9	R0354400A	SCREW, CAP 10-32 X 1"	2
10	*13250200A	COLUMN, INDICATOR MOUNTING	1
11	R0272300A	SCREW, CAP 1/4-20 X 1.5"	2
12	*13250300A	SUPPORT, COLUMN MOUNTING	1
13	*13315500A	FOOT ASSEMBLY	4
14	*13254900A	PLATTER	1

1938 Optional Accessories

Part Number	Description	Sales Number
*13304500A	ADJUSTABLE HEIGHT STAND	0924-0036
*13330400A	CASTERS FOR STAND KOP	0924-0019
*13304400A	WALL MOUNT TRANSFORMER KOP	0901-0266

* Part number may have alpha prefix