


Kit Number: 9770109

Description: Single Column Scale Stand


Parts List

The parts illustrated are shipped with the stand kit.

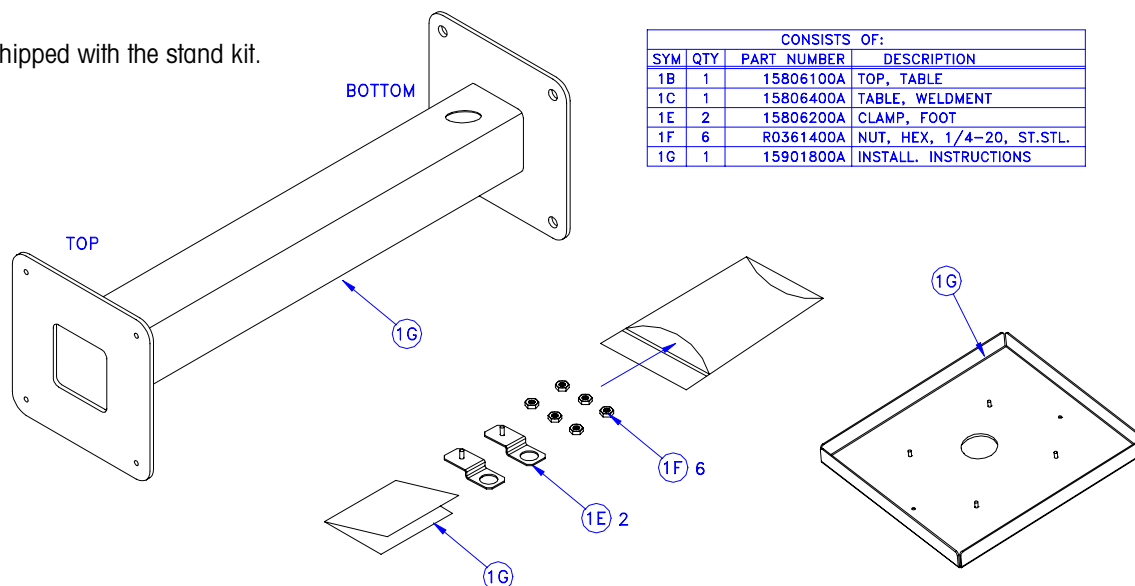

Assembly

Assemble the stand as shown below. Note that the scale table has a front and back. The tabletop must be mounted so the foot anchor holes are toward the front. The column is hollow and it has a hole on the side for routing the power and communication cables. The hole in the side of the column goes at the bottom facing the back (in relation to the tabletop).

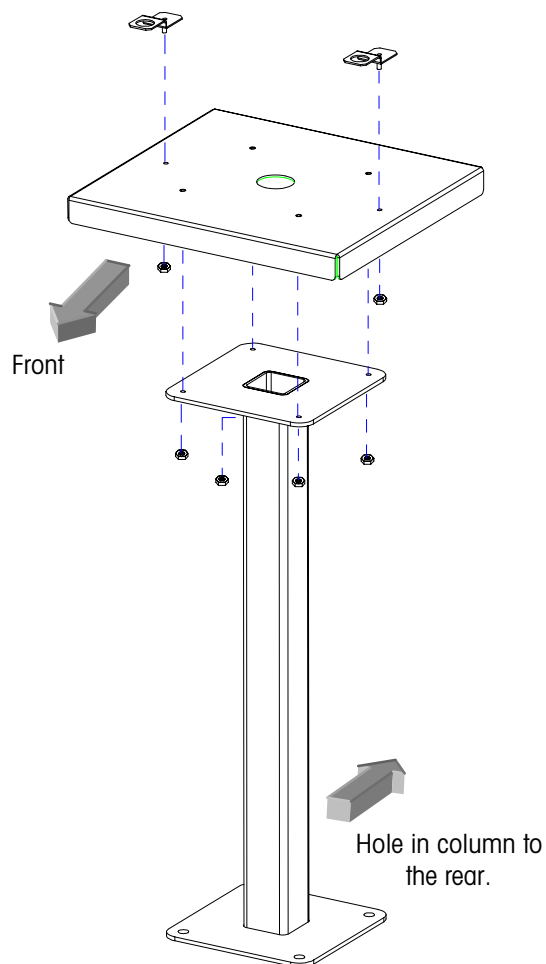


METTLER TOLEDO
Scales & Systems
1900 Polaris Parkway
Columbus, Ohio 43240

METTLER TOLEDO® is a registered trademark of Mettler-Toledo, Inc.
©2000 Mettler-Toledo, Inc.
Printed in USA

Stand Mounting Instructions

The stand must be securely mounted to the floor. To mount the stand on a concrete floor, use four (4) 1/2-inch by 3-inch (minimum) bolts and anchors. For wood floors, use four (4) 1/2-inch bolts through the floor with nuts and washers on the bottom side.

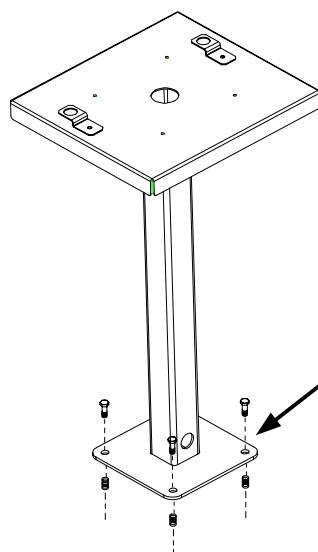

Concrete

1/2-inch by 3-inch minimum bolts with anchors required for mounting on concrete.

Wood Floors

1/2 inch bolts of sufficient length to go through wood floors with nuts and washers on the other side are required.

Scale Mounting Instructions

This stand will accept the Model 8450 and Model 8461 scales. The scale must be secured to the stand table using the supplied foot anchors as shown below. Remove the two front feet and install the anchors between the foot and the scale base. Place the scale on the table and level the scale. (On the 8450 SSP, level the scale using the two front feet and the tower feet to level the scale. When the scale is level, screw down the two rear scale feet until they contact the table.) Bolt the foot anchors down on the table.

