

Serial Expansion Card Installation Instructions

PN 67604

Use the following procedure to install serial expansion cards in 920i indicators:

1. Disconnect indicator from power source.

Warning *Disconnect power before removing indicator backplate.*

2. Place indicator face-down on an antistatic work mat. Remove screws that hold the backplate to the enclosure body.

Caution *Use a wrist strap to ground yourself and protect components from electrostatic discharge (ESD) when working inside the indicator enclosure.*

3. Carefully align the large option card connector with connector J5 or J6 on the CPU board. Press down to seat the option card in the CPU board connector.
4. Use the screws and lockwashers provided in the option kit to secure the other end of the option card to the threaded standoffs on the CPU board (see Figure 1).

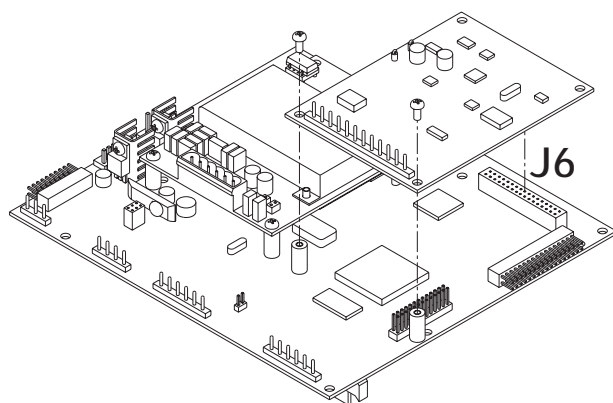


Figure 1. Installing Option Card Onto CPU Board

5. Make connections to the option card as required. Use cable ties to secure loose cables inside the enclosure. Once cabling is complete, position the backplate over the enclosure and reinstall the backplate screws. Use the torque pattern shown in Figure 2 to prevent distorting the backplate gasket. Torque screws to 15 in-lb (1.7 N-m).
6. Ensure no excess cable is left inside the enclosure and tighten cord grips.
7. Reconnect power to the indicator.
8. Configure serial ports using the SERIAL menu, as described in the 920i Installation Manual, PN 67887

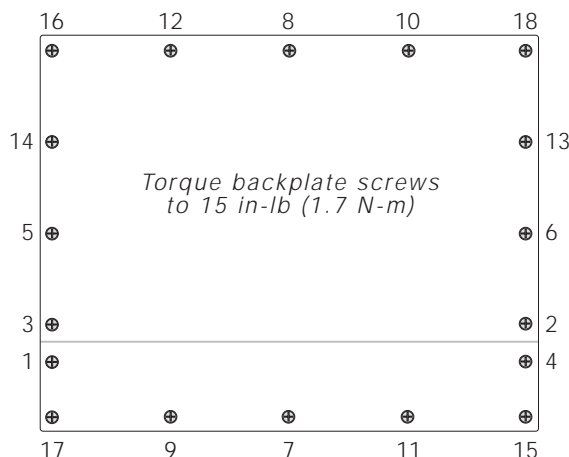


Figure 2. 920i Enclosure Backplate

The 920i automatically recognizes all installed option cards when the unit is powered on. No hardware-specific configuration is required to identify the newly-installed card to the system.

A card installed at connector J5 on the CPU board is configured as serial ports 5 and 6; a card installed at connector J6 is configured as ports 7 and 8.

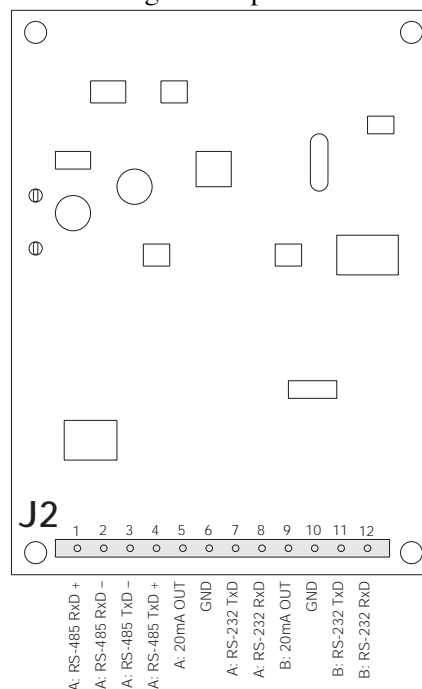


Figure 3. Serial Expansion Card

Specifications

Serial Channels	Channel A supports RS-232, 20mA, or RS-485; Channel B supports RS-232 or 20mA
Serial Type	Compatible with RS-232, RS-422, and RS-485 specifications
Baud Rates	300, 600, 1200, 2400, 4800, 9600, 19200
Input Protection	Short circuit protection, 300W transient voltage suppression Protection for ESD, EFT (electrical fast transients), tertiary lightning, and system-generated transients per IEC 60001-4-2, 60001-4-4, and 60001-4-5; European Standards EN50082 and EN61000-4